

# 737

## Quick Reference Handbook 快速检查单

### Quick Action Index

---

Aborted Engine Start.....	7.1
Airspeed Unreliable.....	10.1
APU FIRE .....	8.1
<b>CABIN ALTITUDE WARNING.....</b>	<b>2.1</b>
<b>Emergency Descent.....</b>	<b>0.1</b>
<b>ENGINE FIRE.....</b>	<b>8.2</b>
Engine Limit or Surge or Stall .....	7.2
<b>ENGINE OVERHEAT .....</b>	<b>8.5</b>
Engine Severe Damage or Separation .....	8.2
Engine Tailpipe Fire .....	8.6
<b>Evacuation .....</b>	<b>Back Cover.2</b>
<b>LANDING CONFIGURATION.....</b>	<b>15.1</b>
Loss Of Thrust On Both Engines .....	7.6
<b>Rapid Depressurization .....</b>	<b>2.1</b>
Runaway Stabilizer .....	9.1
<b>Smoke, Fire or Fumes .....</b>	<b>8.8</b>
<b>TAKEOFF CONFIGURATION .....</b>	<b>15.1</b>
<b>WARNING HORN (INTERMITTENT) .....</b>	<b>15.2</b>
<b>WARNING LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION.....</b>	<b>15.2</b>

This document has EAR data with Export Control Classification Numbers (ECCN) of: 9E991. Export of this technology is controlled under the United States Export Administration Regulations (EAR) (15 CFR 730-774). An export license may be required before it is used for development, production or use by foreign persons from specific countries. The controller of this data has the individual responsibility to abide by all export laws.

BOEING PROPRIETARY

Copyright © 1999-2016 The Boeing Company. All rights reserved.

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle Washington 98124.



Lights Index	Chapter Lights Section Index
-----------------	---------------------------------

<b>A</b>	
A/P .....	4.1
A/T .....	4.1
AFT - Cargo Fire and FIRE WARN .....	8.13
AFT CARGO .....	1.2
AFT ENTRY .....	1.6
AFT SERVICE .....	1.14
ALIGN and FAULT - IRS .....	11.10
ALT DISAGREE .....	10.6
ALTN - EEC .....	7.13
ANTISKID INOP .....	14.1
AOA DISAGREE .....	10.7
APU - Fire and FIRE WARN .....	8.1
APU DET INOP .....	8.12
AUTO BRAKE DISARM .....	14.3
AUTO FAIL .....	2.4
AUTO SLAT FAIL .....	9.6
AUTO UNLK .....	1.1
AUX PITOT .....	3.5
<b>B</b>	
BAT DISCHARGE .....	6.1
BLEED TRIP OFF .....	2.7
BRAKE TEMP .....	14.6
<b>C</b>	
CABIN ALTITUDE .....	2.1

CAPT PITOT .....	3.5
CDS FAULT .....	10.7
CONFIG .....	12.1
COWL ANTI-ICE .....	3.1
COWL VALVE OPEN - Engine Anti-ice.....	3.2

**D**

DC FAIL .....	11.8
DETECTOR FAULT .....	8.15
DISPLAYS CONTROL PANEL .....	10.9
DRIVE.....	6.2
DSPLY SOURCE .....	10.10
DSPLY SOURCE .....	10.12
DUAL BLEED .....	2.13
DUCT OVERHEAT .....	2.14

**E**

ELEC .....	6.3
ELT .....	1.4
ENG 1 OVERHEAT .....	8.5
ENG 2 OVERHEAT .....	8.5
ENG FAIL (both).....	7.6
ENG FAIL (single) .....	7.16
Engine 1 - Fire and FIRE WARN .....	8.2
Engine 2 - Fire and FIRE WARN .....	8.2
ENGINE CONTROL .....	7.15
EQUIP.....	1.7

**F**

F/O PITOT .....	3.5
-----------------	-----

FAULT - APU .....	7.11
FAULT - Engine Fire/Overheat Detector .....	8.16
FAULT - IRS .....	11.10
FAULT and ALIGN - IRS.....	11.10
FEEL DIFF PRESS .....	9.7
FILTER BYPASS.....	12.5
FIRE WARN and AFT - Cargo Fire.....	8.13
FIRE WARN and APU - Fire .....	8.1
FIRE WARN and Engine 1 - Fire .....	8.2
FIRE WARN and Engine 2 - Fire .....	8.2
FIRE WARN and FWD - Cargo Fire .....	8.13
FIRE WARN and WHEEL WELL - Fire.....	8.22
FMC - CDU Alerting .....	11.7
FMC - FMC DISAGREE - VERTICAL.....	11.2
FMC - FMC DISAGREE .....	11.1
FMC - FMC FAIL .....	11.4
FMC and MSG - CDU Alerting .....	11.7
FMC and MSG - FMC DISAGREE - VERTICAL.....	11.2
FMC and MSG - FMC DISAGREE.....	11.1
FMC DISAGREE - VERTICAL .....	11.2
FMC DISAGREE.....	11.1
FWD - Cargo Fire and FIRE WARN .....	8.13
FWD CARGO .....	1.2
FWD ENTRY.....	1.6
FWD SERVICE.....	1.14

**G**

GEN OFF BUS, SOURCE OFF and TRANSFER BUS OFF (both sides) .....	6.4
--	-----

GLS .....	11.7
GPS .....	11.7

**I**

IAS DISAGREE .....	10.14
ILS .....	11.8
IMBAL .....	12.15
INOP - Ground Proximity .....	15.3
INOP - High Altitude Landing .....	2.15

**L**

L ALPHA VANE .....	3.5
L ELEV PITOT .....	3.5
L VALVE OPEN - Wing Anti-ice .....	3.7
LE FLAPS TRANSIT .....	9.12
LEFT AFT OVERWING .....	1.12
LEFT FWD OVERWING .....	1.12
LEFT GEAR .....	14.8
LEFT OVERWING .....	1.11
LOCK FAIL .....	1.10
LOW OIL PRESSURE - APU .....	7.12
LOW OIL PRESSURE - Engine .....	7.28
LOW PRESSURE - Flight Control .....	9.7
LOW PRESSURE - Fuel Pump .....	12.12
LOW PRESSURE - Hydraulic Pump - Standby ....	13.18
LOW PRESSURE - Hydraulic Pump - System A (both) .....	13.3
LOW PRESSURE - Hydraulic Pump - System A and B .....	13.12

LOW PRESSURE - Hydraulic Pump - System B (both) .....	13.6
LOW PRESSURE - Hydraulic Pump (single) .....	13.1
LOW QUANTITY .....	13.18
LOW .....	12.18

**M**

MACH TRIM FAIL .....	9.16
MSG and FMC - CDU Alerting .....	11.7
MSG and FMC - FMC DISAGREE - VERTICAL .....	11.2
MSG and FMC - FMC DISAGREE .....	11.1

**N**

NOSE GEAR .....	14.8
NOT ARMED .....	1.5

**O**

OFF - Equipment Cooling .....	2.15
OFF - Flight Recorder .....	10.14
OFF SCHED DESCENT .....	2.16
OIL FILTER BYPASS .....	7.29
ON DC .....	11.14
OVER SPEED - APU .....	7.12
OVERHEAT - Hydraulic Pump .....	13.2
OVERHEAT - Window .....	3.6

**P**

PACK TRIP OFF .....	2.22
PACK .....	2.18
PASS OXY ON - Chemical oxygen .....	1.12

PASS OXY ON - Gaseous oxygen .....	1.13
PSEU .....	15.4

**R**

R ALPHA VANE .....	3.5
R ELEV PITOT .....	3.5
R VALVE OPEN - Wing Anti-ice .....	3.7
REV .....	7.34
REVERSER.....	7.33
RIGHT AFT OVERWING.....	1.12
RIGHT FWD OVERWING .....	1.12
RIGHT GEAR.....	14.8
RIGHT OVERWING.....	1.11
ROLL AUTHORITY .....	4.2
ROLL/YAW ASYMMETRY.....	4.3

**S**

SOURCE OFF (both) .....	6.4
SOURCE OFF (single) .....	6.12
SOURCE OFF, TRANSFER BUS OFF and GEN OFF BUS (both sides) .....	6.4
SPEED BRAKE DO NOT ARM - With Load Alleviation System.....	9.17
SPEED BRAKE DO NOT ARM - Without Load Alleviation System.....	9.20
SPEED TRIM FAIL .....	9.21
SPEEDBRAKES EXTENDED .....	9.21
STAB OUT OF TRIM .....	9.22
STANDBY PWR OFF.....	6.14
START VALVE OPEN .....	7.36



STBY RUD ON .....	9.28
<b>T</b>	
TAI .....	3.2
TAKEOFF CONFIG.....	15.1
TEMP PROBE .....	3.5
TR UNIT.....	6.14
TRANSFER BUS OFF.....	6.15
TRANSFER BUS OFF, SOURCE OFF and GEN OFF Bus (both sides) .....	6.4
<b>U</b>	
UNABLE REQD NAV PERF - RNP .....	11.15
<b>V</b>	
VALVE OPEN - Crossfeed .....	12.2
<b>W</b>	
WHEEL WELL - Fire and FIRE WARN .....	8.22
WING-BODY OVERHEAT .....	2.25
WING-BODY OVERHEAT .....	2.30
<b>Y</b>	
YAW DAMPER .....	9.44
<b>Z</b>	
ZONE TEMP .....	2.36

Intentionally  
Blank



**Unannunciated  
Index**

**Chapter Unann  
Section Index**

**Aborted Engine Start..... 7.1**  
ACARS Electrical Power Loss ..... 5.1  
ACARS MU Fail or DU Fail ..... 5.1  
ADS-B Out Failure ..... 11.1  
**Airspeed Unreliable..... 10.1**  
All Flaps Up Landing ..... 9.4  
Brake Pressure Indicator Zero PSI ..... 14.5  
Cabin Temperature Hot ..... 2.8  
Display Failure ..... 10.8  
Ditching ..... 0.4  
Elevator Tab Vibration ..... 9.6  
**Emergency Descent..... 0.1**  
Engine Failure or Shutdown ..... 7.16  
Engine High Oil Temperature ..... 7.20  
Engine High Vibration ..... 7.22  
Engine In-Flight Start ..... 7.24  
**Engine Limit or Surge or Stall ..... 7.2**  
**Engine Severe Damage or Separation ..... 8.2**  
**Engine Tailpipe Fire ..... 8.6**  
**Evacuation ..... Back Cover.2**  
Fuel Leak Engine ..... 12.6  
Fuel Quantity Indication Inoperative ..... 12.13  
Fuel Temperature Low ..... 12.14  
Ice Crystal Icing..... 3.3  
Jammed or Restricted Flight Controls ..... 9.8  
Landing Gear Lever Jammed in the Up Position 14.12

---

Landing Gear Lever Will Not Move Up After Takeoff .....	14.16
<b>Loss Of Thrust On Both Engines .....</b>	<b>7.6</b>
Manual Gear Extension.....	14.20
One Engine Inoperative Landing.....	7.30
Overspeed.....	15.3
Partial or All Gear Up Landing .....	14.22
Radio Transmit Continuous (Stuck Microphone Switch) .....	5.1
<b>Rapid Depressurization .....</b>	<b>2.1</b>
<b>Runaway Stabilizer .....</b>	<b>9.1</b>
Smoke or Fumes Removal .....	8.18
<b>Smoke, Fire or Fumes .....</b>	<b>8.8</b>
Stabilizer Trim Inoperative .....	9.24
Tail Strike .....	15.5
Trailing Edge Flap Asymmetry.....	9.29
Trailing Edge Flap Disagree.....	9.34
Trailing Edge Flaps Up Landing.....	9.40
Unscheduled Pressurization Change .....	2.4
Volcanic Ash .....	7.38
Window Damage - Forward (L1, L2, R1, R2) .....	1.16
Window Damage - Unheated Side (L3, R3) .....	1.20
Window Damage - Upper (L4, L5, R4, R5) .....	1.24
Window Open .....	1.28



**A**

A/P ..... 4.1

A/T ..... 4.1

**Aborted Engine Start..... 7.1**

ACARS Electrical Power Loss ..... 5.1

ACARS MU Fail or DU Fail ..... 5.1

ADS-B Out Failure ..... 11.1

AFT - Cargo Fire and FIRE WARN ..... 8.13

AFT CARGO ..... 1.2

AFT ENTRY ..... 1.6

AFT SERVICE ..... 1.14

**Airspeed Unreliable..... 10.1**

ALIGN and FAULT - IRS..... 11.10

All Flaps Up Landing ..... 9.4

ALT DISAGREE ..... 10.6

ALTN - EEC ..... 7.13

ANTISKID INOP ..... 14.1

ANTISKID INOPERATIVE ..... 14.1

AOA DISAGREE ..... 10.7

APU - Fire and FIRE WARN ..... 8.1

APU DET INOP ..... 8.12

APU DETECTION INOPERATIVE ..... 8.12

APU FAULT ..... 7.11

**APU FIRE ..... 8.1**

APU LOW OIL PRESSURE ..... 7.12

APU OVERSPEED ..... 7.12

AUTO BRAKE DISARM .....	14.3
AUTO FAIL .....	2.4
AUTO SLAT FAIL .....	9.6
AUTO UNLK .....	1.1
AUTOMATIC UNLOCK .....	1.1
AUTOPILOT DISENGAGE .....	4.1
AUTOTHROTTLE DISENGAGE .....	4.1
AUX PITOT .....	3.5

**B**

BAT DISCHARGE .....	6.1
BATTERY DISCHARGE .....	6.1
BLEED TRIP OFF .....	2.7
Brake Pressure Indicator Zero PSI .....	14.5
BRAKE TEMP.....	14.6
BRAKE TEMPERATURE .....	14.6

**C****CABIN ALTITUDE WARNING ..... 2.1**

CABIN ALTITUDE.....	2.1
Cabin Temperature Hot .....	2.8
CAPT PITOT .....	3.5
CARGO DOOR .....	1.2
CARGO FIRE .....	8.13
CARGO FIRE DETECTOR FAULT .....	8.15
CDS FAULT .....	10.7
CONFIG .....	12.1
COWL ANTI-ICE .....	3.1
COWL VALVE OPEN - Engine Anti-ice.....	3.2

CROSSFEED SELECTOR INOPERATIVE ..... 12.2

**D**

DC FAIL ..... 11.8  
DETECTOR FAULT ..... 8.15  
Display Failure ..... 10.8  
DISPLAY SOURCE ..... 10.10  
DISPLAY SOURCE ..... 10.12  
DISPLAYS CONTROL PANEL ..... 10.9  
Ditching ..... 0.4  
DRIVE ..... 6.2  
DSPLY SOURCE ..... 10.10  
DSPLY SOURCE ..... 10.12  
DUAL BLEED ..... 2.13  
DUCT OVERHEAT ..... 2.14

**E**

EEC ALTERNATE MODE ..... 7.13  
ELEC ..... 6.3  
Elevator Tab Vibration ..... 9.6  
ELT ..... 1.4

**Emergency Descent.....0.1**

EMERGENCY EXIT LIGHTS NOT ARMED ..... 1.5  
ENG 1 OVERHEAT ..... 8.5  
ENG 2 OVERHEAT ..... 8.5  
ENG FAIL (both) ..... 7.6  
ENG FAIL (single) ..... 7.16  
Engine 1 - Fire and FIRE WARN ..... 8.2  
Engine 2 - Fire and FIRE WARN ..... 8.2

ENGINE CONTROL .....	7.15
ENGINE COWL ANTI-ICE .....	3.1
ENGINE COWL VALVE OPEN OR TAI INDICATION	3.2
Engine Failure or Shutdown .....	7.16
<b>ENGINE FIRE.....</b>	<b>8.2</b>
ENGINE FIRE/OVERHEAT DETECTOR FAULT .....	8.16
Engine High Oil Temperature .....	7.20
Engine High Vibration .....	7.22
Engine In-Flight Start .....	7.24
<b>Engine Limit or Surge or Stall .....</b>	<b>7.2</b>
ENGINE LOW OIL PRESSURE .....	7.28
ENGINE OIL FILTER BYPASS .....	7.29
<b>ENGINE OVERHEAT .....</b>	<b>8.5</b>
<b>Engine Severe Damage or Separation .....</b>	<b>8.2</b>
<b>Engine Tailpipe Fire.....</b>	<b>8.6</b>
ENTRY DOOR .....	1.6
EQUIP.....	1.7
EQUIPMENT COOLING OFF .....	2.15
EQUIPMENT DOOR .....	1.7
<b>Evacuation .....</b>	<b>Back Cover.2</b>
<b>F</b>	
F/O PITOT .....	3.5
FAULT - APU .....	7.11
FAULT - Engine Fire/Overheat Detector .....	8.16
FAULT - IRS .....	11.10
FAULT and ALIGN - IRS.....	11.10
FEEL DIFF PRESS .....	9.7



FEEL DIFFERENTIAL PRESSURE .....	9.7
FILTER BYPASS .....	12.5
FIRE WARN and AFT - Cargo Fire .....	8.13
FIRE WARN and APU - Fire .....	8.1
FIRE WARN and Engine 1 - Fire .....	8.2
FIRE WARN and Engine 2 - Fire .....	8.2
FIRE WARN and FWD - Cargo Fire .....	8.13
FIRE WARN and WHEEL WELL - Fire .....	8.22
FLIGHT CONTROL LOW PRESSURE .....	9.7
FLIGHT RECORDER OFF .....	10.14
FMC - CDU Alerting .....	11.7
FMC - FMC DISAGREE - VERTICAL .....	11.2
FMC - FMC DISAGREE .....	11.1
FMC - FMC FAIL .....	11.4
FMC and MSG - CDU Alerting .....	11.7
FMC and MSG - FMC DISAGREE - VERTICAL .....	11.2
FMC and MSG - FMC DISAGREE .....	11.1
FMC DISAGREE - VERTICAL .....	11.2
FMC DISAGREE .....	11.1
FMC FAIL .....	11.4
FMC/CDU ALERTING MESSAGE .....	11.7
FUEL FILTER BYPASS .....	12.5
Fuel Leak Engine .....	12.6
FUEL PUMP LOW PRESSURE .....	12.12
Fuel Quantity Indication Inoperative .....	12.13
Fuel Temperature Low .....	12.14
FWD - Cargo Fire and FIRE WARN .....	8.13
FWD CARGO .....	1.2

---

FWD ENTRY .....	1.6
FWD SERVICE .....	1.14

**G**

GEAR DISAGREE .....	14.8
GEN OFF BUS, SOURCE OFF and TRANSFER BUS OFF (both sides) .....	6.4
GLS .....	11.7
GPS .....	11.7
GROUND PROXIMITY INOPERATIVE .....	15.3

**H**

HIGH ALTITUDE LANDING INOPERATIVE .....	2.15
HYDRAULIC PUMP LOW PRESSURE .....	13.1
HYDRAULIC PUMP OVERHEAT .....	13.2

**I**

IAS DISAGREE .....	10.14
Ice Crystal Icing .....	3.3
ILS .....	11.8
IMBAL .....	12.15
INOP - Ground Proximity .....	15.3
INOP - High Altitude Landing .....	2.15
IRS DC FAIL .....	11.8
IRS FAULT .....	11.10
IRS ON DC .....	11.14

**J**

Jammed or Restricted Flight Controls .....	9.8
--	-----

**L**

L ALPHA VANE .....	3.5
L ELEV PITOT .....	3.5
L VALVE OPEN - Wing Anti-ice.....	3.7
<b>LANDING CONFIGURATION .....</b>	<b>15.1</b>
Landing Gear Lever Jammed in the Up Position	14.12
Landing Gear Lever Will Not Move Up After Takeoff .....	14.16
LE FLAPS TRANSIT .....	9.12
LEADING EDGE FLAPS TRANSIT .....	9.12
LEFT AFT OVERWING.....	1.12
LEFT FWD OVERWING.....	1.12
LEFT GEAR .....	14.8
LEFT OVERWING .....	1.11
LOCK FAIL .....	1.10
LOSS OF BOTH ENGINE DRIVEN GENERATORS ...	6.4
LOSS OF SYSTEM A .....	13.3
LOSS OF SYSTEM A AND SYSTEM B .....	13.12
LOSS OF SYSTEM B .....	13.6
<b>Loss Of Thrust On Both Engines .....</b>	<b>7.6</b>
LOW .....	12.18
LOW OIL PRESSURE - APU.....	7.12
LOW OIL PRESSURE - Engine.....	7.28
LOW PRESSURE - Flight Control .....	9.7
LOW PRESSURE - Fuel Pump .....	12.12
LOW PRESSURE - Hydraulic Pump - Standby....	13.18
LOW PRESSURE - Hydraulic Pump - System A (both) .....	13.3

LOW PRESSURE - Hydraulic Pump - System A and B .....	13.12
LOW PRESSURE - Hydraulic Pump - System B (both) .....	13.6
LOW PRESSURE - Hydraulic Pump (single) .....	13.1
LOW QUANTITY .....	13.18

**M**

MACH TRIM FAIL .....	9.16
Manual Gear Extension.....	14.20
MANUAL REVERSION .....	13.12
MSG and FMC - CDU Alerting .....	11.7
MSG and FMC - FMC DISAGREE - VERTICAL.....	11.2
MSG and FMC - FMC DISAGREE.....	11.1

**N**

NOSE GEAR .....	14.8
NOT ARMED .....	1.5

**O**

OFF - Equipment Cooling .....	2.15
OFF - Flight Recorder .....	10.14
OFF SCHED DESCENT .....	2.16
OFF SCHEDULE DESCENT .....	2.16
OIL FILTER BYPASS .....	7.29
ON DC .....	11.14
One Engine Inoperative Landing.....	7.30
OVER SPEED - APU.....	7.12
OVERHEAT - Hydraulic Pump .....	13.2
OVERHEAT - Window .....	3.6

Overspeed .....	15.3
OVERWING DOOR .....	1.11
OVERWING DOOR .....	1.12

**P**

PACK .....	2.18
PACK TRIP OFF .....	2.22
Partial or All Gear Up Landing .....	14.22
PASS OXY ON - Chemical oxygen .....	1.12
PASS OXY ON - Gaseous oxygen .....	1.13
PASSENGER OXYGEN ON .....	1.12
PASSENGER OXYGEN ON .....	1.13
PROBE HEAT .....	3.5
PSEU .....	15.4

**R**

R ALPHA VANE .....	3.5
R ELEV PITOT .....	3.5
R VALVE OPEN - Wing Anti-ice .....	3.7
Radio Transmit Continuous (Stuck Microphone Switch) .....	5.1

**Rapid Depressurization .....** **2.1**

REV .....	7.34
REVERSER .....	7.33
REVERSER UNLOCKED (IN FLIGHT) .....	7.34
RIGHT AFT OVERWING .....	1.12
RIGHT FWD OVERWING .....	1.12
RIGHT GEAR .....	14.8
RIGHT OVERWING .....	1.11

ROLL AUTHORITY .....	4.2
ROLL/YAW ASYMMETRY .....	4.3
<b>Runaway Stabilizer .....</b>	<b>9.1</b>

**S**

SERVICE DOOR .....	1.14
Smoke or Fumes Removal .....	8.18
<b>Smoke, Fire or Fumes .....</b>	<b>8.8</b>
SOURCE OFF .....	6.12
SOURCE OFF (both) .....	6.4
SOURCE OFF, TRANSFER BUS OFF and GEN OFF BUS (both sides) .....	6.4
SPEED BRAKE DO NOT ARM .....	9.17
SPEED BRAKE DO NOT ARM .....	9.20
SPEED TRIM FAIL .....	9.21
SPEEDBRAKES EXTENDED .....	9.21
STAB OUT OF TRIM .....	9.22
STABILIZER OUT OF TRIM .....	9.22
Stabilizer Trim Inoperative .....	9.24
STANDBY HYDRAULIC LOW PRESSURE .....	13.18
STANDBY HYDRAULIC LOW QUANTITY .....	13.18
STANDBY POWER OFF .....	6.14
STANDBY PWR OFF .....	6.14
STANDBY RUDDER ON .....	9.28
START VALVE OPEN .....	7.36
STBY RUD ON .....	9.28

**T**

TAI .....	3.2
-----------	-----

Tail Strike .....	15.5
TAKEOFF CONFIG.....	15.1
<b>TAKEOFF CONFIGURATION .....</b>	<b>15.1</b>
TEMP PROBE .....	3.5
TR UNIT .....	6.14
Trailing Edge Flap Asymmetry.....	9.29
Trailing Edge Flap Disagree .....	9.34
Trailing Edge Flaps Up Landing.....	9.40
TRANSFER BUS OFF .....	6.15
TRANSFER BUS OFF, SOURCE OFF and GEN OFF (both sides).....	6.4

**U**

UNABLE REQD NAV PERF - RNP .....	11.15
Unscheduled Pressurization Change .....	2.4

**V**

VALVE OPEN - Crossfeed .....	12.2
Volcanic Ash .....	7.38

**W**

<b>WARNING HORN (INTERMITTENT) .....</b>	<b>15.2</b>
<b>WARNING LIGHT - CABIN ALTITUDE OR TAKE-OFF CONFIGURATION .....</b>	<b>15.2</b>
WHEEL WELL - Fire and FIRE WARN.....	8.22
WHEEL WELL FIRE .....	8.22
Window Damage - Forward (L1, L2, R1, R2) .....	1.16
Window Damage - Unheated Side (L3, R3) .....	1.20
Window Damage - Upper (L4, L5, R4, R5) .....	1.24
Window Open .....	1.28

WINDOW OVERHEAT .....	3.6
WING ANTI-ICE VALVE OPEN .....	3.7
WING-BODY OVERHEAT .....	2.25
WING-BODY OVERHEAT .....	2.30
<b>Y</b>	
YAW DAMPER .....	9.44
<b>Z</b>	
ZONE TEMP .....	2.36





Note: Accomplish De-icing/Anti-icing Checklist if operating in icing conditions.

---

**PREFLIGHT**

- Pins/pitot covers** . . . . . **Removed**
- Oxygen** . . . . . **Tested, 100%**
- Navigation transfer and display switches** . . . . . **NORMAL, AUTO**
- Emergency exit lights** . . . . . **ARMED**
- Window heat** . . . . . **ON**
- Pressurization mode selector** . . . . . **AUTO**
- Flight instruments** . . . . . **Heading \_\_\_\_, Altimeter \_\_\_\_**
- Parking brake** . . . . . **Set**
- Engine start levers** . . . . . **CUTOFF**
- COMM/WXR/XPNDR** . . . . . **Set**



**BEFORE START**

- Papers ..... Aboard
- Flight deck door .....Closed and locked
- Fuel ..... \_\_ KGS, Pumps ON
- Passenger signs .....ON
- Windows ..... Locked
- EFB .....Secured, Plug off
- MCP .....V2 \_\_, HEADING \_\_, ALTITUDE \_\_
- Takeoff speeds ..... V1 \_\_, VR \_\_, V2 \_\_
- CDU preflight ..... Completed
- Rudder and aileron trim ..... Free and 0
- Taxi and takeoff briefing ..... Completed
- Anti collision light .....ON

**BEFORE TAXI**

- Generators ..... On
- Probe heat .....ON
- Anti-ice .....ON/OFF
- Isolation valve ..... AUTO
- Engine start switches ..... CONT
- Recall ..... Checked
- Autobrake .....RTO
- Engine start levers ..... IDLE detent
- Flight controls ..... Checked
- Ground equipment ..... Clear



737 Flight Crew Operations Manual

**BEFORE TAKEOFF**

Flaps ..... \_\_\_\_, Green light  
Stabilizer trim ..... \_\_ Units

**AFTER TAKEOFF**

Engine bleeds ..... ON  
Packs ..... AUTO  
Landing gear ..... UP and OFF  
Flaps ..... UP, No lights

**DESCENT**

Pressurization ..... LAND ALT \_\_  
Recall ..... Checked  
MCP (inbound course, autopilot) ..... Checked  
Autobrake ..... \_\_  
Landing data ..... VREF \_\_, Minimums \_\_  
Approach briefing ..... Completed

**APPROACH**

Altimeters ..... \_\_  
Navigation aids ..... Tuned  
EFB ..... Secured, Plug off

**LANDING**

Engine start switches ..... CONT  
Speedbrake ..... ARMED  
Landing gear ..... Down  
Flaps ..... \_\_\_\_, Green light




---



---

## SHUTDOWN

Fuel pumps . . . . .	OFF
Passenger signs . . . . .	OFF
Probe heat . . . . .	AUTO
Electric Hydraulic pumps . . . . .	OFF
Anti collision light . . . . .	OFF
Engine start switches . . . . .	OFF
Flaps . . . . .	UP, No lights
Parking brake . . . . .	___
Engine start levers . . . . .	CUTOFF
Weather radar . . . . .	Off

---

## SECURE

IRSs . . . . .	OFF
Emergency exit lights . . . . .	OFF
Window heat . . . . .	OFF
Packs . . . . .	OFF



**Table of Contents**

**Emergency Descent.....0.1**  
 -----  
 Ditching.....0.4  
**Emergency Descent.....0.1**



## Table of Contents

Intentionally  
Blank

## Emergency Descent

Condition: One or more of these occur:

- Cabin altitude cannot be controlled
- A rapid descent is needed.

- 1 Announce the emergency descent. The pilot flying will advise the cabin crew, on the PA system, of impending rapid descent. The pilot monitoring will advise ATC and obtain the area altimeter setting.
- 2 Passenger signs . . . . . ON
- 3 **Without delay**, descend to the lowest safe altitude or 10,000 feet, whichever is higher.
- 4 ENGINE START switches (both) . . . . . CONT
- 5 Thrust levers (both) . . . . . Reduce thrust to minimum or as needed for anti-ice
- 6 Speedbrake . . . . . FLIGHT DETENT

If structural integrity is in doubt, limit speed as much as possible and avoid high maneuvering loads.

- 7  Set target speed to Mmo/Vmo.
- 

▼ Continued on next page ▼

▼Emergency Descent continued ▼

YM482 - YN534

**Caution!** When gross weight is greater than 64,864 kgs, speed brake will autostow to the 50% flight detent if airspeed exceeds 320 knots. Do not override autostow function unless airspeed is less than 320 knots.

8 **When** approaching the level off altitude:

Smoothly lower the SPEED BRAKE lever to the DOWN detent and level off. Add thrust and stabilize on altitude and airspeed.

9 Crew oxygen regulators. . . . . Normal

Flight crew must use oxygen when cabin altitude is above 10,000 feet. To conserve oxygen, move the regulator to Normal.

10 ENGINE START switches (both) . . . . .As needed

11 The new course of action is based on weather, oxygen, fuel remaining and available airports. Use of long range cruise may be needed.





Intentionally  
Blank

# Ditching

Condition: Airplane ditching and evacuation are needed.

- 1 Send distress signals. Determine position, course, speed, altitude, situation, intention, time and position of intended touchdown and transmit mayday. Report type of aircraft and request intercept.
- 2 Alert the cabin crew to prepare for ditching and seat passengers as far forward as possible.
- 3 Burn off fuel to reduce touchdown speed and increase buoyancy.
- 4 Plan to touch down on the windward side and parallel to waves and swells.
- 5 Plan a flaps 40 landing unless another configuration is needed.
- 6 Set VREF 40.
- 7 Do **not** arm the autobrake.
- 8 Do **not** accomplish the normal landing checklist.
- 9 **Checklist Complete Except Deferred Items**

## Deferred Items

### Descent Checklist

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- Autobrake . . . . . **OFF**
- Landing data . . . . . **VREF 40** \_\_\_\_

▼ Continued on next page ▼

**▼ Ditching continued ▼**

Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_

**Below 5000 feet**

LANDING GEAR AURAL WARN

circuit breaker (P6-3:D18) . . . . . Pull

This prevents the warning horn with gear retracted and landing flaps selected.

The flight deck chime for an incoming call from the cabin crew is unavailable.

Passenger signs . . . . . ON

Engine BLEED air switches (both) . . . . . OFF

This allows the airplane to be depressurized with the outflow valve closed.

Pressurization mode selector . . . . . MAN

Outflow VALVE switch . . . . . Hold in CLOSE  
until the outflow VALVE  
indication shows fully closed

This prevents water from entering the airplane.

**Note:** The outflow valve takes up to 20 seconds to close.

APU switch . . . . . OFF

GROUND PROXIMITY GEAR

INHIBIT switch . . . . . GEAR INHIBIT

**▼ Continued on next page ▼**

▼ Ditching continued ▼

GROUND PROXIMITY TERR

INHIBIT switch . . . . . TERR INHIBIT

Life vests, shoulder harnesses and seat belts . . . On

Confirm that passenger cabin preparations are complete.

**Caution! Do not open aft entry or service doors as they may be partially submerged.**

Transmit all pertinent information regarding final ditching position.

### After Impact Procedure Review

Set both engine start levers to CUTOFF. This closes fuel shutoff valves to prevent discharge of fuel from ruptured fuel lines.

Open flight deck windows. This ensures no cabin differential pressure prevents the opening of the doors or emergency exits.

Start the evacuation.

Proceed to assigned ditching stations, launch rafts and evacuate the airplane as soon as practicable.

The airplane may stay afloat indefinitely if fuel load is minimal and no serious damage was sustained during landing.

▼ Continued on next page ▼

**▼ Ditching continued ▼****Ditching Final**

LANDING GEAR lever. . . . . UP and OFF

Flaps . . . . . \_\_\_\_\_, Green light

At **500 feet**, advise the cabin crew that ditching is imminent.

At **50 feet**, advise the cabin crew to brace for impact.

Maintain airspeed at VREF. Flare the airplane to achieve the minimum rate of descent at touchdown. Maintain 200-300 fpm rate of descent until the start of the flare.

At flare, rotate smoothly to a touchdown attitude of 10-12°. Maintain airspeed and rate of descent with thrust.

At touchdown, reduce thrust to idle.





Intentionally  
Blank



**Table of Contents**

AUTOMATIC UNLOCK ..... 1.1

CARGO DOOR ..... 1.2

ELT ..... 1.4

EMERGENCY EXIT LIGHTS NOT ARMED ..... 1.5

ENTRY DOOR..... 1.6

EQUIPMENT DOOR ..... 1.7

LOCK FAIL..... 1.10

OVERWING DOOR ..... 1.11

OVERWING DOOR ..... 1.12

PASSENGER OXYGEN ON..... 1.12

PASSENGER OXYGEN ON..... 1.13

SERVICE DOOR..... 1.14

Tail Strike ..... ►► 15.5

Window Damage - Forward (L1, L2, R1, R2) ..... 1.16

Window Damage - Unheated Side (L3, R3) ..... 1.20

Window Damage - Upper (L4, L5, R4, R5) ..... 1.24

Window Open ..... 1.28

## Table of Contents

Intentionally  
Blank



**AUTO  
UNLK****AUTOMATIC UNLOCK****YA707 - YV767**

Condition: The correct emergency access code is entered.

Objective: To deny unauthorized access to the flight deck before the door automatically unlocks.

- 1 FLT DK DOOR lock selector . . . . . Rotate to DENY and hold for 1 second



**CARGO DOOR**

**FWD  
CARGO**

**AFT  
CARGO**

Condition: One or more cargo doors are not closed and secure.

1 Choose one:

◆ Pressurization is **normal**:

The door is in a safe configuration.  
Continue normal operation.



◆ Pressurization is **not** normal:

▶▶ **Go to step 2**

2 Don oxygen masks.

3 Establish crew communications.

4 Passenger signs . . . . .ON

5 Choose one:

◆ Airplane **has** reached the planned cruise altitude:

▶▶ **Go to step 6**

◆ Airplane has **not** reached the planned cruise altitude:

Do **not** continue the climb.

Reset the FLT ALT indicator to the actual airplane altitude.

▶▶ **Go to step 6**

▼ Continued on next page ▼

▼ **CARGO DOOR** continued ▼

6 LAND ALT indicator. . . . . 9,000 feet

7 Choose one:

◆ Minimum safe altitude is **at or below 9000 feet:**

▶▶ **Go to step 8**

◆ Minimum safe altitude is **between 9000 feet and 13,000 feet:**

▶▶ **Go to step 10**

◆ Minimum safe altitude is **at or above 13,000 feet:**

▶▶ **Go to step 12**

8 Descend to 9000 feet.

9 Maintain a cabin differential pressure of 0 psi by limiting flight altitude to 9000 feet.

▶▶ **Go to step 15**

10 Descend to the minimum safe altitude.

11 LAND ALT indicator. . . . . Select a higher altitude (maximum 13,000 feet) to maintain a cabin differential pressure of 0 psi

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

▶▶ **Go to step 15**


 ▼ **Continued on next page** ▼

▼ CARGO DOOR continued ▼

12 Descend to the minimum safe altitude.

13 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

14  Outflow VALVE switch . . . . Move to OPEN until the outflow VALVE indication shows fully open to depressurize the airplane

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

15 Plan to land at the nearest suitable airport.

16 **When** the cabin altitude is at or below 10,000 feet:

Oxygen masks may be removed.



Condition: The emergency locator transmitter is on.



**A  
R  
M  
E  
D****EMERGENCY EXIT LIGHTS  
NOT ARMED**

Condition: The emergency exit lights switch is not ARMED.

1 Choose one:

◆ EMER EXIT LIGHTS switch is **ON**:

Individual emergency exit light batteries supply a minimum of 10 minutes of lighting.



◆ EMER EXIT LIGHTS switch is **OFF**:

Emergency lighting is not available.



**ENTRY DOOR**

**FWD  
ENTRY**

**AFT  
ENTRY**

Condition: One or more entry doors are not closed and secure.

1 Instruct the cabin crew to verify that the door handle is in the closed position or to move the handle to the closed position if possible.

2 Choose one:

◆ Handle is in the **closed** position:

▶▶ **Go to step 3**

◆ Handle is **not** in the closed position:

Plan to land at the nearest suitable airport.



3 Choose one:

◆ Pressurization is **normal**:

The door is in a safe configuration.  
Continue normal operation.



◆ Pressurization is **not** normal:

Plan to land at the nearest suitable airport.



**EQUIP****EQUIPMENT DOOR**

Condition: The equipment door is not closed and secure.

1 Choose one:

◆ Pressurization is **normal**:

The door is in a safe configuration.  
Continue normal operation.



◆ Pressurization is **not** normal:

▶▶ **Go to step 2**

2 Don oxygen masks.

3 Establish crew communications.

4 Passenger signs . . . . . ON

5 Choose one:

◆ Airplane **has** reached the planned cruise altitude:

▶▶ **Go to step 6**

◆ Airplane has **not** reached the planned cruise altitude:

Do **not** continue the climb.

Reset the FLT ALT indicator to the actual airplane altitude.

▶▶ **Go to step 6**

6 LAND ALT indicator . . . . . 9,000 feet

▼ **Continued on next page** ▼

## ▼ EQUIPMENT DOOR continued ▼

7 Choose one:

◆ Minimum safe altitude is **at or below 9000 feet:**

▶▶ **Go to step 8**

◆ Minimum safe altitude is **between 9000 feet and 13,000 feet:**

▶▶ **Go to step 10**

◆ Minimum safe altitude is **at or above 13,000 feet:**

▶▶ **Go to step 12**

8 Descend to 9000 feet.

9 Maintain a cabin differential pressure of 0 psi by limiting flight altitude to 9000 feet.

▶▶ **Go to step 15**

10 Descend to the minimum safe altitude.

11 LAND ALT indicator . . . . Select a higher altitude (maximum 13,000 feet) to maintain a cabin differential pressure of 0 psi

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

▶▶ **Go to step 15**

12 Descend to the minimum safe altitude.


▼ Continued on next page ▼



## ▼ EQUIPMENT DOOR continued ▼

13 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

14  Outflow VALVE switch . . . . Move to OPEN until the outflow VALVE indication shows fully open to depressurize the airplane

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

15 Plan to land at the nearest suitable airport.

16 **When** the cabin altitude is at or below 10,000 feet:  
Oxygen masks may be removed.



**LOCK  
FAIL**
**LOCK FAIL**
**YA707 - YV767**

Condition: One or more of these occur:

- The FLIGHT DECK ACCESS SYSTEM switch is OFF
- The lock is failed.

Objective: To remove electrical power from the lock to prevent a possible overheat.

Do **if** conditions allow a crew member to leave the seat.

- 1  FLIGHT DECK ACCESS SYSTEM switch . . . . OFF

**Note:** The door can be locked with the dead bolt.



**OVERWING DOOR****B737-700****LEFT  
OVERWING****RIGHT  
OVERWING**

Condition: One or more overwing doors are not closed and secure.

1 Choose one:

◆ Pressurization is **normal**:

The door is in a safe configuration.  
Continue normal operation.



◆ Pressurization is **not** normal:

Plan to land at the nearest suitable airport.



**OVERWING DOOR**

**B737-800**

**LEFT FWD  
OVERWING**

**RIGHT FWD  
OVERWING**

**LEFT AFT  
OVERWING**

**RIGHT AFT  
OVERWING**

Condition: One or more overwing doors are not closed and secure.

1 Choose one:

◆ Pressurization is **normal**:

The door is in a safe configuration.  
Continue normal operation.



◆ Pressurization is **not** normal:

Plan to land at the nearest suitable airport.



**PASS OXY  
ON**

**PASSENGER OXYGEN ON**

**YA701 - YM484, YS151 - YV767**

Condition: The passenger oxygen system is on.



**PASS OXY  
ON****PASSENGER OXYGEN ON****YN531 - YN534**

Condition: The passenger oxygen system is on.

1 **When** passenger oxygen is no longer needed:

PASS OXYGEN switch . . . . . RESET then NORM



**SERVICE DOOR**

**FWD  
SERVICE**

**AFT  
SERVICE**

Condition: One or more service doors are not closed and secure.

- 1 Instruct the cabin crew to verify that the door handle is in the closed position or to move the handle to the closed position if possible.
- 2 Choose one:
  - ◆ Handle is in the **closed** position:
    - ▶▶ **Go to step 3**
  - ◆ Handle is **not** in the closed position:
    - Plan to land at the nearest suitable airport.
    - ■ ■ ■
- 3 Choose one:
  - ◆ Pressurization is **normal**:
    - The door is in a safe configuration.
    - Continue normal operation.
    - ■ ■ ■
  - ◆ Pressurization is **not** normal:
    - Plan to land at the nearest suitable airport.
    - ■ ■ ■



Intentionally  
Blank


## Window Damage - Forward (L1, L2, R1, R2)

Condition: A forward flight deck window has one or more of these:


- An electrical arc
- A delamination
- A crack
- Is shattered.

Objective: To remove electrical power, if needed, to prevent arcing. To reduce differential pressure and descend if the inner pane is shattered or cracked.

### YA701 - YA710

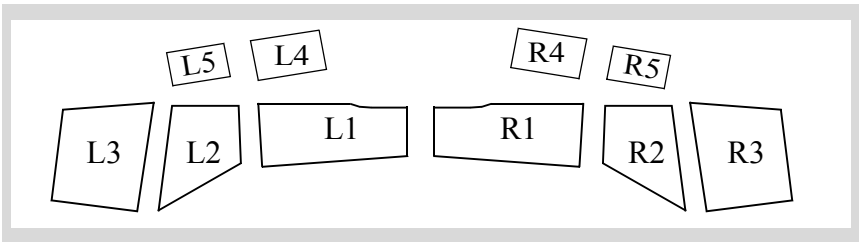

### YF048 - YV767

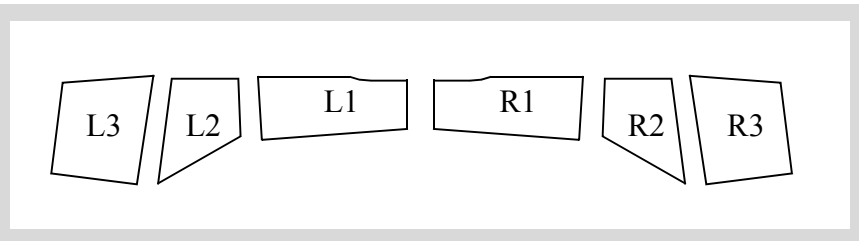

▼ Continued on next page ▼



**▼ Window Damage - Forward (L1, L2, R1, R2) continued ▼**

1 Choose one:

◆ Window is **delaminated** only:

Continue normal operation.

◆ Window is **arcing**:▶▶ **Go to step 2**◆ Window is **cracked** or **shattered**:▶▶ **Go to step 5**

2 WINDOW HEAT switch

(affected window) . . . . . OFF

Limit airspeed to 250 knots maximum below  
10,000 feet.3 Pull both WINDSHIELD AIR controls. This vents  
conditioned air to the inside of the windshield for  
defogging.

4 Continue normal operation.



5 Don seat belts and shoulder harnesses.

6 WINDOW HEAT switch

(affected window) . . . . . OFF

Limit airspeed to 250 knots maximum below  
10,000 feet.**▼ Continued on next page ▼**

▼ Window Damage - Forward (L1, L2, R1, R2) continued ▼

7 Pull both WINDSHIELD AIR controls. This vents conditioned air to the inside of the windshield for defogging.

8 Choose one:

◆ Damage is on the **outer** pane:

▶▶ **Go to step 9**

◆ Damage is on the **inner** pane:

▶▶ **Go to step 11**

9 Continue normal operation.

10 Shoulder harnesses may be removed.



11 Don oxygen masks.

12 Establish crew communications.

13 Passenger signs . . . . . ON

14 Choose one:

◆ Airplane **has** reached the planned cruise altitude:

▶▶ **Go to step 15**

◆ Airplane has **not** reached the planned cruise altitude:

Do **not** continue the climb.

Reset the FLT ALT indicator to the actual airplane altitude.

▶▶ **Go to step 15**

▼ Continued on next page ▼

**▼ Window Damage - Forward (L1, L2, R1, R2) continued ▼**

- 15 LAND ALT indicator. . . . . 9,000 feet
- 16 Start a normal descent to below 14,000 feet or to the minimum safe altitude, whichever is higher.
- 17 Plan to land at the nearest suitable airport.
- 18 **When** cabin differential pressure is 2 psi or less:
  - Oxygen masks and shoulder harnesses may be removed.
- 19 Sustained flight below 10,000 feet is not recommended due to the greater risk of a bird strike.




**Window Damage - Unheated Side  
(L3, R3)**

Condition: An unheated side flight deck window has one or more of these:

- A crack
- Is shattered.

Objective: To reduce differential pressure to 0 psi if both panes are shattered or cracked.



- 1 Don seat belts and shoulder harnesses.
- 2 Choose one:
  - ◆ Damage is **only** on the inner **or** outer pane:
    - ▶▶ **Go to step 3**
  - ◆ Damage is on **both** the inner **and** outer panes:
    - ▶▶ **Go to step 5**
- 3 Continue normal operation.
- 4 Shoulder harnesses may be removed.
- 5 Don oxygen masks.

▼ **Continued on next page** ▼

**▼ Window Damage - Unheated Side (L3, R3) continued ▼**

- 6 Establish crew communications.
- 7 Passenger signs . . . . . ON
- 8 Choose one:

◆ Airplane **has** reached the planned cruise altitude:

▶▶ **Go to step 9**

◆ Airplane has **not** reached the planned cruise altitude:

Do **not** continue the climb.

Reset the FLT ALT indicator to the actual airplane altitude.

▶▶ **Go to step 9**

- 9 LAND ALT indicator . . . . . 9,000 feet
- 10 Choose one:

◆ Minimum safe altitude is **at or below 9,000 feet**:

▶▶ **Go to step 11**

◆ Minimum safe altitude is **between 9,000 feet and 13,000 feet**:

▶▶ **Go to step 13**

◆ Minimum safe altitude is **at or above 13,000 feet**:

▶▶ **Go to step 15**

**▼ Continued on next page ▼**

▼ Window Damage - Unheated Side (L3, R3) continued ▼

11 Descend to 9000 feet.

12 Maintain a cabin differential pressure of 0 psi by limiting flight altitude to 9000 feet.

▶▶ **Go to step 18**

13 Descend to the minimum safe altitude.

14 LAND ALT indicator . . . . . Select a higher altitude (maximum 13,000 feet) to maintain a cabin differential pressure of 0 psi


**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

▶▶ **Go to step 18**

15 Descend to the minimum safe altitude.

16 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

17  Outflow VALVE switch . . . . . Move to OPEN until the outflow VALVE indication shows fully open to depressurize the airplane

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

▼ Continued on next page ▼

**▼ Window Damage - Unheated Side (L3, R3) continued ▼**

18 **When** the cabin altitude is at or below 10,000 feet:  
Oxygen masks may be removed.

19 Shoulder harnesses may be removed.




## Window Damage - Upper (L4, L5, R4, R5)

**YA701 - YA710**

**Condition:** An upper flight deck window has one or more of these:

- An electrical arc
- A delamination
- A crack
- Is shattered.

**Objective:** To remove electrical power, if needed, to prevent arcing. To reduce differential pressure and descend if the structural pane is shattered or cracked.

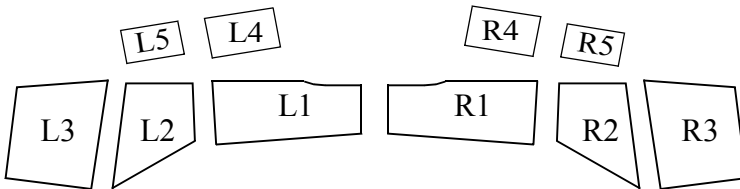

▼ **Continued on next page** ▼



**▼ Window Damage - Upper (L4, L5, R4, R5) continued ▼**

1 Choose one:

◆ Window is **delaminated** only:

Continue normal operation.



◆ Window is **arc**ing:

▶▶ **Go to step 2**

◆ Window is **cracked** or **shattered**:

▶▶ **Go to step 5**

2 WINDOW HEAT switch

(affected window) . . . . . OFF

Limit airspeed to 250 knots maximum below 10,000 feet.

3 Pull both WINDSHIELD AIR controls. This vents conditioned air to the inside of the windshield for defogging.

4 Continue normal operation.



5 Don seat belts and shoulder harnesses.

6 WINDOW HEAT switch

(affected window) . . . . . OFF

Limit airspeed to 250 knots maximum below 10,000 feet.

**▼ Continued on next page ▼**

**▼ Window Damage - Upper (L4, L5, R4, R5) continued ▼**

7 Pull both WINDSHIELD AIR controls. This vents conditioned air to the inside of the windshield for defogging.

8 Choose one:

◆ Damage is on the **L4** or **R4** window:

▶▶ **Go to step 9**

◆ Damage is on the **L5** or **R5** window:

▶▶ **Go to step 10**

9 Choose one:

◆ Damage is on the **middle or outer** pane:

▶▶ **Go to step 13**

◆ Damage is on the **inner** pane:

▶▶ **Go to step 11**

10 Choose one:

◆ Damage is on the **outer** pane:

▶▶ **Go to step 11**

◆ Damage is on the **inner** pane:

▶▶ **Go to step 13**

11 Continue normal operation.

12 Shoulder harnesses may be removed.

**▼ Continued on next page ▼**

▼ Window Damage - Upper (L4, L5, R4, R5) continued ▼

13 Don oxygen masks.

14 Establish crew communications.

15 Passenger signs . . . . . ON

16 Choose one:

◆ Airplane **has** reached the planned cruise altitude:

▶▶ **Go to step 17**

◆ Airplane has **not** reached the planned cruise altitude:

Do **not** continue the climb.

Reset the FLT ALT indicator to the actual airplane altitude.

▶▶ **Go to step 17**

17 LAND ALT indicator . . . . . 9,000 feet

18 Start a normal descent to below 14,000 feet or to the minimum safe altitude, whichever is higher.

19 Plan to land at the nearest suitable airport.

20 **When** cabin differential pressure is 2 psi or less:

Oxygen masks and shoulder harnesses may be removed.

21 Sustained flight below 10,000 feet is not recommended due to the greater risk of a bird strike.



## Window Open

Condition: A side window opens during takeoff or in flight.

- 1 Maintain the maneuvering speed for the existing flap setting until the window is closed.
- 2 The force needed to close the window increases with airspeed. It may not be possible to close the window at speeds above 250 knots.
- 3 Close and lock the window.
- 4 Choose one:

◆ Window **locks and** the pressurization is **normal**:

Continue normal operation.



◆ Window does **not** lock **or** the pressurization is **not** normal:

Level off at the lowest safe altitude.

The airplane can fly unpressurized and land safely with the window open.





Table of Contents

**CABIN ALTITUDE WARNING or Rapid  
Depressurization ..... 2.1**

**Emergency Descent ..... ►► 0.1**

**Smoke, Fire or Fumes ..... ►► 8.8**

-----

AUTO FAIL or Unscheduled Pressurization Change 2.4

BLEED TRIP OFF.....2.7

**CABIN ALTITUDE WARNING or Rapid  
Depressurization ..... 2.1**

Cabin Temperature Hot .....2.8

DUAL BLEED..... 2.13

DUCT OVERHEAT ..... 2.14

**Emergency Descent ..... ►► 0.1**

EQUIPMENT COOLING OFF ..... 2.15

HIGH ALTITUDE LANDING INOPERATIVE ..... 2.15

OFF SCHEDULE DESCENT ..... 2.16

PACK..... 2.18

PACK TRIP OFF ..... 2.22

**Smoke, Fire or Fumes ..... ►► 8.8**

WING-BODY OVERHEAT ..... 2.25

WING-BODY OVERHEAT ..... 2.30

ZONE TEMP ..... 2.36



## Table of Contents

Intentionally  
Blank

**CABIN ALTITUDE WARNING  
or  
Rapid Depressurization**

**CABIN  
ALTITUDE**

(If installed and operative)

Condition: One or more of these occur:

- A cabin altitude exceedance
- In flight, the intermittent cabin altitude/configuration warning horn sounds or a CABIN ALTITUDE light (if installed and operative) illuminates.

- 1 Don oxygen masks and set regulators to 100%.
- 2 Establish crew communications.
- 3 Pressurization mode selector . . . . . MAN
- 4 Outflow VALVE switch . . . . . Hold in CLOSE until the outflow VALVE indication shows fully closed
- 5 **If cabin altitude is uncontrollable:**
  - Passenger signs . . . . . ON
  - PASS OXYGEN switch . . . . . ON

▶▶ **Go to the Emergency Descent checklist on page 0.1**



▼ Continued on next page ▼

**▼ CABIN ALTITUDE WARNING or Rapid Depressurization continued ▼**

**6 If cabin altitude is controllable:**

Continue manual operation to maintain correct cabin altitude.

**When** the cabin altitude is at or below 10,000 feet:

Oxygen masks may be removed.

**7 Checklist Complete Except Deferred Items**

**Deferred Items**

**Note:** Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

**Descent Checklist**

Pressurization . . . . . **Move outflow VALVE switch to OPEN or CLOSE as needed to control cabin altitude and rate**

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . .

Landing data . . . . . VREF , Minimums

Approach briefing . . . . . Completed

**▼ Continued on next page ▼**



**▼ CABIN ALTITUDE WARNING or Rapid Depressurization  
continued ▼**

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_  
Navigation aids . . . . . Tuned  
EFB . . . . . Secured, Plug off

---

**At Pattern Altitude**

Outflow VALVE switch . . . . . Move to OPEN until  
the outflow VALVE  
indication shows fully open  
to depressurize the airplane

---

**Landing Checklist**

ENGINE START switches . . . . . CONT  
Speedbrake . . . . . ARMED  
Landing gear . . . . . Down  
Flaps . . . . . \_\_\_\_\_, Green light



<p><b>AUTO FAIL</b> or <b>Unscheduled Pressurization Change</b></p>
---

**AUTO FAIL**

May or may not be illuminated

Condition: One or more of these occur:

- Automatic pressurization mode has failed
- The cabin altitude is uncontrollable.

Objective: To maintain control of cabin altitude.

- 1 Increasing thrust may ensure sufficient air supply to control cabin altitude.
- 2 Pressurization mode selector . . . . . ALTN
- 3 Choose one:

◆ AUTO FAIL light is **extinguished and** cabin altitude is **controllable**:

Continue normal operation.



◆ AUTO FAIL light is **illuminated or** cabin altitude is **uncontrollable**:


▶▶ **Go to step 4**

- 4 Pressurization mode selector . . . . . MAN

▼ Continued on next page ▼

▼ **AUTO FAIL or Unscheduled Pressurization Change continued** ▼

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

5  Outflow VALVE switch . . . . . Move to OPEN or CLOSE as needed to control cabin altitude and rate

6 Choose one:

◆ Cabin altitude is **controllable**:

▶▶ **Go to step 11**

◆ Cabin altitude is **uncontrollable**:

▶▶ **Go to step 7**

7 Don oxygen masks and set regulators to 100%.

8 Establish crew communications.

9 Passenger signs . . . . . ON

10 PASS OXYGEN switch . . . . . ON

▶▶ **Go to the Emergency Descent checklist on page 0.1**



11 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Note:** Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

▼ **Continued on next page** ▼

---

**▼ AUTO FAIL or Unscheduled Pressurization Change continued ▼**


---

**Descent Checklist**

Pressurization . . . . **Move outflow VALVE switch to OPEN or CLOSE as needed to control cabin altitude and rate**

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . \_\_\_\_

Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_

Approach briefing . . . . . Completed

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_

Navigation aids . . . . . Tuned

EFB . . . . . Secured, Plug off

---

**At Pattern Altitude**

Outflow VALVE switch . . . . . Move to OPEN until the outflow VALVE indication shows fully open to depressurize the airplane

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps . . . . . \_\_\_\_, Green light



**BLEED  
TRIP OFF**

**BLEED TRIP OFF**

Condition: One or more of these occur:

- An engine bleed air overheat
- An engine bleed air overpressure.

- 1 WING ANTI-ICE switch . . . . . OFF
- 2 TRIP RESET switch . . . . . Push

The BLEED TRIP OFF light extinguishes if the bleed air temperature has cooled below limits.

3 Choose one:

◆ BLEED TRIP OFF light **stays illuminated**:

PACK switch (affected side) . . . . . OFF

This causes the operating pack to regulate to high flow in flight with flaps up.

Avoid icing conditions where wing anti-ice is needed.



◆ BLEED TRIP OFF light **extinguishes**:

▶▶ **Go to step 4**

- 4 WING ANTI-ICE switch . . . . . As needed

---

**Caution! Use of wing anti-ice above approximately FL350 may cause bleed trip off and possible loss of cabin pressure.**

---



**Cabin Temperature Hot**

Condition: Flight deck or passenger cabin temperature is excessively hot. The temperature can cause incapacitation.

Objective: To regain temperature control. If unable to regain control, to descend and configure to provide alternate ventilation.

**B737-700**

1 Choose one:

◆ **Flight deck** temperature is too high:

▶▶ **Go to step 3**

◆ **Passenger cabin** temperature is too high:

▶▶ **Go to step 11**

**B737-800**

2 Choose one:

◆ **Flight deck** temperature is too high:

▶▶ **Go to step 5**

◆ **Passenger cabin** temperature is too high:

▶▶ **Go to step 13**

**B737-700**

3 CONT CABIN temperature selector . . . . . **MANUAL**

▼ **Continued on next page** ▼

**▼ Cabin Temperature Hot continued ▼****B737-700**

- 4 CONT CABIN temperature selector . . . . . Hold in COOL until the AIR MIX VALVE indication shows full COLD

**B737-800**

- 5 TRIM AIR switch . . . . . OFF
- 6 **Wait** 1 minute.
- 7 Choose one:

◆ Air from the flight deck outlets is still too **warm**:  
▶▶ **Go to step 8**

◆ Air from the flight deck outlets is **cool**:  
The flight deck temperature gradually cools.



- 8 L PACK switch . . . . . OFF
- 9 **Wait** 1 minute.
- 10 Choose one:

◆ Air from the flight deck outlets is still too **warm**:  
▶▶ **Go to step 19**

◆ Air from the flight deck outlets is **cool**:  
The flight deck temperature gradually cools.

**▼ Continued on next page ▼**

▼ Cabin Temperature Hot continued ▼

**B737-700**

11 PASS CABIN temperature selector . . . . . MANUAL

**B737-700**

12 PASS CABIN temperature selector . . . . . Hold in COOL until the AIR MIX VALVE indication shows full COLD

**B737-800**

13 TRIM AIR switch . . . . . OFF

14 **Wait** 1 minute.

15 Choose one:

◆ Air from the passenger cabin outlets is still too **warm**:

▶▶ **Go to step 16**

◆ Air from the passenger cabin outlets is **cool**:

The passenger cabin temperature gradually cools.



16 R PACK switch . . . . . OFF

17 **Wait** 1 minute.

▼ Continued on next page ▼



**▼ Cabin Temperature Hot continued ▼**

18 Choose one:

◆ Air from the passenger cabin outlets is still too **warm**:

▶▶ **Go to step 19**

◆ Air from the passenger cabin outlets is **cool**:

The passenger cabin temperature gradually cools.



19 Start a descent to the lowest safe altitude, or 10,000 feet, whichever is higher. Use the speedbrakes to increase the rate of descent, if needed. Monitor cabin altitude and rate.

**B737-800**

20 R RECIRC FAN switch . . . . . AUTO

**B737-800**

21 L RECIRC FAN switch . . . . . OFF

22 Minimize the flight deck lighting intensity.

23 Open the flight deck door.

24 **During** daylight:

Use flight deck window shades, as needed.

Instruct the cabin crew to close cabin window shades.

**YA701 - YM484**

25 Instruct the cabin crew to dim cabin lighting.

**▼ Continued on next page ▼**

▼ Cabin Temperature Hot continued ▼

**YN531 - YV767**

26 Advise the cabin crew that the cabin lighting will be extinguished, but passenger reading lights will continue to work.

27 CAB/UTIL switch. . . . . OFF

28 IFE/PASS SEAT switch. . . . . OFF

29 **When** at level off:

Maintain 290 knots minimum. Flight deck and passenger cabin temperatures can increase rapidly at speeds below 290 knots.

30 Choose one:

◆ Airplane altitude is **at or below 10,000 feet**:

▶▶ **Go to step 31**

◆ Airplane altitude is **above 10,000 feet**:

Don oxygen masks.

Establish crew communications.

▶▶ **Go to step 31**


31 PACK switch (operating pack) . . . . . OFF

32 Pressurization mode selector . . . . . MAN

▼ Continued on next page ▼

## ▼ Cabin Temperature Hot continued ▼

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

- 33  Outflow VALVE switch . . . . Move to OPEN until the outflow VALVE indication shows fully open

This increases airplane ventilation.

- 34 Plan to land at the nearest suitable airport.



**DUAL BLEED**

**DUAL BLEED**

Condition: The APU bleed valve is open and one of these occurs:

- BLEED 1 air switch is on
- BLEED 2 air switch is on and the ISOLATION VALVE is open.

Objective: To prevent possible backpressure of the APU.

- 1 Limit engine thrust to idle while the light is illuminated.
- 2 **After** engine start:

APU BLEED air switch . . . . . OFF



**DUCT OVERHEAT**

**DUCT OVERHEAT**

**B737-700**

Condition: A duct overheat occurs.

- 1 Temperature selector (affected side) . . . . . Select cooler temperature

This prevents the air mix valves from returning to an overheat condition.

- 2 TRIP RESET switch . . . . . Push
- The DUCT OVERHEAT light extinguishes if the duct temperature has cooled below limits.

- 3 Monitor duct temperature.

If the duct temperature increases rapidly or the air mix valve indicator moves toward full hot, set the temperature selector to MANUAL. Adjust the air mix valve position as needed.



**OFF****EQUIPMENT COOLING OFF**

Condition: The equipment cooling supply or exhaust fan is failed.

- 1 EQUIP COOLING SUPPLY or EXHAUST switch (affected side) . . . . . ALTN

**Note:** Illumination of the EQUIP COOLING SUPPLY or EXHAUST OFF light may be an indication of a pressurization problem. Ensure the pressurization system is operating normally.

- 2 No further action is necessary in flight if the equipment cooling OFF light does not extinguish.

**INOP****HIGH ALTITUDE LANDING  
INOPERATIVE**

YN531 - YN534

Condition: The high altitude landing system is inoperative.

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.



**OFF SCHED  
DESCENT**

**OFF SCHEDULE DESCENT**

Condition: A descent is started before reaching the planned cruise altitude set in the FLT ALT indicator.

1 Choose one:

◆ **Landing** at airport of departure:

Continue normal operation.



◆ **Not landing** at airport of departure:

FLT ALT indicator . . . . . Reset to actual airplane altitude



Intentionally  
Blank

**PACK**

**PACK**

**B737-800**

Condition: One or more of these occur:

- The primary and standby pack controls are failed
- A pack overheat.

1 Temperature selectors (all) . . . . . Select warmer temperature

This reduces the workload on the affected air conditioning pack.

2 TRIP RESET switch . . . . . Push

If the PACK light illuminated as a result of the pack temperature exceeding limits, the light extinguishes if the pack temperature has cooled below limits.

**▼ Continued on next page ▼**



## ▼ PACK continued ▼

3 Choose one:

◆ **Both** PACK lights are **extinguished**:

Continue normal operation.



◆ **A single** PACK light **stays illuminated**:

ISOLATION VALVE switch . . . . . CLOSE

PACK switch (affected side) . . . . . OFF



◆ **Both** PACK lights **stay illuminated**:

**Note:** Both pack valves may have closed resulting in a gradual loss of cabin pressure and an eventual CABIN ALTITUDE warning.

▶▶ **Go to step 4**

4 Descend to the lowest safe altitude, or 10,000 feet, whichever is higher. Monitor cabin altitude and rate.

5 **When** at level off:

Maintain 290 knots minimum. Flight deck and cabin temperatures may increase rapidly at speeds below 290 knots.

▼ Continued on next page ▼

▼ PACK continued ▼

6 Choose one:

◆ Airplane altitude is **at or below 10,000 feet**:

▶▶ **Go to step 7**

◆ Airplane altitude is **above 10,000 feet**:


Don oxygen masks.

Establish crew communications.

▶▶ **Go to step 7**

7 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

8  Outflow VALVE switch . . . . Move to OPEN until the outflow VALVE indication shows fully open

This increases airplane ventilation.

9 R RECIRC FAN switch . . . . . AUTO

10 L RECIRC FAN switch . . . . . OFF

11 Minimize the flight deck lighting intensity.

12 Open the flight deck door.

13 **During** daylight:

Use flight deck window shades, as needed.

Instruct the cabin crew to close cabin window shades.

▼ Continued on next page ▼

**▼ PACK continued ▼****YF048 - YL551**

14 Instruct the cabin crew to dim cabin lighting.

**YS151 - YV767**

15 Advise the cabin crew that the cabin lighting will be extinguished, but passenger reading lights will continue to work.

16 CAB/UTIL switch . . . . . OFF

17 IFE/PASS SEAT switch . . . . . OFF

18 Plan to land at the nearest suitable airport.



**PACK  
TRIP OFF**

**PACK TRIP OFF**

**B737-700**

Condition: A pack overheat occurs.

- 1 Temperature selectors (affected side) . . . . . Select warmer temperature

This reduces the workload on the affected air conditioning pack.

- 2 TRIP RESET switch . . . . . Push
- The PACK TRIP OFF light extinguishes if the pack temperature has cooled below limits.

- 3 Choose one:

◆ **Both** PACK TRIP OFF lights are **extinguished**:

Continue normal operation.



◆ **A single** PACK TRIP OFF light **stays illuminated**:

Continue normal operation.



◆ **Both** PACK TRIP OFF lights **stay illuminated**:

**Note:** Both pack valves may have closed resulting in a gradual loss of cabin pressure and an eventual CABIN ALTITUDE warning.

▶▶ **Go to step 4**

▼ **Continued on next page** ▼

**▼ PACK TRIP OFF continued ▼**

4 Descend to the lowest safe altitude, or 10,000 feet, whichever is higher. Monitor cabin altitude and rate.

5 **When** at level off:

Maintain 290 knots minimum. Flight deck and cabin temperatures may increase rapidly at speeds below 290 knots.

6 Choose one:

◆ Airplane altitude is **at or below 10,000 feet**:

▶▶ **Go to step 7**

◆ Airplane altitude is **above 10,000 feet**:


Don oxygen masks.

Establish crew communications.

▶▶ **Go to step 7**

7 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

8  Outflow VALVE switch . . . . Move to OPEN until the outflow VALVE indication shows fully open

This increases airplane ventilation.

9 Minimize the flight deck lighting intensity.

10 Open the flight deck door.

**▼ Continued on next page ▼**

▼ PACK TRIP OFF continued ▼

11 **During** daylight:

Use flight deck window shades, as needed.

Instruct the cabin crew to close cabin window shades.

**YA701 - YA710, YM482 - YM484**

12 Instruct the cabin crew to dim cabin lighting.

**YN531 - YN534**

13 Advise the cabin crew that the cabin lighting will be extinguished, but passenger reading lights will continue to work.

14 CAB/UTIL switch. . . . . OFF

15 IFE/PASS SEAT switch. . . . . OFF

16 Plan to land at the nearest suitable airport.



**WING-BODY  
OVERHEAT****WING-BODY OVERHEAT****B737-700**

Condition: An overheat from a bleed duct leak occurs.

Objective: To isolate the bleed duct leak.

1 ISOLATION VALVE switch . . . . . CLOSE

2 Choose one:

◆ **Right** WING-BODY OVERHEAT light illuminated:

▶▶ **Go to step 3**

◆ **Left** WING-BODY OVERHEAT light illuminated:

▶▶ **Go to step 7**

3 R PACK switch . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

4 BLEED 2 air switch . . . . . OFF

5 WING ANTI-ICE switch . . . . . OFF

This prevents possible asymmetrical ice buildup on the wings.

6 Avoid icing conditions where wing anti-ice is needed.



7 L PACK switch . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

▼ **Continued on next page** ▼

▼ WING-BODY OVERHEAT continued ▼

- 8 BLEED 1 air switch . . . . . OFF
- 9 WING ANTI-ICE switch . . . . . OFF

This prevents possible asymmetrical ice buildup on the wings.

10 Avoid icing conditions where wing anti-ice is needed.

11 Choose one:

◆ WING-BODY OVERHEAT light **extinguishes:**



◆ WING-BODY OVERHEAT light **stays illuminated:**

▶▶ Go to step 12

12 Choose one:

◆ APU is **running:**

▶▶ Go to step 13

◆ APU is **not** running:



▼ Continued on next page ▼



**▼ WING-BODY OVERHEAT continued ▼**

13 Choose one:

◆ **APU BLEED** air switch is **ON**:

APU BLEED air switch . . . . . OFF

This stops the flow of bleed air from the APU to the left side of the pneumatic ducting.

▶▶ **Go to step 14**◆ **APU BLEED** air switch is **OFF**:

APU switch . . . . . OFF

▶▶ **Go to step 15**

14 Choose one:

◆ **WING-BODY OVERHEAT** light **extinguishes**:▶▶ **Go to step 16**◆ **WING-BODY OVERHEAT** light **stays illuminated**:

APU switch . . . . . OFF

▶▶ **Go to step 15****▼ Continued on next page ▼**

▼ WING-BODY OVERHEAT continued ▼

15 Choose one:

◆ WING-BODY OVERHEAT light **extinguishes:**

▶▶ **Go to step 16**

◆ WING-BODY OVERHEAT light **stays illuminated:**



16 ISOLATION VALVE switch . . . . . AUTO

17 BLEED 1 air switch . . . . . ON

18 L PACK switch . . . . . AUTO

19 WING ANTI-ICE switch . . . . . As needed

20 Choose one:

◆ WING-BODY OVERHEAT light **stays extinguished:**

▶▶ **Go to step 21**

◆ WING-BODY OVERHEAT light **illuminates again:**

▶▶ **Go to step 22**

▼ Continued on next page ▼

**▼ WING-BODY OVERHEAT continued ▼**

21 Choose one:

◆ APU switch is **ON**:

The APU can be used during the rest of the flight, as an electrical source only, if needed.

◆ APU switch is **OFF**:

Do **not** start the APU for the rest of the flight.



22 ISOLATION VALVE switch . . . . . CLOSE

23 L PACK switch . . . . . OFF

24 BLEED 1 air switch . . . . . OFF

25 WING ANTI-ICE switch . . . . . OFF

26 Avoid icing conditions where wing anti-ice is needed.

27 The APU can be used during the rest of the flight, as an electrical source only, if needed.



**WING-BODY OVERHEAT**

**WING-BODY OVERHEAT**

**B737-800**

Condition: An overheat from a bleed duct leak occurs.

Objective: To isolate the bleed duct leak.

1 ISOLATION VALVE switch . . . . . CLOSE

2 Choose one:

◆ **Both** WING-BODY OVERHEAT lights illuminated:

TRIM AIR switch . . . . . OFF

**Note:** Passenger cabin temperature control may be less accurate.



◆ **Only right** WING-BODY OVERHEAT light illuminated:

▶▶ **Go to step 3**

◆ **Only left** WING-BODY OVERHEAT light illuminated:

▶▶ **Go to step 8**

3 R PACK switch . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

4 BLEED 2 air switch . . . . . OFF

▼ **Continued on next page** ▼

**▼ WING-BODY OVERHEAT continued ▼**

- 5 WING ANTI-ICE switch . . . . . OFF

This prevents possible asymmetrical ice buildup on the wings.

- 6 Avoid icing conditions where wing anti-ice is needed.

- 7 Choose one:

◆ WING-BODY OVERHEAT light **extinguishes:**



◆ WING-BODY OVERHEAT light **stays illuminated:**

TRIM AIR switch . . . . . OFF

**Note:** Passenger cabin temperature control may be less accurate.



- 8 L PACK switch . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

- 9 BLEED 1 air switch . . . . . OFF

- 10 WING ANTI-ICE switch . . . . . OFF

This prevents possible asymmetrical ice buildup on the wings.

- 11 Avoid icing conditions where wing anti-ice is needed.

**▼ Continued on next page ▼**

▼ WING-BODY OVERHEAT continued ▼

12 Choose one:

◆ WING-BODY OVERHEAT light **extinguishes:**



◆ WING-BODY OVERHEAT light **stays illuminated:**

▶▶ Go to step 13

13 Choose one:

◆ APU is **running:**

▶▶ Go to step 14

◆ APU is **not** running:

TRIM AIR switch . . . . . OFF

**Note:** Passenger cabin temperature control may be less accurate.



▼ Continued on next page ▼

**▼ WING-BODY OVERHEAT continued ▼**

14 Choose one:

◆ **APU BLEED** air switch is **ON**:

APU BLEED air switch . . . . . OFF

This stops the flow of bleed air from the APU to the left side of the pneumatic ducting.

▶▶ **Go to step 15**◆ **APU BLEED** air switch is **OFF**:

APU switch . . . . . OFF

▶▶ **Go to step 16**

15 Choose one:

◆ **WING-BODY OVERHEAT** light **extinguishes**:▶▶ **Go to step 17**◆ **WING-BODY OVERHEAT** light **stays illuminated**:

APU switch . . . . . OFF

▶▶ **Go to step 16****▼ Continued on next page ▼**

▼ WING-BODY OVERHEAT continued ▼

16 Choose one:

◆ WING-BODY OVERHEAT light **extinguishes:**

▶▶ Go to step 17

◆ WING-BODY OVERHEAT light **stays illuminated:**

TRIM AIR switch . . . . . OFF

**Note:** Passenger cabin temperature control may be less accurate.



17 ISOLATION VALVE switch . . . . . AUTO

18 BLEED 1 air switch . . . . . ON

19 L PACK switch . . . . . AUTO

20 WING ANTI-ICE switch . . . . . As needed

21 Choose one:

◆ WING-BODY OVERHEAT light **stays extinguished:**

▶▶ Go to step 22

◆ WING-BODY OVERHEAT light **illuminates again:**

▶▶ Go to step 23

▼ Continued on next page ▼



**▼ WING-BODY OVERHEAT continued ▼**

22 Choose one:

◆ APU switch is **ON**:

The APU can be used during the rest of the flight, as an electrical source only, if needed.

◆ APU switch is **OFF**:

Do **not** start the APU for the rest of the flight.



23 ISOLATION VALVE switch . . . . . CLOSE

24 L PACK switch . . . . . OFF

25 BLEED 1 air switch . . . . . OFF

26 WING ANTI-ICE switch . . . . . OFF

27 Avoid icing conditions where wing anti-ice is needed.

28 The APU can be used during the rest of the flight, as an electrical source only, if needed.



**ZONE  
TEMP**

**ZONE TEMP**

**B737-800**

Condition: One or more of these occur:

- A zone duct overheat
- Flight deck temperature control is failed.

- 1 Temperature selector  
(affected cabin) . . . . . Select a cooler temperature

This prevents the trim air modulating valve from returning to an overheat condition.

- 2 TRIP RESET switch . . . . . Push

The ZONE TEMP light extinguishes if the duct temperature has cooled below limits.

- 3 Monitor duct temperature.

If the duct temperature increases rapidly, set the TRIM AIR switch to OFF.

- 4 Choose one:

◆ Affected cabin temperature is excessively high:

▶▶ **Go to the Cabin Temperature Hot checklist on page 2.8**



◆ Affected cabin temperature is normal:





**Table of Contents**

ENGINE COWL ANTI-ICE .....3.1  
ENGINE COWL VALVE OPEN OR TAI INDICATION..3.2  
Ice Crystal Icing.....3.3  
PROBE HEAT.....3.5  
WINDOW OVERHEAT .....3.6  
WING ANTI-ICE VALVE OPEN.....3.7



## Table of Contents

Intentionally  
Blank

**COWL  
ANTI-ICE****ENGINE COWL ANTI-ICE**

Condition: An engine cowl anti-ice duct overpressure occurs.

Objective: To reduce cowl duct pressure by reducing thrust.

- 1 Reduce thrust only when flight conditions allow.
- 2 Autothrottle (if engaged) . . . . . Disengage
- 3 Thrust lever  
(affected engine) . . . Confirm . . . Retard until the  
COWL ANTI-ICE  
light extinguishes
- 4 Run the engine at reduced thrust to keep the light  
extinguished.
- 5 Transponder mode selector . . . . . TA only  
This step prevents climb commands which can  
exceed reduced thrust performance capability.



**COWL VALVE  
OPEN**
**ENGINE COWL VALVE OPEN  
OR TAI INDICATION**

Condition: One or both of the following occurs:

- An engine COWL VALVE OPEN light stays illuminated bright blue
- An amber TAI indication is shown.

1 Choose one:

◆ ENG ANTI-ICE switch is **ON**:

The cowl anti-ice valve is failed closed.

Avoid icing conditions.



◆ ENG ANTI-ICE switch is **OFF**:

The cowl anti-ice valve is failed open.

If TAT is **above 10°C**, limit thrust on the affected engine to 80% N1 if possible.



## Ice Crystal Icing

Condition: Engine ice crystal or TAT probe icing is suspected. Ice crystal icing conditions exist when in visible moisture, and one or more of the following indications are present:

- Amber or red weather radar returns below the airplane
- Appearance of liquid water on the windshield at temperatures too cold for rain (the sound is different than rain)
- The autothrottle is unable to maintain the selected airspeed
- TAT indication stays near 0°C

(Additional items that can indicate ice crystal icing are listed in the Additional Information section.)

Objective: To exit the ice crystal icing conditions and reduce the operational effects of the icing.

**Note:** TAT probe icing can cause the reference N1 bugs to increase or decrease while flying at a constant altitude and airspeed.

**Caution! Do not use engine anti-ice when TAT is above 10°C.**

- 1 ENGINE START switches (both) . . . . . CONT
- 2 ENG ANTI-ICE switches (both) . . . . . ON
- 3 Minimize time above amber and red weather radar returns. If conditions allow, exit the ice crystal icing conditions.

▼ Continued on next page ▼

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

▼ Ice Crystal Icing continued ▼

4 Choose one:

◆ Autothrottle response **or** TAT indication is normal:

▶▶ Go to step 7

◆ Autothrottle is **unable** to maintain the selected airspeed and TAT indication stays near 0°C:

▶▶ Go to step 5

5 Autothrottle (if engaged) . . . . . Disengage

6 Thrust levers (both) . . . . . Set to maintain airspeed and airplane flight path

7 When in ice crystal icing conditions, the following can be unreliable:

- | Reference N1 bugs and reference N1 readouts
- TAS, TAT, SAT, ECON SPD, and LRC.

8 **When** ice crystal icing conditions are no longer present:

Use engine anti-ice normally.

The autothrottle can be re-engaged, if needed.



▼ Continued on next page ▼



## ▼ Ice Crystal Icing continued ▼

**Additional Information**

One or more of the following can indicate ice crystal icing:

- Light to moderate turbulence
- Static discharge around the windshield (St. Elmo's fire)
- Smell of sulfur
- Smell of ozone
- Humidity increase

An erroneous TAT indication can occur as a result of ice crystals blocking the sensor. The erroneous indication can last from one minute to more than 20 minutes. TAT normally should increase approximately 2°C per 1000 ft of descent.

**PROBE HEAT**

CAPT PITOT	L ELEV PITOT	L ALPHA VANE	TEMP PROBE
F/O PITOT	R ELEV PITOT	R ALPHA VANE	AUX PITOT

Condition: One or more probe heats are failed.

1 Avoid icing conditions.

**Note:** Flight in icing conditions may result in erroneous flight instrument indications.



**OVERHEAT****WINDOW OVERHEAT**

Condition: A window overheat occurs.

- 1 WINDOW HEAT switch (affected window) . . . OFF
- 2 **Wait** 2 - 5 minutes.
- 3 WINDOW HEAT switch (affected window) . . . ON
- 4 Choose one:
  - ◆ Window OVERHEAT light **stays extinguished**:  
 Continue normal operation.  

■ ■ ■ ■
  - ◆ Window OVERHEAT light **illuminates again**:  

▶▶ **Go to step 5**
- 5 WINDOW HEAT switch (affected window) . . . OFF  
 Limit airspeed to 250 knots maximum below 10,000 feet.
- 6 Pull both WINDSHIELD AIR controls. This vents conditioned air to the inside of the windshield for defogging.



**WING ANTI-ICE VALVE OPEN****L VALVE  
OPEN****R VALVE  
OPEN**

Condition: A wing anti-ice L VALVE OPEN or R VALVE OPEN light stays illuminated bright blue. The wing anti-ice valve is not in the commanded position.

## 1 Choose one:

◆ WING ANTI-ICE switch is **ON**:

The wing anti-ice valve is failed closed.

WING ANTI-ICE switch . . . . . OFF

Avoid icing conditions where wing anti-ice is needed.

◆ WING ANTI-ICE switch is **OFF**:

The wing anti-ice valve is failed open.

▶▶ **Go to step 2**2 **When** icing conditions no longer exist:

ISOLATION VALVE switch . . . . . CLOSE

PACK switch (affected side) . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

Engine BLEED air switch (affected side) . . OFF

Wing anti-ice is not available on the affected side with the ISOLATION VALVE switch closed.





Intentionally  
Blank



**Table of Contents**

AUTOPILOT DISENGAGE .....4.1  
AUTOTHROTTLE DISENGAGE .....4.1  
ROLL AUTHORITY .....4.2  
ROLL/YAW ASYMMETRY .....4.3



## Table of Contents

Intentionally  
Blank

## AUTOPILOT DISENGAGE

**A/P**  
P/RST

Condition: All autopilots are disengaged. The red light flashes and the aural tone sounds.

- 1 Fly the airplane manually or re-engage an autopilot.



## AUTOTHROTTLE DISENGAGE

**A/T**  
P/RST

Condition: The autothrottle is disengaged. The red light flashes.

- 1 Control thrust manually or re-engage the autothrottle.



**ROLL AUTHORITY****YV751 - YV755**

Condition: The autopilot has reached its roll authority limit due to an airplane roll or yaw asymmetry.

- 1 Possible causes of the ROLL AUTHORITY alert include:
  - Thrust asymmetry
  - Incorrect airplane trim for the conditions
  - Fuel imbalance
  - Asymmetric wing icing
  - A flap or slat asymmetry
  - Jammed or restricted flight controls





**ROLL/YAW ASYMMETRY****YV751 - YV755**

Condition: The autopilot is approaching its roll authority limit due to an airplane roll or yaw asymmetry.

- 1 Possible causes of the ROLL AUTHORITY alert include:
  - Thrust asymmetry
  - Incorrect airplane trim for the conditions
  - Fuel imbalance
  - Asymmetric wing icing
  - A flap or slat asymmetry
  - Jammed or restricted flight controls





Intentionally  
Blank



**Table of Contents**

ACARS Electrical Power Loss .....5.1  
ACARS MU Fail or DU Fail .....5.1  
Radio Transmit Continuous (Stuck  
Microphone Switch) .....5.1



## Table of Contents

Intentionally  
Blank

**ACARS Electrical Power Loss**

Condition: ACARS AC power is lost.

**Note:** The ACARS automatically reverts to VOX MODE. The DATA MODE is inoperative.

**ACARS MU Fail or DU Fail**

Condition: The ACARS system is failed.

- 1 Use normal voice procedures for reporting.

**Radio Transmit Continuous  
(Stuck Microphone Switch)**

Condition: A radio transmits continuously without crew input.

- 1 MIC SELECTOR switches  
(all audio selector panels) . . . . . FLT INT

This deselects radios and stops radio transmissions.

**Note:** The microphone/interphone with the stuck switch continuously transmits on flight interphone.

- 2 The associated audio selector panel should stay on flight interphone. All other audio selector panels may be used normally.



Intentionally  
Blank



Table of Contents

**Smoke, Fire or Fumes ..... ▶▶ 8.8**

-----  
BATTERY DISCHARGE ..... 6.1

DRIVE ..... 6.2

ELEC ..... 6.3

LOSS OF BOTH ENGINE DRIVEN GENERATORS.... 6.4

**Smoke, Fire or Fumes ..... ▶▶ 8.8**

SOURCE OFF ..... 6.12

STANDBY POWER OFF..... 6.14

TR UNIT..... 6.14

TRANSFER BUS OFF..... 6.15



## Table of Contents

Intentionally  
Blank



**BAT  
DISCHARGE****BATTERY DISCHARGE**

Condition: A battery discharge exceedance occurs.

**YA701 - YF049, YM482 - YM484**

**Note:** A fully charged battery supplies a minimum of 30 minutes of standby power.

**YF921 - YL551, YN531 - YV767**

**Note:** Fully charged batteries supply a minimum of 60 minutes of standby power.




**DRIVE**

**DRIVE**

Condition: A generator drive malfunction occurs.

Action is irreversible.

- 1  Generator drive DISCONNECT switch (affected side) . . . . . Confirm . . . . . Hold in the DISCONNECT position momentarily

This prevents generator drive damage.

2 Choose one:

◆ APU is **available** for start:

APU . . . . . START

**When** APU is running:

APU GEN switch (affected side) . . . . . ON



◆ APU is **not** available:

Plan to land at the nearest suitable airport. Only one main AC power source remains.



**ELEC****ELEC**

Condition: A standby power or DC system fault occurs.

**Note:** The ELEC light illuminates on the ground only.

- 1 Do **not** takeoff.



## LOSS OF BOTH ENGINE DRIVEN GENERATORS

GEN 1 & 2    GEN 1 & 2    GEN 1 & 2

TRANSFER  
BUS OFF

SOURCE  
OFF

GEN OFF  
BUS

Condition: Both engine driven generators are off.

**Note:** At high altitude, thrust deterioration or engine flameout can occur.

1 Engine GEN switches (both) . . . ON, one at a time

2 Choose one:

◆ **A single SOURCE OFF light stays illuminated:**

▶▶ **Go to step 3**

◆ **Both SOURCE OFF lights stay illuminated:**

▶▶ **Go to step 5**

◆ **Both SOURCE OFF lights extinguish:**

YAW DAMPER switch . . . . . ON

▶▶ **Go to step 17**

**A single SOURCE OFF light stays illuminated**

3 YAW DAMPER switch . . . . . ON

▼ Continued on next page ▼

**▼ LOSS OF BOTH ENGINE DRIVEN GENERATORS continued ▼**

4 Choose one:

◆ APU is **available** for start:

**Note:** APU start attempts are not recommended above 25,000 feet.

APU . . . . . START

**When** APU is running:APU GEN switch  
(affected side) . . . . . ON**▶▶ Go to step 17**◆ APU is **not** available:Plan to land at the nearest suitable airport.  
Only one main AC power source remains.**▶▶ Go to step 17****▼ Continued on next page ▼**

▼ LOSS OF BOTH ENGINE DRIVEN GENERATORS continued ▼

**Both SOURCE OFF lights stay illuminated**

5 Choose one:

◆ APU is **available** for start:

BUS TRANSFER switch . . . . . OFF

ELEC HYD PUMP switches (both) . . . . OFF

**Note:** APU start attempts are not recommended above 25,000 feet. With both busses off, only one start attempt is recommended. Multiple start attempts reduce standby power capacity.

APU . . . . . START

▶▶ **Go to step 6**

◆ APU is **not** available:

▶▶ **Go to step 14**

6 **When** APU is running:

APU GEN  
switches (both) . . . . . ON,  
one at a time

**YF921 - YL551, YN531 - YV767**

7 Check for the REMOTE CONTROL CB (RCCB Remote P6-SPCU-A-4).

▼ Continued on next page ▼

**▼ LOSS OF BOTH ENGINE DRIVEN GENERATORS continued ▼**

YF921 - YL551, YN531 - YV767

8 Choose one:

◆ RCCB REMOTE circuit breaker **is** tripped:

Reset circuit breaker. Only one reset is allowed.

▶▶ **Go to step 9**◆ RCCB REMOTE circuit breaker is **not** tripped:▶▶ **Go to step 9**

9 Choose one:

◆ **A single or both** SOURCE OFF lights **extinguish**:▶▶ **Go to step 10**◆ **Both** SOURCE OFF lights **stay illuminated**:▶▶ **Go to step 14**

10 BUS TRANSFER switch . . . . . AUTO

This restores power to the remaining transfer bus if one SOURCE OFF light stays illuminated.

11 ELEC HYD PUMP

switches (both) . . . . . ON, one at a time

12 YAW DAMPER switch . . . . . ON

13 Plan to land at the nearest suitable airport. Only one main AC power source remains.

▶▶ **Go to step 17****▼ Continued on next page ▼**

**▼ LOSS OF BOTH ENGINE DRIVEN GENERATORS continued ▼****Both SOURCE OFF lights stay illuminated**

14 Avoid icing conditions.

**Note:** Flight in icing conditions can result in erroneous flight instrument indications.

15 Plan to land at the nearest suitable airport.

**YA701 - YF049, YM482 - YM484**

**Note:** A fully charged battery supplies a minimum of 30 minutes of standby power.

**YF921 - YL551, YN531 - YV767**

**Note:** Fully charged batteries supply a minimum of 60 minutes of standby power.

16 The right IRS will operate on DC power for 5 minutes.

**▼ Continued on next page ▼**



▼ **LOSS OF BOTH ENGINE DRIVEN GENERATORS** continued ▼

17 Choose one:

◆ **Both** the captain's and first officer's primary attitude displays are **operative and** ATT flags are **not** shown:



◆ **Both** the captain's and first officer's primary attitude displays are **failed**:

▶▶ **Go to step 19**

◆ **Only** the **first officer's** primary attitude display is **failed**:

IRS TRANSFER switch . . . . . BOTH ON L  
Do **not** engage either autopilot.

▶▶ **Go to step 18**

18 Choose one:

◆ **A single** SOURCE OFF light is **illuminated**:



◆ **Both** SOURCE OFF lights are **extinguished**:



◆ **Both** SOURCE OFF lights are **illuminated**:

The left IRS will operate as long as battery power remains.

Plan to land at the nearest suitable airport.


 ▼ **Continued on next page** ▼

▼ LOSS OF BOTH ENGINE DRIVEN GENERATORS continued ▼

Action is irreversible. Do this step only if **both** the captain's and first officer's primary attitude displays are **failed**.

19 IRS MODE selectors (both). . . . . ATT

Maintain straight and level, constant airspeed flight until attitude displays recover (approximately 30 seconds).

The primary attitude displays stay failed and the SET IRS HDG prompt on the POS INIT page is blank until the attitude mode alignment is complete.

20 Enter magnetic heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

**Note:** The MAP display is not available.

**Note:** Periodically enter updated heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

21 Do **not** engage either autopilot.



Intentionally  
Blank

**SOURCE OFF**

**SOURCE OFF**

Condition: The transfer bus is not powered by the last selected source.

1 Choose one:

◆ **Both** SOURCE OFF lights are illuminated:

▶▶ **Go to the LOSS OF BOTH ENGINE DRIVEN GENERATORS checklist on page 6.4**



◆ **Only one** SOURCE OFF light is illuminated:

▶▶ **Go to step 2**

2 Engine GEN switch (affected side) . . . . .ON

3 Choose one:

◆ SOURCE OFF light **extinguishes**:



◆ SOURCE OFF light **stays illuminated**:

▶▶ **Go to step 4**

▼ **Continued on next page** ▼

**▼ SOURCE OFF continued ▼**

4 Choose one:

◆ APU is **available** for start:

APU . . . . . START

**When** APU is running:APU GEN switch  
(affected side) . . . . . ON▶▶ **Go to step 5**◆ APU is **not** available:Plan to land at the nearest suitable airport.  
Only one main AC power source remains.

5 Choose one:

◆ SOURCE OFF light **extinguishes**:◆ SOURCE OFF light **stays illuminated**:Plan to land at the nearest suitable airport.  
Only one main AC power source remains.

**STANDBY  
PWR OFF**

**STANDBY POWER OFF**

Condition: One or more of these busses are not energized:

- AC standby bus
- DC standby bus
- Battery bus.

- 1 STANDBY POWER switch . . . . . BAT
- ■ ■ ■

**TR UNIT**

**TR UNIT**

Condition: One or more transformer rectifiers are failed.

**YV751 - YV767**

- 1 Do not use the AFDS approach mode during an ILS or GLS approach.

**YA701 - YV750**

- 2 Do not use the AFDS approach mode during an ILS approach.

**Note:** Autoland is not available.



**TRANSFER  
BUS OFF****TRANSFER BUS OFF**

Condition: The transfer bus is not energized.

1 Engine GEN switch (affected side) . . . . . ON

2 Choose one:

◆ TRANSFER BUS OFF light **extinguishes**:



◆ TRANSFER BUS OFF light **stays illuminated**:

▶▶ **Go to step 3**

3 Choose one:

◆ APU is **available** for start:

APU . . . . . START

**When** APU is running:

APU GEN switch  
(affected side) . . . . . ON



◆ APU is **not** available:

Plan to land at the nearest suitable airport.  
Only one main AC power source remains.



Intentionally  
Blank





**Table of Contents**

**Aborted Engine Start..... 7.1**

**APU FIRE ..... ►► 8.1**

**ENGINE FIRE or Engine Severe Damage or Separation ..... ►► 8.2**

**Engine Limit or Surge or Stall ..... 7.2**

**ENGINE OVERHEAT ..... ►► 8.5**

**Engine Tailpipe Fire..... ►► 8.6**

**Loss Of Thrust On Both Engines ..... 7.6**

-----

**Aborted Engine Start..... 7.1**

**APU DETECTION INOPERATIVE ..... ►► 8.12**

**APU FAULT ..... 7.11**

**APU FIRE ..... ►► 8.1**

**APU LOW OIL PRESSURE ..... 7.12**

**APU OVERSPEED ..... 7.12**

**EEC ALTERNATE MODE ..... 7.13**

**ENGINE CONTROL ..... 7.15**

**Engine Failure or Shutdown ..... 7.16**

**ENGINE FIRE or Engine Severe Damage or Separation ..... ►► 8.2**

**ENGINE FIRE/OVERHEAT DETECTOR FAULT . ►► 8.16**

**Engine High Oil Temperature ..... 7.20**

**Engine High Vibration ..... 7.22**

**Engine In-Flight Start ..... 7.24**

**Engine Limit or Surge or Stall ..... 7.2**

**ENGINE LOW OIL PRESSURE ..... 7.28**



---

**Table of Contents**

ENGINE OIL FILTER BYPASS ..... 7.29

**ENGINE OVERHEAT ..... ►► 8.5**

**Engine Tailpipe Fire ..... ►► 8.6**

Fuel Leak Engine..... ►► 12.6

**Loss Of Thrust On Both Engines ..... 7.6**

One Engine Inoperative Landing ..... 7.30

REVERSER..... 7.33

REVERSER UNLOCKED (IN FLIGHT) ..... 7.34

START VALVE OPEN ..... 7.36

Volcanic Ash ..... 7.38

**Aborted Engine Start**

Condition: On the ground, an aborted engine start is needed.

Objective: To shut down the engine and motor it.

1 Engine start lever (affected engine) . . . . CUTOFF

-----

2 Choose one:

◆ ENGINE START switch is in **GRD**:

Motor the engine for 60 seconds.

ENGINE START switch  
(affected engine) . . . . . OFF



◆ ENGINE START switch is in **OFF**:

▶▶ **Go to step 3**

3 **After** N2 decreases below 20%:

ENGINE START switch  
(affected engine) . . . . . GRD

Motor the engine for 60 seconds.

ENGINE START switch  
(affected engine) . . . . . OFF



**Engine Limit or Surge or Stall**

Condition: One or more of these occur:

- Engine indications are abnormal
- Engine indications are rapidly approaching or exceeding limits
- Abnormal engine noises are heard, possibly with airframe vibration
- There is no response to thrust lever movement or the response is abnormal
- Flames in the engine inlet or exhaust are reported.

Objective: To attempt to recover normal engine operation or shut down the engine if recovery is not possible.

- 1 Autothrottle (if engaged) . . . . . Disengage
- 2 Thrust lever  
(affected engine) . . . . Confirm. . . . Retard until  
engine indications  
stay within limits or  
the thrust lever is closed



- 3 Choose one:
  - ◆ Engine indications are **stabilized and** EGT is **stabilized or decreasing**:
    - ▶▶ Go to step 4
  - ◆ Engine indications are **abnormal or** EGT continues to **increase**:
    - ▶▶ Go to step 7

▼ Continued on next page ▼

▼ Engine Limit or Surge or Stall continued ▼

Check that RPM and EGT follow thrust lever movement.

4  Thrust lever (affected engine). . . . . Advance slowly

5 Run the engine normally or at a reduced thrust setting that is surge and stall free.

6 Choose one:

◆ Engine runs **normally**:  
  ■ ■ ■ ■

◆ Engine runs at **reduced** thrust:  
  Transponder mode selector . . . . TA ONLY  
  This step prevents climb commands  
  which can exceed reduced thrust  
  performance capability.  
  ■ ■ ■ ■

7 Engine start lever (affected engine) . . . . . Confirm . . . . . CUTOFF

8 PACK switch (affected side) . . . . . OFF  
This causes the operating pack to regulate to high flow in flight with flaps up.

▼ Continued on next page ▼

▼ Engine Limit or Surge or Stall continued ▼

9 Choose one:

◆ APU is **available** for start:

APU . . . . . START

**When** APU is running:

APU GEN switch  
(affected side) . . . . . ON

▶▶ **Go to step 10**

◆ APU is **not** available:

▶▶ **Go to step 10**

10 Balance fuel as needed.

11 Transponder mode selector . . . . . TA ONLY

This prevents climb commands which can exceed single engine performance capability.

12 ISOLATION VALVE switch . . . . . Verify AUTO

This ensures bleed air is available to both wings if wing anti-ice is needed.

13 A restart may be attempted if there is N1 rotation and no abnormal airframe vibration.

▼ Continued on next page ▼

**▼ Engine Limit or Surge or Stall continued ▼**

14 Choose one:

◆ Restart **will** be attempted:**▶▶ Go to the Engine In-Flight Start  
checklist on page 7.24**◆ Restart will **not** be attempted:**▶▶ Go to step 15**

15 Plan to land at the nearest suitable airport.

**Note:** Do not use FMC fuel predictions.**▶▶ Go to the One Engine Inoperative Landing  
checklist on page 7.30**

## Loss Of Thrust On Both Engines

Condition: Both of these occur:

- Both engines have a loss of thrust
- Both ENG FAIL alerts show.

Objective: To restart at least one engine.

- 1 ENGINE START switches (both) . . . . . FLT
- 2 Engine start levers (both) . . . . . CUTOFF
- 3 **When** EGT decreases:

Engine start levers (both) . . . . . IDLE detent

- 4 **If** EGT reaches 950°C or there is no increase in EGT within 30 seconds:

Engine start lever  
(affected engine) . . . . Confirm . . . . CUTOFF,  
then IDLE detent

**If** EGT again reaches 950°C or there is no increase in EGT within 30 seconds, repeat as needed.

- 
- 5 At or above FL270, set airspeed to 275 knots.  
Below FL270, set airspeed to 300 knots.
  - 6 Engines can accelerate to idle very slowly, especially at high altitudes or in heavy precipitation. If N2 is steadily increasing and EGT stays within limits, do not interrupt the start.
  - 7 Do **not** wait for a successful engine start before starting the APU.

▼ Continued on next page ▼



**▼ Loss Of Thrust On Both Engines continued ▼**

8 Choose one:

◆ APU is **available** for start:

APU . . . . . START

▶▶ **Go to step 9**◆ APU is **not** available:▶▶ **Go to step 10**9 **When** APU is running:

APU GEN switches

(both) . . . . . ON, one at a time

10 Choose one:

◆ **One or both** engines **start**:▶▶ **Go to step 15**◆ **Neither** engine starts:▶▶ **Go to step 11**

11 Choose one:

◆ **N2** is **at or above 11%**:

Attempt a windmill start.

▶▶ **Go to step 13**◆ **N2** is **below 11%**:▶▶ **Go to step 12****▼ Continued on next page ▼**

▼ Loss Of Thrust On Both Engines continued ▼

12 Choose one:

◆ APU bleed air is **available**:

Attempt a starter assist start.

▶▶ **Go to step 16**

◆ APU bleed air is **not** available:

Attempt a windmill start.

▶▶ **Go to step 13**

13 Thrust levers (both) . . . . . Close

14 Engine start  
lever (**either**) . . . . . Confirm. . . . . CUTOFF,  
then IDLE detent

The engine can accelerate to idle very slowly especially at high altitudes or in heavy precipitation. If N2 is steadily increasing and EGT stays within limits, do not interrupt the start.

15 **When** engine parameters have stabilized:

ENGINE START switch  
(operating engine) . . . . . As needed

Thrust lever  
(operating engine) . . . . . Advance slowly

Engine GEN switch  
(operating engine side) . . . . . ON

▶▶ **Go to step 25**

▼ Continued on next page ▼

**▼ Loss Of Thrust On Both Engines continued ▼**

- 16 Thrust levers (both) . . . . . Close
- 17 WING ANTI-ICE switch . . . . . OFF
- 18 PACK switches (both) . . . . . OFF
- 19 APU BLEED air switch . . . . . ON
- 20 Ignition select switch . . . . . BOTH
- 21 Engine start  
    lever (**either**) . . . . . Confirm. . . . . CUTOFF
- 22 ENGINE START switch . . . . . GRD
- 23 **When** N2 is at or above 11%:
  - Engine start lever . . . . . IDLE detent

The engine can accelerate to idle very slowly especially at high altitudes or in heavy precipitation. If N2 is steadily increasing and EGT stays within limits, do not interrupt the start.

- 24 **When** engine parameters have stabilized:
  - APU BLEED air switch . . . . . OFF
  - ENGINE START switch  
    (operating engine) . . . . . As needed
  - Thrust lever  
    (operating engine) . . . . . Advance slowly
  - Engine GEN switch  
    (operating engine side) . . . . . ON
  - PACK switch  
    (operating engine side) . . . . . AUTO

**▼ Continued on next page ▼**

▼ Loss Of Thrust On Both Engines continued ▼

25 Choose one:

◆ **Both** the captain's and first officer's primary attitude displays are **operative and** ATT flags are **not** shown:

▶▶ **Go to step 30**

◆ **Both** the captain's and first officer's primary attitude displays are **failed**:

▶▶ **Go to step 26**

◆ **Only** the **first officer's** primary attitude display is **failed**:

IRS TRANSFER switch. . . . . BOTH ON L

Do **not** engage either autopilot.

▶▶ **Go to step 30**

Action is irreversible. Do this step only if **both** the captain's and first officer's primary attitude displays are **failed**.

26 IRS MODE selectors (both). . . . . ATT

Maintain straight and level, constant airspeed flight until attitude displays recover (approximately 30 seconds).

The primary attitude displays stay failed and the SET IRS HDG prompt on the POS INIT page is blank until the attitude mode alignment is complete.

▼ Continued on next page ▼

**▼ Loss Of Thrust On Both Engines continued ▼**

27 Enter magnetic heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

28 The MAP display is not available.

**Note:** Periodically enter updated heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

29 Do **not** engage either autopilot.

30 Choose one:

◆ **Both** engines are **running**:

Run the APU as needed.



◆ **One** engine stays **failed**:

▶▶ **Go to the Engine In-Flight Start checklist on page 7.24**

**FAULT****APU FAULT**

Condition: An APU malfunction occurs.

**Note:** The APU shuts down automatically.

1 APU switch . . . . . OFF

If the APU FAULT light extinguishes after 5 minutes, restarts may be attempted.



**LOW OIL PRESSURE**

**APU LOW OIL PRESSURE**

Condition: The APU oil pressure is low.

**Note:** The APU shuts down automatically.

1 APU switch. . . . . OFF

The LOW OIL PRESSURE light extinguishes in 5 minutes.



**OVER SPEED**

**APU OVERSPEED**

Condition: One of these occurs:

- An APU RPM limit exceedance causes automatic shutdown
- During a normal APU shutdown the overspeed shutdown protection logic fails a self-test.

1 APU switch. . . . . OFF

The APU OVERSPEED light extinguishes in 5 minutes.



**ALTN****EEC ALTERNATE MODE**

Condition: An EEC operates in the alternate control mode.

- 1 Autothrottle (if engaged) . . . . . Disengage
- 2 Thrust levers (both) . . . . . Retard to mid position

This prevents exceeding thrust limits when switching to the EEC alternate mode.

- 3 EEC mode switches (one at a time) . . . . . ALTN

This ensures both engines operate in alternate mode.

- 4 Autothrottle (if needed) . . . . . Engage

**Note:** Maximum thrust limiting is available with autothrottle engaged.

- 5 Do not exceed engine limits. Engine limit protection in alternate mode is not the same as in normal mode.

▼ Continued on next page ▼

▼ EEC ALTERNATE MODE continued ▼

6 Choose one:

◆ **DSPLY SOURCE** annunciation is **shown**:

YA701 - YV750

▶▶ **Go to step 7**

YV751 - YV767

▶▶ **Go to step 8**

**DSPLY SOURCE** annunciation is **not** shown:



YA701 - YV750

7 Choose one:

◆ **DISPLAY SOURCE** checklist **has** been completed:



◆ **DISPLAY SOURCE** checklist has **not** been completed:

▶▶ **Go to the DISPLAY SOURCE checklist on page 10.10**



▼ Continued on next page ▼



## ▼ EEC ALTERNATE MODE continued ▼

**YV751 - YV767**

8 Choose one:

 ◆ **DISPLAY SOURCE** checklist **has** been completed:

 ◆ **DISPLAY SOURCE** checklist has **not** been completed:

 ►► **Go to the DISPLAY SOURCE checklist on page 10.12**

**ENGINE CONTROL**
**ENGINE CONTROL**

Condition: An engine control system fault occurs.

**Note:** An ENGINE CONTROL light illuminates on the ground only.

 1 Do **not** takeoff.


## Engine Failure or Shutdown

Condition: One of these occurs:

- An engine failure
- An ENG FAIL alert shows
- An engine flameout
- Another checklist directs an engine shutdown.

1 Choose one:

◆ **Airframe vibrations with abnormal engine indications** exist:

▶▶ **Go to the ENGINE FIRE or Engine Severe Damage or Separation checklist on page 8.2**



◆ An engine has **separated**:

▶▶ **Go to the ENGINE FIRE or Engine Severe Damage or Separation checklist on page 8.2**



◆ Airframe vibrations with abnormal engine indications do **not** exist **and** an engine has **not** separated:

▶▶ **Go to step 2**

2 Do an engine shutdown only when flight conditions allow.

3 Autothrottle (if engaged) . . . . . Disengage

▼ Continued on next page ▼

**▼ Engine Failure or Shutdown continued ▼**

- 4 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Close
- 5 **When** the affected engine is at idle thrust:  
Engine start lever  
(affected engine) . . . . . Confirm . . . . . CUTOFF
- 6 PACK switch (affected side) . . . . . OFF  
This causes the operating pack to regulate to high flow in flight with flaps up.
- 7 Choose one:
  - ◆ APU is **available** for start:  
APU . . . . . START  
**When** APU is running:  
APU GEN switch  
(affected side) . . . . . ON  
  
▶▶ **Go to step 8** |
  - ◆ APU is **not** available:  
▶▶ **Go to step 8** |
- 8 Balance fuel as needed.
- 9 Transponder mode selector . . . . . TA ONLY  
This prevents climb commands which can exceed single engine performance capability.

**▼ Continued on next page ▼**

▼ Engine Failure or Shutdown continued ▼

10 ISOLATION VALVE switch . . . . . Verify AUTO

This ensures bleed air is available to both wings if wing anti-ice is needed.

11 A restart may be attempted if there is N1 rotation and no abnormal airframe vibration.

12 Choose one:

◆ A restart will be **attempted**:

▶▶ **Go to the Engine In-Flight Start checklist on page 7.24**



◆ A restart will **not** be attempted:

▶▶ **Go to step 13**

13 Plan to land at the nearest suitable airport.

**Note:** Do not use FMC fuel predictions.

▶▶ **Go to the One Engine Inoperative Landing checklist on page 7.30**



Intentionally  
Blank

**Engine High Oil Temperature**

Condition: The engine oil temperature is high.

1 Choose one:

◆ Temperature is **at or above** the **redline**:

▶▶ **Go to the Engine Failure or Shutdown checklist on page 7.16**



◆ Temperature is in the **amber band**:

▶▶ **Go to step 2**

2 Autothrottle (if engaged) . . . . . Disengage

3 Thrust lever (affected engine) . . . . . Confirm . . . . . Retard slowly until the engine oil temperature is within the normal operating range or the thrust lever is closed

▼ **Continued on next page** ▼

**▼ Engine High Oil Temperature continued ▼**

4 Choose one:

◆ Oil temperature is in the **amber** band for **45 minutes or less**:

**Note:** Run the affected engine at a thrust setting that keeps the engine oil temperature within the normal operating range.

Transponder mode selector. . . . TA ONLY

This step prevents climb commands which can exceed reduced thrust performance capability.



◆ Oil temperature is in the **amber** band for **more than 45 minutes**:

▶▶ **Go to the Engine Failure or Shutdown checklist on page 7.16**



# Engine High Vibration

Condition: The vibration level is more than 4.0 units.  
Airframe vibration may or may not be felt.

1 Choose one:

◆ In **icing** conditions:

▶▶ **Go to step 2**


◆ **Not** in icing conditions:

▶▶ **Go to step 6**

2 ENGINE START switches (both) . . . . . FLT

3 Autothrottle (if engaged) . . . . . Disengage

Do the following on one engine at a time.

4  Thrust lever (affected engine) . . . . . Retard to 45% N1 for five seconds, then slowly advance to a minimum of 80% N1 while monitoring engine vibration

5 Choose one:

◆ Vibration **decreases**:

Continue normal operation.



◆ Vibration does **not** decrease:

▶▶ **Go to step 7**

▼ Continued on next page ▼



**▼ Engine High Vibration continued ▼**

- 6 Autothrottle (if engaged) . . . . . Disengage
- 7 Thrust lever  
(affected engine) . . . . Confirm. . . . . Retard to  
maintain vibration  
levels below 4 units or  
until the thrust lever is closed
- 8 Transponder mode selector . . . . . TA ONLY  
This step prevents climb commands which can  
exceed reduced thrust performance capability.

**Note:** If the VIB indication does not decrease when the thrust lever is retarded, check other engine indications on the affected engine. If other engine indications are normal, run the engine at reduced thrust.



## Engine In-Flight Start

Condition: An engine start is needed and all of the following are true:

- There was **no** engine fire
- There is N1 rotation
- There is **no** abnormal airframe vibration.

**Note:** Oil quantity indication as low as zero is normal if windmilling N2 RPM is below approximately 8%.

- 1 Do this checklist **only** after completion of the Engine Failure or Shutdown checklist or as directed by the Engine Limit or Surge or Stall checklist or by the Loss of Thrust on Both Engines checklist.
- 2 Check the In-Flight Start Envelope. X-BLD or XB indication may not match the envelope. Starts are not assured outside of the In-flight Start Envelope.

**Note:** If the N2 is less than 8%, ENGINE START switch must be in CONT to display the EGT.


**Note:** For engines shut down one hour or more, or if EGT is less than 30°C, attempt a restart:

- At an altitude at or below 20,000 feet
- With airspeed at or above 220 knots
- Using a crossbleed start.

▼ Continued on next page ▼

## ▼ Engine In-Flight Start continued ▼

## IN-FLIGHT START ENVELOPE

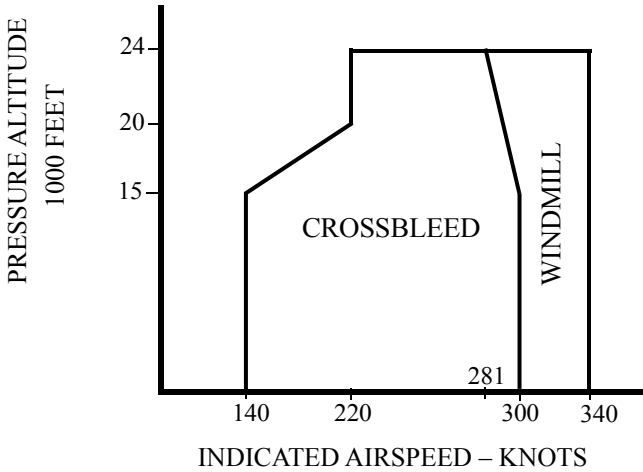

- 3 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Close
- 4 Engine start lever  
(affected engine) . . . . . Confirm . . . . . CUTOFF
- 5 Engines can accelerate to idle very slowly,  
especially at high altitudes or in heavy  
precipitation. If N2 is steadily increasing and EGT  
stays within limits, do not interrupt the start.

▼ Continued on next page ▼

▼ Engine In-Flight Start continued ▼

6 Choose one:

◆ Windmill start:

ENGINE START switch  
(affected engine) . . . . . FLT

▶▶ Go to step 7

◆ Crossbleed start:

PACK switch (affected side). . . . . OFF  
DUCT PRESSURE . . . . . Minimum 30 PSI

Advance the thrust lever to increase duct pressure if needed.

ENGINE START switch  
(affected engine) . . . . . GRD

▶▶ Go to step 7

7 When N2 is at or above 11%:

Engine start lever  
(affected engine) . . . . . IDLE detent

Monitor EGT to ensure it does not rise rapidly or exceed the start limit during the start attempt.

▼ Continued on next page ▼

**▼ Engine In-Flight Start continued ▼**

8 Choose one:

◆ EGT **increases** within 30 seconds **and** a normal start occurs:▶▶ **Go to step 10**◆ EGT does **not** increase within 30 seconds **or** another abort start condition as listed in the Normal Procedures occurs:Engine start lever  
(affected engine) . . . Confirm . . . CUTOFFENGINE START switch  
(affected engine) . . . . . OFF**Note:** If the engine has been shutdown for more than one hour, multiple start attempts can be needed.▶▶ **Go to step 9**

9 Plan to land at the nearest suitable airport.

**Note:** Do not use FMC fuel predictions.▶▶ **Go to the One Engine Inoperative Landing checklist on page 7.30**

10 Engine GEN switch (affected side) . . . . . ON

11 PACK switch (affected side) . . . . . AUTO

12 ENGINE START switch. . . . . As needed

13 APU . . . . . As needed

14 Transponder mode selector . . . . . TA/RA



**ENGINE LOW OIL PRESSURE**

Condition: The engine oil pressure is low. The LOW OIL PRESSURE alert may or may not be illuminated.

1 Choose one:

◆ Engine oil pressure is in the **amber band** with **takeoff thrust** set:

Do **not** takeoff.



◆ Engine oil pressure is **at or below** the **redline**:

▶▶ **Go to the Engine Failure or Shutdown checklist on page 7.16**



**ENGINE OIL FILTER BYPASS**

Condition: The OIL FILTER BYPASS alert indicates oil filter contamination can cause oil to bypass the oil filter.

- 1 Autothrottle (if engaged) . . . . . Disengage
- 2 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Retard  
slowly until the  
OIL FILTER BYPASS  
alert extinguishes or  
the thrust lever is closed

3 Choose one:

◆ OIL FILTER BYPASS alert **extinguishes:**

▶▶ **Go to step 4**

◆ OIL FILTER BYPASS alert **stays illuminated:**

▶▶ **Go to the Engine Failure or  
Shutdown checklist on page 7.16**



- 4 Run the engine at reduced thrust to keep the alert extinguished.

Transponder mode selector . . . . . TA ONLY

This step prevents climb commands which can exceed reduced thrust performance capability.



## One Engine Inoperative Landing

Condition: Landing must be made with one engine inoperative.

- 1 Plan a flaps 15 landing.
- 2 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

- 3 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 4 Maintain VREF 15 + wind additive or VREF ICE + wind additive on final approach to assure sufficient maneuver margin and speed for go-around. The minimum wind additive is 5 knots.
- 5 When engine anti-ice is needed, use on the operating engine only.
- 6 **Checklist Complete Except Deferred Items**

▼ Continued on next page ▼



▼ One Engine Inoperative Landing continued ▼

**Deferred Items**

**Descent Checklist**

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . \_\_\_\_
- Landing data . . . . . **VREF 15 or VREF ICE** \_\_\_\_,  
**Minimums** \_\_\_\_
- Approach briefing . . . . . Completed

**Additional Go-Around Thrust**

Choose one:

- ◆ Additional go-around thrust is **needed**:
  - ▶▶ **Go to No Engine Bleed Landing below**
- ◆ Additional go-around thrust is **not** needed:
  - ▶▶ **Go to Go-Around Procedure Review below**

**No Engine Bleed Landing**

**When** below 10,000 feet:

- WING ANTI-ICE switch . . . . . OFF
- ISOLATION VALVE switch . . . . . CLOSE
- BLEED 1 air switch . . . . . OFF

▼ Continued on next page ▼

▼ One Engine Inoperative Landing continued ▼

Do not open the APU bleed air valve if the engine fire switch is illuminated.



APU BLEED air switch . . . . . ON  
Left PACK switch . . . . . AUTO  
BLEED 2 air switch . . . . . OFF

**Go-Around Procedure Review**

Do the normal go-around procedure except:

Use flaps 1.

Maintain VREF 15 + 5 knots or VREF ICE + 5 knots until reaching flap retraction altitude.

Limit bank angle to 15° when airspeed is less than VREF 15 + 15 knots or VREF ICE + 5 knots or the minimum maneuver speed, whichever is lower.

Accelerate to flaps 1 maneuvering speed before flap retraction.

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_  
Navigation aids . . . . . Tuned  
EFB . . . . . Secured, Plug off

**Additional Deferred Item**

GROUND PROXIMITY  
FLAP INHIBIT switch . . . . . FLAP INHIBIT

▼ Continued on next page ▼

▼ One Engine Inoperative Landing continued ▼

## Landing Checklist

**ENGINE START switch**  
**(operating engine)** . . . . . CONT  
 Speedbrake . . . . . ARMED  
 Landing gear . . . . . Down  
 Flaps. . . . . **15, Green light**



Condition: A fault occurs in the thrust reverser system.

**Note:** Additional system failures may cause in-flight deployment.

- 1 Expect normal reverser operation after landing.



## REVERSER UNLOCKED (IN FLIGHT)

Condition: The amber REV indication shows with uncommanded reverse thrust.

**Note:** Only multiple failures could allow the engine to go into reverse thrust.

Unstowed reverser sleeves produce buffet, yaw, roll and increased airplane drag.

- 1 Check movement of the forward thrust lever on the affected engine.

The EECs prevent power above idle if the related thrust reverser has moved from the stowed position.

---

**Warning! Do not actuate the reverse thrust lever.**

---

- 2 Choose one:

◆ Engine **responds** to forward thrust lever movement **and no** buffet or yaw exists:

Continue normal operation.



◆ Engine does **not** respond to forward thrust lever movement **or** buffet or yaw **exists**:

▶▶ **Go to the Engine Failure or Shutdown checklist on page 7.16**



Intentionally  
Blank

**START VALVE OPEN**

Condition: The START VALVE OPEN alert indicates the start valve fails to close.

1 ENGINE START switch . . . . . OFF

2 Choose one:

◆ START VALVE OPEN alert **extinguishes**:



◆ START VALVE OPEN alert **stays illuminated**:

▶▶ **Go to step 3**

3 ISOLATION VALVE switch . . . . . CLOSE

4 PACK switch (affected side) . . . . . OFF

This causes the operating pack to regulate to high flow in flight with flaps up.

5 Engine BLEED air switch (affected side) . . . . . OFF

6 Choose one:

◆ START VALVE OPEN alert stays illuminated for **engine 1**:

APU BLEED air switch . . . . . OFF

▶▶ **Go to step 7**

◆ START VALVE OPEN alert stays illuminated for **engine 2**:

▶▶ **Go to step 7**

▼ **Continued on next page** ▼

**▼ START VALVE OPEN continued ▼**

7 Choose one:

◆ **In flight:**

WING ANTI-ICE switch . . . . . OFF

This prevents possible asymmetrical ice buildup on the wings.

Avoid icing conditions where wing anti-ice is needed.

◆ **On the ground:**Ground air source  
(if in use) . . . . . DisconnectEngine start lever  
(affected engine) . . . . . CUTOFF

# Volcanic Ash

Condition: Volcanic ash is suspected when one or more of these occur:


- A static discharge around the windshield
- A bright glow in the engine inlets
- Smoke or dust on the flight deck
- An acrid odor.

Objective: To exit the ash cloud and restart engines if needed.

**Caution! Exit the volcanic ash as quickly as possible. Consider a 180° turn. Consider a descending turn.**

- 1 Don oxygen masks and smoke goggles, as needed.
- 2 Establish crew communications, as needed.
- 3 Autothrottle (if engaged) . . . . .Disengage

**If conditions allow, run the engines at idle thrust.**

- 4  Thrust levers (both) . . . . . Close

This reduces possible engine damage or flameout, or both, by decreasing EGT.

- 5 ENGINE START switches (both) . . . . . FLT
- 6 PACK switches . . . . . HIGH
- 7 ENG ANTI-ICE switches (both) . . . . . ON
- 8 WING ANTI-ICE switch . . . . . ON

▼ Continued on next page ▼



**▼ Volcanic Ash continued ▼**

- 9 APU switch  
(if APU available) . . . . . START

This supplies backup electrical and pneumatic sources, if needed.

**Note:** Volcanic ash can cause non-normal system reactions such as:

- Engine malfunctions, increasing EGT, engine stall or flameout
- Decrease in indicated airspeed or loss of airspeed indications
- Equipment cooling OFF light.

- 10 If failed, engines can accelerate to idle very slowly, especially at high altitudes. If N2 is steadily increasing and EGT stays within limits, the start is progressing normally.

- 11 Plan to land at the nearest suitable airport.

- 12 Choose one:

◆ Engines run **normally**:



◆ Engines do **not** run normally:

▶▶ **Go to the Loss Of Thrust On Both Engines checklist on page 7.6**



Intentionally  
Blank



**Table of Contents**

**APU FIRE ..... 8.1**

**ENGINE FIRE or Engine Severe Damage or Separation ..... 8.2**

**ENGINE OVERHEAT ..... 8.5**

**Engine Tailpipe Fire ..... 8.6**

**Smoke, Fire or Fumes ..... 8.8**

-----

APU DETECTION INOPERATIVE ..... 8.12

**APU FIRE ..... 8.1**

CARGO FIRE ..... 8.13

CARGO FIRE DETECTOR FAULT ..... 8.15

**ENGINE FIRE or Engine Severe Damage or Separation ..... 8.2**

ENGINE FIRE/OVERHEAT DETECTOR FAULT ..... 8.16

**ENGINE OVERHEAT ..... 8.5**

**Engine Tailpipe Fire ..... 8.6**

Smoke or Fumes Removal ..... 8.18

**Smoke, Fire or Fumes ..... 8.8**

WHEEL WELL FIRE..... 8.22



## Table of Contents

Intentionally  
Blank

**APU FIRE**

Condition: Fire is detected in the APU.

1 APU fire switch. . . Confirm . . . . Pull, rotate to the stop, and hold for 1 second

2 APU switch . . . . . OFF

-----

3 Choose one:

◆ APU fire switch **extinguishes:**



◆ APU fire switch **stays illuminated:**

▶▶ **Go to step 4**

4 Plan to land at the nearest suitable airport.



<p><b>ENGINE FIRE</b>  <b>or</b>  <b>Engine Severe Damage or Separation</b></p>
---

Condition: One or more of these occur:

- Engine fire warning
- Airframe vibrations with abnormal engine indications
- Engine separation.

- 1 Autothrottle (if engaged) . . . . . Disengage
- 2 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Close
- 3 Engine start lever  
(affected engine) . . . . . Confirm . . . . . CUTOFF
- 4 Engine fire switch  
(affected engine) . . . . . Confirm . . . . . Pull

To manually unlock the engine fire switch, press the override and pull.

- 5 **If** the engine fire switch or ENG OVERHEAT light is illuminated:

Engine fire switch . . . . . Rotate to the stop and hold for 1 second

**If** after 30 seconds the engine fire switch or ENG OVERHEAT light stays illuminated:

Engine fire switch. . . . . Rotate to the other stop and hold for 1 second



**▼ Continued on next page ▼**

**▼ ENGINE FIRE or Engine Severe Damage or Separation continued ▼**

6 Choose one:

◆ High airframe vibration **occurs** and **continues** after the engine is shut down:

Without delay, reduce airspeed and descend to a safe altitude which results in an acceptable vibration level.

**Note:** If high vibration returns and further airspeed reduction and descent are not practical, increasing airspeed may reduce the vibration.

▶▶ **Go to step 7**

◆ High airframe vibration does **not** occur or does **not** continue after the engine is shut down:

▶▶ **Go to step 7**

7 ISOLATION VALVE switch . . . . . CLOSE

8 PACK switch (affected side) . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

9 APU BLEED air switch . . . . . OFF

**▼ Continued on next page ▼**

▼ENGINE FIRE or Engine Severe Damage or Separation continued▼

10 Choose one:

◆APU is **available** for start:

APU . . . . . START

**When** APU is running:

APU GEN switch  
(affected side) . . . . .ON

▶▶Go to step 11

◆APU is **not** available:

▶▶Go to step 11

11 Balance fuel as needed.

12 Transponder mode selector . . . . . TA ONLY

This prevents climb commands which can exceed single engine performance capability.

13 ISOLATION VALVE switch  
(after the fire has been extinguished) . . . . . AUTO

This ensures bleed air is available to both wings if wing anti-ice is needed.

14 Plan to land at the nearest suitable airport.

**Note:** Do not use FMC fuel predictions.

▶▶Go to the One Engine Inoperative Landing checklist on page 7.30





**ENGINE OVERHEAT****ENG 1  
OVERHEAT****ENG 2  
OVERHEAT**

Condition: An overheat is detected in the engine.

- 1 Autothrottle (if engaged) . . . . . Disengage
- 2 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Close
- 3 **If the ENG OVERHEAT light stays illuminated:**
  - ▶▶ **Go to the ENGINE FIRE or Engine Severe Damage or Separation checklist on page 8.2**



- 
- 4 **If the ENG OVERHEAT light extinguishes:**
    - Run the engine at reduced thrust to keep the light extinguished.
  - 5 Transponder mode selector . . . . . TA ONLY  
This step prevents climb commands which can exceed reduced thrust performance capability.



# Engine Tailpipe Fire

Condition: An engine tailpipe fire occurs on the ground with no engine fire warning.

1 Engine start lever (affected engine) . . . . . CUTOFF

2 Advise the cabin.

3 Choose one:

◆ Bleed air is **available**:

▶▶ **Go to step 4**

◆ Bleed air is **not** available:

Advise the tower.



4 PACK switches (both) . . . . . OFF

5 ISOLATION VALVE switch . . . . . AUTO

6 Engine BLEED air switches (both) . . . . . ON

7 Choose one:

◆ APU is **running**:

APU BLEED air switch . . . . . ON

▶▶ **Go to step 8**

◆ APU is **not** running:

▶▶ **Go to step 8**

▼ Continued on next page ▼

**▼ Engine Tailpipe Fire continued ▼**

8 Choose one:

◆ Affected ENGINE START switch is in **GRD**:▶▶ **Go to step 9**◆ Affected ENGINE START switch is **not** in GRD:

Allow the affected N2 to decrease below 20%.

ENGINE START switch  
(affected engine) . . . . . GRD▶▶ **Go to step 9**

9 Advise the tower.

10 **When** the tailpipe fire is extinguished:ENGINE START switch  
(affected engine) . . . . . OFF

**Smoke, Fire or Fumes**

Condition: Smoke, fire or fumes occur.

- 1 Diversion may be needed.
- 2 Don oxygen masks and set regulators to 100%, as needed.
- 3 Don smoke goggles, as needed.
- 4 Establish crew and cabin communications.
- 5 BUS TRANSFER switch . . . . . OFF

**YN531 - YV767**

- 6 Advise the cabin crew that the cabin lighting will be extinguished, but passenger reading lights will continue to work.
- 7 CAB/UTIL switch. . . . . OFF
- 8 IFE/PASS SEAT switch. . . . . OFF

**B737-700**

- 9 RECIRC FAN switch. . . . . OFF

**B737-800**

- 10 RECIRC FAN switches (both) . . . . . OFF
- 11 APU BLEED air switch . . . . . OFF

12 **Anytime** the smoke or fumes become the greatest threat:

**▶▶ Go to the Smoke or Fumes Removal checklist on page 8.18**

▼ Continued on next page ▼

▼ Smoke, Fire or Fumes continued ▼

13 Choose one:

- ◆ Source of the smoke, fire or fumes is **obvious and** can be **extinguished quickly**:

Isolate and extinguish the source.

If possible, remove power from the affected equipment by switch or circuit breaker in the flight deck or cabin.

▶▶ **Go to step 14**

- ◆ Source of the smoke, fire or fumes is **not obvious or cannot** be extinguished quickly:

▶▶ **Go to step 15**

14 Choose one:

- ◆ Source is **visually confirmed** to be extinguished **and** the smoke or fumes are **decreasing**:

Continue the flight at the captain's discretion.

Restore unpowered items at the captain's discretion.

▶▶ **Go to the Smoke or Fumes Removal checklist on page 8.18, if needed**



- ◆ Source is **not** visually confirmed to be extinguished **or** smoke or fumes are **not** decreasing:

▶▶ **Go to step 15**

▼ Continued on next page ▼

▼ Smoke, Fire or Fumes continued ▼

15 EQUIP COOLING SUPPLY  
and EXHAUST switches (both) . . . . . ALTN

16 Instruct the cabin crew to:

Turn on cabin reading lights.

Turn on galley attendants work lights.

**YA701 - YM484**

Turn off cabin fluorescent light switches.

17 Divert to the nearest suitable airport while continuing the checklist.

18 Consider an immediate landing if the smoke, fire or fumes situation becomes uncontrollable.

19 Do **not** delay landing in an attempt to complete all of the following steps.

20 ISOLATION VALVE switch . . . . . CLOSE

21 R PACK switch . . . . . OFF

22 **Wait** 2 minutes unless the smoke or fumes are increasing. This allows time for the smoke or fumes to clear.

▼ Continued on next page ▼

**▼ Smoke, Fire or Fumes continued ▼**

23 Choose one:

◆ Smoke or fumes are **decreasing**:**▶▶ Go to the Smoke or Fumes Removal checklist on page 8.18, if needed**◆ Smoke or fumes **continue or are increasing**:

R PACK switch . . . . . AUTO

L PACK switch . . . . . OFF

**▶▶ Go to step 24**24 **Wait** 2 minutes unless the smoke or fumes are increasing. This allows time for the smoke or fumes to clear.

25 Choose one:

◆ Smoke or fumes are **decreasing**:**▶▶ Go to the Smoke or Fumes Removal checklist on page 8.18, if needed**◆ Smoke or fumes **continue or are increasing**:

L PACK switch . . . . . AUTO

Consider an immediate landing.

**▶▶ Go to the Smoke or Fumes Removal checklist on page 8.18, if needed**

APU DET  
INOP

**APU DETECTION  
INOPERATIVE**

Condition: APU fire detection is inoperative.

- 1 APU switch. . . . . OFF

---

**Caution! Do not run the APU. An APU fire would not be detected and the APU would continue to run.**

---





**CARGO FIRE****FWD****AFT**

Condition: Fire is detected in the related cargo compartment.

- 1 CARGO FIRE ARM switch  
(affected compartment) . . . Confirm . . . . . Push,  
Verify ARMED
- 2 CARGO FIRE DISCH switch . . . . . Push and hold  
for 1 second

**Note:** DISCH light may need up to 30 seconds to illuminate.

**B737-700**

- 3 Choose one:

◆ On the **ground**:

**Warning!** Inform ground personnel  
**NOT** to open any cargo door  
until all passengers and crew  
have exited the airplane and  
fire fighting equipment is  
nearby.



◆ In flight:

▶▶ Go to step 5

▼ Continued on next page ▼

▼ CARGO FIRE continued ▼

**B737-800**

4 Choose one:

◆ On the **ground**:

**Warning! Inform ground personnel  
NOT to open any cargo door  
until all passengers and crew  
have exited the airplane and  
fire fighting equipment is  
nearby.**



◆ In flight:

▶▶ Go to step 6

**B737-700**

5 RECIRC FAN switch . . . . . OFF

**B737-800**

6 RECIRC FAN switches (both) . . . . . OFF

7 PACK switches (both) . . . . . HIGH

8 Plan to land at the nearest suitable airport.

9 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

▼ Continued on next page ▼

## ▼ CARGO FIRE continued ▼

Autobrake . . . . . \_\_\_\_\_ |  
 Landing data . . . . . VREF \_\_\_\_\_, Minimums \_\_\_\_\_  
 Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_  
 Navigation aids . . . . . Tuned  
 EFB . . . . . Secured, Plug off

---

**Warning! Inform ground personnel NOT to open any cargo door after landing until all passengers and crew have exited the airplane and fire fighting equipment is nearby.**

---

**Landing Checklist**

ENGINE START switches . . . . . CONT  
 Speedbrake . . . . . ARMED  
 Landing gear . . . . . Down  
 Flaps . . . . . \_\_\_\_\_, Green light



**DETECTOR  
 FAULT**

**CARGO FIRE DETECTOR FAULT**

Condition: Fire detection is inoperative in one or both cargo compartments.



**FAULT****ENGINE FIRE/OVERHEAT  
DETECTOR FAULT**

Condition: Engine fire and overheat detection is inoperative in one or both engines.



Intentionally  
Blank

**Smoke or Fumes Removal**

Condition: Smoke or fumes removal is needed.

- 1 Do this checklist **only** when directed by the Smoke, Fire or Fumes checklist.
- 2 Do **not** delay landing in an attempt to complete the following steps.
- 3 Close the flight deck door.
- 4 Choose one:
  - ◆ **Both** PACK switches are **OFF**:
    - ▶▶ **Go to step 5**
  - ◆ **A single or both** PACK switch(es) are in **AUTO**:
    - ▶▶ **Go to step 6**

▼ **Continued on next page** ▼

## ▼ Smoke or Fumes Removal continued ▼

5 Choose one:

◆ Smoke or fumes source is confirmed to be **outside** the flight deck:◆ Smoke or fumes source is confirmed to be **on** the flight deck:

---

**Caution! Window should not be opened unless the source is confirmed to be on the flight deck.**


---

Establish normal holding speed. High airspeed may prevent opening the window.

Open the first officer's sliding window.

▶▶ **Go to the Smoke, Fire or Fumes checklist on page 8.8 and do the remaining steps**

Do <b>not</b> turn on any PACK switch that was turned off by the Smoke, Fire or Fumes checklist.
--

6  Operating PACK switch(es) . . . . . HIGH

7 LAND ALT indicator . . . . . 10,000 feet

**Note:** The intermittent cabin altitude/configuration warning horn will sound and the CABIN ALTITUDE lights (if installed and operative) will illuminate at a cabin altitude of approximately 10,000 feet.

## ▼ Continued on next page ▼

▼ Smoke or Fumes Removal continued ▼

- 8 Engine BLEED air switches (both) . . . . Verify ON
- 9 Set thrust to maximum practical N1 (minimum 45%).
- 10 Open flight deck air conditioning and gasper outlets.

**Caution! Do not open any flight deck window.  
Keep the flight deck door closed.**

11 Choose one:

◆ Smoke or fumes are **controllable**:

▶▶ **Go to the Smoke, Fire or Fumes checklist on page 8.8 and do the remaining steps**



◆ Smoke or fumes are **uncontrollable**:

▶▶ **Go to step 12**

12 Descend to the lowest safe altitude or 10,000 feet, whichever is higher.

13 **When** at 14,000 feet or below:

Pressurization mode selector . . . . . MAN

Outflow VALVE switch . . . . . Hold in OPEN until the outflow VALVE indication shows fully OPEN

This causes the cabin airflow to carry smoke or fumes aft.

▼ Continued on next page ▼



**▼ Smoke or Fumes Removal continued ▼**

**Note:** The outflow valve can take up to 20 seconds to open.

- ▶▶ **Go to the Smoke, Fire or Fumes checklist on page 8.8 and do the remaining steps**




**WHEEL WELL**

**WHEEL WELL FIRE**

Condition: Fire is detected in the main wheel well.

270K/.82M maximum.

- 1  LANDING GEAR lever . . . . . DN

This attempts to remove and extinguish the fire source.

- 2 Plan to land at the nearest suitable airport.

**Note:** Do **not** use FMC fuel predictions with gear extended.

- 3 Choose one:

◆ Gear **must be retracted** for airplane performance:

▶▶ **Go to step 4**


◆ Gear does **not** need to be retracted for airplane performance:



- 4 **When** the WHEEL WELL light extinguishes:

**Wait** 20 minutes.

235K maximum

- 5  LANDING GEAR lever . . . . . UP

- 6 **When** the landing gear indicator lights extinguish:

LANDING GEAR lever . . . . . OFF





Table of Contents

**Runaway Stabilizer ..... 9.1**  
-----

All Flaps Up Landing ..... 9.4

AUTO SLAT FAIL ..... 9.6

Elevator Tab Vibration ..... 9.6

FEEL DIFFERENTIAL PRESSURE ..... 9.7

FLIGHT CONTROL LOW PRESSURE..... 9.7

Jammed or Restricted Flight Controls ..... 9.8

LEADING EDGE FLAPS TRANSIT ..... 9.12

MACH TRIM FAIL ..... 9.16

**Runaway Stabilizer ..... 9.1**

SPEED BRAKE DO NOT ARM..... 9.17

SPEED BRAKE DO NOT ARM..... 9.20

SPEED TRIM FAIL ..... 9.21

SPEEDBRAKES EXTENDED ..... 9.21

STABILIZER OUT OF TRIM ..... 9.22

Stabilizer Trim Inoperative ..... 9.24

STANDBY RUDDER ON ..... 9.28

Trailing Edge Flap Asymmetry ..... 9.29

Trailing Edge Flap Disagree ..... 9.34

Trailing Edge Flaps Up Landing..... 9.40

YAW DAMPER ..... 9.44



## Table of Contents

Intentionally  
Blank

## Runaway Stabilizer

Condition: Uncommanded stabilizer trim movement occurs continuously.

1 Control column. . . . . Hold firmly

2 Autopilot (if engaged) . . . . . Disengage

Do **not** re-engage the autopilot.

Control airplane pitch attitude manually with control column and main electric trim as needed.

3 Autothrottle (if engaged) . . . . . Disengage

Do **not** re-engage the autothrottle.

4 **If** the runaway **stops** after the autopilot is disengaged:



5 **If** the runaway **continues** after the autopilot is disengaged:

STAB TRIM CUTOUT  
switches (both) . . . . . CUTOUT

**If** the runaway **continues**:

Stabilizer  
trim wheel . . . . . Grasp and hold



6 Stabilizer. . . . . Trim manually

7 Anticipate trim requirements.

▼ Continued on next page ▼

▼ Runway Stabilizer continued ▼

### 8 Checklist Complete Except Deferred Items

#### Deferred Items

##### Descent Checklist

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . \_\_\_\_
- Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_
- Approach briefing . . . . . Completed

##### Approach Checklist

- Altimeters . . . . . \_\_\_\_
- Navigation aids . . . . . Tuned
- EFB . . . . . Secured, Plug off

##### Airspeed and Trim

Establish correct airspeed and in-trim condition early on final approach.

##### Landing Checklist

- ENGINE START switches . . . . . CONT
- Speedbrake . . . . . ARMED
- Landing gear . . . . . Down
- Flaps . . . . . \_\_\_\_, Green light



Intentionally  
Blank

**All Flaps Up Landing**

Condition: The leading edge devices fail to extend and trailing edge flaps are less than 1.

Objective: To configure for a landing with leading edge devices retracted and trailing edge flaps less than 1.

- 1 Do this checklist **only** when directed by the Trailing Edge Flaps Up Landing checklist.
- 2 Consider burning off fuel to reduce touchdown speed.
- 3 Set VREF 40 + 55 knots.
- 4 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 5 Maintain flaps up maneuvering speed until established on final approach.
- 6 Limit bank angle to 15° when airspeed is less than the flaps up maneuvering speed.
- 7 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . \_\_\_\_

Landing data . . . . . **VREF 40 + 55 knots** \_\_\_\_,  
**Minimums** \_\_\_\_

Approach briefing . . . . . Completed

▼ Continued on next page ▼



---

**▼ All Flaps Up Landing continued ▼**

---

**Go-Around Procedure Review**

Do the normal go-around procedure except:

Limit bank angle to 15° when the airspeed is less than the flaps up maneuvering speed.

Accelerate to flaps up maneuvering speed.

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_  
Navigation aids . . . . . Tuned  
EFB . . . . . Secured, Plug off

---

**Additional Deferred Items**

FASTEN BELTS switch . . . . . ON  
GROUND PROXIMITY  
FLAP INHIBIT switch . . . . . FLAP INHIBIT

---

**Landing Checklist**

ENGINE START switches . . . . . CONT  
Speedbrake . . . . . ARMED  
**YV604, YV605**

**Note:** The SPEED BRAKE lever will not move beyond the FLIGHT DETENT on landing and the spoilers will not fully deploy.

Landing gear . . . . . Down  
Flaps . . . . . \_\_\_\_\_, **No lights**



**AUTO SLAT FAIL**

**AUTO SLAT FAIL**

Condition: The auto slat system is failed.

- 1 Continue normal operation.




**Elevator Tab Vibration**

Condition: An elevator tab vibration occurs in flight. One or more of the following may be an indication of an elevator tab vibration:

- Vibration that originates, and is strongest, in the aft part of the airplane but can be felt throughout the airplane
- Vibration that is felt in the control wheel and rudder pedals
- Vibration that causes items attached to the airplane, such as sun visors, to move.

- 1 Passenger signs . . . . . ON

**Do not** use speedbrakes or change aircraft configuration to reduce airspeed. Do **not** reduce airspeed below the minimum speed for the existing flap setting and gross weight.

- 2  Smoothly reduce airspeed until the vibration stops.
- 3 Consider landing at the nearest suitable airport.
- 4 Stay at or below the reduced airspeed at which the vibration stopped for the rest of the flight. Limit bank angle to 15° until below 20,000 feet.
- 5 Do **not** deploy speedbrakes in flight.

▼ Continued on next page ▼

▼ Elevator Tab Vibration continued ▼

**Note:** Flaps and landing gear can be extended normally for the approach.

The speedbrakes can be armed for landing.



Condition: High differential pressure is measured by the elevator feel computer.

- 1 Continue normal operation.



Condition: Hydraulic system pressure to the ailerons, elevators and rudder is low.

Objective: To activate the standby hydraulic system and standby rudder PCU.

- 1 FLT CONTROL switch (affected side) . . . . . Confirm. . . . . STBY RUD



## Jammed or Restricted Flight Controls

Condition: A flight control is jammed or restricted in roll, pitch, or yaw.

- 1 Autopilot (if engaged) . . . . . Disengage
- 2 Autothrottle (if engaged) . . . . . Disengage
- 3 Verify that the thrust is symmetrical.
- 4 Overpower the jammed or restricted system. Use maximum force, including a combined effort of both pilots, if needed. A maximum two-pilot effort on the controls will not cause a cable or system failure.
- 5 Do **not** turn off any flight control switches.
- 6 Choose one:

◆ The failure could be **due** to freezing water **and** conditions **allow**:

Consider a descent to a warmer temperature and attempt to overpower the jammed or restricted system again.

▶▶ **Go to step 7**

◆ The failure could **not** be due to freezing water **or** conditions do **not** allow:

▶▶ **Go to step 7**

▼ Continued on next page ▼

## ▼ Jammed or Restricted Flight Controls continued ▼

7 Choose one:

◆ Controls are **normal**:



◆ Controls are **not** normal:

▶▶ **Go to step 8**

- 8 Use stabilizer or rudder trim to offload control forces. If electric stabilizer trim is needed, move the Stabilizer Trim Override switch to OVERRIDE.
- 9 Do not make abrupt thrust changes. Extend or retract speedbrake slowly and smoothly.
- 10 Limit bank angle to 15°.
- 11 Plan to land at the nearest suitable airport.
- 12 Plan a flaps 15 landing.
- 13 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

▼ Continued on next page ▼

▼ Jammed or Restricted Flight Controls continued ▼

14 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

15 Checklist Complete Except Deferred Items

Deferred Items

Descent Checklist

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . \_\_\_\_
- Landing data . . . . . **VREF 15 or VREF ICE** \_\_\_\_,  
**Minimums** \_\_\_\_
- Approach briefing . . . . . Completed

Go-Around Procedure Review

Do the normal go-around procedure.

Advance thrust to go-around smoothly and slowly to avoid excessive pitch-up.

Approach Checklist

- Altimeters . . . . . \_\_\_\_
- Navigation aids . . . . . Tuned
- EFB . . . . . Secured, Plug off

▼ Continued on next page ▼

---

▼ Jammed or Restricted Flight Controls continued ▼

---

### Additional Deferred Item

GROUND PROXIMITY

FLAP INHIBIT switch . . . . . FLAP INHIBIT

---

### Landing Checklist

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps. . . . . **15, Green light**



**LE FLAPS  
TRANSIT**
**LEADING EDGE FLAPS  
TRANSIT**

- Condition: One or more of these occur:
- The leading edge devices are not in the commanded position
  - A leading edge device asymmetry is detected
  - A leading edge device skew is detected.

**Note:** Do not use FMC fuel predictions with any flaps or slats extended.

1 Choose one:

◆ **Trailing** edge flaps are **extended** and the trailing edge flap position indication **disagrees** with the flap handle position:

▶▶ **Go to the Trailing Edge Flap Disagree checklist on page 9.34**



◆ **Trailing** edge flaps are **extended** and the trailing edge flap position indication **agrees** with the flap handle position:

▶▶ **Go to step 7**

◆ **Trailing** edge flaps are **up**:

Limit airspeed to 230 knots maximum.

▶▶ **Go to step 2**

▼ **Continued on next page** ▼



**▼ LEADING EDGE FLAPS TRANSIT continued ▼**

2 Choose one:

◆ Roll is **encountered**:▶▶ **Go to step 7**◆ Roll is **not** encountered:**Note:** Roll may be difficult to identify with the autopilot engaged.▶▶ **Go to step 3****Maximum flap extension altitude 20,000 feet.**3  Flaps . . . . . Extend to flaps 1, then retract to flaps up

4 Choose one:

◆ LE FLAPS TRANSIT light **extinguishes** after the flaps are up:

Continue normal operation.

◆ LE FLAPS TRANSIT light **stays illuminated** after the flaps are up:▶▶ **Go to step 5**

5 Check LE DEVICES annunciator panel.

**▼ Continued on next page ▼**

▼ **LEADING EDGE FLAPS TRANSIT continued** ▼

6 Choose one:

◆ Light(s) for **only one** leading edge device is illuminated:

Limit airspeed to 300 knots (280 knots for turbulent air penetration) or 0.65 Mach, whichever is lower.

▶▶ **Go to step 7**

◆ Light(s) for **more than one** leading edge device is illuminated:

Limit airspeed to 230 knots maximum.

▶▶ **Go to step 7**

7 Plan a flaps 15 landing.

8 Set VREF 15 + 15 knots.

9 Limit bank angle to 15° when airspeed is less than the flaps up maneuvering speed.

10 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

**11 Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . \_\_\_\_

▼ **Continued on next page** ▼

## ▼ LEADING EDGE FLAPS TRANSIT continued ▼

Landing data . . . . . **VREF 15 + 15 knots** \_\_\_\_,  
**Minimums** \_\_\_\_

Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_

Navigation aids . . . . . Tuned

EFB . . . . . Secured, Plug off

**Additional Deferred Item**

GROUND PROXIMITY

FLAP INHIBIT switch . . . . . FLAP INHIBIT

**Note:** The amber LE FLAPS TRANSIT light may be illuminated. Operation within the lower amber airspeed band for landing is normal for this condition.

**YA701 - YA706**

**Note:** V/S and VNAV PTH modes may revert to LVL CHG mode.

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps . . . . . **15, Green or amber light**

**Note:** The light may be green or amber depending on the cause of the failure.



**MACH TRIM  
FAIL****MACH TRIM FAIL**

Condition: The mach trim system is failed.

- 1 Limit airspeed to 280 knots/0.82 Mach.



**SPEED BRAKE  
DO NOT ARM**
**SPEED BRAKE DO NOT ARM**

YM482 - YN534

Condition: An automatic speedbrake fault occurs.

**Note:** Speedbrakes may be used in flight.

1 Choose one:

 ◆ SPEED BRAKE DO NOT ARM light illuminates **before** the flaps are retracted:

Retract the flaps on schedule.

**▶▶ Go to step 2**

 ◆ SPEED BRAKE DO NOT ARM light illuminates with the flaps **up**:

Limit airspeed to 320 knots maximum.

**▶▶ Go to step 3**

 ◆ SPEED BRAKE DO NOT ARM light is illuminated **after** flap extension for landing:

**▶▶ Go to step 3**

▼ Continued on next page ▼

▼ **SPEED BRAKE DO NOT ARM continued** ▼

2 Choose one:

◆ **SPEED BRAKE DO NOT ARM light stays illuminated** after the flaps are retracted:

Limit airspeed to 320 knots maximum.

▶▶ **Go to step 3**

◆ **SPEED BRAKE DO NOT ARM light extinguishes** after the flaps are retracted:

▶▶ **Go to step 3**

### 3 Checklist Complete Except Deferred Items

#### Deferred Items

##### Descent Checklist

Pressurization . . . . .	LAND ALT ____
Recall . . . . .	Checked
MCP (inbound course, autopilot) . . . . .	Checked
Autobrake . . . . .	____
Landing data . . . . .	VREF ____, Minimums ____
Approach briefing . . . . .	Completed

##### Approach Checklist

Altimeters . . . . .	____
Navigation aids . . . . .	Tuned
EFB . . . . .	Secured, Plug off

▼ **Continued on next page** ▼

---

**▼ SPEED BRAKE DO NOT ARM continued ▼**

---

**Additional Deferred Item**

Choose one:

◆ SPEED BRAKE DO NOT ARM light **is extinguished** after flap extension for landing:◆ SPEED BRAKE DO NOT ARM light **is illuminated** after flap extension for landing:

Do **not** arm the speedbrakes for landing. Manually deploy the speedbrakes immediately upon landing. Increased force may be needed to move the SPEED BRAKE lever to the UP position.

**▶▶ Go to Landing Checklist below**

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . **DOWN detent**

Landing gear . . . . . Down

Flaps . . . . . \_\_\_\_, Green light



**SPEED BRAKE  
DO NOT ARM**

**SPEED BRAKE DO NOT ARM**

YA701 - YL551, YS151 - YV767

Condition: An automatic speedbrake fault occurs.

**Note:** Speedbrakes may be used in flight.

- 1 Do **not** arm the speedbrake for landing. Manually deploy the speedbrakes immediately upon landing.
- 2 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_  
 Recall . . . . . Checked  
 MCP (inbound course, autopilot) . . . . . Checked  
 Autobrake . . . . . \_\_\_\_  
 Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_  
 Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_  
 Navigation aids . . . . . Tuned  
 EFB . . . . . Secured, Plug off

**Landing Checklist**

ENGINE START switches . . . . . CONT  
 Speedbrake . . . . . **DOWN detent**  
 Landing gear . . . . . Down  
 Flaps . . . . . \_\_\_\_, Green light





**SPEED TRIM  
FAIL****SPEED TRIM FAIL**

Condition: The speed trim system is failed.

- 1 Continue normal operation.

**SPEEDBRAKES  
EXTENDED****SPEEDBRAKES EXTENDED**

Condition: In flight, the speedbrakes are extended beyond the ARMED position and one or more of these occur:

- The radio altitude is below 800 feet
- The flap lever setting is more than flaps 10.

On the ground, the SPEED BRAKE lever is down and the speedbrakes are extended.

- 1 Choose one:

◆ **In flight:**

SPEED BRAKE lever . . . . . ARMED



◆ **On the ground:**

SPEED BRAKE lever . . . . . DOWN detent

**Note:** If the light stays illuminated, do **not** takeoff.



# STABILIZER OUT OF TRIM

**STAB  
OUT OF  
TRIM**

Condition: The autopilot does not set the stabilizer trim correctly.

**Note:** Momentary illumination of the STAB OUT OF TRIM light during large changes in trim requirements is normal.

1 Choose one:

◆ Stabilizer is **trimming**:  
Continue normal operation.  
■ ■ ■ ■

◆ Stabilizer is **not** trimming:  
▶▶ **Go to step 2**

- 2 Control column. . . . . Hold firmly
- 3 Autopilot . . . . . Disengage
- 4 Autothrottle (if engaged) . . . . . Disengage
- 5 Stabilizer trim . . . . . As needed

▼ Continued on next page ▼

**▼ STABILIZER OUT OF TRIM continued ▼**

6 Choose one:

◆ Stabilizer **responds** to electric trim inputs:Do **not** re-engage the autopilot or autothrottle.◆ Stabilizer does **not** respond to electric trim inputs:▶▶ **Go to the Stabilizer Trim Inoperative checklist on page 9.24**

## Stabilizer Trim Inoperative

Condition: Both of these occur:

- Loss of electric trim through the autopilot
- Loss of electric trim through the control wheel switches.

Objective: To land the airplane using manual trim or, if manual trim is not available, to land the airplane using elevator control only.

### 1 STAB TRIM CUTOUT switches (both) . . . CUTOUT

The autopilot is not available.

### 2 Apply steady pressure on the manual trim handles until the needed trim is attained.

Use sufficient force to disengage the disconnect clutch. Approximately 1/2 turn of the stabilizer trim wheel may be needed.

**Note:** A maximum two-pilot effort on the trim wheels will not cause a cable or system failure.

The handle(s) should be folded inside the stabilizer trim wheel when manual trim is no longer needed.

If the failure could be due to ice accumulation, descend to a warmer temperature and attempt again.

▼ Continued on next page ▼

## ▼ Stabilizer Trim Inoperative continued ▼

3 Choose one:

◆ Stabilizer **can** be trimmed manually:

▶▶ **Go to step 4**

◆ Stabilizer can **not** be trimmed manually:

▶▶ **Go to step 8**

4 Maintain in-trim airspeed until the start of the approach.

5 Use an airspeed which results in an in-trim condition. This will reduce the force that is needed to move the stabilizer.

6 Continue to trim manually for the rest of the flight.

7 Establish the landing configuration early.

▶▶ **Go to step 10**

8 Anticipate higher than normal elevator forces during approach and landing.

9 The thrust reduction at flare will cause a nose down pitch.

**Note:** Elevator control is sufficient to safely land the airplane regardless of stabilizer position.

10 Plan a flaps 15 landing.

▼ Continued on next page ▼

▼ Stabilizer Trim Inoperative continued ▼

11 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

12 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

13 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . \_\_\_\_

Landing data . . . . . **VREF 15 or VREF ICE** \_\_\_\_,  
**Minimums** \_\_\_\_

Approach briefing . . . . . Completed

▼ Continued on next page ▼

---

**▼ Stabilizer Trim Inoperative continued ▼**

---

**Go-Around Procedure Review**

Do the normal go-around procedure.

Advance thrust to go-around smoothly and slowly to avoid excessive pitch-up.

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_

Navigation aids . . . . . Tuned

EFB . . . . . Secured, Plug off

---

**Additional Deferred Item**

GROUND PROXIMITY

FLAP INHIBIT switch . . . . . FLAP INHIBIT

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps . . . . . **15, Green light**



**STBY  
RUD ON**
**STANDBY RUDDER ON**

Condition: The standby rudder hydraulic system is commanded on.

1 Choose one:

◆ STBY RUD ON light is illuminated with **no other flight deck indications:**

Avoid large or abrupt rudder pedal inputs.



◆ STBY RUD ON light is illuminated due to the **pilot moving** the FLT CONTROL A or B switch to STBY RUD:



◆ STBY RUD ON light is illuminated in response to a hydraulic system **non-normal** situation:





## Trailing Edge Flap Asymmetry

Condition: One or more of these occur:

- An uncommanded roll occurs when the flaps change position
- The left and right flap indications disagree.

Objective: To configure the airplane for landing.

- 1 Set the flap lever to the nearest detent that is equal to or less than the smallest indicated flap position.

**Caution!** Do not attempt to move the trailing edge flaps with the **ALTERNATE FLAPS** switch because there is no asymmetry protection.

**Note:** Do not use FMC fuel predictions with any flaps or slats extended.

▼ Continued on next page ▼

**▼ Trailing Edge Flap Asymmetry continued ▼**

2 Choose one:

◆ Flap **lever** is set to **30**:

Set VREF 30.

**Note:** VREF + wind additive must not exceed the flap placard speed for flaps 40.▶▶ **Go to step 4**◆ Flap **lever** is set to **15** or **25**:▶▶ **Go to step 3**◆ Flap **lever** is set to **1** or **greater** and **less than 15**:

Consider burning off fuel to reduce touchdown speed.

Set VREF 40 + 30 knots.

▶▶ **Go to step 4**◆ Flap **lever** is set to **UP**:▶▶ **Go to the Trailing Edge Flaps Up Landing checklist on page 9.40****▼ Continued on next page ▼**

**▼ Trailing Edge Flap Asymmetry continued ▼**

- 3 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

VREF 15 + wind additive, or VREF ICE + wind additive if needed, must not exceed the flap placard speed for the next larger flap setting.

- 4 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 5 **Checklist Complete Except Deferred Items**

**▼ Continued on next page ▼**

▼ Trailing Edge Flap Asymmetry continued ▼

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_  
 Recall . . . . . Checked  
 MCP (inbound course, autopilot) . . . . . Checked  
 Autobrake . . . . . \_\_\_\_  
 Landing data . . . . . **VREF \_\_\_\_ as directed  
 by checklist, Minimums \_\_\_\_**  
 Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_  
 Navigation aids . . . . . Tuned  
 EFB . . . . . Secured, Plug off

**Additional Deferred Item**

Choose one:

◆ Flap **lever** is set to **30**:

▶▶ **Go to Landing Checklist below**

◆ Flap **lever** is set to **less than 30**:

GROUND PROXIMITY FLAP

INHIBIT switch . . . . . FLAP INHIBIT

▶▶ **Go to Landing Checklist below**

▼ Continued on next page ▼

**▼Trailing Edge Flap Asymmetry continued▼****Landing Checklist**

ENGINE START switches . . . . . CONT  
Speedbrake . . . . . ARMED  
Landing gear . . . . . Down  
Flaps. . . . .     , **Green or amber light**

**Note:** The light can be green or amber depending on the cause of the failure.



## Trailing Edge Flap Disagree

Condition: The trailing edge flaps are not in the commanded position.

Objective: To configure the airplane for landing.

1 Choose one:

◆ Trailing edge flap asymmetry **exists**:

▶▶ **Go to the Trailing Edge Flap Asymmetry checklist on page 9.29**



◆ Trailing edge flap asymmetry does **not** exist:

▶▶ **Go to step 2**

2 Choose one:

◆ Indicated flap position is **30 or greater and less than 40**:

Land using existing flaps.

▶▶ **Go to step 3**

◆ Indicated flap position is **15 or greater and less than 30**:

Land using existing flaps.

▶▶ **Go to step 5**

◆ Indicated flap position is **less than 15**:

▶▶ **Go to step 4**

3 Set VREF 30.

▼ Continued on next page ▼

▼ **Trailing Edge Flap Disagree continued** ▼

**Note:** VREF 30 + wind additive must not exceed the flap placard speed for flaps 40.

▶▶ **Go to step 6**

- 4 Plan to extend flaps to 15 using alternate flap extension.

**Note:** Alternate flap extension time to flaps 15 is approximately 2 minutes.

The drag penalty with the leading edge devices extended can make it impossible to reach an alternate field.

- 5 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

VREF 15 + wind additive, or VREF ICE + wind additive if needed, must not exceed the flap placard speed for the next larger flap setting.

- 6 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

▼ **Continued on next page** ▼

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

▼Trailing Edge Flap Disagree continued ▼

### 7 Checklist Complete Except Deferred Items

#### Deferred Items

##### Descent Checklist

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . \_\_\_\_
- Landing data . . . . . **VREF \_\_\_\_ as directed  
by checklist, Minimums \_\_\_\_**
- Approach briefing . . . . . Completed

##### Approach Checklist

- Altimeters . . . . . \_\_\_\_
- Navigation aids . . . . . Tuned
- EFB . . . . . Secured, Plug off

▼ Continued on next page ▼




**▼ Trailing Edge Flap Disagree continued ▼****Additional Deferred Item**

Choose one:

- ◆ Indicated flap position is **30 or greater**:
  - ▶▶ **Go to Landing Checklist below**
- ◆ Indicated flap position is **15 or greater and less than 30**:
  - GROUND PROXIMITY FLAP  
INHIBIT switch . . . . . FLAP INHIBIT
  - ▶▶ **Go to Landing Checklist below**
- ◆ Indicated flap position is **less than 15**:
  - GROUND PROXIMITY FLAP  
INHIBIT switch . . . . . FLAP INHIBIT
  - ▶▶ **Go to Alternate Flap Extension below**

**Alternate Flap Extension**

During flap extension, set the flap lever to the desired flap position.

 **230K maximum during alternate flap extension.**  
ALTERNATE FLAPS master switch . . . . . ARM

**Note:** The landing gear configuration warning can sound if the flaps are between 10 and 15 and the landing gear are retracted.

**▼ Continued on next page ▼**

▼ Trailing Edge Flap Disagree continued ▼

**YV604, YV605**

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 15 position.

**YA701 - YT521, YV741 - YV767**

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 10 position.

**Note:** Operation within the lower amber airspeed band can be needed until the LE FLAPS TRANSIT light extinguishes.

**If flap asymmetry occurs, release the switch immediately. There is no asymmetry protection.**



**ALTERNATE FLAPS**

position switch . . . . . Hold DOWN  
to extend flaps  
to 15 on schedule

As flaps are extending, slow to respective maneuvering speed.

▼ Continued on next page ▼

## ▼ Trailing Edge Flap Disagree continued ▼

Choose one:

- ◆ Trailing edge flaps **asymmetry** occurs:
  - ▶▶ **Go to the Trailing Edge Flap Asymmetry checklist on page 9.29**
  - ■ ■ ■
- ◆ Trailing edge flaps extend to **15**:
  - ▶▶ **Go to Landing Checklist below**
- ◆ Indicated flap position is **less than 1** after attempting alternate flap extension:
  - ▶▶ **Go to the Trailing Edge Flaps Up Landing checklist on page 9.40**
  - ■ ■ ■
- ◆ Indicated flap position is **1 or greater and less than 15** after attempting alternate flap extension:

Land using existing flaps.

Consider burning off fuel to reduce touchdown speed.

Set VREF 40 + 30 knots.

Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

▶▶ **Go to Landing Checklist below**

▼ Continued on next page ▼

▼ Trailing Edge Flap Disagree continued ▼

## Landing Checklist

ENGINE START switches . . . . . CONT  
 Speedbrake . . . . . ARMED  
 Landing gear . . . . . Down  
 Flaps . . . . . \_\_\_\_\_, **Green or amber light**

**Note:** The light can be green or amber depending on the cause of the failure.



### Trailing Edge Flaps Up Landing

Condition: The trailing edge flaps are less than 1.

Objective: To configure for a landing with trailing edge flaps less than 1.

1 Choose one:

◆ Trailing edge flap asymmetry **exists**:

▶▶ **Go to step 2**

◆ Trailing edge flap asymmetry does **not** exist:


Do this checklist **only** when directed by the Trailing Edge Flap Disagree checklist.

▶▶ **Go to step 4**

▼ Continued on next page ▼

▼ Trailing Edge Flaps Up Landing continued ▼

230K maximum.

- 2  ALTERNATE FLAPS master switch . . . . . ARM

**Note:** This procedure extends the leading edge devices only.

- 3 ALTERNATE FLAPS position switch . . . . . Momentary DOWN

Verify that the LE DEVICES annunciator indicates FULL EXT for all leading edge slats and flaps.

**Note:** The LE FLAPS TRANSIT light can stay illuminated after the LE devices are fully extended.

- 4 Choose one:

◆ LE DEVICES annunciator **shows** FULL EXT:

▶▶ **Go to step 5**

◆ LE DEVICES annunciator does **not** show FULL EXT:

▶▶ **Go to the All Flaps Up Landing checklist on page 9.4**



- 5 Consider burning off fuel to reduce touchdown speed.

- 6 Set VREF 40 + 40 knots.

- 7 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

▼ Continued on next page ▼

▼ **Trailing Edge Flaps Up Landing continued** ▼

- 8 Maintain flaps up maneuvering speed until on final.
- 9 Limit bank angle to 15° when airspeed is less than the flaps up maneuvering speed.

## 10 Checklist Complete Except Deferred Items

### Deferred Items

#### Descent Checklist

Pressurization . . . . . LAND ALT \_\_\_\_  
 Recall . . . . . Checked  
 MCP (inbound course, autopilot) . . . . . Checked  
 Autobrake . . . . . \_\_\_\_  
 Landing data . . . . . **VREF 40 + 40 knots** \_\_\_\_,  
**Minimums** \_\_\_\_  
 Approach briefing . . . . . Completed

#### Go-Around Procedure Review

Do the normal go-around procedure except:

Limit bank angle to 15° when the airspeed is less than the flaps up maneuvering speed.

Accelerate to flaps up maneuvering speed.

Do not exceed 230 knots with leading edge devices extended.

#### Approach Checklist

Altimeters . . . . . \_\_\_\_  
 Navigation aids . . . . . Tuned  
 EFB . . . . . Secured, Plug off

▼ **Continued on next page** ▼

---

**▼ Trailing Edge Flaps Up Landing continued ▼**

---

**Additional Deferred Items**

FASTEN BELTS switch . . . . . ON

GROUND PROXIMITY

FLAP INHIBIT switch . . . . . FLAP INHIBIT

**Note:** A nuisance stick shaker can occur when slowing to VREF 40 + 40 knots at high gross weights and/or bank angles greater than 15°.

Operation within the lower amber airspeed band for landing is normal for this condition.

V/S and VNAV PTH modes can revert to LVL CHG mode.

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

**YV604, YV605**

**Note:** The SPEED BRAKE lever will not move beyond the FLIGHT DETENT on landing and the spoilers will not fully deploy.

Landing gear . . . . . Down

Flaps. . . . . **\_\_\_, Green or amber light**

**Note:** The light can be green or amber depending on the cause of the failure.

---



**YAW  
DAMPER**

**YAW DAMPER**

Condition: The yaw damper is disengaged.

1 YAW DAMPER switch . . . . . OFF then ON

2 Choose one:

◆ YAW DAMPER light **extinguishes**:



◆ YAW DAMPER light **stays illuminated**:

YAW DAMPER switch . . . . . OFF

▶▶ **Go to step 3**

3 Avoid areas of predicted moderate or severe turbulence. If turbulence is encountered and passenger comfort becomes affected, reduce airspeed and/or descend to a lower altitude.

4 Do not exceed flaps 30.







**Table of Contents**

**Airspeed Unreliable..... 10.1**  
-----  
**Airspeed Unreliable..... 10.1**  
ALT DISAGREE..... 10.6  
AOA DISAGREE..... 10.7  
CDS FAULT..... 10.7  
Display Failure..... 10.8  
DISPLAYS CONTROL PANEL..... 10.9  
DISPLAY SOURCE..... 10.10  
DISPLAY SOURCE..... 10.12  
FLIGHT RECORDER OFF..... 10.14  
IAS DISAGREE..... 10.14

## Table of Contents

Intentionally  
Blank

**Airspeed Unreliable**

Condition: Airspeed or Mach indications are suspected to be unreliable. (Items which might indicate unreliable airspeed are listed in the Additional Information section.)

Objective: To identify a reliable airspeed indication, if possible, or to continue the flight using the Flight With Unreliable Airspeed table in the Performance Inflight chapter.

- 1 Autopilot (if engaged) . . . . . Disengage
- 2 Autothrottle (if engaged) . . . . . Disengage
- 3 F/D switches (both) . . . . . OFF
- 4 Set the following gear up pitch attitude and thrust:  
    Flaps extended . . . . . 10° and 80% N1  
    Flaps up . . . . . 4° and 75% N1  
- - - - -
- 5 PROBE HEAT switches . . . . . Check ON
- 6 The following are **reliable**:  
    Attitude  
    N1  
    Ground speed  
    Radio altitude

**Note:** Stick shaker, overspeed warning and AIRSPEED LOW (as installed) alerts may sound erroneously or simultaneously.

▼ Continued on next page ▼

▼ Airspeed Unreliable continued ▼

**YA701 - YF928, YK626 - YS178, YS191 - YV755**

**Note:** The Flight Path Vector and Pitch Limit Indicator may be unreliable.

**YK622 - YK625, YS179 - YS190, YV756 - YV767**

**Note:** The Flight Path Vector and Pitch Limit Indicator may be unreliable on the PFD and HUD.

- 7 Refer to the Flight With Unreliable Airspeed table in the Performance Inflight chapter and set the pitch attitude and thrust setting for the current airplane configuration and phase of flight.
- 8 When in trim and stabilized, cross check the captain, first officer and standby airspeed indicators. An airspeed indication that differs by more than 20 knots or 0.03 Mach from the airspeed shown in the table should be considered **unreliable**.
- 9 Choose one:
  - ◆ Reliable airspeed indication can be **determined**:
    - Use the most reliable airspeed source for the remainder of the flight.
    - ▶▶ **Go to step 10**
  - ◆ Reliable airspeed indication can **not** be determined:
    - ▶▶ **Go to step 14**

▼ Continued on next page ▼

**▼ Airspeed Unreliable continued ▼**

10 Choose one:

◆ **Captain's or First Officer's** airspeed indication is **reliable**:

▶▶ **Go to step 11**

◆ **Only** the **standby airspeed** indication is **reliable**:

**Note:** Do not re-engage the autothrottle.

▶▶ **Go to step 17**

11 Flight director switch (reliable side) . . . . . ON

12 Autopilot (reliable side) . . . . . Engage

13 Transponder selector . . . . . Select reliable side

**Note:** Do not re-engage the autothrottle.

▶▶ **Go to step 17**

14 Set pitch attitude and thrust from the Flight With Unreliable Airspeed table in the Performance Inflight chapter for the airplane configuration and phase of flight, as needed.

**▼ Continued on next page ▼**

▼ Airspeed Unreliable continued ▼

15 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

**Note:** Maintain visual conditions if possible.

Establish landing configuration early.

Radio altitude reference is available below 2,500 feet.

Use electronic and visual glideslope indicators, where available, for approach and landing.

Do not use TO/GA for a go-around or missed approach.

16 Transponder mode selector . . . . . TA ONLY

17 Choose one:

◆ Altitude is **reliable**:



◆ Altitude is **unreliable**:

Transponder mode selector . . . . . ALT RPTG OFF



▼ Continued on next page ▼

**▼ Airspeed Unreliable continued ▼****Additional Information**

One or more of the following may be evidence of unreliable airspeed or Mach indications:

- Speed/altitude information not consistent with pitch attitude and thrust setting
- SPD failure flag
- SPD LIM failure flag
- IAS DISAGREE alert
- Blank or fluctuating airspeed display
- Variation between captain and first officer airspeed displays
- Radome damage or loss
- Overspeed warning
- Simultaneous overspeed and stall warnings.

## ALT DISAGREE

Condition: The ALT DISAGREE alert indicates the captain's and first officer's altitude indications disagree by more than 200 feet.

1 Check all altimeters are set to correct barometric setting for phase of flight.

2 Choose one:

◆ ALT DISAGREE alert **extinguishes**:

Continue normal operation.



◆ ALT DISAGREE alert **stays illuminated**:

▶▶ **Go to step 3**

3 Airplane does not meet RVSM airspace requirements.

4 Standby altimeter is available.

5 Transponder altitude received by ATC may be unreliable.

6 Do **not** use the flight path vector.

7 Maintain visual conditions if possible.

8 **Checklist Complete Except Deferred Items**

### Deferred Items

**Review before descent:**

Establish landing configuration early

Radio altitude reference is available below 2,500 feet

▼ **Continued on next page** ▼



## ▼ ALT DISAGREE continued ▼

Use electronic and visual glideslope indicators, where available, for approach and landing.

**AOA DISAGREE**

Condition: The AOA DISAGREE alert indicates the left and right angle of attack vanes disagree.

- 1 Airspeed errors and the IAS DISAGREE alert may occur.
- 2 Altimeter errors and the ALT DISAGREE alert may occur.

**CDS FAULT**

Condition: The CDS FAULT annunciation indicates a CDS fault occurs.

**Note:** CDS FAULT annunciates on the ground only, before the second engine start.

- 1 Do **not** takeoff.



**Display Failure**

Condition: A display in the common display system is failed.

1 Choose one:

◆ A single display is not usable and automatic switching **has** occurred:

Continue normal operation.



◆ A single display is not usable and automatic switching has **not** occurred:

▶▶ **Go to step 2**

2 MAIN PANEL DUs selector . . . . .As needed

3 LOWER DU selector. . . . .As needed



## DISPLAYS CONTROL PANEL

Condition: The DISPLAYS CONTROL PANEL annunciation indicates the EFIS control panel is failed.

**Note:** The altimeter blanks and an ALT flag illuminates on the side corresponding to the failed control panel.

- 1 CONTROL PANEL select switch . . . . . BOTH ON 1 or BOTH ON 2  
Select the operating control panel.
- 2 Verify that the DISPLAYS CONTROL PANEL annunciation and ALT flag extinguish.



## DISPLAY SOURCE

### YA701 - YV750

Condition: The DSPLY SOURCE annunciation indicates only one DEU is supplying display information. Indications may include:

- No hydraulic pressure indication on the failed side
- Speed limit flag shown on the failed side
- Minimum maneuver speed and stick shaker band removed on the failed side
- Both EEC ALTN lights illuminated.

**Note:** Flight director indications may be removed and autoflight mode reversions may occur.

Dual autopilot approach is not available.

1 Choose one:

◆ DEU fails on the **same** side as the engaged autopilot:

Select the opposite autopilot, if needed.

Verify that the correct flight director indications and flight mode annunciations are shown on the same side as the operating autopilot.

▶▶ **Go to step 2**

◆ DEU fails on the **opposite** side as the engaged autopilot:

▶▶ **Go to step 2**

▼ Continued on next page ▼

## ▼ DISPLAY SOURCE continued ▼

2 Choose one:

◆ **EEC ALTN** lights are **illuminated**:

▶▶ **Go to step 3**

◆ **EEC ALTN** lights are **not** illuminated:



3 Choose one:

◆ **EEC ALTERNATE MODE** checklist has been **completed**:



◆ **EEC ALTERNATE MODE** checklist has **not** been completed:

▶▶ **Go to the EEC ALTERNATE MODE checklist on page 7.13**



**DISPLAY SOURCE****YV751 - YV767**

Condition: The DSPLY SOURCE 1 or DSPLY SOURCE 2 annunciation indicates only one DEU is supplying display information. Indications may include:

- No hydraulic pressure indication on the failed side
- Speed limit flag shown on the failed side
- Minimum maneuver speed and stick shaker band removed on the failed side
- Both EEC ALTN lights illuminated.

**Note:** Flight director indications may be removed and autoflight mode reversions may occur.

Dual autopilot approach is not available.

▼ Continued on next page ▼

**▼ DISPLAY SOURCE continued ▼**

1 Choose one:

◆ **DSPLY SOURCE 1** annunciation is shown:

Autopilot B is available, if needed.

Verify that the correct flight director indications and flight mode annunciations are shown on the first officer's side.

▶▶ **Go to step 2**

◆ **DSPLY SOURCE 2** annunciation is shown:

Autopilot A is available, if needed.

Verify that the correct flight director indications and flight mode annunciations are shown on the captain's side.

▶▶ **Go to step 2**

2 Choose one:

◆ **EEC ALTN** lights are **illuminated**:

▶▶ **Go to step 3**

◆ **EEC ALTN** lights are **not** illuminated:



**▼ Continued on next page ▼**

▼ DISPLAY SOURCE continued ▼

3 Choose one:

◆ **EEC ALTERNATE MODE** checklist has been completed:



◆ **EEC ALTERNATE MODE** checklist has **not** been completed:

▶▶ **Go to the EEC ALTERNATE MODE checklist on page 7.13**



**OFF**

**FLIGHT RECORDER OFF**

Condition: The flight recorder is off.

1 Continue normal operation.



**IAS DISAGREE**

Condition: The IAS DISAGREE alert indicates the captain's and first officer's airspeed indications disagree.

▶▶ **Go to the Airspeed Unreliable checklist on page 10.1**







**Table of Contents**

ADS-B Out Failure .....	11.1
FMC DISAGREE .....	11.1
FMC DISAGREE - VERTICAL .....	11.2
FMC FAIL .....	11.4
FMC/CDU ALERTING MESSAGE.....	11.7
GLS.....	11.7
GPS.....	11.7
ILS.....	11.8
IRS DC FAIL .....	11.8
IRS FAULT.....	11.10
IRS ON DC .....	11.14
UNABLE REQD NAV PERF - RNP.....	11.15

## Table of Contents

Intentionally  
Blank

## ADS-B Out Failure

Condition: One or more of these occur:

- ATC reports ADS-B Out is lost or degraded
- GPS-L or GPS-R INVALID message is in the FMC scratchpad and the transponder is selected to the related side.

- 1 Transponder selector . . . . . Select opposite transponder



M  
S  
G

## FMC DISAGREE

FMC  
P/RST

Condition: Data needed for dual FMC operation disagree.

- 1 Choose one:

◆ Flying an approach with an **RNP alerting requirement**:

Go-around unless suitable visual references can be established and maintained.



◆ Flying an approach **without** an RNP alerting requirement:

Verify position.



MSG

**FMC DISAGREE - VERTICAL**FMC  
P/RST

Condition: One of the following occur:

- Left FMC and right FMC target airspeeds disagree during descent
- Left FMC and right FMC vertical paths disagree during descent.

1 Do **not** move the FMC source select switch.

The FMC will attempt to correct the difference without crew action.

2 Monitor crossing altitudes to ensure compliance.

**Additional Information**

The disagreement will most likely be corrected when crossing a waypoint with an altitude constraint.

If the disagreement remains when entering the approach phase, the FMC DISAGREE - VERTICAL message will be replaced with the FMC DISAGREE message. An approach with an RNP alerting requirement is not authorized when the FMC DISAGREE message is shown.

Intentionally  
Blank

**FMC**  
P/RST**FMC FAIL**

Condition: Display of VTK followed by MAP failure flags on one or both navigation displays.

Objective: To restore dual FMC operation, configure for single FMC operation or resume conventional navigation.

**Note:** LNAV/VNAV may disengage.

- 1 Check both navigation display MAP modes and FMC CDUs.

▼ Continued on next page ▼

**▼ FMC FAIL continued ▼**

2 Choose one:

◆ No FMC data on the captain's and first officer's navigation display MAP modes **and** no FMC data on both CDUs:

Both FMCs are failed.

▶▶ **Go to step 7**

◆ No FMC data on the captain's navigation display MAP mode **and** no FMC data on both CDUs:

Left FMC is failed.

▶▶ **Go to step 3**

◆ No FMC data on the first officer's navigation display MAP mode, MSG light is illuminated **and** SINGLE FMC OPERATION scratchpad message is shown:

Right FMC is failed.

▶▶ **Go to step 3**

3 FMC source

select switch . . . . . BOTH ON L or BOTH ON R

Select the operating FMC.

4 **Wait** 1 minute.

5 Check for FMC-L and FMC-R bearing/distance information on POS SHIFT page 3/3.

**▼ Continued on next page ▼**

▼ FMC FAIL continued ▼

6 Choose one:

◆ Bearing/distance information for **both** FMCs are displayed:

FMC source select switch . . . . . NORMAL



◆ Bearing/distance information for only a **single** FMC is displayed:

Continue with single FMC operation.



7 Resume conventional navigation. Without an operating FMC, LNAV and VNAV are not available.

**YF048 - YF928, YK624 - YK630, YK966 - YL551, YN531 - YV767**

8 Verify position relative to terrain using conventional navigation.

**Note:** EGPWS may use inaccurate GPS position data or an inappropriate value of RNP. This could result in a VSD terrain display that is incorrectly positioned relative to the airplane track.

9 **When** preparing for the approach:

Use the SPD REF selector to set the current gross weight.

Use the SPD REF selector to set the reference airspeed bugs.

Use the N1 SET selector to set the N1 bugs.





MSG

**FMC/CDU ALERTING MESSAGE**

 FMC  
P/RST

Condition: An alert message is in the FMC scratchpad.

- 1 Take action as needed by the message.



GLS

**GLS**

YV751 - YV767

Condition: A GLS failure occurs.

- 1 Do not fly a GLS approach.
- 2 ILS and non-ILS approaches may be flown.



GPS

**GPS**

Condition: Both GPS receivers are failed.

**Note:** The FMC uses only IRS or radio inputs.

Look-ahead terrain alerting and display are unavailable due to position uncertainty.

ADS-B is inoperative.

- 1 Continue normal operation if ANP meets the requirements for the phase of flight.



**ILS****ILS****YV751 - YV767**

Condition: An ILS failure occurs.

- 1 Do not fly an ILS approach.
- 2 GLS and non-ILS approaches may be flown.

**DC FAIL****IRS DC FAIL**

Condition: IRS backup DC power is failed.

- 1 Choose one:

◆ **One** IRS DC FAIL light is illuminated **and** all other IRS lights are **extinguished**:

Continue normal operation. The IRS is operating normally on AC power.



◆ **Both** IRS DC FAIL lights are illuminated:

The IRS is operating normally on AC power.

The battery is nearly discharged or the switched hot battery bus is not powered.

The following systems may be inoperative:

Engine and APU fire extinguishing  
APU start.



Intentionally  
Blank

**FAULT**

**IRS FAULT**

Condition: One or more of these occur:

- An IRS fault occurs
- On the ground, if the ALIGN light is also illuminated, the present position entry is possibly incorrect.

1 Choose one:

◆ On the **ground**:

▶▶ Go to step 2

◆ In flight:

▶▶ Go to step 6

**On the ground**

2 Choose one:

◆ **ALIGN** light is **extinguished**:

Do not takeoff.



◆ **ALIGN** light is also **illuminated**:

IRS mode selector

**(failed side)** . . . . . OFF

The **FAULT** light extinguishes immediately and the **ALIGN** light extinguishes after approximately 30 seconds.

▶▶ Go to step 3

▼ Continued on next page ▼

## ▼ IRS FAULT continued ▼

3 After the ALIGN light extinguishes:

IRS mode selector  
**(failed side)** . . . . . NAV

Enter present position.

4 Choose one:

◆ **ALIGN** light is **flashing**:

Re-enter present position.

▶▶ **Go to step 5**

◆ **ALIGN** light is **not** flashing:

▶▶ **Go to step 5**

5 Choose one:

◆ **FAULT** light **illuminates** again:

Do not takeoff.



◆ **FAULT** light does **not** illuminate again:




---

## In flight

6 The IRS ATT and/or NAV mode(s) can be inoperative.

▼ Continued on next page ▼

▼ IRS FAULT continued ▼

7 Partial capability can be restored by selecting attitude mode on the failed IRS. Straight and level, constant airspeed flight must be maintained for at least 30 seconds.

8 Choose one:

◆ Selecting attitude mode on the failed IRS is **needed**:

▶▶ Go to step 9

◆ Selecting attitude mode on the failed IRS is **not** needed:

▶▶ Go to step 12

9 Do the next step **only** if the captain's **or** first officer's primary attitude display is failed.

Action is irreversible.

10 IRS mode selector **(failed side)** . . . . . Confirm . . . . ATT  
Maintain straight and level, constant airspeed flight until the attitude display recovers (approximately 30 seconds).

The primary attitude display stays failed and the SET IRS HDG prompt on the POS INIT page is blank until the attitude mode alignment is complete.

▼ Continued on next page ▼

## ▼ IRS FAULT continued ▼

11 Choose one:

◆ FAULT light **extinguishes**:

Enter magnetic heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

**Note:** Periodically enter updated heading on the POS INIT page or on the overhead IRS display unit by selecting HDG/STS.

Do **not** engage either autopilot.



◆ FAULT light **stays illuminated**:

▶▶ **Go to step 12**

12 IRS transfer switch . . . . BOTH ON L or BOTH ON R

**Note:** Autopilot(s) cannot be engaged.



**ON DC****IRS ON DC**

Condition: IRS AC power is failed.

1 Choose one:

◆ **Left** IRS ON DC light is illuminated:

The left IRS continues to operate as long as DC power is available.

◆ **Right** IRS ON DC light is illuminated:

Power to the right IRS is removed after 5 minutes.





**UNABLE REQD NAV PERF - RNP**

Condition: UNABLE REQD NAV PERF-RNP is shown. The actual navigation performance is not sufficient.

1 Choose one:

- ◆ On a procedure or airway with an **RNP alerting requirement**:

Select an alternate procedure or airway. During an approach, go-around unless suitable visual references can be established and maintained.



- ◆ On a procedure or airway **without** an RNP alerting requirement:

Verify position.



Intentionally  
Blank



**Table of Contents**

CONFIG ..... 12.1

CROSSFEED SELECTOR INOPERATIVE ..... 12.2

FUEL FILTER BYPASS ..... 12.5

Fuel Leak Engine ..... 12.6

FUEL PUMP LOW PRESSURE ..... 12.12

Fuel Quantity Indication Inoperative ..... 12.13

Fuel Temperature Low ..... 12.14

IMBAL ..... 12.15

LOW ..... 12.18



## Table of Contents

Intentionally  
Blank

**CONFIG**

Condition: All of these occur:

- Both center tank fuel pump switches are off
- There is more than 726 kgs of fuel in the center tank
- An engine is running.

- 1 Do not accomplish this procedure until established in a level flight attitude.
- 2 CTR FUEL PUMP switches (both). . . . . ON  
Verify that the LOW PRESSURE lights extinguish.
- 3 Resume normal fuel management.



**CROSSFEED SELECTOR  
INOPERATIVE****VALVE  
OPEN**

May or may not be illuminated

Condition: One of the following occurs:

- The crossfeed VALVE OPEN light stays illuminated bright blue
- The CROSSFEED selector is in the open position and the crossfeed VALVE OPEN light is extinguished
- When the CROSSFEED selector is rotated to a new position, the crossfeed VALVE OPEN light does not illuminate bright blue.

- 1 Check the FUEL CROSSFEED VALVE circuit breaker (P6-3:B7).

**▼ Continued on next page ▼**

**▼ CROSSFEED SELECTOR INOPERATIVE continued ▼**

2 Choose one:

◆ **FUEL CROSSFEED VALVE** circuit breaker is **tripped**:

It is not possible to determine the position of the fuel crossfeed valve.

**Note:** Verify that sufficient fuel is available to both engines to complete the flight.

Do **not** accomplish the following checklist:

IMBAL



◆ **FUEL CROSSFEED VALVE** circuit breaker is **not** tripped:

▶▶ **Go to step 3**

**▼ Continued on next page ▼**

▼ **CROSSFEED SELECTOR INOPERATIVE** continued ▼

3 Choose one:

◆ CROSSFEED selector is in the **closed** position:Crossfeed **valve** is failed open.**Note:** Maintain fuel balance with selective use of fuel pumps.◆ CROSSFEED selector is in the **open** position:Crossfeed **valve** is failed closed.**Note:** As conditions allow, vary engine thrust as needed to maintain fuel balance.

Verify that sufficient fuel is available to both engines to complete the flight.





**FILTER  
BYPASS**
**FUEL FILTER BYPASS**

Condition: Fuel contamination can cause fuel to bypass the engine fuel filter.

## 1 Choose one:

- ◆ Only **one** FILTER BYPASS light, ENG 1 or ENG 2, has illuminated during the flight:

**Note:** Erratic engine operation and flameout may occur on the affected engine due to fuel contamination.



- ◆ FILTER BYPASS lights for **both** engines illuminate or have illuminated at any time during the flight (either separately or at the same time):

▶▶ **Go to step 2**

## 2 Plan to land at the nearest suitable airport.

**Note:** Erratic engine operation and flameout may occur on either or both engines due to fuel contamination.



## Fuel Leak Engine

**Condition:** An engine fuel leak is suspected for the reasons listed in the Additional Information section of this checklist.

**Objective:** To confirm there is an engine fuel leak and shut down the affected engine if needed. This checklist does not address the unlikely possibility of a tank leak.

- 1 A diversion may be needed.
- 2 Main tank FUEL PUMPS switches (all) . . . . . ON
- 3 CROSSFEED selector . . . . . Close
- 4 CTR FUEL PUMPS switches (both) . . . . . OFF

The fuel CONFIG alert may show with fuel in the center tank.

---

### The following steps check for an engine fuel leak

- 5 Record the main tank fuel quantities and the current time.
- 6 An engine fuel leak is confirmed if one or both of the following are true:

Fuel spray is observed from an engine or strut

A change in fuel imbalance of 230 kgs within 30 minutes or less

**▼ Continued on next page ▼**

**▼ Fuel Leak Engine continued ▼**

7 Choose one:

◆ Engine fuel leak is **confirmed**:▶▶ **Go to step 11**◆ Engine fuel leak is **not** confirmed:▶▶ **Go to step 8**

8 Choose one:

◆ The center tank **contains** usable fuel:▶▶ **Go to step 9**◆ The center tank does **not** contain usable fuel:▶▶ **Go to step 10**

9 CTR FUEL PUMPS switches (both) . . . . . ON

10 Resume normal fuel management.



---

**An engine fuel leak is confirmed**

11 The following steps shut down the engine to stop an engine fuel leak.

12 The engine to be shut down is the engine on the side where the fuel quantity decreased faster.

13 Autothrottle . . . . . Disengage

14 Thrust lever  
(affected engine) . . . . . Confirm . . . . . Close**▼ Continued on next page ▼**

**▼ Fuel Leak Engine continued ▼**

15 **When** the affected engine is at idle thrust:

Engine start lever  
(affected engine) . . . . Confirm . . . . CUTOFF

This closes the spar valve and stops an engine fuel leak.

16 PACK switch (affected side) . . . . . OFF

This causes the operating pack to regulate to high flow in flight with the flaps up.

17 Choose one:

◆ APU is **available** for start:

APU . . . . . START

**When** APU is running:

APU GEN switch  
(affected side) . . . . . ON

**▶▶ Go to step 18**

◆ APU is **not** available:

**▶▶ Go to step 18**

18 Transponder mode selector . . . . . TA ONLY

This prevents climb commands which can exceed single engine performance capability.

19 ISOLATION VALVE switch . . . . . Verify AUTO

This ensures bleed air is available to both wings if wing anti-ice is needed.

**▼ Continued on next page ▼**

**▼ Fuel Leak Engine continued ▼**

20 Choose one:

◆ Fuel LOW alert is **shown**:▶▶ **Go to step 21**◆ Fuel LOW alert is **not** shown:▶▶ **Go to step 23**

21 CROSSFEED selector. . . . . Open

This ensures that all fuel is available to the running engine.

22 FUEL PUMPS switches (all). . . . . ON

This ensures that all fuel is available for use.

23 Plan to land at the nearest suitable airport.

**Note:** Balance fuel as needed. All remaining fuel can be used for the running engine.**Note:** Do not use FMC fuel predictions.▶▶ **Go to the One Engine Inoperative Landing checklist on page 7.30****▼ Continued on next page ▼**

**▼Fuel Leak Engine continued▼****Additional Information**

Reasons that an engine fuel leak should be suspected:

- A visual observation of fuel spray
- The total fuel quantity is decreasing at an abnormal rate
- An engine has excessive fuel flow
- The fuel IMBAL alert shows
- The fuel LOW alert shows
- The USING RSV FUEL message shows on the FMC CDU
- The INSUFFICIENT FUEL message shows on the FMC CDU
- The CHECK FMC FUEL QUANTITY message shows on the FMC CDU.

Intentionally  
Blank

**LOW PRESSURE**

**FUEL PUMP LOW PRESSURE**

Condition: The fuel pump pressure is low.

**Note:** Fuel pump LOW PRESSURE lights may flicker when tank quantity is low and the airplane is in turbulent air or during climb or descent.

1 Choose one:

◆ **One main** tank fuel pump LOW PRESSURE light is illuminated:

Main tank FUEL PUMP switch (affected pump). . . . . OFF  
Sufficient fuel pressure is available for normal operation.



◆ **Both main** tank fuel pump LOW PRESSURE lights are illuminated:

**Note:** At high altitude, thrust deterioration or engine flameout may occur.



◆ **One CTR** tank fuel pump LOW PRESSURE light is illuminated:

▶▶ **Go to step 2**

◆ **Both CTR** tank fuel pump LOW PRESSURE lights are illuminated:

▶▶ **Go to step 5**

▼ **Continued on next page** ▼



**▼ FUEL PUMP LOW PRESSURE continued ▼**

- 2 CROSSFEED selector . . . . . Open  
This prevents fuel imbalance.
- 3 CTR FUEL PUMP switch (affected side) . . . . . OFF
- 4 **When** the other CTR tank fuel pump LOW PRESSURE light illuminates:  
CROSSFEED selector . . . . . Close  
Remaining CTR FUEL PUMP switch . . . . . OFF



---

**Both CTR tank fuel pump LOW PRESSURE lights are illuminated**

- 5 CTR FUEL PUMP switches (both). . . . . OFF
- 6 Fuel CONFIG alert may show with fuel in the center tank.
- 7 Center tank fuel is unusable. Main tank fuel may not be sufficient for the planned flight.



---

**Fuel Quantity Indication Inoperative**

---

Condition: The fuel quantity indication is blank.

- 1 Enter and periodically update the manually calculated FUEL weight on the FMC PERF INIT page.



**Fuel Temperature Low**

Condition: Fuel temperature is near the minimum.

- 1 **When** fuel temperature is approaching the fuel temperature limit (3° C /5° F above the fuel freeze point or - 43° C /- 45° F whichever is higher):

Increase speed, change altitude and/or deviate to a warmer air mass to achieve a TAT equal to or higher than the fuel temperature limit.

TAT will increase approximately 0.5 to 0.7° C for each 0.01 Mach increase in speed. In extreme conditions, it may be necessary to descend as low as FL250.



**IMBAL**

Condition: There is a fuel imbalance between the main tanks.

Objective: To decide if a fuel leak is suspected. To balance fuel if a fuel leak is not suspected.

- 1 If an engine has low fuel flow and unusual engine indications, the IMBAL alert may show due to an engine malfunction instead of a fuel leak.
- 2 The IMBAL alert may be caused by a fuel leak, an inoperative crossfeed valve or a fuel imbalance.
- 3 A fuel leak should be suspected if one or more of the following are true:

The total fuel remaining is less than the planned fuel remaining

An engine has excessive fuel flow.

- 4 Choose one:

◆ A fuel leak is **suspected**:

▶▶ **Go to the Fuel Leak Engine checklist on page 12.6**



◆ A fuel leak is **not** suspected:

▶▶ **Go to step 5**

▼ **Continued on next page** ▼

▼ **IMBAL continued** ▼

5 CROSSFEED selector . . . . . Open

Verify that the VALVE OPEN light illuminates bright, then dim. This indicates that the crossfeed valve is operating correctly.

6 Choose one:

◆ Crossfeed valve is operating **correctly**:

▶▶ **Go to step 7**

◆ Crossfeed valve is **not** operating correctly:

▶▶ **Go to the CROSSFEED SELECTOR  
INOPERATIVE checklist on page  
12.2**

▼ **Continued on next page** ▼

**▼ IMBAL continued ▼**

7 Choose one:

◆ **Main tank 1** quantity is low:Main tank 1 FUEL PUMPS  
switches (both) . . . . . OFFThis allows fuel from the higher  
quantity tank to feed both engines.▶▶ **Go to step 8**◆ **Main tank 2** quantity is low:Main tank 2 FUEL PUMPS  
switches (both) . . . . . OFFThis allows fuel from the higher  
quantity tank to feed both engines.▶▶ **Go to step 8**8 **When** fuel balancing is complete:Main tank FUEL PUMPS switches (all) . . . . . ON  
CROSSFEED selector . . . . . Close

**LOW**

Condition: The fuel quantity is low in a main tank.

Objective: To decide if a fuel leak is suspected. To ensure that all fuel is available for use.

**Note:** Avoid high nose up attitude. Make thrust changes slowly and smoothly. This reduces the possibility of uncovering fuel pumps.

- 1 The fuel LOW alert may be caused by a fuel leak or low fuel.
- 2 A fuel leak should be suspected if one or more of the following are true:

The total fuel remaining is less than the planned fuel remaining.

An engine has excessive fuel flow.

One main tank is abnormally low compared to the other main tank and to the expected fuel remaining in the tanks.

- 3 Choose one:

◆ A fuel leak is **suspected**:

▶▶ **Go to the Fuel Leak Engine checklist on page 12.6**



◆ A fuel leak is **not** suspected:

▶▶ **Go to step 4**

▼ **Continued on next page** ▼

**▼LOW continued▼**

- 4 CROSSFEED selector. . . . . Open  
This ensures that fuel is available to both engines if the low tank empties.
- 5 FUEL PUMPS switches (all). . . . . ON  
This ensures that all fuel is available for use.
- 6 Plan to land at the nearest suitable airport.



Intentionally  
Blank





**Table of Contents**

HYDRAULIC PUMP LOW PRESSURE ..... 13.1

HYDRAULIC PUMP OVERHEAT ..... 13.2

LOSS OF SYSTEM A ..... 13.3

LOSS OF SYSTEM B ..... 13.6

MANUAL REVERSION or LOSS OF SYSTEM A AND  
SYSTEM B ..... 13.12

STANDBY HYDRAULIC LOW PRESSURE ..... 13.18

STANDBY HYDRAULIC LOW QUANTITY ..... 13.18



## Table of Contents

Intentionally  
Blank

**LOW  
PRESSURE****HYDRAULIC PUMP LOW  
PRESSURE**

Condition: The hydraulic pump pressure is low.

- 1 HYD PUMP switch (affected side) . . . . . OFF

**Note:** Loss of an engine-driven hydraulic pump and a high demand on the system may result in an intermittent illumination of the LOW PRESSURE light for the remaining electric motor-driven hydraulic pump.



**OVERHEAT**

**HYDRAULIC PUMP OVERHEAT**

Condition: The hydraulic pump temperature is high.

- 1 ELEC HYD PUMP switch (affected side) . . . . . OFF

**Note:** One pump supplies sufficient pressure for normal system operation.

- 2 MFD SYS switch . . . . . Push

- 3 Choose one:

- ◆ Affected side hydraulic pressure is 3300 psi **or less:**



- ◆ Affected side hydraulic pressure is **greater than** 3300 psi:

ENG HYD PUMP switch  
(affected side) . . . . . OFF

▶▶ **Go to step 4**

- 4 Choose one:

- ◆ **System A** HYD PUMPS switches are OFF:

▶▶ **Go to the LOSS OF SYSTEM A checklist on page 13.3**



- ◆ **System B** HYD PUMPS switches are OFF:

▶▶ **Go to the LOSS OF SYSTEM B checklist on page 13.6**



## LOSS OF SYSTEM A

**FLT CONTROL**
**A HYD PUMPS**
**A**
**ENG 1**
**ELEC 2**

**LOW  
PRESSURE**

**LOW  
PRESSURE**

**LOW  
PRESSURE**

Condition: Hydraulic system A pressure is low.

- 1 System A  
FLT CONTROL switch . . . Confirm . . . . STBY RUD
- 2 System A  
HYD PUMP switches (both) . . . . . OFF
- 3 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 4 NOSE WHEEL STEERING switch . . . . . ALT
- 5 Plan for manual gear extension.

**Note:** When the gear has been lowered manually, it cannot be retracted. The drag penalty with gear extended may make it impossible to reach an alternate field.

▼ Continued on next page ▼

▼ **LOSS OF SYSTEM A continued** ▼

**Note: Inoperative Items**

**Autopilot A inop**

Autopilot B is available.

**Flight spoilers (two on each wing) inop**

Roll rate and speedbrake effectiveness may be reduced in flight.

**Normal landing gear extension and retraction inop**

Manual gear extension is needed.

**Ground spoilers inop**

Landing distance will be increased.

**Alternate brakes inop**

Normal brakes are available.

**Engine 1 thrust reverser normal hydraulic pressure inop**

Thrust reverser will deploy and retract at a slower rate and some thrust asymmetry can be anticipated during thrust reverser deployment.

**Normal nose wheel steering inop**

Alternate nose wheel steering is available.

**6 Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . \_\_\_\_

Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_

▼ **Continued on next page** ▼

---

**▼ LOSS OF SYSTEM A continued ▼**

---

Approach briefing . . . . . Completed

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_

Navigation aids . . . . . Tuned

EFB . . . . . Secured, Plug off

---

**Manual Gear Extension**

LANDING GEAR lever . . . . . OFF

Manual gear extension handles . . . . . Pull

The uplock is released when the handle is pulled to its limit.

The related red landing gear indicator light illuminates, indicating uplock release.

**Wait** 15 seconds after the last manual gear extension handle is pulled:

LANDING GEAR lever . . . . . DN

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps . . . . . \_\_\_\_, Green light



## LOSS OF SYSTEM B

FLT CONTROL

B HYD PUMPS

B

ELEC 1

ENG 2

LOW  
PRESSURE

LOW  
PRESSURE

LOW  
PRESSURE

Condition: Hydraulic system B pressure is low.

- 1 System B  
FLT CONTROL switch. . . . Confirm . . . . STBY RUD
- 2 System B  
HYD PUMP switches (both). . . . . OFF
- 3 Plan a flaps 15 landing.
- 4 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

- 5 Plan to extend flaps to 15 using alternate flap extension.

**Note:** The drag penalty with the leading edge devices extended may make it impossible to reach an alternate field.

▼ Continued on next page ▼



**▼ LOSS OF SYSTEM B continued ▼**

- 6 Check the Non–Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 7 Do **not** arm the autobrake for landing. Use manual braking.

**▼ Continued on next page ▼**

▼ **LOSS OF SYSTEM B continued** ▼

**Note: Inoperative Items**

**Autopilot B inop**

Autopilot A is available.

**Flight spoilers (two on each wing) inop**

Roll rate and speedbrake effectiveness may be reduced in flight.

**Yaw damper inop**

**Trailing edge flaps normal hydraulic system inop**

The trailing edge flaps can be operated with the alternate electrical system. Alternate flap extension time to flaps 15 is approximately 2 minutes.

**Leading edge flaps and slats normal hydraulic system inop**

The leading edge flaps and slats can be extended with standby pressure. Once extended, they can not be retracted.

**Autobrake inop**

Use manual braking.

**Normal brakes inop**

Alternate brakes are available.

**Engine 2 thrust reverser normal hydraulic pressure inop**

Thrust reverser will deploy and retract at a slower rate and some thrust asymmetry can be anticipated during thrust reverser deployment.

**Alternate nose wheel steering inop**

Normal nose wheel steering is available.

**8 Checklist Complete Except Deferred Items**

▼ **Continued on next page** ▼



▼ LOSS OF SYSTEM B continued ▼

## Alternate Flap Extension

During flap extension, set the flap lever to the desired flap position.

230K maximum during alternate flap extension.



ALTERNATE FLAPS master switch . . . . . ARM

**Note:** The landing gear configuration warning may sound if the flaps are between 10 and 15 and the landing gear are retracted.

### YV604, YV605

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 15 position.

### YA701 - YT521, YV741 - YV767

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 10 position.

**Note:** Operation within the lower amber airspeed band may be needed until the LE FLAPS TRANSIT light extinguishes.

▼ Continued on next page ▼

**▼ LOSS OF SYSTEM B continued ▼**

If flap asymmetry occurs, release the switch immediately. There is no asymmetry protection.



**ALTERNATE FLAPS**

position switch . . . . . Hold DOWN  
to extend flaps  
to 15 on schedule

As flaps are extending, slow to respective  
maneuvering speed.

---

**Additional Deferred Item**

GROUND PROXIMITY FLAP

INHIBIT switch . . . . . FLAP INHIBIT

---

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . ARMED

Landing gear . . . . . Down

Flaps. . . . . **15, Green light**





**MANUAL REVERSION  
or  
LOSS OF SYSTEM A AND SYSTEM B**

**FLT CONTROL**

**HYD PUMPS**

**A**

**B**

**ENG 1 ELEC 2**

**ELEC 1 ENG 2**

**LOW  
PRESSURE**

**LOW  
PRESSURE**

**LOW  
PRESSURE**

**LOW  
PRESSURE**

Condition: Hydraulic system A and B pressures are low.

- 1 System A and B FLT CONTROL switches (both) . . . . . Confirm. . . . . STBY RUD
- 2 YAW DAMPER switch . . . . . ON
- 3 System A and B HYD PUMPS switches (all) . . . . . OFF
- 4 Plan to land at the nearest suitable airport.
- 5 Plan a flaps 15 landing.
- 6 Set VREF 15 or VREF ICE.

**Note:** If any of the following conditions apply, set VREF ICE = VREF 15 + 10 knots:

- Engine anti-ice will be used during landing
- Wing anti-ice has been used any time during the flight
- Icing conditions were encountered during the flight and the landing temperature is below 10° C.

**Note:** When VREF ICE is needed, the wind additive should not exceed 10 knots.

**▼ Continued on next page ▼**

**▼ MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B  
continued ▼**

7 Plan to extend flaps to 15 using alternate flap extension.

**Note:** The drag penalty with the leading edge devices extended may make it impossible to reach an alternate field.

8 Plan for manual gear extension.

**Note:** When the gear has been lowered manually, it cannot be retracted. The drag penalty with gear extended may make it impossible to reach an alternate field.

9 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.

**Note:** The crosswind capability of the airplane is greatly reduced.

10 Do **not** arm the autobrake for landing.

11 Do **not** arm the speedbrakes for landing.

12 On touchdown, apply steady brake pressure without modulating the brakes.

13 Do not attempt to taxi the airplane after stopping.

**▼ Continued on next page ▼**

**▼ MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B  
continued ▼****Note: Inoperative Items****Autopilots A and B inop****All flight spoilers inop**

Roll rate will be reduced and speedbrakes will not be available in flight.

**Trailing edge flaps normal hydraulic system inop**

The trailing edge flaps can be operated with the alternate electrical system. Alternate flap extension time to flaps 15 is approximately 2 minutes.

**Leading edge flaps and slats normal hydraulic system inop**

The leading edge flaps and slats can be extended with standby hydraulic pressure. Once extended, they can not be retracted.

**Normal landing gear extension and retraction inop**

Manual gear extension is needed.

**Autobrake inop****Ground spoilers inop**

Landing distance will be increased.

**Normal and alternate brakes inop**

Inboard and outboard brakes have accumulator pressure only. On landing, apply steady brake pressure without modulating the brakes.

**Both thrust reversers normal pressure inop**

Thrust reversers will deploy and retract at a slower rate.

**Nose wheel steering inop**

Do not attempt to taxi the airplane after stopping.

**▼ Continued on next page ▼**






▼ **MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B**  
continued ▼

## Alternate Flap Extension

During flap extension, set the flap lever to the desired flap position.

 230K maximum during alternate flap extension.  
ALTERNATE FLAPS master switch . . . . . ARM

**Note:** The landing gear configuration warning may sound if the flaps are between 10 and 15 and the landing gear are retracted.

### YV604, YV605

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 15 position.

### | YA701 - YT521, YV741 - YV767

**Note:** The amber LE FLAPS TRANSIT light will stay illuminated until the flaps approach the flaps 10 position.

**Note:** Operation within the lower amber airspeed band may be needed until the LE FLAPS TRANSIT light extinguishes.

▼ **Continued on next page** ▼

**▼ MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B continued ▼**

If flap asymmetry occurs, release the switch immediately. There is no asymmetry protection.



**ALTERNATE FLAPS**

position switch . . . . . Hold DOWN  
to extend flaps  
to 15 on schedule

As flaps are extending, slow to respective maneuvering speed.

---

**Manual Gear Extension**

LANDING GEAR lever. . . . . OFF

Manual gear extension handles. . . . . Pull

The uplock is released when the handle is pulled to its limit.

The related red landing gear indicator light illuminates, indicating uplock release.

**Wait** 15 seconds after the last manual gear extension handle is pulled:

LANDING GEAR lever . . . . . DN

---

**Additional Deferred Item**

GROUND PROXIMITY FLAP

INHIBIT switch . . . . . FLAP INHIBIT

**▼ Continued on next page ▼**

▼ **MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B**  
continued ▼

**Landing Checklist**

- ENGINE START switches . . . . . CONT
- Speedbrake . . . . . **DOWN** detent
- Landing gear . . . . . Down
- Flaps . . . . . **15, Green light**



<b>LOW PRESSURE</b>	<b>STANDBY HYDRAULIC LOW PRESSURE</b>
---------------------	---------------------------------------

Condition: The standby hydraulic pump pressure is low.

**Note:** With a loss of hydraulic system A and B, the rudder is inoperative.



<b>LOW QUANTITY</b>	<b>STANDBY HYDRAULIC LOW QUANTITY</b>
---------------------	---------------------------------------

Condition: The standby hydraulic quantity is low.

- 1 Continue normal operation.





**Table of Contents**

ANTISKID INOPERATIVE ..... 14.1

AUTO BRAKE DISARM ..... 14.3

Brake Pressure Indicator Zero PSI ..... 14.5

BRAKE TEMPERATURE ..... 14.6

GEAR DISAGREE ..... 14.8

Landing Gear Lever Jammed in the Up Position 14.12

Landing Gear Lever Will Not Move Up  
    After Takeoff ..... 14.16

Manual Gear Extension ..... 14.20

Partial or All Gear Up Landing ..... 14.22

WHEEL WELL FIRE ..... ►► 8.22



## Table of Contents

Intentionally  
Blank

**ANTISKID  
INOP****ANTISKID INOPERATIVE**

Condition: An antiskid system fault occurs.

---

**Caution! Locked wheel protection is not available.**

---

- 1 AUTO BRAKE select switch. . . . . OFF  
The autobrake system is inoperative.
- 2 Do **not** arm the speedbrakes for landing. Manually deploy the speedbrakes immediately upon landing.  
Automatic speedbrake extension may be inoperative.
- 3 Check the Non-Normal Configuration Landing Distance tables in the Performance Inflight-QRH chapter or other approved source.
- 4 **Checklist Complete Except Deferred Items**

---

**Deferred Items**

---

**Landing Procedure Review**

Use minimum braking consistent with runway length and conditions to reduce the possibility of a tire blowout.

Do **not** apply the brakes until the nose wheel is on the ground and the speedbrakes have been manually deployed.

Brake initially using light steady pedal pressure. Increase pressure as ground speed decreases. Do **not** pump the brakes.

---

**▼ Continued on next page ▼**

---

---

 ▼ **ANTISKID INOPERATIVE** continued ▼
 

---

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_  
 Recall . . . . . Checked  
 MCP (inbound course, autopilot) . . . . . Checked  
 Autobrake . . . . . **OFF**  
 Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_  
 Approach briefing . . . . . Completed

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_  
 Navigation aids . . . . . Tuned  
 EFB . . . . . Secured, Plug off

---

**Landing Checklist**

ENGINE START switches . . . . . CONT  
 Speedbrake . . . . . **DOWN detent**  
 Landing gear . . . . . Down  
 Flaps . . . . . \_\_\_\_, Green light





**AUTO BRAKE  
DISARM****AUTO BRAKE DISARM**

Condition: The autobrake system disarms after being set.

1 Choose one:

◆ On the **ground**:

AUTO BRAKE select switch . . . . . OFF

▶▶ Go to step 2

◆ In flight:

▶▶ Go to step 3

2 Choose one:

◆ AUTO BRAKE DISARM light **extinguishes**:



◆ AUTO BRAKE DISARM light **stays illuminated**:

Do not takeoff.



3 AUTO BRAKE select switch. . . . OFF, then reselect

▼ Continued on next page ▼

▼ AUTO BRAKE DISARM continued ▼

4 Choose one:

◆ AUTO BRAKE DISARM light **stays extinguished:**



◆ AUTO BRAKE DISARM light **illuminates again:**

AUTO BRAKE select switch . . . . . OFF

Use manual brakes for landing.

▶▶ **Go to step 5**

5 Checklist Complete Except Deferred Items

**Deferred Items**

**Descent Checklist**

Pressurization . . . . . LAND ALT \_\_\_\_

Recall . . . . . Checked

MCP (inbound course, autopilot) . . . . . Checked

Autobrake . . . . . **OFF**

Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_

Approach briefing . . . . . Completed

**Approach Checklist**

Altimeters . . . . . \_\_\_\_

Navigation aids . . . . . Tuned

EFB . . . . . Secured, Plug off

▼ Continued on next page ▼

▼ AUTO BRAKE DISARM continued ▼

### Landing Checklist

- ENGINE START switches . . . . . CONT
- Speedbrake . . . . . ARMED
- Landing gear . . . . . Down
- Flaps . . . . . \_\_\_\_, Green light



**Brake Pressure Indicator Zero PSI**

Condition: The brake accumulator has no nitrogen precharge.

- 1 Accumulator braking is not available.

**Note:** If hydraulic systems indications are normal, brake operation is unaffected.



**BRAKE  
TEMP**

**BRAKE TEMPERATURE**

**YN531 - YN534**

Condition: One or more brake temperatures are high.

1 Choose one:

◆ On the **ground**:


Check the Recommended Brake Cooling Schedule in the Advisory Information section of the Performance Inflight chapter for needed cooling time.



◆ In flight:

▶▶ Go to step 2

270K/.82M maximum.


2  LANDING GEAR lever . . . . . DN

This allows cooling air to flow around the brakes.

3 **When** the BRAKE TEMP light is **extinguished**:

**Wait** 7 minutes. This ensures sufficient cooling time.

235K maximum.

4  LANDING GEAR lever . . . . . UP

5 **When** the landing gear indicator lights extinguish:

LANDING GEAR lever . . . . . OFF



Intentionally  
Blank

**GEAR DISAGREE****LEFT  
GEAR****NOSE  
GEAR****RIGHT  
GEAR**

Condition: The landing gear position disagrees with the LANDING GEAR lever position.

**Note:** Do not exceed the gear EXTEND limit speed (270K/.82M).

Do not use FMC fuel predictions with gear extended.

1 Choose one:

◆ LANDING GEAR lever is **UP**:

▶▶ **Go to step 5**

◆ LANDING GEAR lever is **OFF**:

▶▶ **Go to step 2**

◆ LANDING GEAR lever is **DN**:

▶▶ **Go to step 9**

▼ **Continued on next page** ▼

## ▼ GEAR DISAGREE continued ▼

2 Choose one:

◆ LANDING GEAR lever **moved** to the UP position after takeoff:

▶▶ Go to step 3

◆ LANDING GEAR lever did **not** move to the UP position after takeoff:

▶▶ Go to the Landing Gear Lever Will Not Move Up After Takeoff checklist on page 14.16



235K maximum

3 LANDING GEAR lever. . . . . UP

4 Choose one:

◆ **All red and green** landing gear indicator lights are **extinguished**:

The landing gear lever should be kept in the UP position to keep the landing gear retracted.

◆ **Any red** landing gear indicator light is **illuminated**:

▶▶ Go to step 8

▼ Continued on next page ▼

▼ GEAR DISAGREE continued ▼

5 Choose one:

◆ **All red and green** landing gear indicator lights are **illuminated**:

Open and close the manual gear extension access door. Verify the door is fully closed.

▶▶ **Go to step 6**

◆ **Any other combination** of landing gear indicator lights is **illuminated**:

▶▶ **Go to step 8**

235K maximum

6 LANDING GEAR lever . . . . . DN, then UP

7 Choose one:

◆ **All** landing gear indicator lights **extinguish**:

LANDING GEAR lever . . . . . OFF



◆ **Any red** landing gear indicator light is **illuminated**:

▶▶ **Go to step 8**

8 Flight with gear down increases fuel consumption and decreases climb performance. Refer to the Gear Down performance tables in the Performance Inflight section.



▼ Continued on next page ▼



## ▼ GEAR DISAGREE continued ▼

9 Check landing gear indicator lights.

**Note:** If a green landing gear indicator light is illuminated on either the center main panel or the overhead panel, the related landing gear is down and locked.

10 Choose one:

◆ **All** landing gear indicate **down and locked** and one or more **red** landing gear indicator lights are also **illuminated**:

▶▶ **Go to step 11**

◆ **Any** landing gear is **not** down and locked:

▶▶ **Go to the Manual Gear Extension checklist on page 14.20**



11 Verify landing gear lever is pushed in and fully in the DN detent.

12 Choose one:

◆ **All red** landing gear indicator lights **extinguish**:



◆ **One or more red** landing gear indicator lights stay **illuminated**:

GROUND PROXIMITY GEAR  
INHIBIT switch . . . . . GEAR INHIBIT

Land normally.




## Landing Gear Lever Jammed in the Up Position

Condition: The LANDING GEAR lever will not move from the UP position.

**Note:** Start this checklist **only** when ready to extend the gear for landing.

Once the gear is extended, do **not** retract.

270K/.82M maximum.

- 1  LANDING GEAR override trigger . . . . . Pull
- 2 LANDING GEAR lever . . . . . DN
- 3 Choose one:

◆ LANDING GEAR **lever** moves to the **DN** position:

▶▶ **Go to step 4**

◆ LANDING GEAR **lever** does **not** move to the DN position:

▶▶ **Go to step 6**

- 4 Check landing gear indicator lights.

**Note:** If a green landing gear indicator light is illuminated on either the center main panel or the overhead panel, the related landing gear is down and locked.

▼ **Continued on next page** ▼

▼ **Landing Gear Lever Jammed in the Up Position continued** ▼

5 Choose one:

◆ **All** landing gear **indicate** down and locked:

Plan to land at the nearest suitable airport.



◆ **One or more** landing gear do **not** indicate down and locked:

▶▶ **Go to the Manual Gear Extension checklist on page 14.20**



6 NOSE WHEEL

STEERING switch . . . . . Verify NORM

Nose wheel steering is not available.


---

---

**Warning! Do not use alternate nose wheel steering because the landing gear may retract on the ground.**

---

---

7  270K/.82M maximum.

Manual gear extension handles (all) . . . . . Pull

The uplock is released when the handle is pulled to its limit. The related red landing gear indicator light illuminates, indicating uplock released.

**Note:** With the LANDING GEAR lever in the UP or OFF position, the red landing gear indicator lights will stay illuminated.

▼ **Continued on next page** ▼

▼ Landing Gear Lever Jammed in the Up Position continued ▼

8 Check landing gear indicator lights.

**Note:** If a green landing gear indicator light is illuminated on either the center main panel or the overhead panel, the related landing gear is down and locked.

9 Choose one:

◆ **All** landing gear **indicate** down and locked:

▶▶ **Go to step 10**

◆ **One or more** landing gear do **not** indicate down and locked:

▶▶ **Go to the Partial or All Gear Up Landing checklist on page 14.22**



10 Checklist Complete Except Deferred Items

Deferred Items

Descent Checklist

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . \_\_\_\_
- Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_
- Approach briefing . . . . . Completed

▼ Continued on next page ▼

---

**▼ Landing Gear Lever Jammed in the Up Position continued ▼**

---

**Approach Checklist**

Altimeters . . . . . \_\_\_\_\_  
Navigation aids . . . . . Tuned  
EFB . . . . . Secured, Plug off

---

**Additional Deferred Item**

GROUND PROXIMITY GEAR  
INHIBIT switch . . . . . GEAR INHIBIT

---

**Landing Checklist**

ENGINE START switches . . . . . CONT  
Speedbrake . . . . . ARMED  
Landing gear . . . . . **Down, Three green**  
Flaps . . . . . \_\_\_\_\_, Green light

**Note:** Nose wheel steering is not available.

---

---

**Warning! Do not use alternate nose wheel steering because the landing gear may retract on the ground.**

---

---



**Landing Gear Lever Will Not Move Up After Takeoff**

Condition: The LANDING GEAR lever cannot be moved to the UP position due to one of the following:

- Failure of the landing gear lever lock solenoid
- Failure of the air/ground system
- Failure of the ground spoiler bypass valve to close.

**Note:** Do not use FMC fuel predictions.

- 1 LANDING GEAR lever . . . . . DN
- 2 Retract the flaps on schedule.

▼ Continued on next page ▼

▼ Landing Gear Lever Will Not Move Up After Takeoff continued ▼

3 Choose one:

- ◆ Intermittent cabin altitude/configuration warning horn **stays silent** and the TAKEOFF CONFIG lights (if installed and operative) do **not illuminate** after the flaps are fully retracted and the thrust levers are advanced beyond the vertical position:

**Note:** This indicates a failure of the landing gear lever lock solenoid.

▶▶ Go to step 4


- ◆ Intermittent cabin altitude/configuration warning horn **sounds** or the TAKEOFF CONFIG lights (if installed and operative) **illuminate** when the flaps are fully retracted:

**Note:** This indicates either a failure of the air/ground system or a failure of the ground spoiler bypass to close.

Do **not** retract the gear.

▶▶ Go to step 8

235K maximum.

- 4  LANDING GEAR override trigger . . . . . Pull
- 5 LANDING GEAR lever . . . . . UP
- 6 **When** the landing gear indicator lights extinguish:  
LANDING GEAR lever . . . . . OFF

▼ Continued on next page ▼

▼ Landing Gear Lever Will Not Move Up After Takeoff continued ▼

7 Continue normal operation.



8 LANDING GEAR  
TAKEOFF WARNING CUTOFF  
circuit breaker (P6-3:C18) . . . . . Pull

**Note:** The intermittent cabin altitude/configuration warning horn may still sound and the TAKEOFF CONFIG lights (if installed and operative) may still illuminate depending on thrust lever and flap position.

**Caution! Do not use the speedbrakes in flight.**

- 9 Plan to land at the nearest suitable airport.
- 10 Do **not** arm the autobrake for landing. Use manual braking.
- 11 Do **not** arm the speedbrakes for landing. Manually deploy the speedbrakes immediately upon landing.
- 12 **Checklist Complete Except Deferred Items**

**Deferred Items**

**Descent Checklist**

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . **OFF**
- Landing data . . . . . VREF \_\_\_\_, Minimums \_\_\_\_
- Approach briefing . . . . . Completed

▼ Continued on next page ▼



---

▼Landing Gear Lever Will Not Move Up After Takeoff continued▼

---

### Approach Checklist

Altimeters . . . . . \_\_\_\_\_  
Navigation aids . . . . . Tuned  
EFB . . . . . Secured, Plug off

---

### Gear Down Verification

LANDING GEAR lever . . . . . Verify DN

---

### Landing Checklist

ENGINE START switches . . . . . CONT  
Speedbrake . . . . . **DOWN detent**  
Landing gear . . . . . **Down (previously verified)**  
Flaps . . . . . \_\_\_\_\_, Green light

**Note:** Manually deploy the speedbrakes immediately upon touchdown. Use manual braking.



**Manual Gear Extension**


Condition: One of these occurs:

- Any landing gear is not down and locked when the LANDING GEAR lever is down
- The LANDING GEAR lever is jammed in the OFF position.

**Note:** If a green landing gear indicator light is illuminated on either the center main panel or the overhead panel, the related landing gear is down and locked.

1 LANDING GEAR lever . . . . . OFF (if possible)

270K/.82M maximum.

2  Manual gear extension handles (affected gear) . . . . . Pull  
 The uplock is released when the handle is pulled to its limit. The related red landing gear indicator light illuminates, indicating uplock released.

3 **Wait** 15 seconds after the last manual gear extension handle is pulled:  
 LANDING GEAR lever . . . . . DN (if possible)

4 Check landing gear indicator lights.

**Note:** If the LANDING GEAR lever is in the OFF position, the red landing gear indicator lights will also be illuminated.

▼ Continued on next page ▼

**▼ Manual Gear Extension continued ▼**

5 Choose one:

◆ **All** landing gear **indicate** down and locked:▶▶ **Go to step 6**◆ **One or more** landing gear do **not** indicate down and locked:▶▶ **Go to the Partial or All Gear Up Landing checklist on page 14.22**

6 Choose one:

◆ **LANDING GEAR lever** is in the **DN** position:

Land normally.

◆ **LANDING GEAR lever** is in the **OFF** position:

**GROUND PROXIMITY GEAR  
INHIBIT switch . . . . . GEAR INHIBIT**

Land normally.

**Note:** Nose wheel steering is not available.

## Partial or All Gear Up Landing

Condition: All landing gear are not down and locked after attempting manual gear extension.

1 Choose one:

◆ Manual gear extension **has** been attempted:

▶▶ **Go to step 2**

◆ Manual gear extension has **not** been attempted:

▶▶ **Go to the Manual Gear Extension checklist on page 14.20**



2 Brief the crew and passengers on emergency landing and evacuation procedures.

3 Consider burning off fuel to reduce touchdown speed.

4 Plan a flaps 40 landing.

5 Set VREF 40.

6 LANDING GEAR

AURAL WARN circuit breaker (P6-3:D18). . . . Pull

This prevents the landing gear warning horn with gear retracted and landing flaps selected.

The flight deck chime for an incoming call from the cabin crew is unavailable.

▼ Continued on next page ▼

**▼ Partial or All Gear Up Landing continued ▼**

- 7 FLIGHT CONTROL  
AUTO SPEED BRAKE  
circuit breaker (P6-2:B9) . . . . . Pull

This prevents inadvertent deployment of ground spoilers after landing.

- 8 Do **not** arm the autobrake for landing. Use manual braking.
- 9 Do **not** arm the speedbrakes for landing.

**10 Checklist Complete Except Deferred Items****Deferred Items****Descent Checklist**

- Pressurization . . . . . LAND ALT \_\_\_\_
- Recall . . . . . Checked
- MCP (inbound course, autopilot) . . . . . Checked
- Autobrake . . . . . **OFF**
- Landing data . . . . . **VREF 40**\_\_\_\_, **Minimums** \_\_\_\_
- Approach briefing . . . . . Completed

**Approach Checklist**

- Altimeters . . . . . \_\_\_\_
- Navigation aids . . . . . Tuned
- EFB . . . . . Secured, Plug off

**▼ Continued on next page ▼**

▼ Partial or All Gear Up Landing continued ▼

**Landing Procedure Review**

Do not extend the speedbrakes unless stopping distance is critical. When stopping distance is critical, extend the speedbrakes after all landing gear, the nose or the engine nacelle have contacted the runway.

Do not use the thrust reversers unless stopping distance is critical.

Turn all fuel pump switches OFF just before the flare.

After stopping, do the Evacuation checklist, if needed.

**Additional Deferred Items**

APU switch . . . . . OFF

GROUND PROXIMITY GEAR

INHIBIT switch . . . . . GEAR INHIBIT

**When** on approach:

Engine BLEED air switches. . . . . OFF

This ensures the airplane is depressurized at touchdown.

**Landing Checklist**

ENGINE START switches . . . . . CONT

Speedbrake . . . . . **DOWN detent**

Landing gear . . . . . **Down**

▼ Continued on next page ▼

**▼Partial or All Gear Up Landing continued▼**Flaps. . . . . **40, Green light**

Intentionally  
Blank





**Table of Contents**

**LANDING CONFIGURATION..... 15.1**

**TAKEOFF CONFIGURATION ..... 15.1**

**WARNING HORN (INTERMITTENT) or WARNING LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION..... 15.2**

**-----**

**GROUND PROXIMITY INOPERATIVE ..... 15.3**

**LANDING CONFIGURATION..... 15.1**

**Overspeed ..... 15.3**

**PSEU ..... 15.4**

**Tail Strike ..... 15.5**

**TAKEOFF CONFIGURATION ..... 15.1**

**WARNING HORN (INTERMITTENT) or WARNING LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION..... 15.2**

## Table of Contents

Intentionally  
Blank

**LANDING CONFIGURATION**

Condition: In flight, the steady warning horn sounds.

- 1 Assure correct airplane landing configuration.

**TAKEOFF CONFIGURATION**

**TAKEOFF  
CONFIG** (If installed and operative)

Condition: On the ground, the intermittent cabin altitude/configuration warning horn sounds or a TAKEOFF CONFIG light (if installed and operative) illuminates when advancing the thrust levers to takeoff thrust.

- 1 Assure correct airplane takeoff configuration.



<b>WARNING HORN (INTERMITTENT) or WARNING LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION</b>
---

(If installed and operative)

**Left Forward Panel**



**Right Forward Panel**



Condition: One of these occurs:

- In flight, at an airplane flight altitude above 10,000 feet MSL, the intermittent warning horn sounds or a CABIN ALTITUDE light (if installed and operative) illuminates
- On the ground, the intermittent warning horn sounds or a TAKEOFF CONFIG light (if installed and operative) illuminates when advancing the thrust levers to takeoff thrust.

- 1 **If** the intermittent warning horn sounds or a CABIN ALTITUDE light (if installed and operative) illuminates **in flight** at an airplane flight altitude above 10,000 feet MSL:

Don the oxygen masks and set the regulators to 100%.

Establish crew communications.

▼ Continued on next page ▼

▼ **WARNING HORN (INTERMITTENT) or WARNING LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION** continued ▼

▶▶ **Go to the CABIN ALTITUDE WARNING or Rapid Depressurization checklist on page 2.1**



- 2 **If** the intermittent warning horn sounds or a TAKEOFF CONFIG light (if installed and operative) illuminates **on the ground** when advancing the thrust levers to takeoff thrust:

Assure correct airplane takeoff configuration.



<b>INOP</b>	<b>GROUND PROXIMITY INOPERATIVE</b>
-------------	---

Condition: A ground proximity warning system(GPWS) fault occurs.

**Note:** Some or all GPWS alerts are not available. GPWS alerts which occur are valid.



<b>Overspeed</b>
------------------

Condition: Airspeed is more than Vmo/Mmo.



**PSEU****PSEU**

Condition: A proximity switch electronics unit fault occurs.

**Note:** The PSEU light illuminates on the ground only.

1 Choose one:

◆ PSEU light **stays illuminated** when the Master Caution system is reset:

▶▶ **Go to step 2**

◆ PSEU light **extinguishes** when the Master Caution system is reset:



2 Choose one:

◆ PSEU light **stays illuminated** when the parking brake is set or when both engines are shut down:

Do **not** takeoff.



◆ PSEU light **extinguishes** when the parking brake is set or when both engines are shut down:




## Tail Strike

Condition: A tail strike is suspected or confirmed.

**Caution! Continued pressurization of the airplane can cause further structural damage.**

1 Pressurization mode selector . . . . . MAN

Use momentary actuation of the outflow valve switch to avoid large and rapid pressurization changes.

2  Outflow VALVE switch . . . . . Move to OPEN until the outflow VALVE indication shows fully open to depressurize the airplane

3 Plan to land at the nearest suitable airport.



Intentionally  
Blank





**Performance Inflight - QRH** **Chapter PI-QRH**  
**Table of Contents**

**737-700 CFM56-7B22 KG FAA CATA - - - - - PI-QRH.10.1**

**737-700W CFM56-7B22 KG M FAA CATA - - PI-QRH.20.1**

**737-700W CFM56-7B24A+26B2\_BUMP C M KG FAA  
CATF/M HIGH\_ALT PAX GAS - - - - - PI-QRH.30.1**

**737-800W CFM56-7B24 KG M FAA CATC/N PI-QRH.40.1**

**737-800W CFM56-7B26 KG M FAA CATC/N PI-QRH.50.1**

**737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC  
Model 737-800W.1) - - - - - PI-QRH.60.1**



Intentionally  
Blank



737-700 CFM56-7B22 KG FAA CATA

**Pkg Model Identification . . . . . PI-QRH.ModID.10.1**

**General . . . . . PI-QRH.10.1**

- Flight With Unreliable Airspeed /
- Turbulent Air Penetration . . . . . PI-QRH.10.1
- Max Climb %N1 . . . . . PI-QRH.10.3
- Go-around %N1 . . . . . PI-QRH.10.4
- VREF . . . . . PI-QRH.10.5

**Advisory Information . . . . . PI-QRH.11.1**

- Normal Configuration Landing Distance . . . . . PI-QRH.11.1
- Non-Normal Configuration Landing Distance . . . . . PI-QRH.11.4
  - Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.11.4
  - Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.11.5
  - Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.11.6
  - All Flaps Up Landing . . . . . PI-QRH.11.7
  - ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.11.8
  - ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.11.9
  - ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.11.10
  - Jammed or Restricted Flight Controls (Flaps 15) . . PI-QRH.11.11
  - LEADING EDGE FLAPS TRANSIT (Flaps 15) . . PI-QRH.11.12
  - LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.11.13
  - LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.11.14
  - LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.11.15
  - LOSS OF SYSTEM A AND SYSTEM B (Flaps 15) . . . . . PI-QRH.11.16
  - LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.11.17
  - MANUAL REVERSION (Flaps 15) . . . . . PI-QRH.11.18
  - One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.11.19
  - One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.11.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.11.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.11.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.11.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.11.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.11.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.11.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.11.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.11.28
Recommended Brake Cooling Schedule . . . . .	PI-QRH.11.29
<b>Engine Inoperative . . . . .</b>	<b>PI-QRH.12.1</b>
Initial Max Continuous %N1 . . . . .	PI-QRH.12.1
Max Continuous %N1 . . . . .	PI-QRH.12.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.12.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.12.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.12.8
Long Range Cruise Control . . . . .	PI-QRH.12.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.12.10
Holding . . . . .	PI-QRH.12.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.12.12
<b>Gear Down . . . . .</b>	<b>PI-QRH.13.1</b>
Long Range Cruise Altitude Capability . . . . .	PI-QRH.13.1
Long Range Cruise Control . . . . .	PI-QRH.13.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.13.3
Descent . . . . .	PI-QRH.13.4
Holding . . . . .	PI-QRH.13.5
<b>Gear Down, Engine Inoperative . . . . .</b>	<b>PI-QRH.14.1</b>
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.14.1



**737 Flight Crew Operations Manual**

---

Long Range Cruise Altitude Capability . . . . .	PI-QRH.14.1
Long Range Cruise Control . . . . .	PI-QRH.14.2
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.14.3
Holding . . . . .	PI-QRH.14.4
<b>Text . . . . .</b>	<b>PI-QRH.15.1</b>
Introduction . . . . .	PI-QRH.15.1
General . . . . .	PI-QRH.15.1
Advisory Information . . . . .	PI-QRH.15.2
Engine Inoperative . . . . .	PI-QRH.15.4
Gear Down . . . . .	PI-QRH.15.6



Intentionally  
Blank

**General**

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-2998	29042	YA701
B-2999	29084	YA702
B-2991	29085	YA703
B-2992	29086	YA704
B-2658	30512	YA705
B-2659	30513	YA706
B-5029	30634	YA707



**737 Flight Crew Operations Manual**

---

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-5028	30034	YA708
B-5038	30656	YA709
B-5039	28258	YA710





## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 10

**Flight With Unreliable Airspeed / Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>		
	V/S (FT/MIN)	1800	1100	400		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2600	2000	1500	1100	800
20000	<b>PITCH ATT</b>	<b>7.0</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4100	3200	2500	2100	1600
10000	<b>PITCH ATT</b>	<b>10.5</b>	<b>9.0</b>	<b>8.0</b>	<b>8.0</b>	<b>7.5</b>
	V/S (FT/MIN)	5400	4200	3400	2800	2300
SEA LEVEL	<b>PITCH ATT</b>	<b>14.0</b>	<b>12.0</b>	<b>11.0</b>	<b>10.0</b>	<b>9.5</b>
	V/S (FT/MIN)	6600	5200	4200	3500	3000

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	83	87	92		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	81	83	85	89	94
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	80	81	83	85	87
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	77	78	79	81	83
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	73	74	75	77	79
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	69	70	71	73	75

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-2.0</b>	<b>-0.5</b>	<b>0.0</b>	<b>0.5</b>	<b>1.0</b>
	V/S (FT/MIN)	-2800	-2600	-2600	-2800	-3100
30000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>-0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-3200	-2700	-2400	-2200	-2100
20000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2900	-2400	-2100	-2000	-1900
10000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.5</b>	<b>-1.0</b>	<b>-0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-2700	-2300	-2000	-1800	-1700
SEA LEVEL	<b>PITCH ATT</b>	<b>-4.0</b>	<b>-2.5</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-2600	-2200	-1900	-1700	-1600

**Flight With Unreliable Airspeed / Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Holding (VREF40 + 70)**

**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	56	62	66	70	74
	KIAS	177	196	215	233	250
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	53	58	63	66	70
	KIAS	177	196	214	232	248
5000	<b>PITCH ATT</b>	<b>5.5</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	49	54	58	63	66
	KIAS	177	194	214	231	247

**Terminal Area (5000 FT)**

**%N1 for Level Flight**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	49	54	58	62	66
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	51	56	61	65	69
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT.</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	52	57	62	66	70
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT.</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	60	65	70	75	79

**Final Approach (1500 FT)**

**Gear Down, %N1 for 3° Glideslope**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF 15 + 10)	<b>PITCH ATT</b>	<b>3.5</b>	<b>3.5</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	%N1	42	46	51	54	57
FLAPS 30 (VREF 30 + 10)	<b>PITCH ATT</b>	<b>1.5</b>	<b>2.0</b>	<b>2.0</b>	<b>2.0</b>	<b>2.5</b>
	%N1	46	51	56	59	63
FLAPS 40 (VREF 40 + 10)	<b>PITCH ATT</b>	<b>0.0</b>	<b>0.0</b>	<b>0.5</b>	<b>0.5</b>	<b>0.5</b>
	%N1	53	58	63	67	70

**Go-Around**

**Flaps 15, Gear Up, Set Go-Around Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>19.5</b>	<b>16.0</b>	<b>13.5</b>	<b>11.5</b>	<b>10.0</b>
	V/S (FT/MIN)	3400	2700	2100	1600	1300
	KIAS	126	139	151	163	174
5000	<b>PITCH ATT</b>	<b>22.0</b>	<b>18.0</b>	<b>15.0</b>	<b>13.0</b>	<b>11.5</b>
	V/S (FT/MIN)	3800	3000	2400	1900	1600
	KIAS	126	138	150	161	172
SEA LEVEL	<b>PITCH ATT</b>	<b>24.5</b>	<b>19.5</b>	<b>16.5</b>	<b>14.5</b>	<b>13.0</b>
	V/S (FT/MIN)	4000	3200	2600	2100	1700
	KIAS	126	138	149	160	170

**Max Climb %N1****Based on engine bleed for packs on or off and anti-ice off**

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	88.4	88.6	88.5	88.2	88.9	91.3	92.9	94.3	94.4	92.7
55	89.2	89.4	89.3	89.1	89.3	90.6	92.3	93.6	93.7	92.0
50	90.0	90.1	90.1	89.9	90.2	90.7	91.6	92.9	93.0	91.3
45	90.7	90.8	90.9	90.7	91.1	91.6	91.6	92.2	92.3	90.6
40	91.5	91.6	91.6	91.4	92.0	92.4	92.4	91.5	91.6	89.9
35	92.0	92.3	92.3	92.2	92.8	93.2	93.2	92.3	91.6	90.0
30	91.3	93.0	93.0	92.9	93.6	94.0	93.9	93.1	92.5	91.0
25	90.5	93.0	93.8	93.6	94.3	94.8	94.6	93.9	93.3	92.0
20	89.8	92.3	94.5	94.3	95.1	95.5	95.3	94.6	94.1	92.9
15	89.1	91.5	93.9	95.1	95.8	96.2	96.0	95.4	94.9	93.9
10	88.3	90.8	93.1	95.3	96.7	96.9	96.6	96.1	95.7	94.8
5	87.5	90.0	92.4	94.5	97.7	97.8	97.3	96.9	96.5	95.7
0	86.8	89.2	91.6	93.7	97.1	98.9	98.3	97.8	97.4	96.6
-5	86.0	88.4	90.8	92.9	96.3	98.8	99.3	98.5	98.2	97.7
-10	85.2	87.6	89.9	92.1	95.5	98.0	99.6	99.4	99.1	98.6
-15	84.4	86.8	89.1	91.2	94.7	97.3	98.8	100.4	100.1	99.6
-20	83.6	86.0	88.3	90.4	93.9	96.5	98.0	100.1	100.6	100.2
-25	82.8	85.2	87.5	89.6	93.1	95.7	97.2	99.2	99.8	99.4
-30	82.0	84.3	86.6	88.7	92.3	94.9	96.4	98.4	98.9	98.6
-35	81.2	83.5	85.8	87.9	91.4	94.0	95.5	97.6	98.1	97.7
-40	80.4	82.6	84.9	87.0	90.6	93.2	94.7	96.7	97.2	96.9

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

### Go-around %N1

Based on engine bleed for packs on, engine and wing anti-ice on or off

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	88.5	89.3	89.4									
52	125	55	89.2	90.1	90.3	90.4	90.5							
47	116	50	90.0	90.9	91.0	91.2	91.3	91.4	91.4	91.3				
42	108	45	90.9	91.7	91.9	92.0	92.1	92.2	92.2	92.1	91.8	91.4		
37	99	40	91.8	92.6	92.7	92.8	92.9	93.0	93.0	92.9	92.6	92.2	92.1	92.0
32	90	35	91.9	93.5	93.6	93.7	93.7	93.8	93.7	93.7	93.4	93.0	93.0	92.9
27	81	30	91.2	93.4	94.1	94.5	94.6	94.6	94.6	94.5	94.1	93.8	93.8	93.7
22	72	25	90.5	92.6	93.3	94.0	94.7	95.5	95.4	95.3	95.0	94.6	94.5	94.5
17	63	20	89.7	91.9	92.6	93.3	94.0	94.7	95.2	95.8	96.0	95.7	95.3	95.3
12	54	15	89.0	91.1	91.8	92.5	93.2	93.9	94.5	95.0	95.6	96.2	96.8	96.5
7	45	10	88.3	90.4	91.0	91.7	92.4	93.2	93.7	94.2	94.8	95.4	96.1	96.7
2	36	5	87.5	89.6	90.3	90.9	91.6	92.4	92.9	93.4	94.0	94.6	95.3	95.9
-3	27	0	86.7	88.8	89.5	90.1	90.9	91.6	92.1	92.6	93.2	93.8	94.5	95.1
-8	18	-5	86.0	88.0	88.7	89.4	90.1	90.8	91.3	91.8	92.4	93.0	93.7	94.3
-13	9	-10	85.2	87.2	87.9	88.5	89.2	89.9	90.5	91.0	91.6	92.2	92.9	93.5
-17	1	-15	84.4	86.4	87.1	87.7	88.4	89.1	89.7	90.2	90.8	91.4	92.0	92.7
-22	-8	-20	83.6	85.6	86.3	86.9	87.6	88.3	88.8	89.3	90.0	90.5	91.2	91.9
-27	-17	-25	82.8	84.8	85.4	86.1	86.8	87.5	88.0	88.5	89.1	89.7	90.4	91.1
-32	-26	-30	82.0	84.0	84.6	85.2	85.9	86.6	87.1	87.6	88.3	88.9	89.5	90.2
-37	-35	-35	81.2	83.1	83.8	84.4	85.1	85.8	86.3	86.8	87.4	88.0	88.7	89.4
-42	-44	-40	80.3	82.3	82.9	83.5	84.2	84.9	85.4	85.9	86.5	87.1	87.8	88.5
-47	-53	-45	79.5	81.4	82.1	82.7	83.4	84.0	84.5	85.0	85.7	86.3	87.0	87.6
-52	-62	-50	78.6	80.6	81.2	81.8	82.5	83.1	83.6	84.1	84.8	85.4	86.1	86.8

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)												
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.6	0.6	0.6	0.6	0.6	0.6	0.7	0.7	0.7	0.7	0.8	0.8	0.8
A/C HIGH	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2



## 737 Flight Crew Operations Manual

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
80	154	156	162
75	149	151	157
70	144	146	152
65	139	141	147
60	133	135	140
55	127	129	134
50	120	123	127
45	114	117	121
40	107	110	114

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 11

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	890	65/-50	20/25	-30/110	10/-10	20/-20	30	15	35
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1570	95/-100	40/60	-70/230	0/0	40/-40	90	0	0
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Good Reported Braking Action

MAX MANUAL	1220	70/-75	30/45	-55/190	30/-25	30/-30	45	65	145
AUTOBRAKE MAX	1290	75/-80	35/45	-55/195	25/-20	30/-30	55	70	160
AUTOBRAKE 3	1575	95/-100	40/60	-70/235	5/0	40/-40	90	5	15
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Medium Reported Braking Action

MAX MANUAL	1680	115/-115	50/70	-85/320	75/-60	40/-45	60	185	455
AUTOBRAKE MAX	1690	115/-115	50/75	-90/320	70/-55	45/-45	70	180	450
AUTOBRAKE 3	1750	115/-120	50/75	-90/325	60/-35	45/-45	90	150	425
AUTOBRAKE 2	2070	140/-150	60/85	-105/365	45/-45	55/-60	100	65	195
AUTOBRAKE 1	2270	170/-180	75/105	-115/400	70/-70	65/-65	95	200	265

## Poor Reported Braking Action

MAX MANUAL	2210	165/-165	70/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE MAX	2210	165/-165	75/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE 3	2210	165/-165	75/105	-135/505	185/-115	55/-60	80	405	1120
AUTOBRAKE 2	2340	170/-175	75/110	-140/520	165/-105	60/-65	95	310	1005
AUTOBRAKE 1	2460	185/-195	80/115	-145/540	170/-120	65/-70	95	365	920

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
Flaps 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	860	55/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 3	1490	85/-95	40/55	-65/225	0/0	40/-40	85	0	0
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Good Reported Braking Action**

MAX MANUAL	1180	65/-70	30/40	-55/190	30/-25	25/-30	45	60	135
AUTOBRAKE MAX	1250	70/-75	30/45	-55/195	25/-20	30/-30	55	65	145
AUTOBRAKE 3	1490	90/-95	40/55	-65/230	5/0	40/-40	85	5	15
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Medium Reported Braking Action**

MAX MANUAL	1610	105/-110	45/65	-85/310	70/-55	40/-40	60	165	400
AUTOBRAKE MAX	1620	110/-110	50/70	-85/315	70/-50	40/-40	70	165	400
AUTOBRAKE 3	1670	110/-110	50/70	-90/320	60/-35	45/-45	85	140	385
AUTOBRAKE 2	1955	130/-140	55/80	-100/355	45/-45	55/-55	90	65	180
AUTOBRAKE 1	2125	155/-165	70/95	-110/385	70/-65	60/-60	85	180	255

**Poor Reported Braking Action**

MAX MANUAL	2090	155/-155	65/100	-130/495	175/-115	55/-60	70	355	955
AUTOBRAKE MAX	2095	155/-155	65/100	-130/495	180/-115	55/-60	70	355	960
AUTOBRAKE 3	2095	155/-155	65/100	-130/495	175/-110	55/-60	80	355	960
AUTOBRAKE 2	2210	160/-160	70/100	-135/510	160/-105	55/-60	90	280	860
AUTOBRAKE 1	2310	170/-175	75/105	-140/525	165/-115	60/-65	85	330	805

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

## Dry Runway

MAX MANUAL	845	55/-45	15/25	-30/105	10/-10	15/-15	35	15	30
AUTOBRAKE MAX	1045	50/-55	25/35	-40/130	0/0	20/-25	50	0	0
AUTOBRAKE 3	1440	85/-90	40/55	-65/220	0/0	35/-35	85	0	0
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

## Good Reported Braking Action

MAX MANUAL	1165	65/-70	30/45	-55/190	30/-25	25/-25	45	55	130
AUTOBRAKE MAX	1235	70/-75	30/45	-55/195	25/-20	30/-30	55	60	140
AUTOBRAKE 3	1445	85/-90	40/55	-65/225	10/-5	35/-35	85	5	15
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

## Medium Reported Braking Action

MAX MANUAL	1575	105/-105	45/65	-85/310	70/-55	40/-40	60	155	375
AUTOBRAKE MAX	1590	105/-110	45/70	-85/310	70/-50	40/-40	70	155	370
AUTOBRAKE 3	1630	105/-110	50/70	-85/315	60/-40	40/-45	85	140	370
AUTOBRAKE 2	1895	125/-135	55/80	-100/350	45/-45	50/-50	90	60	175
AUTOBRAKE 1	2055	150/-155	65/95	-110/380	70/-65	55/-60	85	160	235

## Poor Reported Braking Action

MAX MANUAL	2040	150/-150	65/95	-130/490	175/-110	50/-55	70	330	875
AUTOBRAKE MAX	2045	150/-150	65/100	-130/490	175/-115	50/-55	70	330	875
AUTOBRAKE 3	2050	155/-150	65/100	-130/490	175/-110	50/-55	80	330	875
AUTOBRAKE 2	2150	155/-155	70/100	-130/500	155/-105	55/-60	85	260	795
AUTOBRAKE 1	2240	165/-170	70/105	-135/515	165/-115	60/-65	85	305	745

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Airspeed Unreliable (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	950	75/-55	20/30	-35/115	10/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1230	65/-65	30/40	-45/150	0/0	30/-30	N/A	0	5
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

**Good Reported Braking Action**

MAX MANUAL	1300	75/-75	35/45	-55/195	30/-25	30/-30	N/A	75	175
AUTOBRAKE MAX	1385	80/-80	35/50	-60/205	25/-20	35/-35	N/A	85	190
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

**Medium Reported Braking Action**

MAX MANUAL	1775	120/-120	55/75	-90/325	75/-60	45/-45	N/A	210	525
AUTOBRAKE MAX	1800	120/-120	55/75	-90/325	70/-55	45/-50	N/A	210	525
AUTOBRAKE 3	1915	120/-125	55/80	-95/340	50/-35	50/-50	N/A	135	445

**Poor Reported Braking Action**

MAX MANUAL	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	445	1250
AUTOBRAKE MAX	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	440	1250
AUTOBRAKE 3	2320	170/-170	75/110	-135/510	175/-105	60/-65	N/A	440	1250

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## Airspeed Unreliable (Flaps 30)

## VREF30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	920	65/-50	20/25	-35/115	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1175	60/-60	25/35	-45/145	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

## Good Reported Braking Action

MAX MANUAL	1265	70/-75	35/45	-55/195	30/-25	30/-30	N/A	70	165
AUTOBRAKE MAX	1350	75/-80	35/50	-60/200	25/-25	30/-30	N/A	80	180
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

## Medium Reported Braking Action

MAX MANUAL	1705	110/-115	50/70	-85/320	70/-55	45/-45	N/A	190	465
AUTOBRAKE MAX	1735	115/-115	50/70	-90/320	65/-55	45/-45	N/A	190	470
AUTOBRAKE 3	1830	115/-115	55/75	-90/330	50/-35	50/-50	N/A	125	405

## Poor Reported Braking Action

MAX MANUAL	2185	160/-155	70/100	-130/500	170/-115	55/-60	N/A	390	1070
AUTOBRAKE MAX	2190	160/-160	70/100	-130/500	175/-115	55/-60	N/A	390	1070
AUTOBRAKE 3	2210	160/-160	70/100	-130/500	165/-100	55/-60	N/A	390	1075

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	910	60/-45	20/25	-35/110	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1145	55/-60	25/35	-40/140	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	30/-40	55/-55	N/A	90	90

**Good Reported Braking Action**

MAX MANUAL	1250	70/-70	35/45	-55/195	30/-25	30/-30	N/A	70	155
AUTOBRAKE MAX	1335	75/-80	35/50	-60/200	25/-25	30/-30	N/A	75	170
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	35/-40	55/-55	N/A	90	90

**Medium Reported Braking Action**

MAX MANUAL	1675	110/-110	50/70	-85/315	70/-60	40/-45	N/A	180	435
AUTOBRAKE MAX	1705	115/-115	50/75	-90/320	65/-55	45/-45	N/A	180	440
AUTOBRAKE 3	1785	110/-115	50/75	-90/330	50/-40	45/-50	N/A	125	390

**Poor Reported Braking Action**

MAX MANUAL	2140	155/-155	70/100	-130/495	170/-110	55/-60	N/A	365	975
AUTOBRAKE MAX	2145	155/-155	70/100	-130/495	170/-110	55/-60	N/A	360	975
AUTOBRAKE 3	2165	160/-155	70/100	-130/495	165/-105	55/-60	N/A	365	985

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## All Flaps Up Landing

## VREF40 + 55

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1240	170/-80	30/80	-40/145	15/-15	30/-30	40	40	85
AUTOBRAKE MAX	1730	95/-80	45/60	-55/185	5/-5	45/-45	70	5	15
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

## Good Reported Braking Action

MAX MANUAL	1635	85/-90	45/65	-65/220	35/-30	40/-45	45	105	240
AUTOBRAKE MAX	1860	90/-95	50/70	-70/235	25/-20	50/-50	65	80	215
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

## Medium Reported Braking Action

MAX MANUAL	2305	145/-150	75/105	-100/360	90/-75	65/-65	60	295	735
AUTOBRAKE MAX	2380	145/-150	75/110	-105/365	85/-70	65/-65	70	300	760
AUTOBRAKE 3	2720	140/-160	85/120	-115/395	55/-50	80/-80	105	150	485

## Poor Reported Braking Action

MAX MANUAL	3050	215/-215	110/155	-155/570	215/-150	85/-90	75	640	1825
AUTOBRAKE MAX	3050	215/-215	110/155	-155/570	215/-140	85/-90	85	635	1810
AUTOBRAKE 3	3165	205/-210	110/155	-155/580	190/-130	90/-95	105	555	1750

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	95/-100	40/60	-75/265	45/-40	35/-40	60	125	295
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1760	115/-115	50/70	-90/325	70/-55	40/-45	65	185	460
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2250	165/-160	70/105	-135/505	170/-110	55/-60	75	400	1135
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3015	240/-235	100/150	-220/935	1360/-260	65/-90	90	985	3725
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1510	90/-95	40/55	-75/260	45/-40	35/-35	60	110	265
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1685	105/-110	45/65	-85/320	65/-55	40/-40	65	165	405
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2140	150/-150	65/95	-130/495	165/-105	50/-55	75	350	970
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2845	225/-215	90/140	-215/915	1265/-245	60/-85	85	865	3105
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1480	90/-90	40/55	-75/260	45/-40	35/-35	60	105	250
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1650	105/-105	45/65	-85/315	65/-55	40/-40	65	155	375
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2090	150/-145	65/95	-130/490	165/-105	50/-55	75	325	885
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2765	215/-210	90/135	-210/905	1220/-240	60/-80	80	805	2815
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

Non-Normal Configuration Landing Distance  
Jammed or Restricted Flight Controls (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	885	70/-50	20/25	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

## Good Reported Braking Action

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

## Medium Reported Braking Action

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

## Poor Reported Braking Action

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LEADING EDGE FLAPS TRANSIT (Flaps 15)**

**VREF15 + 15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1000	80/-60	20/30	-35/120	10/-10	20/-20	35	25	55
AUTOBRAKE MAX	1290	65/-70	30/40	-45/150	0/0	30/-30	60	0	5
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Good Reported Braking Action**

MAX MANUAL	1385	80/-80	35/50	-60/205	30/-30	35/-35	50	90	205
AUTOBRAKE MAX	1465	85/-85	40/55	-60/210	30/-25	35/-35	55	95	220
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/85	-95/335	80/-65	50/-50	65	240	610
AUTOBRAKE MAX	1915	130/-130	60/85	-95/335	75/-60	50/-50	70	240	610
AUTOBRAKE 3	2025	125/-130	60/85	-95/350	55/-35	55/-55	95	165	540

**Poor Reported Braking Action**

MAX MANUAL	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE MAX	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE 3	2475	185/-180	85/125	-140/525	195/-115	65/-70	90	505	1460

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### LOSS OF SYSTEM A (Flaps 15)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	965	65/-50	20/30	-35/120	15/-10	20/-20	40	25	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

#### Good Reported Braking Action

MAX MANUAL	1395	85/-85	40/55	-60/210	40/-35	35/-35	60	110	220
AUTOBRAKE MAX	1395	85/-90	40/55	-60/210	35/-25	35/-35	65	105	215
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

#### Medium Reported Braking Action

MAX MANUAL	1920	135/-135	60/85	-95/345	95/-75	50/-50	80	295	705
AUTOBRAKE MAX	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695
AUTOBRAKE 3	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695

#### Poor Reported Braking Action

MAX MANUAL	2495	195/-190	85/125	-145/540	220/-145	65/-70	95	605	1765
AUTOBRAKE MAX	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765
AUTOBRAKE 3	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	935	60/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	5	5
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1350	80/-80	35/50	-60/210	40/-35	30/-35	65	100	200
AUTOBRAKE MAX	1350	80/-85	35/50	-60/210	30/-30	30/-35	65	100	195
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	1830	125/-125	55/80	-95/340	90/-70	45/-50	80	260	615
AUTOBRAKE MAX	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610
AUTOBRAKE 3	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610

**Poor Reported Braking Action**

MAX MANUAL	2360	180/-175	80/115	-140/530	210/-135	60/-65	90	530	1475
AUTOBRAKE MAX	2355	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475
AUTOBRAKE 3	2360	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM A (Flaps 40)

## VREF40

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

## Dry Runway

MAX MANUAL	930	60/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1045	55/-55	25/35	-40/135	5/0	25/-25	50	10	20
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

## Good Reported Braking Action

MAX MANUAL	1330	80/-80	35/50	-60/210	40/-35	30/-30	65	95	190
AUTOBRAKE MAX	1335	80/-85	35/55	-60/210	35/-30	30/-30	70	95	185
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

## Medium Reported Braking Action

MAX MANUAL	1790	125/-120	55/80	-95/335	90/-70	45/-45	80	240	560
AUTOBRAKE MAX	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560
AUTOBRAKE 3	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560

## Poor Reported Braking Action

MAX MANUAL	2285	175/-170	75/115	-140/525	205/-135	60/-65	90	480	1305
AUTOBRAKE MAX	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305
AUTOBRAKE 3	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1375	75/-75	35/50	-55/190	35/-30	30/-35	70	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1605	90/-95	40/60	-70/235	55/-45	40/-40	80	10	150
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2230	145/-145	65/95	-110/380	120/-95	55/-60	100	150	670
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2890	215/-205	95/140	-160/585	265/-175	70/-80	115	455	1925
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### LOSS OF SYSTEM B (Flaps 15)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1015	50/-55	25/30	-40/135	15/-15	20/-20	40	35	55
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Good Reported Braking Action

MAX MANUAL	1280	75/-75	35/45	-55/195	30/-25	30/-30	50	80	155
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Medium Reported Braking Action

MAX MANUAL	1755	120/-120	50/75	-90/325	80/-60	45/-45	65	225	510
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

#### Poor Reported Braking Action

MAX MANUAL	2285	175/-170	75/110	-135/515	190/-125	55/-65	80	475	1290
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

**\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.**

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1375	75/-75	35/50	-55/190	35/-30	30/-35	70	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1605	90/-95	40/60	-70/235	55/-45	40/-40	80	10	150
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2230	145/-145	65/95	-110/380	120/-95	55/-60	100	150	670
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2890	215/-205	95/140	-160/585	265/-175	70/-80	115	455	1925
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## One Engine Inoperative Landing (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	885	75/-55	20/30	-35/115	10/-10	20/-20	35	0	20
AUTOBRAKE MAX	1125	65/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

## Good Reported Braking Action

MAX MANUAL	1260	75/-75	35/50	-55/200	30/-30	30/-30	50	0	85
AUTOBRAKE MAX	1340	80/-85	40/50	-60/205	30/-25	30/-30	55	0	90
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

## Medium Reported Braking Action

MAX MANUAL	1800	120/-125	60/80	-95/340	90/-70	45/-50	70	0	270
AUTOBRAKE MAX	1815	125/-125	60/85	-95/345	85/-65	50/-50	80	0	270
AUTOBRAKE 3	1845	125/-130	60/85	-95/345	85/-55	50/-50	85	0	275

## Poor Reported Braking Action

MAX MANUAL	2470	185/-185	90/125	-150/560	245/-155	65/-70	85	0	685
AUTOBRAKE MAX	2470	185/-185	90/125	-150/560	250/-160	70/-70	85	0	685
AUTOBRAKE 3	2475	190/-190	90/125	-150/560	250/-150	70/-70	95	0	685

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**One Engine Inoperative Landing (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	855	60/-50	20/25	-30/110	10/-10	15/-20	35	0	20
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

**Good Reported Braking Action**

MAX MANUAL	1215	70/-75	35/45	-55/195	30/-25	30/-30	50	0	75
AUTOBRAKE MAX	1295	75/-80	35/50	-60/205	30/-25	30/-30	60	0	85
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

**Medium Reported Braking Action**

MAX MANUAL	1710	115/-115	55/75	-90/335	90/-70	45/-45	65	0	235
AUTOBRAKE MAX	1730	115/-120	55/75	-95/335	80/-60	45/-45	75	0	235
AUTOBRAKE 3	1755	115/-120	55/80	-95/335	85/-55	45/-45	85	0	245

**Poor Reported Braking Action**

MAX MANUAL	2315	170/-170	80/115	-145/545	230/-145	65/-65	80	0	575
AUTOBRAKE MAX	2315	170/-170	80/115	-145/545	235/-150	65/-65	85	0	575
AUTOBRAKE 3	2330	175/-175	80/115	-145/545	230/-140	65/-65	90	0	580

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## Stabilizer Trim Inoperative (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	885	70/-50	20/25	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

## Good Reported Braking Action

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

## Medium Reported Braking Action

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

## Poor Reported Braking Action

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15)  
VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1020	95/-65	25/35	-35/125	10/-10	25/-25	35	25	55
AUTOBRAKE MAX	1400	70/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

#### Dry Runway

MAX MANUAL	875	70/-50	20/30	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

#### Good Reported Braking Action

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

#### Medium Reported Braking Action

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

#### Poor Reported Braking Action

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flap Asymmetry (Flap Lever 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	845	60/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Good Reported Braking Action**

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Medium Reported Braking Action**

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

**Poor Reported Braking Action**

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance**  
**Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15)**  
**VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1020	95/-65	25/35	-35/125	10/-10	25/-25	35	25	55
AUTOBRAKE MAX	1400	70/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	875	70/-50	20/30	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) VREF30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	845	60/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

#### Good Reported Braking Action

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

#### Medium Reported Braking Action

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

#### Poor Reported Braking Action

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flaps Up Landing**

**VREF40 + 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1085	115/-65	30/45	-40/130	10/-10	25/-25	40	30	60
AUTOBRAKE MAX	1530	80/-75	40/55	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

**Good Reported Braking Action**

MAX MANUAL	1480	80/-85	45/60	-60/205	30/-30	35/-35	45	90	200
AUTOBRAKE MAX	1655	80/-85	50/70	-65/220	25/-20	40/-40	65	75	195
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

**Medium Reported Braking Action**

MAX MANUAL	2055	130/-135	70/100	-95/345	80/-65	55/-55	60	245	615
AUTOBRAKE MAX	2125	130/-135	75/105	-100/350	75/-60	55/-60	65	255	630
AUTOBRAKE 3	2385	130/-145	80/110	-105/375	50/-45	65/-70	100	130	420

**Poor Reported Braking Action**

MAX MANUAL	2700	190/-190	105/150	-145/540	195/-135	75/-80	75	530	1490
AUTOBRAKE MAX	2705	190/-190	105/150	-145/540	195/-125	75/-80	80	525	1480
AUTOBRAKE 3	2790	185/-190	105/150	-145/550	175/-115	75/-80	100	475	1445

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Recommended Brake Cooling Schedule

## Reference Brake Energy Per Brake (Millions of Foot Pounds)

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
				80			100			120			140			160			180		
				PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10		
80	0	15.3	17.2	19.4	22.9	25.8	29.3	31.7	35.8	40.9	41.5	47.1	54.2	52.2	59.6	69.0	62.4	71.4	83.3		
	10	15.8	17.7	20.0	23.6	26.6	30.2	32.7	37.0	42.2	42.8	48.7	55.9	53.9	61.5	71.2	64.4	73.7	86.0		
	15	16.0	18.0	20.3	24.0	27.1	30.7	33.2	37.6	42.9	43.5	49.4	56.8	54.7	62.4	72.3	65.3	74.8	87.3		
	20	16.3	18.3	20.6	24.4	27.5	31.1	33.7	38.1	43.5	44.1	50.1	57.6	55.6	63.4	73.4	66.3	75.9	88.6		
	30	16.7	18.8	21.2	25.0	28.2	32.0	34.6	39.2	44.7	45.4	51.5	59.3	57.1	65.1	75.4	68.2	78.0	91.0		
	40	16.8	18.9	21.3	25.2	28.5	32.3	35.0	39.6	45.3	46.0	52.3	60.2	58.0	66.3	77.0	69.5	79.7	93.3		
50	16.8	19.0	21.4	25.3	28.6	32.5	35.2	40.0	45.8	46.4	52.9	61.1	58.8	67.4	78.5	70.7	81.3	95.6			
70	0	13.9	15.6	17.6	20.6	23.3	26.3	28.4	32.1	36.5	37.1	42.1	48.2	46.6	53.0	61.2	56.4	64.4	74.8		
	10	14.4	16.2	18.2	21.3	24.0	27.2	29.3	33.1	37.7	38.3	43.4	49.7	48.1	54.7	63.1	58.2	66.5	77.2		
	15	14.6	16.4	18.5	21.6	24.4	27.6	29.8	33.6	38.3	38.9	44.1	50.5	48.8	55.6	64.1	59.1	67.5	78.4		
	20	14.8	16.7	18.8	22.0	24.8	28.0	30.2	34.2	38.9	39.5	44.7	51.3	49.5	56.4	65.1	60.0	68.5	79.6		
	30	15.2	17.1	19.3	22.6	25.5	28.8	31.1	35.1	40.0	40.6	46.0	52.7	50.9	58.0	66.9	61.6	70.4	81.8		
	40	15.3	17.2	19.4	22.7	25.6	29.1	31.3	35.5	40.4	41.0	46.6	53.5	51.7	58.9	68.1	62.7	71.8	83.6		
50	15.3	17.2	19.4	22.8	25.8	29.2	31.5	35.7	40.8	41.4	47.1	54.2	52.3	59.7	69.3	63.7	73.1	85.4			
60	0	12.6	14.1	15.9	18.4	20.7	23.4	25.1	28.3	32.2	32.5	36.9	42.1	40.7	46.3	53.1	49.6	56.5	65.3		
	10	13.0	14.6	16.4	19.0	21.4	24.2	25.9	29.2	33.2	33.6	38.0	43.4	42.0	47.7	54.7	51.2	58.3	67.4		
	15	13.2	14.8	16.6	19.3	21.7	24.6	26.3	29.7	33.7	34.1	38.6	44.1	42.7	48.5	55.7	51.9	59.2	68.4		
	20	13.4	15.0	16.9	19.6	22.1	24.9	26.7	30.1	34.2	34.6	39.2	44.8	43.3	49.2	56.5	52.7	60.1	69.5		
	30	13.7	15.4	17.4	20.1	22.7	25.6	27.4	31.0	35.2	35.6	40.3	46.0	44.5	50.6	58.1	54.2	61.7	71.4		
	40	13.8	15.5	17.5	20.3	22.8	25.8	27.7	31.3	35.6	36.0	40.8	46.6	45.1	51.3	59.0	55.0	62.8	72.8		
50	13.8	15.5	17.5	20.3	22.9	25.9	27.8	31.5	35.8	36.2	41.1	47.1	45.6	51.9	59.9	55.7	63.8	74.2			
50	0	11.2	12.6	14.1	16.2	18.2	20.5	21.8	24.6	27.9	28.0	31.7	36.1	34.8	39.5	45.1	42.1	47.9	55.1		
	10	11.6	13.0	14.6	16.7	18.8	21.2	22.5	25.4	28.8	28.9	32.7	37.2	35.9	40.7	46.6	43.5	49.4	56.8		
	15	11.7	13.2	14.8	16.9	19.1	21.5	22.8	25.8	29.2	29.4	33.2	37.8	36.5	41.4	47.3	44.2	50.2	57.7		
	20	11.9	13.4	15.1	17.2	19.4	21.9	23.2	26.2	29.6	29.8	33.7	38.4	37.0	42.0	48.0	44.8	50.9	58.6		
	30	12.3	13.8	15.5	17.7	19.9	22.5	23.8	26.9	30.5	30.7	34.7	39.4	38.1	43.2	49.4	46.1	52.4	60.2		
	40	12.3	13.8	15.6	17.8	20.0	22.6	24.0	27.1	30.7	30.9	35.0	39.9	38.5	43.7	50.0	46.7	53.1	61.2		
50	12.3	13.8	15.6	17.8	20.1	22.7	24.1	27.2	30.9	31.1	35.2	40.2	38.8	44.1	50.6	47.2	53.8	62.1			
40	0	9.9	11.1	12.5	14.0	15.7	17.7	18.5	20.8	23.5	23.5	26.5	30.1	28.9	32.7	37.3	34.8	39.4	45.1		
	10	10.2	11.5	12.9	14.4	16.2	18.2	19.1	21.5	24.3	24.3	27.4	31.1	29.9	33.8	38.5	35.9	40.7	46.5		
	15	10.4	11.7	13.1	14.6	16.5	18.5	19.4	21.8	24.7	24.6	27.8	31.5	30.3	34.3	39.1	36.4	41.3	47.2		
	20	10.6	11.9	13.3	14.9	16.7	18.8	19.7	22.2	25.1	25.0	28.2	32.0	30.8	34.8	39.7	37.0	41.9	47.9		
	30	10.9	12.2	13.7	15.3	17.2	19.3	20.2	22.8	25.8	25.7	29.0	32.9	31.7	35.8	40.8	38.0	43.1	49.3		
	40	10.9	12.2	13.7	15.3	17.3	19.5	20.4	22.9	26.0	25.9	29.3	33.2	31.9	36.2	41.2	38.4	43.6	50.0		
50	10.9	12.2	13.8	15.4	17.3	19.5	20.4	23.0	26.1	26.0	29.4	33.4	32.1	36.4	41.6	38.7	44.0	50.5			

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

## Adjusted Brake Energy Per Brake (Millions of Foot Pounds)

## No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.5	15.8	24.6	33.8	43.5	53.5	63.6	73.9	84.2
	MAX AUTO	7.3	15.0	23.2	31.9	41.2	51.0	61.3	72.2	83.7
	AUTOBRAKE 3	7.0	14.2	21.8	29.7	38.1	47.1	56.7	67.1	78.3
	AUTOBRAKE 2	6.6	13.3	20.2	27.3	34.7	42.6	51.0	59.9	69.6
	AUTOBRAKE 1	6.3	12.4	18.6	24.9	31.6	38.6	46.2	54.4	63.5

**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule  
Adjusted Brake Energy Per Brake (Millions of Foot Pounds)  
Two Engine Detent Reverse Thrust**

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	6.9	14.5	22.7	31.4	40.4	49.7	59.3	68.9	78.5
	MAX AUTO	6.0	12.6	19.8	27.6	36.0	45.1	54.8	65.3	76.5
	AUTOBRAKE 3	4.5	9.5	15.1	21.3	28.1	35.6	43.7	52.5	62.0
	AUTOBRAKE 2	2.6	5.9	9.7	14.1	19.1	24.7	31.0	37.9	45.4
AUTOBRAKE 1		1.8	3.8	6.3	9.1	12.5	16.4	21.0	26.3	32.5

**Cooling Time (Minutes) - Category A Steel and Carbon Brakes**

EVENT		ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED	6.7	16.0	24.1	34.2	45.9	53.3			

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.



## Performance Inflight - QRH

## Chapter PI-QRH

## Engine Inoperative

## Section 12

## ENGINE INOP

## Initial Max Continuous %N1

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.0	95.8	95.6	95.4	95.1	94.7	94.2	93.9	93.1
15	96.6	96.4	96.1	96.0	95.9	95.4	95.0	94.7	94.0
10	97.2	97.1	96.7	96.6	96.6	96.2	95.7	95.5	94.9
5	97.4	97.8	97.5	97.3	97.3	96.9	96.5	96.3	95.8
0	96.7	98.0	98.4	98.2	98.1	97.7	97.4	97.1	96.7
-5	95.9	97.2	98.4	99.1	99.0	98.5	98.2	98.0	97.7
-10	95.1	96.4	97.6	98.9	99.8	99.4	99.1	98.9	98.6
-15	94.3	95.7	96.9	98.1	99.4	100.3	100.0	99.8	99.6
-20	93.5	94.9	96.1	97.3	98.6	99.8	100.3	100.1	99.9
-25	92.7	94.1	95.3	96.5	97.8	98.9	99.5	99.3	99.1
-30	91.8	93.3	94.5	95.7	96.9	98.1	98.6	98.4	98.2
-35	91.0	92.5	93.6	94.8	96.1	97.2	97.8	97.6	97.4
-40	90.1	91.7	92.8	94.0	95.3	96.4	96.9	96.7	96.5

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

## ENGINE INOP

### Max Continuous %N1 37000 FT to 29000 FT Pressure Altitudes

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.0	96.9	97.8	98.7	99.5	98.9	98.0	96.8	95.5	93.9	92.4	91.1	
200	.63	95.3	96.2	97.1	98.0	98.8	99.7	99.4	98.6	97.7	96.7	95.5	94.4	
240	.74	94.4	95.3	96.1	97.0	97.9	98.7	99.6	100.0	99.2	98.4	97.6	96.6	
280	.86	93.6	94.5	95.4	96.3	97.1	98.0	98.8	99.6	100.4	100.1	99.2	98.4	

35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	95.8	96.7	97.6	98.5	99.4	99.1	98.3	97.2	96.0	94.6	93.2	92.0	
200	.60	95.4	96.4	97.2	98.1	99.0	99.9	99.8	98.8	97.9	96.9	95.7	94.6	
240	.71	94.3	95.2	96.1	97.0	97.9	98.7	99.6	100.1	99.4	98.8	97.9	96.9	
280	.82	93.1	94.0	94.8	95.7	96.5	97.4	98.2	99.0	99.8	99.6	98.8	98.0	

33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	96.7	97.6	98.4	99.3	100.1	99.3	98.4	97.2	95.9	94.5	93.1	91.9	
200	.58	96.3	97.2	98.1	99.0	99.8	100.7	99.8	98.9	97.9	96.7	95.5	94.4	
240	.68	95.2	96.1	97.0	97.8	98.7	99.5	100.4	100.1	99.5	98.6	97.6	96.6	
280	.79	93.6	94.4	95.3	96.1	97.0	97.8	98.6	99.4	99.8	99.0	98.1	97.3	
320	.89	92.9	93.8	94.7	95.5	96.3	97.2	98.0	98.8	99.6	100.3	100.0	99.1	

31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	96.7	97.5	98.4	99.3	100.2	100.3	99.5	98.4	97.2	95.8	94.4	93.1	
200	.55	96.4	97.3	98.1	99.0	99.9	100.7	100.9	100.0	99.0	97.9	96.6	95.4	
240	.66	94.9	95.8	96.7	97.5	98.4	99.2	100.1	100.6	99.8	99.0	98.0	97.0	
280	.76	93.1	94.0	94.8	95.6	96.5	97.3	98.1	98.9	99.7	99.0	98.1	97.2	
320	.85	91.7	92.5	93.4	94.2	95.0	95.8	96.6	97.4	98.2	99.0	99.2	98.3	

29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	97.4	98.3	99.2	100.0	100.9	100.5	99.5	98.4	97.1	95.6	94.3	93.0	
200	.53	96.8	97.7	98.6	99.4	100.3	101.1	100.6	99.6	98.6	97.4	96.2	95.0	
240	.63	95.6	96.4	97.3	98.1	99.0	99.8	100.6	100.3	99.4	98.5	97.4	96.5	
280	.73	93.5	94.3	95.2	96.0	96.8	97.6	98.4	99.2	99.3	98.4	97.4	96.7	
320	.82	91.3	92.2	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	97.7	96.9	
360	.91	91.3	92.2	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	99.3	

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7

## ENGINE INOP

### Max Continuous %N1

#### 27000 FT to 20000 FT Pressure Altitudes

27000 FT PRESS ALT			TAT (°C)										
KIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	97.3	98.1	99.0	99.9	100.7	101.5	100.5	99.5	98.3	96.9	95.6	94.3
200	.51	96.2	97.1	98.0	98.8	99.7	100.5	101.0	100.1	99.1	98.0	96.8	95.6
240	.60	94.9	95.8	96.7	97.5	98.3	99.2	100.0	100.6	99.6	98.6	97.6	96.7
280	.70	92.9	93.7	94.6	95.4	96.2	97.0	97.8	98.6	99.4	98.6	97.6	96.8
320	.79	90.8	91.6	92.5	93.3	94.1	94.9	95.6	96.4	97.2	97.9	97.8	97.1
360	.88	90.0	90.9	91.7	92.5	93.4	94.2	95.0	95.7	96.5	97.3	98.0	98.6
25000 FT PRESS ALT			TAT (°C)										
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.1	98.9	99.8	100.7	101.5	101.6	100.6	99.5	98.3	96.9	95.7	94.4
200	.49	96.7	97.6	98.5	99.3	100.1	100.9	100.8	99.8	98.8	97.6	96.5	95.4
240	.58	95.0	95.8	96.7	97.5	98.3	99.1	99.9	99.7	98.8	97.8	96.8	95.9
280	.67	93.1	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.8	96.8	96.1
320	.76	90.8	91.7	92.5	93.3	94.1	94.9	95.7	96.5	97.2	97.8	97.1	96.4
360	.85	89.5	90.3	91.2	92.0	92.9	93.7	94.5	95.3	96.1	96.9	97.6	97.4
24000 FT PRESS ALT			TAT (°C)										
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	97.3	98.2	99.1	99.9	100.7	101.5	100.4	99.3	98.1	96.8	95.6	94.4
200	.48	96.1	96.9	97.8	98.6	99.4	100.2	100.6	99.6	98.6	97.4	96.3	95.3
240	.57	94.5	95.3	96.1	96.9	97.8	98.6	99.3	99.7	98.7	97.6	96.7	95.8
280	.66	92.7	93.5	94.3	95.1	95.9	96.7	97.5	98.3	98.8	97.7	96.7	96.0
320	.75	90.2	91.1	91.9	92.7	93.5	94.4	95.2	95.9	96.7	97.5	96.9	96.2
360	.83	88.7	89.6	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	96.9
22000 FT PRESS ALT			TAT (°C)										
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	96.7	97.6	98.4	99.2	100.1	100.2	99.0	97.8	96.6	95.5	94.4	93.3
200	.46	95.5	96.4	97.2	98.0	98.8	99.6	99.3	98.1	97.0	96.0	95.0	94.0
240	.55	94.1	94.9	95.8	96.5	97.3	98.1	98.9	98.5	97.3	96.4	95.5	94.7
280	.63	92.5	93.3	94.1	94.9	95.7	96.4	97.2	97.9	97.6	96.7	95.8	95.1
320	.72	90.1	91.0	91.8	92.7	93.5	94.3	95.1	95.9	96.7	96.8	96.0	95.3
360	.80	88.4	89.2	90.1	90.9	91.7	92.6	93.4	94.2	95.0	95.8	96.3	95.8
20000 FT PRESS ALT			TAT (°C)										
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	95.3	96.1	97.0	97.8	98.6	99.4	98.8	97.4	96.2	95.2	94.2	93.2
200	.44	94.2	95.0	95.8	96.6	97.4	98.2	98.9	97.8	96.4	95.5	94.6	93.7
240	.53	92.8	93.6	94.4	95.2	96.0	96.8	97.5	98.2	97.0	95.9	95.1	94.3
280	.61	91.1	92.0	92.8	93.6	94.4	95.2	96.0	96.8	97.4	96.5	95.6	94.9
320	.69	89.1	90.0	90.8	91.6	92.5	93.3	94.1	94.9	95.7	96.5	95.8	95.1
360	.77	87.4	88.3	89.1	90.0	90.8	91.6	92.4	93.2	94.0	94.8	95.6	95.4

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

## ENGINE INOP

### Max Continuous %N1

#### 18000 FT to 12000 FT Pressure Altitudes

18000 FT PRESS ALT													TAT (°C)	
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	94.5	95.3	96.1	96.9	97.7	98.4	97.3	95.9	94.9	94.0	93.0	92.1	
200	.42	93.4	94.2	95.0	95.8	96.6	97.3	97.6	96.3	95.2	94.4	93.5	92.6	
240	.51	91.9	92.7	93.5	94.3	95.1	95.9	96.7	96.7	95.6	94.7	94.0	93.2	
280	.59	90.4	91.3	92.1	92.9	93.8	94.6	95.4	96.1	96.1	95.2	94.4	93.7	
320	.67	88.9	89.7	90.5	91.4	92.2	93.0	93.8	94.6	95.4	95.5	94.8	94.1	
360	.75	87.3	88.2	89.0	89.8	90.7	91.5	92.3	93.1	93.9	94.7	95.1	94.5	

16000 FT PRESS ALT													TAT (°C)	
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	93.0	93.8	94.6	95.4	96.1	96.9	97.2	96.0	94.8	94.0	93.1	92.2	
200	.41	91.6	92.4	93.2	94.0	94.8	95.6	96.4	96.1	95.0	94.1	93.3	92.5	
240	.49	90.3	91.1	92.0	92.8	93.6	94.4	95.2	96.0	95.4	94.5	93.7	92.9	
280	.57	89.0	89.9	90.7	91.5	92.4	93.2	94.0	94.8	95.6	94.9	94.1	93.4	
320	.64	87.8	88.6	89.5	90.3	91.1	91.9	92.7	93.5	94.3	95.1	94.5	93.8	
360	.72	86.5	87.3	88.2	89.0	89.8	90.6	91.4	92.2	93.0	93.8	94.6	94.2	

14000 FT PRESS ALT														TAT (°C)	
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30		
160	.31	92.4	93.2	94.1	94.9	95.7	96.4	96.4	95.5	94.6	93.8	92.9	92.0		
200	.39	91.0	91.9	92.7	93.5	94.3	95.1	95.9	95.1	94.2	93.4	92.6	91.8		
240	.47	90.0	90.9	91.7	92.5	93.3	94.1	94.9	95.4	94.6	93.7	93.0	92.3		
280	.54	88.9	89.8	90.6	91.4	92.3	93.1	93.9	94.7	94.9	94.1	93.4	92.7		
320	.62	87.8	88.7	89.5	90.3	91.2	92.0	92.8	93.5	94.3	94.5	93.8	93.1		
360	.69	86.7	87.5	88.3	89.1	90.0	90.8	91.5	92.3	93.1	93.9	94.2	93.6		

12000 FT PRESS ALT														TAT (°C)	
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35		
160	.30	91.8	92.6	93.4	94.2	95.0	95.8	95.5	94.8	94.0	93.2	92.4	91.5		
200	.38	90.7	91.5	92.3	93.1	93.9	94.7	95.2	94.3	93.5	92.7	92.0	91.2		
240	.45	89.8	90.7	91.5	92.3	93.1	93.9	94.7	94.7	93.8	93.1	92.4	91.6		
280	.52	88.9	89.8	90.6	91.4	92.2	93.0	93.8	94.6	94.2	93.5	92.8	92.1		
320	.60	87.9	88.8	89.6	90.4	91.2	92.0	92.8	93.6	94.3	93.9	93.2	92.5		
360	.67	86.8	87.7	88.5	89.3	90.1	90.9	91.6	92.4	93.2	93.9	93.5	92.9		

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5





**ENGINE INOP**

**Max Continuous %N1  
 10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	90.5	91.4	92.2	93.0	93.8	94.6	95.4	94.7	94.1	93.3	92.5	91.7
200	.36	89.6	90.4	91.3	92.1	92.9	93.7	94.5	94.5	93.7	92.9	92.2	91.4
240	.43	88.9	89.7	90.6	91.4	92.2	93.0	93.8	94.5	94.0	93.1	92.4	91.7
280	.51	88.1	89.0	89.8	90.6	91.4	92.2	93.0	93.8	94.4	93.6	92.8	92.2
320	.58	87.2	88.0	88.8	89.6	90.4	91.2	92.0	92.8	93.5	93.9	93.2	92.5
360	.65	86.2	87.0	87.8	88.6	89.4	90.2	91.0	91.7	92.5	93.2	93.6	92.9
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	89.1	89.9	90.7	91.5	92.3	93.1	93.7	93.5	93.2	92.5	91.8	91.0
200	.33	88.7	89.5	90.3	91.1	91.8	92.6	93.4	93.3	92.9	92.3	91.6	90.8
240	.40	88.1	88.9	89.7	90.5	91.3	92.0	92.8	93.3	92.5	91.8	91.1	90.3
280	.46	87.5	88.3	89.1	89.8	90.6	91.4	92.2	92.9	92.9	92.1	91.4	90.7
320	.53	86.8	87.6	88.3	89.1	89.9	90.7	91.4	92.2	92.9	92.5	91.8	91.1
360	.59	86.0	86.7	87.5	88.3	89.1	89.8	90.6	91.3	92.0	92.8	92.2	91.5
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	88.8	89.6	90.4	91.2	91.9	92.7	93.1	92.9	92.6	91.8	91.1	90.3
200	.32	88.5	89.3	90.0	90.8	91.6	92.3	93.1	92.8	92.5	91.8	91.1	90.3
240	.38	87.9	88.7	89.5	90.3	91.0	91.8	92.5	92.6	91.8	91.0	90.3	89.6
280	.45	87.4	88.1	88.9	89.7	90.5	91.2	92.0	92.7	92.2	91.4	90.7	90.0
320	.51	86.7	87.5	88.3	89.0	89.8	90.5	91.3	92.0	92.5	91.8	91.1	90.4
360	.57	85.9	86.7	87.5	88.2	89.0	89.7	90.5	91.2	91.9	92.2	91.5	90.7
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	87.7	88.5	89.3	90.0	90.8	91.6	92.3	92.3	91.8	91.2	90.5	89.7
200	.31	87.4	88.2	89.0	89.7	90.5	91.3	92.0	92.4	92.0	91.5	90.8	90.0
240	.37	86.9	87.7	88.5	89.3	90.0	90.8	91.5	92.3	91.9	91.2	90.4	89.7
280	.43	86.4	87.2	87.9	88.7	89.5	90.2	90.9	91.7	92.1	91.4	90.7	89.9
320	.49	85.8	86.6	87.4	88.1	88.9	89.6	90.4	91.1	91.8	91.8	91.1	90.3
360	.55	85.1	85.9	86.7	87.4	88.1	88.9	89.6	90.3	91.1	91.8	91.4	90.7

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Driftdown Speed/Level Off Altitude

#### 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	76	261	16000	13800	11500
75	71	253	18600	16600	14100
70	67	245	21100	19500	17200
65	62	237	23600	22200	20400
60	57	228	26000	24900	23500
55	53	219	28300	27300	26200
50	48	209	30500	29700	28600
45	43	198	32700	31900	31000
40	38	187	35000	34300	33400
35	33	175	37600	36900	36100
30	29	162	40700	39900	39100

Includes APU fuel burn.

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Driftdown/LRC Cruise Range Capability Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
140	129	120	113	106	100	95	90	85	82	78
279	259	241	226	212	200	189	180	171	163	156
418	388	361	338	318	300	284	270	256	245	234
558	517	482	451	424	400	379	359	342	326	312
697	646	602	564	530	500	473	449	428	408	390
836	775	722	676	636	600	568	539	513	490	468
975	904	843	789	742	700	663	629	599	571	546
1114	1033	963	902	848	800	757	719	684	653	624
1253	1162	1083	1014	954	900	852	809	770	734	702
1392	1291	1204	1127	1060	1000	947	899	855	816	780
1532	1420	1324	1240	1166	1100	1041	989	941	898	858
1671	1550	1444	1353	1272	1200	1136	1078	1026	979	936
1811	1679	1565	1465	1378	1300	1231	1168	1112	1061	1014
1951	1809	1686	1578	1484	1400	1325	1258	1197	1142	1092
2091	1938	1806	1691	1590	1500	1420	1348	1283	1223	1169
2231	2068	1927	1804	1696	1600	1514	1437	1368	1305	1247
2372	2198	2048	1917	1802	1700	1609	1527	1453	1386	1325
2513	2329	2169	2030	1908	1800	1703	1617	1538	1467	1402

### Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)								TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)								
	35	40	45	50	55	60	65	70	
100	0.3	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0:17
200	0.7	0.8	0.8	0.9	0.9	1.0	1.1	1.1	0:34
300	1.2	1.2	1.3	1.4	1.5	1.6	1.7	1.8	0:51
400	1.5	1.7	1.8	2.0	2.1	2.3	2.4	2.5	1:08
500	1.9	2.1	2.3	2.5	2.7	2.9	3.1	3.2	1:24
600	2.3	2.5	2.7	3.0	3.2	3.4	3.7	3.9	1:41
700	2.6	2.9	3.2	3.4	3.7	4.0	4.3	4.6	1:58
800	3.0	3.3	3.6	3.9	4.2	4.6	4.9	5.2	2:15
900	3.3	3.7	4.0	4.4	4.8	5.1	5.5	5.9	2:32
1000	3.7	4.1	4.5	4.9	5.3	5.7	6.1	6.5	2:49
1100	4.0	4.5	4.9	5.4	5.8	6.2	6.7	7.1	3:06
1200	4.4	4.8	5.3	5.8	6.3	6.8	7.3	7.8	3:23
1300	4.7	5.2	5.8	6.3	6.8	7.3	7.9	8.4	3:40
1400	5.0	5.6	6.2	6.7	7.3	7.9	8.4	9.0	3:57
1500	5.4	6.0	6.6	7.2	7.8	8.4	9.0	9.7	4:14
1600	5.7	6.3	7.0	7.6	8.3	8.9	9.6	10.3	4:31
1700	6.0	6.7	7.4	8.1	8.8	9.4	10.1	10.9	4:48
1800	6.4	7.1	7.8	8.5	9.2	10.0	10.7	11.5	5:05

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at LRC speed.

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	10000	7400	4800
75	12800	10300	7800
70	15800	13300	10800
65	19900	16600	13800
60	23200	20500	17600
55	26100	24500	21700
50	28900	27600	25800
45	31300	30400	29100
40	33700	32900	31800
35	36300	35600	34500
30	39400	38500	37500

With engine anti-ice on, decrease altitude capability by 2000 ft.

With engine and wing anti-ice on, decrease altitude capability by 7000 ft.

## ENGINE INOP

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
75	%N1	88.5	92.6								
	MACH	.528	.579								
	KIAS	293	293								
	FF/ENG	2693	2723								
70	%N1	86.6	90.8	92.5	94.2						
	MACH	.510	.562	.582	.595						
	KIAS	282	284	283	278						
	FF/ENG	2499	2529	2532	2500						
65	%N1	84.5	88.8	90.5	92.3	94.2					
	MACH	.491	.542	.563	.584	.596					
	KIAS	271	274	274	273	268					
	FF/ENG	2306	2334	2339	2341	2313					
60	%N1	82.3	86.6	88.4	90.1	92.0	94.0	96.8			
	MACH	.471	.521	.543	.564	.585	.597	.614			
	KIAS	261	263	263	263	263	258	254			
	FF/ENG	2120	2141	2145	2148	2152	2131	2175			
55	%N1	80.0	84.2	86.0	87.8	89.6	91.5	93.6	96.6		
	MACH	.453	.498	.520	.541	.563	.585	.597	.614		
	KIAS	250	251	252	252	253	252	247	244		
	FF/ENG	1945	1948	1952	1954	1959	1966	1953	1997		
50	%N1	77.6	81.6	83.4	85.2	87.0	88.8	90.8	92.9	96.1	
	MACH	.434	.475	.495	.516	.538	.561	.583	.596	.613	
	KIAS	240	239	239	240	241	241	241	236	233	
	FF/ENG	1777	1759	1760	1763	1767	1771	1783	1776	1815	
45	%N1	75.2	78.9	80.5	82.3	84.1	86.0	87.8	89.8	92.0	95.2
	MACH	.415	.452	.469	.489	.511	.533	.556	.578	.593	.610
	KIAS	229	227	227	227	228	229	229	229	225	222
	FF/ENG	1617	1585	1576	1573	1577	1581	1588	1604	1601	1630
40	%N1	72.5	76.0	77.6	79.2	80.9	82.8	84.6	86.5	88.4	90.8
	MACH	.395	.429	.445	.462	.480	.502	.525	.548	.571	.589
	KIAS	218	215	215	214	214	215	216	216	216	214
	FF/ENG	1462	1421	1406	1395	1388	1393	1400	1411	1424	1428
35	%N1	69.4	73.0	74.4	75.9	77.6	79.2	81.0	82.8	84.7	86.6
	MACH	.375	.406	.420	.435	.452	.469	.490	.513	.536	.560
	KIAS	207	203	202	202	201	201	201	202	203	203
	FF/ENG	1314	1266	1247	1230	1217	1209	1212	1224	1233	1243
30	%N1	66.2	69.5	71.0	72.4	73.8	75.4	77.1	78.7	80.6	82.5
	MACH	.355	.382	.394	.407	.422	.438	.455	.474	.496	.520
	KIAS	196	191	190	189	188	187	186	186	187	187
	FF/ENG	1173	1117	1097	1078	1059	1042	1037	1040	1048	1055

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
314	283	256	234	216	200	190	180	172	164	157
634	570	514	470	433	400	379	360	343	327	313
957	859	775	706	650	600	569	540	513	489	468
1283	1150	1036	943	867	800	758	719	684	652	623
1611	1443	1298	1181	1085	1000	947	898	853	814	778
1942	1737	1561	1419	1302	1200	1135	1076	1023	975	933
2276	2034	1825	1658	1520	1400	1324	1255	1193	1136	1087
2612	2332	2090	1897	1739	1600	1513	1434	1362	1297	1240
2951	2631	2356	2137	1957	1800	1702	1613	1531	1459	1394

#### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.3	0:46	1.1	0:43	1.0	0:41	0.9	0:39	0.8	0:38
400	2.6	1:30	2.4	1:25	2.2	1:20	2.0	1:15	1.8	1:12
600	3.9	2:14	3.6	2:07	3.3	2:00	3.0	1:52	2.9	1:46
800	5.2	2:59	4.8	2:50	4.4	2:39	4.1	2:29	3.9	2:21
1000	6.5	3:45	6.0	3:33	5.5	3:20	5.2	3:07	4.8	2:56
1200	7.8	4:31	7.2	4:16	6.7	4:01	6.2	3:45	5.8	3:31
1400	9.0	5:18	8.3	5:00	7.7	4:42	7.2	4:23	6.8	4:07
1600	10.2	6:05	9.5	5:45	8.8	5:24	8.2	5:02	7.7	4:43
1800	11.5	6:53	10.7	6:30	9.9	6:06	9.2	5:41	8.7	5:19

#### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	30	40	50	60	70
1	-0.1	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.7
3	-0.5	-0.2	0.0	0.4	1.0
4	-0.6	-0.3	0.0	0.6	1.4
5	-0.8	-0.4	0.0	0.7	1.7
6	-1.0	-0.5	0.0	0.8	2.0
7	-1.1	-0.6	0.0	1.0	2.3
8	-1.3	-0.6	0.0	1.1	2.6
9	-1.4	-0.7	0.0	1.2	2.9
10	-1.6	-0.8	0.0	1.3	3.2
11	-1.8	-0.9	0.0	1.4	3.4
12	-1.9	-1.0	0.0	1.5	3.6
13	-2.1	-1.0	0.0	1.6	3.8
14	-2.3	-1.1	0.0	1.7	4.0

Includes APU fuel burn.



**ENGINE INOP**  
**MAX CONTINUOUS THRUST**

**Holding**  
**Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	40000
80	%N1	80.1	83.1	87.4	91.9					
	KIAS	247	247	248	250					
	FF/ENG	2640	2640	2650	2700					
75	%N1	78.3	81.2	85.5	90.0					
	KIAS	239	240	240	242					
	FF/ENG	2470	2460	2470	2510					
70	%N1	76.5	79.2	83.6	88.0	93.4				
	KIAS	231	231	232	233	235				
	FF/ENG	2310	2300	2300	2320	2370				
65	%N1	74.4	77.2	81.5	85.8	90.6				
	KIAS	223	223	223	224	226				
	FF/ENG	2140	2130	2120	2140	2160				
60	%N1	72.1	75.1	79.2	83.6	88.2	95.3			
	KIAS	214	214	215	215	217	218			
	FF/ENG	1980	1960	1950	1960	1970	2070			
55	%N1	69.7	72.7	76.8	81.1	85.7	91.2			
	KIAS	204	205	206	206	207	208			
	FF/ENG	1820	1800	1790	1790	1790	1830			
50	%N1	67.2	70.0	74.3	78.5	83.0	87.8	96.4		
	KIAS	195	195	196	197	197	198	200		
	FF/ENG	1670	1640	1630	1620	1610	1630	1770		
45	%N1	64.5	67.2	71.4	75.6	80.1	84.8	91.0		
	KIAS	185	185	186	186	187	188	189		
	FF/ENG	1510	1490	1470	1460	1440	1450	1510		
40	%N1	61.3	64.2	68.2	72.6	76.9	81.5	86.4	96.0	
	KIAS	177	177	177	177	177	177	178	179	
	FF/ENG	1360	1340	1310	1300	1280	1280	1300	1430	
35	%N1	58.0	60.8	64.9	69.0	73.4	77.9	82.6	88.8	
	KIAS	171	171	171	171	171	171	171	171	
	FF/ENG	1210	1190	1170	1150	1130	1110	1130	1170	
30	%N1	54.8	57.3	61.4	65.4	70.0	74.1	78.7	83.5	93.6
	KIAS	164	164	164	164	164	164	164	164	164
	FF/ENG	1070	1050	1030	1010	990	970	980	990	1090

This table includes 5% additional fuel for holding in a racetrack pattern.

# ENGINE INOP

## ADVISORY INFORMATION

### Gear Down Landing Rate of Climb Available Flaps 15

TAT (°C)	RATE OF CLIMB (FT/MIN)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
52	-290	-350					
50	-270	-330	-420				
48	-250	-310	-390				
46	-220	-280	-370	-460			
44	-200	-260	-350	-440			
42	-170	-230	-330	-420	-520		
40	-140	-210	-300	-390	-500		
38	-120	-180	-270	-370	-470	-600	
36	-100	-150	-250	-350	-450	-580	
34	-100	-130	-220	-320	-430	-560	-660
32	-100	-110	-200	-300	-410	-540	-640
30	-100	-110	-170	-280	-390	-520	-620
20	-90	-100	-160	-210	-290	-390	-520
10	-90	-100	-160	-210	-290	-360	-440
0	-80	-100	-150	-210	-290	-360	-440
-20	-80	-100	-160	-210	-290	-370	-460
-40	-80	-100	-160	-220	-300	-380	-470

Rate of climb capability shown is valid for 60000 kg, gear down at VREF15+5.  
 Decrease rate of climb 110 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 150 ft/min per 5000 kg less than 60000 kg.

### Flaps 30

TAT (°C)	RATE OF CLIMB (FT/MIN)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
52	-450	-510					
50	-430	-490	-580				
48	-410	-470	-560				
46	-380	-450	-540	-630			
44	-360	-430	-520	-610			
42	-330	-400	-490	-590	-690		
40	-310	-380	-470	-560	-670		
38	-290	-350	-450	-540	-650	-770	
36	-270	-330	-420	-520	-630	-760	
34	-270	-300	-400	-500	-610	-740	-840
32	-270	-280	-370	-480	-590	-720	-820
30	-270	-280	-350	-450	-570	-700	-810
20	-260	-280	-340	-390	-470	-580	-710
10	-260	-280	-340	-400	-470	-550	-630
0	-260	-280	-340	-400	-480	-560	-640
-20	-270	-290	-350	-410	-490	-570	-660
-40	-280	-300	-360	-420	-500	-590	-680

Rate of climb capability shown is valid for 60000 kg, gear down at VREF30+5.  
 Decrease rate of climb 110 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 150 ft/min per 5000 kg less than 60000 kg.





## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 13

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	14800	12300	9600
75	19000	15100	12600
70	22500	19300	15700
65	25400	23300	19600
60	27900	26400	24400
55	30200	29100	27400
50	32400	31400	30200
45	34600	33600	32500
40	37000	36100	35000
35	39700	38800	37800

## GEAR DOWN

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
80	%N1	84.7									
	MACH	.468									
	KIAS	259									
	FF/ENG	2307									
75	%N1	82.9	92.5								
	MACH	.454	.554								
	KIAS	251	248								
	FF/ENG	2154	2148								
70	%N1	81.0	90.4	92.5							
	MACH	.440	.541	.557							
	KIAS	243	242	240							
	FF/ENG	2003	1998	1995							
65	%N1	79.0	88.4	90.1	92.5						
	MACH	.425	.524	.543	.560						
	KIAS	235	234	233	231						
	FF/ENG	1856	1845	1841	1846						
60	%N1	76.8	86.2	88.0	89.8	92.2	95.6				
	MACH	.409	.504	.525	.544	.562	.580				
	KIAS	226	225	225	224	222	220				
	FF/ENG	1712	1689	1690	1691	1701	1746				
55	%N1	74.6	83.8	85.5	87.3	89.2	91.8	95.2			
	MACH	.393	.484	.504	.525	.545	.562	.581			
	KIAS	217	216	216	216	215	213	211			
	FF/ENG	1570	1537	1536	1540	1546	1556	1600			
50	%N1	72.1	81.2	82.9	84.7	86.5	88.4	91.0	94.5		
	MACH	.376	.463	.482	.502	.523	.544	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	1431	1388	1386	1389	1397	1402	1409	1451		
45	%N1	69.3	78.3	80.1	81.8	83.6	85.4	87.4	90.0	93.5	
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578	
	KIAS	197	196	196	196	196	196	195	193	191	
	FF/ENG	1297	1244	1238	1240	1247	1253	1258	1263	1299	
40	%N1	66.3	75.2	76.9	78.7	80.4	82.2	84.1	86.0	88.5	92.3
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554	.573
	KIAS	187	185	185	185	185	185	185	185	183	181
	FF/ENG	1169	1106	1095	1095	1102	1106	1109	1113	1118	1151
35	%N1	63.2	71.9	73.5	75.2	77.0	78.7	80.5	82.3	84.3	86.9
	MACH	.321	.392	.408	.425	.442	.461	.481	.503	.526	.547
	KIAS	177	174	174	173	173	173	173	173	173	172
	FF/ENG	1044	974	959	955	961	962	965	966	969	978

## GEAR DOWN

### Long Range Cruise Enroute Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
655	584	523	474	435	400	377	357	338	321	307
990	881	787	713	653	600	566	535	507	483	461
1330	1181	1054	953	871	800	755	713	676	642	613
1676	1486	1323	1195	1091	1000	943	891	844	803	766
2027	1793	1594	1437	1310	1200	1131	1069	1013	962	918
2385	2106	1868	1681	1531	1400	1319	1246	1180	1121	1069
2749	2422	2143	1926	1751	1600	1507	1423	1347	1279	1220
3120	2742	2421	2172	1973	1800	1695	1600	1514	1437	1370

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.8	0:42	1.6	0:41
400	5.0	1:36	4.6	1:31	4.1	1:25	3.8	1:20	3.6	1:17
600	7.4	2:25	6.9	2:17	6.2	2:06	5.8	1:59	5.5	1:54
800	9.9	3:14	9.2	3:03	8.3	2:48	7.7	2:38	7.3	2:31
1000	12.2	4:05	11.4	3:51	10.3	3:31	9.6	3:18	9.2	3:08
1200	14.5	4:56	13.6	4:39	12.2	4:14	11.5	3:59	10.9	3:46
1400	16.8	5:49	15.7	5:28	14.2	4:59	13.3	4:40	12.7	4:24
1600	19.0	6:43	17.8	6:19	16.1	5:44	15.1	5:22	14.3	5:04
1800	21.2	7:39	19.8	7:10	17.9	6:30	16.8	6:05	16.0	5:43

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.7	1.5
6	-1.0	-0.5	0.0	1.0	2.2
8	-1.4	-0.7	0.0	1.2	2.8
10	-1.8	-0.9	0.0	1.5	3.4
12	-2.1	-1.1	0.0	1.8	4.0
14	-2.5	-1.2	0.0	2.0	4.5
16	-2.8	-1.4	0.0	2.2	4.9
18	-3.2	-1.6	0.0	2.3	5.3
20	-3.6	-1.8	0.0	2.5	5.7
22	-3.9	-1.9	0.0	2.6	6.0

## GEAR DOWN

### Descent

VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	270	88
39000	20	260	84
37000	20	260	79
35000	19	260	75
33000	18	250	71
31000	18	250	67
29000	17	240	63
27000	16	230	59
25000	15	230	55
23000	14	220	51
21000	14	210	47
19000	13	210	43
17000	12	200	39
15000	11	190	35
10000	9	160	25
5000	6	130	16
1500	4	100	9

Allowances for a straight-in approach are included.

**GEAR DOWN**

**Holding  
 Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)								
		1500	5000	10000	15000	20000	25000	30000	35000	40000
80	%N1	74.5	77.3	81.5	85.8	90.5				
	KIAS	224	224	224	224	224				
	FF/ENG	2140	2130	2120	2130	2150				
75	%N1	72.8	75.7	79.8	84.1	88.7				
	KIAS	219	219	219	219	219				
	FF/ENG	2010	2000	1990	2000	2000				
70	%N1	71.0	74.0	78.0	82.3	86.9	92.7			
	KIAS	214	214	214	214	214	214			
	FF/ENG	1890	1880	1870	1870	1870	1920			
65	%N1	69.1	72.1	76.2	80.5	84.9	89.9			
	KIAS	209	209	209	209	209	209			
	FF/ENG	1780	1760	1740	1740	1730	1760			
60	%N1	67.2	70.0	74.2	78.3	82.8	87.5	95.4		
	KIAS	203	203	203	203	203	203	203		
	FF/ENG	1660	1630	1620	1610	1600	1610	1720		
55	%N1	65.1	67.9	72.1	76.2	80.6	85.2	91.2		
	KIAS	197	197	197	197	197	197	197		
	FF/ENG	1540	1520	1500	1480	1470	1480	1530		
50	%N1	62.8	65.6	69.7	73.9	78.2	82.8	87.7		
	KIAS	190	190	190	190	190	190	190		
	FF/ENG	1420	1400	1380	1360	1340	1340	1370		
45	%N1	60.3	63.3	67.2	71.5	75.7	80.2	84.9	92.3	
	KIAS	184	184	184	184	184	184	184	184	
	FF/ENG	1310	1290	1270	1250	1220	1220	1240	1300	
40	%N1	57.9	60.6	64.7	68.8	73.1	77.5	82.0	87.4	
	KIAS	177	177	177	177	177	177	177	177	
	FF/ENG	1200	1180	1160	1140	1110	1090	1110	1130	
35	%N1	55.3	57.9	62.0	66.0	70.5	74.7	79.1	83.8	93.3
	KIAS	170	170	170	170	170	170	170	170	170
	FF/ENG	1090	1070	1050	1030	1000	980	990	1000	1090

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 14

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
70	66	213	2500	300	
65	62	208	5800	4000	2100
60	57	202	9100	7300	5700
55	52	196	12400	10600	8800
50	48	190	15600	14100	12300
45	43	184	18900	17500	15900
40	38	177	22200	21000	19700
35	34	170	25400	24600	23600

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
60	3600	500	
55	8100	5800	3200
50	12300	10100	8000
45	16500	14800	12500
40	20700	19300	17400
35	24500	23400	22100

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
60	%N1	90.6									
	MACH	.364									
	KIAS	220									
	FF/ENG	3238									
55	%N1	88.1	89.7	91.5							
	MACH	.351	.362	.374							
	KIAS	212	211	210							
	FF/ENG	2958	2950	2951							
50	%N1	85.5	87.0	88.6	90.4	92.2					
	MACH	.338	.348	.359	.371	.384					
	KIAS	204	203	202	201	200					
	FF/ENG	2694	2675	2664	2665	2675					
45	%N1	82.8	84.2	85.7	87.3	89.0	90.8	93.4			
	MACH	.325	.334	.344	.355	.367	.380	.393			
	KIAS	196	195	193	192	191	190	189			
	FF/ENG	2442	2416	2396	2384	2383	2387	2401			
40	%N1	79.8	81.2	82.6	84.1	85.6	87.3	89.2	91.4	94.9	
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	
	KIAS	188	186	184	183	182	181	180	179	179	
	FF/ENG	2206	2171	2143	2123	2110	2103	2098	2099	2150	
35	%N1	76.7	78.0	79.3	80.7	82.1	83.7	85.5	87.5	89.4	92.7
	MACH	.296	.305	.313	.322	.331	.342	.354	.369	.384	.400
	KIAS	179	178	176	174	172	171	170	170	170	170
	FF/ENG	1973	1943	1906	1877	1856	1838	1828	1832	1839	1872



## GEAR DOWN

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Diversion Fuel and Time

#### Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
178	155	135	121	110	100	93	87	81	77	73
361	314	274	244	220	200	186	174	163	154	146
546	473	412	366	331	300	279	260	244	230	218
732	634	551	489	441	400	372	347	325	306	290
920	796	692	613	552	500	465	434	407	383	362
1109	958	832	737	663	600	558	520	487	458	434
1300	1122	973	861	774	700	651	607	568	534	505
1493	1287	1115	986	885	800	744	693	648	610	577
1688	1453	1257	1110	997	900	836	779	729	685	648
1884	1620	1400	1235	1108	1000	929	865	809	760	719

#### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)							
	6		10		14		18	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.1	0:29	1.0	0:28	0.9	0:27	0.8	0:26
200	2.4	0:56	2.2	0:54	2.0	0:52	1.9	0:50
300	3.6	1:24	3.3	1:21	3.1	1:17	3.0	1:14
400	4.8	1:52	4.4	1:47	4.2	1:42	4.1	1:37
500	6.0	2:20	5.6	2:14	5.2	2:08	5.1	2:02
600	7.1	2:49	6.7	2:41	6.3	2:34	6.1	2:26
700	8.3	3:18	7.7	3:09	7.3	3:00	7.1	2:50
800	9.4	3:47	8.8	3:37	8.3	3:26	8.0	3:15
900	10.5	4:16	9.9	4:05	9.3	3:52	9.0	3:40
1000	11.7	4:46	10.9	4:33	10.3	4:19	9.9	4:06

#### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	30	40	50	60	70
1	-0.2	-0.1	0.0	0.2	0.4
2	-0.4	-0.2	0.0	0.4	0.9
3	-0.6	-0.3	0.0	0.7	1.3
4	-0.8	-0.4	0.0	0.9	1.8
5	-1.0	-0.5	0.0	1.1	2.3
6	-1.2	-0.6	0.0	1.3	2.7
7	-1.4	-0.7	0.0	1.5	3.1
8	-1.6	-0.8	0.0	1.7	3.6
9	-1.8	-0.9	0.0	1.9	4.0
10	-2.0	-1.0	0.0	2.1	4.4
11	-2.2	-1.1	0.0	2.3	4.8
12	-2.4	-1.2	0.0	2.5	5.2

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
70	%N1	89.7			
	KIAS	214			
	FF/ENG	3640			
65	%N1	87.6	90.8		
	KIAS	209	209		
	FF/ENG	3380	3410		
60	%N1	85.4	88.4		
	KIAS	203	203		
	FF/ENG	3120	3130		
55	%N1	83.0	86.0	90.6	
	KIAS	197	197	197	
	FF/ENG	2870	2870	2900	
50	%N1	80.4	83.5	87.9	93.2
	KIAS	190	190	190	190
	FF/ENG	2630	2620	2630	2690
45	%N1	77.8	80.7	85.1	89.9
	KIAS	184	184	184	184
	FF/ENG	2400	2380	2380	2410
40	%N1	75.1	77.9	82.2	86.7
	KIAS	177	177	177	177
	FF/ENG	2180	2160	2150	2160
35	%N1	72.1	75.0	79.1	83.6
	KIAS	170	170	170	170
	FF/ENG	1960	1940	1920	1920

This table includes 5% additional fuel for holding in a racetrack pattern.

**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 15****Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

---

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

## Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

## Gear Down Landing Rate of Climb Available

Rate of climb data is provided as guidance information in the event an engine inoperative landing (manual or autoland) is planned. The tables show gear down rate of climb available for Flaps 15 and Flaps 30. Enter the table with TAT and pressure altitude to read rate of climb available. Apply adjustments shown to correct for weight.

---

## Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

**Note:** The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.





737-700W CFM56-7B22 KG M FAA CATA

**Pkg Model Identification . . . . . PI-QRH.ModID.20.1**

**General . . . . . PI-QRH.20.1**

Flight With Unreliable Airspeed/Turbulent Air

Penetration . . . . . PI-QRH.20.1

Max Climb %N1 . . . . . PI-QRH.20.3

Go-around %N1 . . . . . PI-QRH.20.4

VREF . . . . . PI-QRH.20.5

**Advisory Information . . . . . PI-QRH.21.1**

Normal Configuration Landing Distance . . . . . PI-QRH.21.1

Non-Normal Configuration Landing Distance . . . . . PI-QRH.21.4

Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.21.4

Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.21.5

Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.21.6

All Flaps Up Landing . . . . . PI-QRH.21.7

ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.21.8

ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.21.9

ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.21.10

Jammed or Restricted Flight Controls (Flaps 15) . . . . . PI-QRH.21.11

LEADING EDGE FLAPS TRANSIT (Flaps 15) . . . . . PI-QRH.21.12

LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.21.13

LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.21.14

LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.21.15

LOSS OF SYSTEM A AND SYSTEM B  
(Flaps 15) . . . . . PI-QRH.21.16

LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.21.17

MANUAL REVERSION (Flaps 15) . . . . . PI-QRH.21.18

One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.21.19

One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.21.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.21.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.21.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.21.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.21.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.21.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.21.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.21.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.21.28
Recommended Brake Cooling Schedule . . . . .	PI-QRH.21.29
<b>Engine Inoperative . . . . .</b>	<b>PI-QRH.22.1</b>
Initial Max Continuous %N1 . . . . .	PI-QRH.22.1
Max Continuous %N1 . . . . .	PI-QRH.22.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.22.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.22.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.22.8
Long Range Cruise Control . . . . .	PI-QRH.22.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.22.10
Holding . . . . .	PI-QRH.22.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.22.12
<b>Gear Down . . . . .</b>	<b>PI-QRH.23.1</b>
Long Range Cruise Altitude Capability . . . . .	PI-QRH.23.1
Long Range Cruise Control . . . . .	PI-QRH.23.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.23.3
Descent . . . . .	PI-QRH.23.4
Holding . . . . .	PI-QRH.23.5
<b>Gear Down, Engine Inoperative . . . . .</b>	<b>PI-QRH.24.1</b>
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.24.1



**737 Flight Crew Operations Manual**

---

Long Range Cruise Altitude Capability . . . . .	PI-QRH.24.1
Long Range Cruise Control . . . . .	PI-QRH.24.2
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.24.3
Holding . . . . .	PI-QRH.24.4
<b>Text . . . . .</b>	<b>PI-QRH.25.1</b>
Introduction . . . . .	PI-QRH.25.1
General . . . . .	PI-QRH.25.1
Advisory Information . . . . .	PI-QRH.25.2
Engine Inoperative . . . . .	PI-QRH.25.4
Gear Down . . . . .	PI-QRH.25.6



Intentionally  
Blank



## General

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-5216	34026	YM482
B-5218	34027	YM483
B-5219	34028	YM484

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 20

**Flight With Unreliable Airspeed/Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.5</b>		
	V/S (FT/MIN)	1800	1200	600		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2600	2000	1500	1200	900
20000	<b>PITCH ATT</b>	<b>7.0</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4100	3200	2600	2100	1700
10000	<b>PITCH ATT</b>	<b>10.5</b>	<b>9.0</b>	<b>8.5</b>	<b>8.0</b>	<b>7.5</b>
	V/S (FT/MIN)	5400	4200	3400	2900	2400
SEA LEVEL	<b>PITCH ATT</b>	<b>14.5</b>	<b>12.5</b>	<b>11.0</b>	<b>10.0</b>	<b>9.5</b>
	V/S (FT/MIN)	6600	5200	4300	3600	3000

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	82.4	85.0	89.0		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	80.7	82.1	84.1	86.5	90.5
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	80.2	81.0	82.2	83.8	85.7
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>
	%N1	76.6	77.4	78.5	80.0	81.9
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	73.0	73.8	74.8	76.1	77.9
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	69.2	70.0	71.1	72.3	74.0

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>	<b>1.0</b>	<b>1.5</b>
	V/S (FT/MIN)	-2800	-2500	-2400	-2600	-2700
30000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-3000	-2500	-2200	-2000	-1900
20000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2700	-2300	-2000	-1800	-1700
10000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2400	-2000	-1800	-1600	-1500
SEA LEVEL	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2200	-1800	-1600	-1500	-1400

**Flight With Unreliable Airspeed/Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Holding (VREF40 + 70)**

**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	55.8	61.5	65.8	69.7	73.1
	KIAS	177	195	214	231	247
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	52.2	57.2	61.9	65.8	69.0
	KIAS	177	194	213	230	246
5000	<b>PITCH ATT</b>	<b>5.5</b>	<b>5.5</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>
	%N1	48.6	53.6	57.8	61.7	65.4
	KIAS	177	193	212	229	245

**Terminal Area (5000 FT)**

**%N1 for Level Flight**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	49.0	53.0	58.0	61.0	65.0
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	50.0	56.0	60.0	64.0	67.0
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT.</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	50.0	56.0	61.0	65.0	68.0
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT.</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	59.0	65.0	70.0	74.0	78.0

**Final Approach (1500 FT)**

**Gear Down, %N1 for 3° Glideslope**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	<b>PITCH ATT</b>	<b>3.5</b>	<b>3.5</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	%N1	41.5	45.4	49.3	53.1	56.2
FLAPS 30 (VREF30 + 10)	<b>PITCH ATT</b>	<b>1.5</b>	<b>2.0</b>	<b>2.0</b>	<b>2.0</b>	<b>2.5</b>
	%N1	45.4	50.4	54.6	58.2	61.7
FLAPS 40 (VREF40 + 10)	<b>PITCH ATT</b>	<b>0.0</b>	<b>0.0</b>	<b>0.5</b>	<b>0.5</b>	<b>1.0</b>
	%N1	52.4	57.5	62.3	66.0	69.7

**Go-Around**

**Flaps 15, Gear Up, Set Go-Around Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>20.0</b>	<b>16.5</b>	<b>14.0</b>	<b>12.0</b>	<b>10.5</b>
	V/S (FT/MIN)	3600	2800	2200	1800	1400
	KIAS	126	139	151	163	174
5000	<b>PITCH ATT</b>	<b>23.0</b>	<b>18.5</b>	<b>15.5</b>	<b>13.5</b>	<b>12.0</b>
	V/S (FT/MIN)	4000	3200	2600	2100	1700
	KIAS	126	138	150	161	172
SEA LEVEL	<b>PITCH ATT</b>	<b>25.5</b>	<b>20.5</b>	<b>17.0</b>	<b>15.0</b>	<b>13.0</b>
	V/S (FT/MIN)	4200	3400	2700	2300	1900
	KIAS	126	138	149	160	170



**Max Climb %N1****Based on engine bleed for packs on or off and anti-ice off**

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	88.4	88.6	88.5	88.2	88.9	91.3	92.9	94.3	94.4	92.7
55	89.2	89.4	89.3	89.1	89.3	90.6	92.3	93.6	93.7	92.0
50	90.0	90.1	90.1	89.9	90.2	90.7	91.6	92.9	93.0	91.3
45	90.7	90.8	90.9	90.7	91.1	91.6	91.6	92.2	92.3	90.6
40	91.5	91.6	91.6	91.4	92.0	92.4	92.4	91.5	91.6	89.9
35	92.0	92.3	92.3	92.2	92.8	93.2	93.2	92.3	91.6	90.0
30	91.3	93.0	93.0	92.9	93.6	94.0	93.9	93.1	92.5	91.0
25	90.5	93.0	93.8	93.6	94.3	94.8	94.6	93.9	93.3	92.0
20	89.8	92.3	94.5	94.3	95.1	95.5	95.3	94.6	94.1	92.9
15	89.1	91.5	93.9	95.1	95.8	96.2	96.0	95.4	94.9	93.9
10	88.3	90.8	93.1	95.3	96.7	96.9	96.6	96.1	95.7	94.8
5	87.5	90.0	92.4	94.5	97.7	97.8	97.3	96.9	96.5	95.7
0	86.8	89.2	91.6	93.7	97.1	98.9	98.3	97.8	97.4	96.6
-5	86.0	88.4	90.8	92.9	96.3	98.8	99.3	98.5	98.2	97.7
-10	85.2	87.6	89.9	92.1	95.5	98.0	99.6	99.4	99.1	98.6
-15	84.4	86.8	89.1	91.2	94.7	97.3	98.8	100.4	100.1	99.6
-20	83.6	86.0	88.3	90.4	93.9	96.5	98.0	100.1	100.6	100.2
-25	82.8	85.2	87.5	89.6	93.1	95.7	97.2	99.2	99.8	99.4
-30	82.0	84.3	86.6	88.7	92.3	94.9	96.4	98.4	98.9	98.6
-35	81.2	83.5	85.8	87.9	91.4	94.0	95.5	97.6	98.1	97.7
-40	80.4	82.6	84.9	87.0	90.6	93.2	94.7	96.7	97.2	96.9

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

### Go-around %N1

Based on engine bleed for packs on, engine and wing anti-ice on or off

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	88.5	89.3	89.4									
52	125	55	89.2	90.1	90.3	90.4	90.5							
47	116	50	90.0	90.9	91.0	91.2	91.3	91.4	91.4	91.3				
42	108	45	90.9	91.7	91.9	92.0	92.1	92.2	92.2	92.1	91.8	91.4		
37	99	40	91.8	92.6	92.7	92.8	92.9	93.0	93.0	92.9	92.6	92.2	92.1	92.0
32	90	35	91.9	93.5	93.6	93.7	93.7	93.8	93.7	93.7	93.4	93.0	93.0	92.9
27	81	30	91.2	93.4	94.1	94.5	94.6	94.6	94.6	94.5	94.1	93.8	93.8	93.7
22	72	25	90.5	92.6	93.3	94.0	94.7	95.5	95.4	95.3	95.0	94.6	94.5	94.5
17	63	20	89.7	91.9	92.6	93.3	94.0	94.7	95.2	95.8	96.0	95.7	95.3	95.3
12	54	15	89.0	91.1	91.8	92.5	93.2	93.9	94.5	95.0	95.6	96.2	96.8	96.5
7	45	10	88.3	90.4	91.0	91.7	92.4	93.2	93.7	94.2	94.8	95.4	96.1	96.7
2	36	5	87.5	89.6	90.3	90.9	91.6	92.4	92.9	93.4	94.0	94.6	95.3	95.9
-3	27	0	86.7	88.8	89.5	90.1	90.9	91.6	92.1	92.6	93.2	93.8	94.5	95.1
-8	18	-5	86.0	88.0	88.7	89.4	90.1	90.8	91.3	91.8	92.4	93.0	93.7	94.3
-13	9	-10	85.2	87.2	87.9	88.5	89.2	89.9	90.5	91.0	91.6	92.2	92.9	93.5
-17	1	-15	84.4	86.4	87.1	87.7	88.4	89.1	89.7	90.2	90.8	91.4	92.0	92.7
-22	-8	-20	83.6	85.6	86.3	86.9	87.6	88.3	88.8	89.3	90.0	90.5	91.2	91.9
-27	-17	-25	82.8	84.8	85.4	86.1	86.8	87.5	88.0	88.5	89.1	89.7	90.4	91.1
-32	-26	-30	82.0	84.0	84.6	85.2	85.9	86.6	87.1	87.6	88.3	88.9	89.5	90.2
-37	-35	-35	81.2	83.1	83.8	84.4	85.1	85.8	86.3	86.8	87.4	88.0	88.7	89.4
-42	-44	-40	80.3	82.3	82.9	83.5	84.2	84.9	85.4	85.9	86.5	87.1	87.8	88.5
-47	-53	-45	79.5	81.4	82.1	82.7	83.4	84.0	84.5	85.0	85.7	86.3	87.0	87.6
-52	-62	-50	78.6	80.6	81.2	81.8	82.5	83.1	83.6	84.1	84.8	85.4	86.1	86.8

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)												
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.6	0.6	0.6	0.6	0.6	0.6	0.7	0.7	0.7	0.7	0.8	0.8	0.8
A/C HIGH	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2	-0.2

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	159	161	167
80	154	156	162
75	149	151	157
70	144	146	152
65	139	141	147
60	133	135	140
55	127	129	134
50	120	123	127
45	114	117	121

Intentionally  
Blank

## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 21

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	890	65/-50	20/25	-30/110	10/-10	20/-20	30	15	35
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1570	95/-100	40/60	-70/230	0/0	40/-40	90	0	0
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Good Reported Braking Action

MAX MANUAL	1220	70/-75	30/45	-55/190	30/-25	30/-30	45	65	145
AUTOBRAKE MAX	1290	75/-80	35/45	-55/195	25/-20	30/-30	55	70	160
AUTOBRAKE 3	1575	95/-100	40/60	-70/235	5/0	40/-40	90	5	15
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Medium Reported Braking Action

MAX MANUAL	1680	115/-115	50/70	-85/320	75/-60	40/-45	60	185	455
AUTOBRAKE MAX	1690	115/-115	50/75	-90/320	70/-55	45/-45	70	180	450
AUTOBRAKE 3	1750	115/-120	50/75	-90/325	60/-35	45/-45	90	150	425
AUTOBRAKE 2	2070	140/-150	60/85	-105/365	45/-45	55/-60	100	65	195
AUTOBRAKE 1	2270	170/-180	75/105	-115/400	70/-70	65/-65	95	200	265

## Poor Reported Braking Action

MAX MANUAL	2210	165/-165	70/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE MAX	2210	165/-165	75/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE 3	2210	165/-165	75/105	-135/505	185/-115	55/-60	80	405	1120
AUTOBRAKE 2	2340	170/-175	75/110	-140/520	165/-105	60/-65	95	310	1005
AUTOBRAKE 1	2460	185/-195	80/115	-145/540	170/-120	65/-70	95	365	920

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance**

**Flaps 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	860	55/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 3	1490	85/-95	40/55	-65/225	0/0	40/-40	85	0	0
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Good Reported Braking Action**

MAX MANUAL	1180	65/-70	30/40	-55/190	30/-25	25/-30	45	60	135
AUTOBRAKE MAX	1250	70/-75	30/45	-55/195	25/-20	30/-30	55	65	145
AUTOBRAKE 3	1490	90/-95	40/55	-65/230	5/0	40/-40	85	5	15
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Medium Reported Braking Action**

MAX MANUAL	1610	105/-110	45/65	-85/310	70/-55	40/-40	60	165	400
AUTOBRAKE MAX	1620	110/-110	50/70	-85/315	70/-50	40/-40	70	165	400
AUTOBRAKE 3	1670	110/-110	50/70	-90/320	60/-35	45/-45	85	140	385
AUTOBRAKE 2	1955	130/-140	55/80	-100/355	45/-45	55/-55	90	65	180
AUTOBRAKE 1	2125	155/-165	70/95	-110/385	70/-65	60/-60	85	180	255

**Poor Reported Braking Action**

MAX MANUAL	2090	155/-155	65/100	-130/495	175/-115	55/-60	70	355	955
AUTOBRAKE MAX	2095	155/-155	65/100	-130/495	180/-115	55/-60	70	355	960
AUTOBRAKE 3	2095	155/-155	65/100	-130/495	175/-110	55/-60	80	355	960
AUTOBRAKE 2	2210	160/-160	70/100	-135/510	160/-105	55/-60	90	280	860
AUTOBRAKE 1	2310	170/-175	75/105	-140/525	165/-115	60/-65	85	330	805

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
 Flaps 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	845	55/-45	15/25	-30/105	10/-10	15/-15	35	15	30
AUTOBRAKE MAX	1045	50/-55	25/35	-40/130	0/0	20/-25	50	0	0
AUTOBRAKE 3	1440	85/-90	40/55	-65/220	0/0	35/-35	85	0	0
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

**Good Reported Braking Action**

MAX MANUAL	1165	65/-70	30/45	-55/190	30/-25	25/-25	45	55	130
AUTOBRAKE MAX	1235	70/-75	30/45	-55/195	25/-20	30/-30	55	60	140
AUTOBRAKE 3	1445	85/-90	40/55	-65/225	10/-5	35/-35	85	5	15
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

**Medium Reported Braking Action**

MAX MANUAL	1575	105/-105	45/65	-85/310	70/-55	40/-40	60	155	375
AUTOBRAKE MAX	1590	105/-110	45/70	-85/310	70/-50	40/-40	70	155	370
AUTOBRAKE 3	1630	105/-110	50/70	-85/315	60/-40	40/-45	85	140	370
AUTOBRAKE 2	1895	125/-135	55/80	-100/350	45/-45	50/-50	90	60	175
AUTOBRAKE 1	2055	150/-155	65/95	-110/380	70/-65	55/-60	85	160	235

**Poor Reported Braking Action**

MAX MANUAL	2040	150/-150	65/95	-130/490	175/-110	50/-55	70	330	875
AUTOBRAKE MAX	2045	150/-150	65/100	-130/490	175/-115	50/-55	70	330	875
AUTOBRAKE 3	2050	155/-150	65/100	-130/490	175/-110	50/-55	80	330	875
AUTOBRAKE 2	2150	155/-155	70/100	-130/500	155/-105	55/-60	85	260	795
AUTOBRAKE 1	2240	165/-170	70/105	-135/515	165/-115	60/-65	85	305	745

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Airspeed Unreliable (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	950	75/-55	20/30	-35/115	10/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1230	65/-65	30/40	-45/150	0/0	30/-30	N/A	0	5
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

**Good Reported Braking Action**

MAX MANUAL	1300	75/-75	35/45	-55/195	30/-25	30/-30	N/A	75	175
AUTOBRAKE MAX	1385	80/-80	35/50	-60/205	25/-20	35/-35	N/A	85	190
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

**Medium Reported Braking Action**

MAX MANUAL	1775	120/-120	55/75	-90/325	75/-60	45/-45	N/A	210	525
AUTOBRAKE MAX	1800	120/-120	55/75	-90/325	70/-55	45/-50	N/A	210	525
AUTOBRAKE 3	1915	120/-125	55/80	-95/340	50/-35	50/-50	N/A	135	445

**Poor Reported Braking Action**

MAX MANUAL	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	445	1250
AUTOBRAKE MAX	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	440	1250
AUTOBRAKE 3	2320	170/-170	75/110	-135/510	175/-105	60/-65	N/A	440	1250

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)									
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ		
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV	

**Dry Runway**

MAX MANUAL	920	65/-50	20/25	-35/115	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1175	60/-60	25/35	-45/145	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

**Good Reported Braking Action**

MAX MANUAL	1265	70/-75	35/45	-55/195	30/-25	30/-30	N/A	70	165
AUTOBRAKE MAX	1350	75/-80	35/50	-60/200	25/-25	30/-30	N/A	80	180
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

**Medium Reported Braking Action**

MAX MANUAL	1705	110/-115	50/70	-85/320	70/-55	45/-45	N/A	190	465
AUTOBRAKE MAX	1735	115/-115	50/70	-90/320	65/-55	45/-45	N/A	190	470
AUTOBRAKE 3	1830	115/-115	55/75	-90/330	50/-35	50/-50	N/A	125	405

**Poor Reported Braking Action**

MAX MANUAL	2185	160/-155	70/100	-130/500	170/-115	55/-60	N/A	390	1070
AUTOBRAKE MAX	2190	160/-160	70/100	-130/500	175/-115	55/-60	N/A	390	1070
AUTOBRAKE 3	2210	160/-160	70/100	-130/500	165/-100	55/-60	N/A	390	1075

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	910	60/-45	20/25	-35/110	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1145	55/-60	25/35	-40/140	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	30/-40	55/-55	N/A	90	90

**Good Reported Braking Action**

MAX MANUAL	1250	70/-70	35/45	-55/195	30/-25	30/-30	N/A	70	155
AUTOBRAKE MAX	1335	75/-80	35/50	-60/200	25/-25	30/-30	N/A	75	170
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	35/-40	55/-55	N/A	90	90

**Medium Reported Braking Action**

MAX MANUAL	1675	110/-110	50/70	-85/315	70/-60	40/-45	N/A	180	435
AUTOBRAKE MAX	1705	115/-115	50/75	-90/320	65/-55	45/-45	N/A	180	440
AUTOBRAKE 3	1785	110/-115	50/75	-90/330	50/-40	45/-50	N/A	125	390

**Poor Reported Braking Action**

MAX MANUAL	2140	155/-155	70/100	-130/495	170/-110	55/-60	N/A	365	975
AUTOBRAKE MAX	2145	155/-155	70/100	-130/495	170/-110	55/-60	N/A	360	975
AUTOBRAKE 3	2165	160/-155	70/100	-130/495	165/-105	55/-60	N/A	365	985

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 All Flaps Up Landing  
 VREF40 + 55**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1240	170/-80	30/80	-40/145	15/-15	30/-30	40	40	85
AUTOBRAKE MAX	1730	95/-80	45/60	-55/185	5/-5	45/-45	70	5	15
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

**Good Reported Braking Action**

MAX MANUAL	1635	85/-90	45/65	-65/220	35/-30	40/-45	45	105	240
AUTOBRAKE MAX	1860	90/-95	50/70	-70/235	25/-20	50/-50	65	80	215
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

**Medium Reported Braking Action**

MAX MANUAL	2305	145/-150	75/105	-100/360	90/-75	65/-65	60	295	735
AUTOBRAKE MAX	2380	145/-150	75/110	-105/365	85/-70	65/-65	70	300	760
AUTOBRAKE 3	2720	140/-160	85/120	-115/395	55/-50	80/-80	105	150	485

**Poor Reported Braking Action**

MAX MANUAL	3050	215/-215	110/155	-155/570	215/-150	85/-90	75	640	1825
AUTOBRAKE MAX	3050	215/-215	110/155	-155/570	215/-140	85/-90	85	635	1810
AUTOBRAKE 3	3165	205/-210	110/155	-155/580	190/-130	90/-95	105	555	1750

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	95/-100	40/60	-75/265	45/-40	35/-40	60	125	295
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1760	115/-115	50/70	-90/325	70/-55	40/-45	65	185	460
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2250	165/-160	70/105	-135/505	170/-110	55/-60	75	400	1135
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3015	240/-235	100/150	-220/935	1360/-260	65/-90	90	985	3725
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 ANTISKID INOPERATIVE (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1510	90/-95	40/55	-75/260	45/-40	35/-35	60	110	265
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1685	105/-110	45/65	-85/320	65/-55	40/-40	65	165	405
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2140	150/-150	65/95	-130/495	165/-105	50/-55	75	350	970
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2845	225/-215	90/140	-215/915	1265/-245	60/-85	85	865	3105
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1480	90/-90	40/55	-75/260	45/-40	35/-35	60	105	250
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1650	105/-105	45/65	-85/315	65/-55	40/-40	65	155	375
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2090	150/-145	65/95	-130/490	165/-105	50/-55	75	325	885
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2765	215/-210	90/135	-210/905	1220/-240	60/-80	80	805	2815
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



737 Flight Crew Operations Manual

ADVISORY INFORMATION

Non-Normal Configuration Landing Distance  
 Jammed or Restricted Flight Controls (Flaps 15)

VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

Dry Runway

MAX MANUAL	885	70/-50	20/25	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

Good Reported Braking Action

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

Medium Reported Braking Action

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

Poor Reported Braking Action

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LEADING EDGE FLAPS TRANSIT (Flaps 15)**

**VREF15 + 15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1000	80/-60	20/30	-35/120	10/-10	20/-20	35	25	55
AUTOBRAKE MAX	1290	65/-70	30/40	-45/150	0/0	30/-30	60	0	5
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Good Reported Braking Action**

MAX MANUAL	1385	80/-80	35/50	-60/205	30/-30	35/-35	50	90	205
AUTOBRAKE MAX	1465	85/-85	40/55	-60/210	30/-25	35/-35	55	95	220
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/85	-95/335	80/-65	50/-50	65	240	610
AUTOBRAKE MAX	1915	130/-130	60/85	-95/335	75/-60	50/-50	70	240	610
AUTOBRAKE 3	2025	125/-130	60/85	-95/350	55/-35	55/-55	95	165	540

**Poor Reported Braking Action**

MAX MANUAL	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE MAX	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE 3	2475	185/-180	85/125	-140/525	195/-115	65/-70	90	505	1460

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	965	65/-50	20/30	-35/120	15/-10	20/-20	40	25	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

**Good Reported Braking Action**

MAX MANUAL	1395	85/-85	40/55	-60/210	40/-35	35/-35	60	110	220
AUTOBRAKE MAX	1395	85/-90	40/55	-60/210	35/-25	35/-35	65	105	215
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

**Medium Reported Braking Action**

MAX MANUAL	1920	135/-135	60/85	-95/345	95/-75	50/-50	80	295	705
AUTOBRAKE MAX	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695
AUTOBRAKE 3	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695

**Poor Reported Braking Action**

MAX MANUAL	2495	195/-190	85/125	-145/540	220/-145	65/-70	95	605	1765
AUTOBRAKE MAX	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765
AUTOBRAKE 3	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	935	60/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	5	5
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1350	80/-80	35/50	-60/210	40/-35	30/-35	65	100	200
AUTOBRAKE MAX	1350	80/-85	35/50	-60/210	30/-30	30/-35	65	100	195
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	1830	125/-125	55/80	-95/340	90/-70	45/-50	80	260	615
AUTOBRAKE MAX	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610
AUTOBRAKE 3	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610

**Poor Reported Braking Action**

MAX MANUAL	2360	180/-175	80/115	-140/530	210/-135	60/-65	90	530	1475
AUTOBRAKE MAX	2355	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475
AUTOBRAKE 3	2360	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	930	60/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1045	55/-55	25/35	-40/135	5/0	25/-25	50	10	20
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

**Good Reported Braking Action**

MAX MANUAL	1330	80/-80	35/50	-60/210	40/-35	30/-30	65	95	190
AUTOBRAKE MAX	1335	80/-85	35/55	-60/210	35/-30	30/-30	70	95	185
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

**Medium Reported Braking Action**

MAX MANUAL	1790	125/-120	55/80	-95/335	90/-70	45/-45	80	240	560
AUTOBRAKE MAX	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560
AUTOBRAKE 3	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560

**Poor Reported Braking Action**

MAX MANUAL	2285	175/-170	75/115	-140/525	205/-135	60/-65	90	480	1305
AUTOBRAKE MAX	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305
AUTOBRAKE 3	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1375	75/-75	35/50	-55/190	35/-30	30/-35	70	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1605	90/-95	40/60	-70/235	55/-45	40/-40	80	10	150
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2230	145/-145	65/95	-110/380	120/-95	55/-60	100	150	670
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2890	215/-205	95/140	-160/585	265/-175	70/-80	115	455	1925
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM B (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1015	50/-55	25/30	-40/135	15/-15	20/-20	40	35	55
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1280	75/-75	35/45	-55/195	30/-25	30/-30	50	80	155
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	1755	120/-120	50/75	-90/325	80/-60	45/-45	65	225	510
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2285	175/-170	75/110	-135/515	190/-125	55/-65	80	475	1290
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1375	75/-75	35/50	-55/190	35/-30	30/-35	70	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1605	90/-95	40/60	-70/235	55/-45	40/-40	80	10	150
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2230	145/-145	65/95	-110/380	120/-95	55/-60	100	150	670
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2890	215/-205	95/140	-160/585	265/-175	70/-80	115	455	1925
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 One Engine Inoperative Landing (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	885	75/-55	20/30	-35/115	10/-10	20/-20	35	0	20
AUTOBRAKE MAX	1125	65/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1260	75/-75	35/50	-55/200	30/-30	30/-30	50	0	85
AUTOBRAKE MAX	1340	80/-85	40/50	-60/205	30/-25	30/-30	55	0	90
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	1800	120/-125	60/80	-95/340	90/-70	45/-50	70	0	270
AUTOBRAKE MAX	1815	125/-125	60/85	-95/345	85/-65	50/-50	80	0	270
AUTOBRAKE 3	1845	125/-130	60/85	-95/345	85/-55	50/-50	85	0	275

**Poor Reported Braking Action**

MAX MANUAL	2470	185/-185	90/125	-150/560	245/-155	65/-70	85	0	685
AUTOBRAKE MAX	2470	185/-185	90/125	-150/560	250/-160	70/-70	85	0	685
AUTOBRAKE 3	2475	190/-190	90/125	-150/560	250/-150	70/-70	95	0	685

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**One Engine Inoperative Landing (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	855	60/-50	20/25	-30/110	10/-10	15/-20	35	0	20
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

**Good Reported Braking Action**

MAX MANUAL	1215	70/-75	35/45	-55/195	30/-25	30/-30	50	0	75
AUTOBRAKE MAX	1295	75/-80	35/50	-60/205	30/-25	30/-30	60	0	85
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

**Medium Reported Braking Action**

MAX MANUAL	1710	115/-115	55/75	-90/335	90/-70	45/-45	65	0	235
AUTOBRAKE MAX	1730	115/-120	55/75	-95/335	80/-60	45/-45	75	0	235
AUTOBRAKE 3	1755	115/-120	55/80	-95/335	85/-55	45/-45	85	0	245

**Poor Reported Braking Action**

MAX MANUAL	2315	170/-170	80/115	-145/545	230/-145	65/-65	80	0	575
AUTOBRAKE MAX	2315	170/-170	80/115	-145/545	235/-150	65/-65	85	0	575
AUTOBRAKE 3	2330	175/-175	80/115	-145/545	230/-140	65/-65	90	0	580

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Stabilizer Trim Inoperative (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	885	70/-50	20/25	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15)  
VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1020	95/-65	25/35	-35/125	10/-10	25/-25	35	25	55
AUTOBRAKE MAX	1400	70/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)  
 VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	875	70/-50	20/30	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (Flap Lever 30)  
VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	845	60/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Good Reported Braking Action**

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Medium Reported Braking Action**

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

**Poor Reported Braking Action**

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15)  
 VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1020	95/-65	25/35	-35/125	10/-10	25/-25	35	25	55
AUTOBRAKE MAX	1400	70/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	875	70/-50	20/30	-30/110	10/-10	20/-20	30	20	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40)  
 VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	845	60/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Good Reported Braking Action**

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Medium Reported Braking Action**

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

**Poor Reported Braking Action**

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flaps Up Landing**

**VREF40 + 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1085	115/-65	30/45	-40/130	10/-10	25/-25	40	30	60
AUTOBRAKE MAX	1530	80/-75	40/55	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

**Good Reported Braking Action**

MAX MANUAL	1480	80/-85	45/60	-60/205	30/-30	35/-35	45	90	200
AUTOBRAKE MAX	1655	80/-85	50/70	-65/220	25/-20	40/-40	65	75	195
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

**Medium Reported Braking Action**

MAX MANUAL	2055	130/-135	70/100	-95/345	80/-65	55/-55	60	245	615
AUTOBRAKE MAX	2125	130/-135	75/105	-100/350	75/-60	55/-60	65	255	630
AUTOBRAKE 3	2385	130/-145	80/110	-105/375	50/-45	65/-70	100	130	420

**Poor Reported Braking Action**

MAX MANUAL	2700	190/-190	105/150	-145/540	195/-135	75/-80	75	530	1490
AUTOBRAKE MAX	2705	190/-190	105/150	-145/540	195/-125	75/-80	80	525	1480
AUTOBRAKE 3	2790	185/-190	105/150	-145/550	175/-115	75/-80	100	475	1445

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule**

**Reference Brake Energy Per Brake (Millions of Foot Pounds)**

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																		
				80			100			120			140			160			180			
				PRESSURE ALTITUDE (1000 FT)																		
				0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	
80	0	15.3	17.2	19.4	22.9	25.8	29.3	31.7	35.8	40.9	41.5	47.1	54.2	52.2	59.6	69.0	62.4	71.4	83.3			
	10	15.8	17.7	20.0	23.6	26.6	30.2	32.7	37.0	42.2	42.8	48.7	55.9	53.9	61.5	71.2	64.4	73.7	86.0			
	15	16.0	18.0	20.3	24.0	27.1	30.7	33.2	37.6	42.9	43.5	49.4	56.8	54.7	62.4	72.3	65.3	74.8	87.3			
	20	16.3	18.3	20.6	24.4	27.5	31.1	33.7	38.1	43.5	44.1	50.1	57.6	55.6	63.4	73.4	66.3	75.9	88.6			
	30	16.7	18.8	21.2	25.0	28.2	32.0	34.6	39.2	44.7	45.4	51.5	59.3	57.1	65.1	75.4	68.2	78.0	91.0			
	40	16.8	18.9	21.5	25.2	28.5	32.3	35.0	39.6	45.3	46.0	52.3	60.2	58.0	66.3	77.0	69.5	79.7	93.3			
50	16.8	19.0	21.4	25.3	28.6	32.5	35.2	40.0	45.8	46.4	52.9	61.1	58.8	67.4	78.5	70.7	81.3	95.6				
70	0	13.9	15.6	17.6	20.6	23.3	26.3	28.4	32.1	36.5	37.1	42.1	48.2	46.6	53.0	61.2	56.4	64.4	74.8			
	10	14.4	16.2	18.2	21.3	24.0	27.2	29.3	33.1	37.7	38.3	43.4	49.7	48.1	54.7	63.1	58.2	66.5	77.2			
	15	14.6	16.4	18.5	21.6	24.4	27.6	29.8	33.6	38.3	38.9	44.1	50.5	48.8	55.6	64.1	59.1	67.5	78.4			
	20	14.8	16.7	18.8	22.0	24.8	28.0	30.2	34.2	38.9	39.5	44.7	51.3	49.5	56.4	65.1	60.0	68.5	79.6			
	30	15.2	17.1	19.3	22.6	25.5	28.8	31.1	35.1	40.0	40.6	46.0	52.7	50.9	58.0	66.9	61.6	70.4	81.8			
	40	15.3	17.2	19.4	22.7	25.6	29.1	31.3	35.5	40.4	41.0	46.6	53.5	51.7	58.9	68.1	62.7	71.8	83.6			
50	15.3	17.2	19.4	22.8	25.8	29.2	31.5	35.7	40.8	41.4	47.1	54.2	52.3	59.7	69.3	63.7	73.1	85.4				
60	0	12.6	14.1	15.9	18.4	20.7	23.4	25.1	28.3	32.2	32.5	36.9	42.1	40.7	46.3	53.1	49.6	56.5	65.3			
	10	13.0	14.6	16.4	19.0	21.4	24.2	25.9	29.2	33.2	33.6	38.0	43.4	42.0	47.7	54.9	51.2	58.3	67.4			
	15	13.2	14.8	16.6	19.3	21.7	24.6	26.3	29.7	33.7	34.1	38.6	44.1	42.7	48.5	55.7	51.9	59.2	68.4			
	20	13.4	15.0	16.9	19.6	22.1	24.9	26.7	30.1	34.2	34.6	39.2	44.8	43.2	49.2	56.5	52.7	60.1	69.5			
	30	13.7	15.4	17.4	20.1	22.7	25.6	27.4	31.0	35.2	35.6	40.3	46.0	44.5	50.6	58.1	54.2	61.7	71.4			
	40	13.8	15.5	17.5	20.3	22.8	25.8	27.7	31.3	35.6	36.0	40.8	46.6	45.1	51.3	59.0	55.0	62.8	72.8			
50	13.8	15.5	17.5	20.3	22.9	25.9	27.8	31.5	35.8	36.2	41.1	47.1	45.6	51.9	59.9	55.7	63.8	74.2				
50	0	11.2	12.6	14.1	16.2	18.2	20.5	21.8	24.6	27.9	28.0	31.7	36.1	34.8	39.5	45.1	42.1	47.9	55.1			
	10	11.6	13.0	14.6	16.7	18.8	21.2	22.5	25.4	28.8	28.9	32.7	37.2	35.9	40.7	46.6	43.5	49.4	56.8			
	15	11.7	13.2	14.8	16.9	19.1	21.5	22.8	25.8	29.2	29.4	33.2	37.8	36.5	41.4	47.3	44.2	50.2	57.7			
	20	11.9	13.4	15.1	17.2	19.4	21.8	23.2	26.2	29.6	29.8	33.7	38.4	37.0	42.0	48.0	44.8	50.9	58.6			
	30	12.3	13.8	15.5	17.7	19.9	22.5	23.8	26.9	30.5	30.7	34.7	39.4	38.1	43.2	49.4	46.1	52.4	60.2			
	40	12.3	13.8	15.6	17.8	20.0	22.6	24.0	27.1	30.7	30.9	35.0	39.9	38.5	43.7	50.0	46.7	53.1	61.2			
50	12.3	13.8	15.6	17.8	20.1	22.7	24.1	27.2	30.9	31.1	35.2	40.2	38.8	44.1	50.6	47.2	53.8	62.1				
40	0	9.9	11.1	12.5	14.0	15.7	17.7	18.5	20.8	23.5	23.5	26.5	30.1	28.9	32.7	37.3	34.8	39.4	45.1			
	10	10.2	11.5	12.9	14.4	16.2	18.2	19.1	21.5	24.3	24.3	27.4	31.1	29.9	33.8	38.5	35.9	40.7	46.5			
	15	10.4	11.7	13.1	14.6	16.5	18.5	19.4	21.8	24.7	24.6	27.8	31.5	30.3	34.3	39.1	36.4	41.3	47.2			
	20	10.6	11.9	13.3	14.9	16.7	18.8	19.7	22.2	25.1	25.0	28.2	32.0	30.8	34.8	39.7	37.0	41.9	47.9			
	30	10.9	12.2	13.7	15.3	17.2	19.3	20.2	22.8	25.8	25.7	29.0	32.9	31.7	35.8	40.8	38.0	43.1	49.3			
	40	10.9	12.2	13.7	15.3	17.3	19.5	20.4	22.9	26.0	25.9	29.3	33.2	31.9	36.2	41.2	38.4	43.6	50.0			
50	10.9	12.2	13.8	15.4	17.3	19.5	20.4	23.0	26.1	26.0	29.4	33.4	32.1	36.4	41.6	38.7	44.0	50.5				

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

**Adjusted Brake Energy Per Brake (Millions of Foot Pounds)  
 No Reverse Thrust**

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.5	15.8	24.6	33.8	43.5	53.5	63.6	73.9	84.2
	MAX AUTO	7.3	15.0	23.2	31.9	41.2	51.0	61.3	72.2	83.7
	AUTOBRAKE 3	7.0	14.2	21.8	29.7	38.1	47.1	56.7	67.1	78.3
	AUTOBRAKE 2	6.6	13.3	20.2	27.3	34.7	42.6	51.0	59.9	69.6
	AUTOBRAKE 1	6.3	12.4	18.6	24.9	31.6	38.6	46.2	54.4	63.5





## Performance Inflight - QRH

## Chapter PI-QRH

## Engine Inoperative

## Section 22

## ENGINE INOP

## Initial Max Continuous %N1

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.0	95.8	95.6	95.4	95.1	94.7	94.2	93.9	93.1
15	96.6	96.4	96.1	96.0	95.9	95.4	95.0	94.7	94.0
10	97.2	97.1	96.7	96.6	96.6	96.2	95.7	95.5	94.9
5	97.4	97.8	97.5	97.3	97.3	96.9	96.5	96.3	95.8
0	96.7	98.0	98.4	98.2	98.1	97.7	97.4	97.1	96.7
-5	95.9	97.2	98.4	99.1	99.0	98.5	98.2	98.0	97.7
-10	95.1	96.4	97.6	98.9	99.8	99.4	99.1	98.9	98.6
-15	94.3	95.7	96.9	98.1	99.4	100.3	100.0	99.8	99.6
-20	93.5	94.9	96.1	97.3	98.6	99.8	100.3	100.1	99.9
-25	92.7	94.1	95.3	96.5	97.8	98.9	99.5	99.3	99.1
-30	91.8	93.3	94.5	95.7	96.9	98.1	98.6	98.4	98.2
-35	91.0	92.5	93.6	94.8	96.1	97.2	97.8	97.6	97.4
-40	90.1	91.7	92.8	94.0	95.3	96.4	96.9	96.7	96.5

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8



## ENGINE INOP

### Max Continuous %N1 27000 FT to 20000 FT Pressure Altitudes

27000 FT PRESS ALT		TAT (°C)											
KIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	97.3	98.1	99.0	99.9	100.7	101.5	100.5	99.5	98.3	96.9	95.6	94.3
200	.51	96.2	97.1	98.0	98.8	99.7	100.5	101.0	100.1	99.1	98.0	96.8	95.6
240	.60	94.9	95.8	96.7	97.5	98.3	99.2	100.0	100.6	99.6	98.6	97.6	96.7
280	.70	92.9	93.7	94.6	95.4	96.2	97.0	97.8	98.6	99.4	98.6	97.6	96.8
320	.79	90.8	91.6	92.5	93.3	94.1	94.9	95.6	96.4	97.2	97.9	97.8	97.1
360	.88	90.0	90.9	91.7	92.5	93.4	94.2	95.0	95.7	96.5	97.3	98.0	98.6
25000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.1	98.9	99.8	100.7	101.5	101.6	100.6	99.5	98.3	96.9	95.7	94.4
200	.49	96.7	97.6	98.5	99.3	100.1	100.9	100.8	99.8	98.8	97.6	96.5	95.4
240	.58	95.0	95.8	96.7	97.5	98.3	99.1	99.9	99.7	98.8	97.8	96.8	95.9
280	.67	93.1	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.8	96.8	96.1
320	.76	90.8	91.7	92.5	93.3	94.1	94.9	95.7	96.5	97.2	97.8	97.1	96.4
360	.85	89.5	90.3	91.2	92.0	92.9	93.7	94.5	95.3	96.1	96.9	97.6	97.4
24000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	97.3	98.2	99.1	99.9	100.7	101.5	100.4	99.3	98.1	96.8	95.6	94.4
200	.48	96.1	96.9	97.8	98.6	99.4	100.2	100.6	99.6	98.6	97.4	96.3	95.3
240	.57	94.5	95.3	96.1	96.9	97.8	98.6	99.3	99.7	98.7	97.6	96.7	95.8
280	.66	92.7	93.5	94.3	95.1	95.9	96.7	97.5	98.3	98.8	97.7	96.7	96.0
320	.75	90.2	91.1	91.9	92.7	93.5	94.4	95.2	95.9	96.7	97.5	96.9	96.2
360	.83	88.7	89.6	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	96.9
22000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	96.7	97.6	98.4	99.2	100.1	100.2	99.0	97.8	96.6	95.5	94.4	93.3
200	.46	95.5	96.4	97.2	98.0	98.8	99.6	99.3	98.1	97.0	96.0	95.0	94.0
240	.55	94.1	94.9	95.8	96.5	97.3	98.1	98.9	98.5	97.3	96.4	95.5	94.7
280	.63	92.5	93.3	94.1	94.9	95.7	96.4	97.2	97.9	97.6	96.7	95.8	95.1
320	.72	90.1	91.0	91.8	92.7	93.5	94.3	95.1	95.9	96.7	96.8	96.0	95.3
360	.80	88.4	89.2	90.1	90.9	91.7	92.6	93.4	94.2	95.0	95.8	96.3	95.8
20000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	95.3	96.1	97.0	97.8	98.6	99.4	98.8	97.4	96.2	95.2	94.2	93.2
200	.44	94.2	95.0	95.8	96.6	97.4	98.2	98.9	97.8	96.4	95.5	94.6	93.7
240	.53	92.8	93.6	94.4	95.2	96.0	96.8	97.5	98.2	97.0	95.9	95.1	94.3
280	.61	91.1	92.0	92.8	93.6	94.4	95.2	96.0	96.8	97.4	96.5	95.6	94.9
320	.69	89.1	90.0	90.8	91.6	92.5	93.3	94.1	94.9	95.7	96.5	95.8	95.1
360	.77	87.4	88.3	89.1	90.0	90.8	91.6	92.4	93.2	94.0	94.8	95.6	95.4

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0





**ENGINE INOP**

**Max Continuous %N1  
 10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	90.5	91.4	92.2	93.0	93.8	94.6	95.4	94.7	94.1	93.3	92.5	91.7
200	.36	89.6	90.4	91.3	92.1	92.9	93.7	94.5	94.5	93.7	92.9	92.2	91.4
240	.43	88.9	89.7	90.6	91.4	92.2	93.0	93.8	94.5	94.0	93.1	92.4	91.7
280	.51	88.1	89.0	89.8	90.6	91.4	92.2	93.0	93.8	94.4	93.6	92.8	92.2
320	.58	87.2	88.0	88.8	89.6	90.4	91.2	92.0	92.8	93.5	93.9	93.2	92.5
360	.65	86.2	87.0	87.8	88.6	89.4	90.2	91.0	91.7	92.5	93.2	93.6	92.9
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	89.1	89.9	90.7	91.5	92.3	93.1	93.7	93.5	93.2	92.5	91.8	91.0
200	.33	88.7	89.5	90.3	91.1	91.8	92.6	93.4	93.3	92.9	92.3	91.6	90.8
240	.40	88.1	88.9	89.7	90.5	91.3	92.0	92.8	93.3	92.5	91.8	91.1	90.3
280	.46	87.5	88.3	89.1	89.8	90.6	91.4	92.2	92.9	92.9	92.1	91.4	90.7
320	.53	86.8	87.6	88.3	89.1	89.9	90.7	91.4	92.2	92.9	92.5	91.8	91.1
360	.59	86.0	86.7	87.5	88.3	89.1	89.8	90.6	91.3	92.0	92.8	92.2	91.5
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	88.8	89.6	90.4	91.2	91.9	92.7	93.1	92.9	92.6	91.8	91.1	90.3
200	.32	88.5	89.3	90.0	90.8	91.6	92.3	93.1	92.8	92.5	91.8	91.1	90.3
240	.38	87.9	88.7	89.5	90.3	91.0	91.8	92.5	92.6	91.8	91.0	90.3	89.6
280	.45	87.4	88.1	88.9	89.7	90.5	91.2	92.0	92.7	92.2	91.4	90.7	90.0
320	.51	86.7	87.5	88.3	89.0	89.8	90.5	91.3	92.0	92.5	91.8	91.1	90.4
360	.57	85.9	86.7	87.5	88.2	89.0	89.7	90.5	91.2	91.9	92.2	91.5	90.7
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	87.7	88.5	89.3	90.0	90.8	91.6	92.3	92.3	91.8	91.2	90.5	89.7
200	.31	87.4	88.2	89.0	89.7	90.5	91.3	92.0	92.4	92.0	91.5	90.8	90.0
240	.37	86.9	87.7	88.5	89.3	90.0	90.8	91.5	92.3	91.9	91.2	90.4	89.7
280	.43	86.4	87.2	87.9	88.7	89.5	90.2	90.9	91.7	92.1	91.4	90.7	89.9
320	.49	85.8	86.6	87.4	88.1	88.9	89.6	90.4	91.1	91.8	91.8	91.1	90.3
360	.55	85.1	85.9	86.7	87.4	88.1	88.9	89.6	90.3	91.1	91.8	91.4	90.7

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2







**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Driftdown/LRC Cruise Range Capability  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)					
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)	20	40	60	80	100
100	80	60	40	20							
138	128	120	112	106	100	95	90	86	82	78	
276	256	240	225	212	200	190	180	172	164	157	
414	385	359	337	317	300	284	270	257	246	235	
552	513	479	449	423	400	379	360	343	328	314	
690	641	599	562	529	500	474	450	429	410	392	
828	770	719	674	635	600	569	540	515	492	470	
966	898	839	787	741	700	663	630	601	573	549	
1105	1027	959	899	847	800	758	720	686	655	627	
1243	1155	1079	1012	953	900	853	811	772	737	705	
1382	1284	1199	1124	1058	1000	948	901	858	819	784	
1520	1412	1319	1237	1164	1100	1042	990	944	901	862	
1659	1541	1439	1349	1270	1200	1137	1080	1029	983	940	
1797	1670	1559	1462	1376	1300	1232	1170	1115	1064	1018	
1936	1798	1679	1574	1482	1400	1327	1260	1201	1146	1096	
2075	1927	1799	1687	1588	1500	1421	1350	1286	1228	1175	
2214	2056	1919	1800	1694	1600	1516	1440	1372	1309	1253	
2353	2185	2040	1912	1800	1700	1611	1530	1457	1391	1331	
2492	2314	2160	2025	1906	1800	1705	1620	1543	1473	1409	

**Driftdown/Cruise Fuel and Time**

AIR DIST (NM)	FUEL REQUIRED (1000 KG)									TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)									
	40	45	50	55	60	65	70	75	80	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0:17
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	1.9	0:50
400	1.6	1.8	1.9	2.0	2.2	2.3	2.4	2.6	2.7	1:06
500	2.0	2.2	2.4	2.5	2.7	2.9	3.1	3.3	3.5	1:23
600	2.4	2.6	2.8	3.1	3.3	3.5	3.8	4.0	4.2	1:40
700	2.8	3.1	3.3	3.6	3.8	4.1	4.4	4.7	4.9	1:56
800	3.2	3.5	3.8	4.1	4.4	4.7	5.0	5.3	5.6	2:13
900	3.5	3.9	4.2	4.6	4.9	5.3	5.6	6.0	6.4	2:30
1000	3.9	4.3	4.7	5.1	5.5	5.9	6.2	6.7	7.1	2:46
1100	4.3	4.7	5.2	5.6	6.0	6.4	6.9	7.3	7.8	3:03
1200	4.7	5.2	5.6	6.0	6.5	7.0	7.5	8.0	8.5	3:20
1300	5.0	5.6	6.0	6.5	7.0	7.6	8.1	8.6	9.2	3:37
1400	5.4	6.0	6.5	7.0	7.6	8.1	8.7	9.3	9.9	3:54
1500	5.8	6.4	6.9	7.5	8.1	8.7	9.3	9.9	10.6	4:10
1600	6.1	6.8	7.4	8.0	8.6	9.2	9.8	10.5	11.2	4:27
1700	6.5	7.1	7.8	8.4	9.1	9.8	10.4	11.2	11.9	4:44
1800	6.8	7.5	8.2	8.9	9.6	10.3	11.0	11.8	12.6	5:01

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at Long Range Cruise speed.

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	14500	11700	8900
70	18300	14700	11900
65	21600	18700	15000
60	24600	22600	19500
55	27200	25800	23700
50	29800	28700	27100
45	32100	31300	30100
40	34500	33700	32600

With engine anti-ice on, decrease altitude capability by 2300 ft.

With engine and wing anti-ice on, decrease altitude capability by 7900 ft .



**ENGINE INOP**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	15	17	19	21	25	27	29	31
85	%N1	90.9								
	MACH	.557								
	KIAS	309								
	FF/ENG	2970								
80	%N1	89.3								
	MACH	.542								
	KIAS	301								
	FF/ENG	2794								
75	%N1	87.7	91.5	93.0						
	MACH	.527	.573	.588						
	KIAS	292	290	286						
	FF/ENG	2618	2608	2581						
70	%N1	85.9	89.8	91.4	92.9	95.2				
	MACH	.510	.557	.576	.590	.607				
	KIAS	282	281	280	276	273				
	FF/ENG	2442	2435	2423	2395	2402				
65	%N1	83.9	87.9	89.5	91.1	92.8				
	MACH	.492	.540	.559	.577	.592				
	KIAS	272	272	272	270	266				
	FF/ENG	2265	2261	2251	2237	2215				
60	%N1	81.9	85.9	87.5	89.1	90.7	95.1			
	MACH	.473	.520	.540	.560	.578	.610			
	KIAS	262	262	262	261	260	253			
	FF/ENG	2088	2086	2077	2067	2055	2066			
55	%N1	79.6	83.6	85.3	86.9	88.6	92.2	94.9	98.4	
	MACH	.455	.499	.519	.539	.559	.593	.610	.631	
	KIAS	251	251	252	251	251	245	242	241	
	FF/ENG	1917	1910	1903	1894	1886	1868	1897	1972	
50	%N1	77.2	81.2	82.8	84.5	86.2	89.5	91.5	94.3	97.9
	MACH	.435	.477	.496	.516	.536	.576	.592	.609	.630
	KIAS	241	240	240	240	240	238	234	232	230
	FF/ENG	1754	1733	1728	1721	1714	1703	1700	1725	1795
45	%N1	74.8	78.5	80.1	81.8	83.5	86.9	88.5	90.5	93.5
	MACH	.416	.454	.471	.490	.511	.552	.572	.589	.606
	KIAS	230	228	228	228	228	228	226	223	220
	FF/ENG	1596	1564	1554	1546	1542	1533	1535	1533	1551
40	%N1	72.1	75.6	77.2	78.8	80.5	83.9	85.6	87.2	89.2
	MACH	.395	.431	.447	.464	.482	.524	.545	.566	.584
	KIAS	218	216	216	215	215	215	215	214	212
	FF/ENG	1442	1402	1388	1376	1367	1364	1366	1368	1366



# ENGINE INOP

## MAX CONTINUOUS THRUST

### Holding Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
80	%N1	79.3	82.2	86.4	90.9				
	KIAS	244	245	246	247				
	FF/ENG	2560	2550	2560	2600				
75	%N1	77.6	80.3	84.6	89.0	94.8			
	KIAS	236	237	238	239	241			
	FF/ENG	2400	2390	2390	2420	2480			
70	%N1	75.7	78.4	82.7	87.0	92.0			
	KIAS	228	229	230	231	232			
	FF/ENG	2240	2230	2220	2240	2270			
65	%N1	73.6	76.5	80.6	84.9	89.5	97.4		
	KIAS	220	220	222	223	224	225		
	FF/ENG	2080	2070	2060	2060	2080	2220		
60	%N1	71.3	74.3	78.3	82.7	87.2	93.4		
	KIAS	211	212	213	213	215	216		
	FF/ENG	1920	1910	1900	1900	1900	1960		
55	%N1	69.0	71.9	76.0	80.3	84.7	89.8		
	KIAS	202	203	203	204	205	206		
	FF/ENG	1770	1750	1740	1730	1720	1750		
50	%N1	66.5	69.2	73.5	77.6	82.1	86.8	94.6	
	KIAS	192	193	194	195	195	197	198	
	FF/ENG	1620	1600	1580	1570	1560	1570	1670	
45	%N1	63.8	66.5	70.6	74.8	79.3	83.8	89.4	
	KIAS	184	184	184	184	185	186	187	
	FF/ENG	1480	1450	1430	1410	1390	1400	1440	
40	%N1	60.6	63.5	67.5	71.8	76.0	80.6	85.3	93.9
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1330	1310	1280	1260	1240	1230	1260	1350

This table includes 5% additional fuel for holding in a racetrack pattern.

# ENGINE INOP

## ADVISORY INFORMATION

### Gear Down Landing Rate of Climb Available Flaps 15

TAT (°C)	RATE OF CLIMB (FT/MIN)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
52	-250	-310					
50	-230	-290	-370				
48	-200	-260	-350				
46	-180	-240	-330	-410			
44	-150	-220	-300	-390			
42	-120	-190	-280	-370	-470		
40	-100	-160	-250	-350	-450		
38	-70	-140	-230	-320	-430	-550	
36	-60	-110	-200	-300	-410	-530	
34	-50	-80	-180	-280	-380	-510	-610
32	-50	-60	-150	-250	-360	-490	-590
30	-50	-60	-130	-230	-340	-470	-570
20	-50	-60	-110	-170	-240	-340	-470
10	-40	-50	-110	-160	-240	-310	-390
0	-40	-50	-110	-160	-240	-310	-390
-20	-30	-50	-110	-160	-240	-320	-400
-40	-30	-50	-110	-160	-240	-330	-410

Rate of climb capability shown is valid for 60000 kg, gear down at VREF15+5.  
 Decrease rate of climb 100 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 150 ft/min per 5000 kg less than 60000 kg.

### Flaps 30

TAT (°C)	RATE OF CLIMB (FT/MIN)						
	PRESSURE ALTITUDE (FT)						
	-2000	0	2000	4000	6000	8000	10000
52	-410	-470					
50	-380	-440	-530				
48	-360	-420	-510				
46	-340	-400	-490	-580			
44	-310	-380	-470	-560			
42	-290	-350	-440	-540	-640		
40	-260	-330	-420	-510	-620		
38	-240	-300	-400	-490	-600	-720	
36	-220	-280	-370	-470	-580	-700	
34	-220	-250	-350	-450	-560	-680	-790
32	-220	-230	-320	-420	-540	-660	-770
30	-220	-230	-300	-400	-510	-640	-750
20	-210	-230	-290	-340	-410	-530	-660
10	-210	-230	-290	-340	-420	-490	-580
0	-210	-230	-290	-340	-420	-500	-580
-20	-220	-230	-290	-350	-430	-510	-600
-40	-220	-240	-300	-360	-440	-530	-620

Rate of climb capability shown is valid for 60000 kg, gear down at VREF30+5.  
 Decrease rate of climb 110 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 150 ft/min per 5000 kg less than 60000 kg.



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 23

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	12900	10300	7500
80	16000	13100	10400
75	20400	16300	13300
70	23500	20400	16700
65	26200	24400	20800
60	28700	27200	25400
55	30900	29700	28200
50	33000	32000	30800
45	35200	34200	33100
40	37600	36600	35500

## GEAR DOWN

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
85	%N1	85.9									
	MACH	.482									
	KIAS	267									
	FF/ENG	2417									
80	%N1	84.2									
	MACH	.468									
	KIAS	259									
	FF/ENG	2266									
75	%N1	82.5	91.7								
	MACH	.454	.554								
	KIAS	251	248								
	FF/ENG	2116	2095								
70	%N1	80.5	89.8	91.7	94.3						
	MACH	.440	.541	.557	.575						
	KIAS	243	242	240	238						
	FF/ENG	1969	1955	1943	1965						
65	%N1	78.5	87.8	89.5	91.5	94.4					
	MACH	.425	.524	.543	.560	.578					
	KIAS	235	234	233	231	229					
	FF/ENG	1826	1807	1800	1797	1826					
60	%N1	76.4	85.6	87.4	89.1	91.2	94.4				
	MACH	.409	.504	.525	.544	.562	.580				
	KIAS	226	225	225	224	222	220				
	FF/ENG	1686	1656	1655	1652	1656	1686				
55	%N1	74.2	83.3	85.0	86.8	88.5	90.8	94.0			
	MACH	.393	.484	.504	.525	.545	.562	.581			
	KIAS	217	216	216	216	215	213	211			
	FF/ENG	1548	1509	1506	1509	1511	1515	1545			
50	%N1	71.7	80.7	82.4	84.2	86.0	87.7	90.0	93.3		
	MACH	.376	.463	.482	.502	.523	.544	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	1412	1364	1361	1362	1368	1371	1373	1401		
45	%N1	68.9	77.9	79.6	81.4	83.1	84.9	86.7	89.0	92.3	
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578	
	KIAS	197	196	196	196	196	196	195	193	191	
	FF/ENG	1281	1223	1217	1218	1224	1229	1231	1231	1255	
40	%N1	66.0	74.8	76.5	78.2	80.0	81.7	83.6	85.4	87.5	91.3
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554	.573
	KIAS	187	185	185	185	185	185	185	185	183	181
	FF/ENG	1156	1089	1077	1076	1082	1086	1088	1090	1090	1113



## GEAR DOWN

### Long Range Cruise Enroute Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2380	2102	1865	1680	1530	1400	1320	1247	1181	1122	1070
2742	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3111	2736	2418	2171	1972	1800	1695	1600	1514	1438	1371

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.3	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.3	1:54
800	9.7	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.2	3:50	10.1	3:31	9.4	3:18	8.9	3:08
1200	14.3	4:56	13.4	4:39	12.0	4:14	11.3	3:59	10.7	3:46
1400	16.6	5:49	15.5	5:28	13.9	4:58	13.1	4:40	12.4	4:24
1600	18.8	6:43	17.5	6:18	15.8	5:44	14.8	5:22	14.0	5:03
1800	20.9	7:38	19.6	7:10	17.6	6:30	16.5	6:05	15.7	5:43

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.4
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.4	-0.7	0.0	1.2	2.6
10	-1.7	-0.9	0.0	1.4	3.2
12	-2.1	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.8	-1.4	0.0	2.0	4.6
18	-3.2	-1.6	0.0	2.2	5.0
20	-3.5	-1.7	0.0	2.4	5.3
22	-3.9	-1.9	0.0	2.5	5.6

## GEAR DOWN

### Descent

VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	270	90
39000	21	270	86
37000	20	260	81
35000	19	260	77
33000	19	250	73
31000	18	250	68
29000	17	240	64
27000	16	240	60
25000	15	230	56
23000	15	220	52
21000	14	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	9	160	26
5000	6	130	16
1500	4	100	9

Allowances for a straight-in approach are included.

## GEAR DOWN

### Holding Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
80	%N1	73.9	76.7	80.8	85.1	89.7			
	KIAS	224	224	224	224	224			
	FF/ENG	2090	2080	2070	2080	2090			
75	%N1	72.2	75.2	79.1	83.5	88.0	94.4		
	KIAS	219	219	219	219	219	219		
	FF/ENG	1980	1960	1950	1950	1950	2020		
70	%N1	70.4	73.4	77.4	81.7	86.2	91.5		
	KIAS	214	214	214	214	214	214		
	FF/ENG	1860	1840	1830	1820	1820	1850		
65	%N1	68.6	71.5	75.6	79.9	84.3	89.0		
	KIAS	209	209	209	209	209	209		
	FF/ENG	1750	1720	1710	1700	1690	1710		
60	%N1	66.7	69.5	73.7	77.8	82.2	86.8	93.9	
	KIAS	203	203	203	203	203	203	203	
	FF/ENG	1630	1610	1590	1580	1560	1570	1650	
55	%N1	64.7	67.4	71.6	75.6	80.0	84.6	90.1	
	KIAS	197	197	197	197	197	197	197	
	FF/ENG	1520	1490	1470	1460	1440	1440	1480	
50	%N1	62.3	65.2	69.2	73.4	77.7	82.2	86.9	
	KIAS	190	190	190	190	190	190	190	
	FF/ENG	1400	1380	1360	1340	1320	1310	1340	
45	%N1	59.9	62.8	66.8	71.1	75.2	79.7	84.3	91.1
	KIAS	184	184	184	184	184	184	184	184
	FF/ENG	1290	1270	1250	1230	1200	1190	1210	1250
40	%N1	57.5	60.2	64.3	68.4	72.7	77.0	81.5	86.5
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1180	1160	1140	1120	1090	1070	1090	1100

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 24

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	70	217	400		
70	66	213	3500	1400	
65	62	208	6700	4900	3100
60	57	202	9900	8100	6400
55	52	196	13100	11400	9500
50	48	190	16300	14800	13000
45	43	183	19500	18200	16500
40	38	177	22800	21600	20300

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
60	4500	1600	
55	8900	6600	4300
50	13000	10900	8600
45	17100	15400	13200
40	21400	19900	18100

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
60	%N1	90.1									
	MACH	.364									
	KIAS	220									
	FF/ENG	3180									
55	%N1	87.6	89.2	90.9							
	MACH	.351	.362	.374							
	KIAS	212	211	210							
	FF/ENG	2909	2898	2897							
50	%N1	85.1	86.6	88.1	89.8	91.6					
	MACH	.338	.348	.359	.371	.384					
	KIAS	204	203	202	201	200					
	FF/ENG	2652	2632	2618	2616	2624					
45	%N1	82.4	83.8	85.3	86.8	88.5	90.3	92.6			
	MACH	.325	.334	.344	.355	.367	.380	.393			
	KIAS	196	195	193	192	191	190	189			
	FF/ENG	2407	2379	2358	2344	2341	2343	2350			
40	%N1	79.5	80.8	82.2	83.7	85.2	86.9	88.7	90.7	93.9	98.2
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.417
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2178	2141	2111	2090	2075	2066	2060	2057	2091	2183



**GEAR DOWN**  
**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Diversion Fuel and Time  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1652	1430	1244	1103	994	900	838	782	733	690	653
1844	1595	1385	1228	1105	1000	931	868	813	765	724

**Reference Fuel and Time Required at Check Point**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.2	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.6	1:15	3.5	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	5.9	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.0	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.5	3:58	10.8	3:46	10.5	3:35
1000	12.7	4:25	12.0	4:12	11.6	3:59

**Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.7	-0.4	0.0	0.7	1.3
5	-0.9	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.1	2.0
7	-1.2	-0.6	0.0	1.2	2.4
8	-1.4	-0.7	0.0	1.4	2.8
9	-1.5	-0.8	0.0	1.6	3.1
10	-1.7	-0.9	0.0	1.8	3.5
11	-1.9	-0.9	0.0	2.0	3.8
12	-2.0	-1.0	0.0	2.1	4.2
13	-2.2	-1.1	0.0	2.3	4.6
14	-2.4	-1.2	0.0	2.5	5.0

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)				
		1500	5000	10000	15000	20000
70	%N1	89.1				
	KIAS	214				
	FF/ENG	3560				
65	%N1	87.1	90.1			
	KIAS	209	209			
	FF/ENG	3310	3330			
60	%N1	84.8	87.8			
	KIAS	203	203			
	FF/ENG	3060	3070			
55	%N1	82.5	85.5	90.0		
	KIAS	197	197	197		
	FF/ENG	2820	2820	2840		
50	%N1	79.9	82.9	87.3	92.4	
	KIAS	190	190	190	190	
	FF/ENG	2580	2570	2580	2630	
45	%N1	77.4	80.2	84.6	89.3	
	KIAS	184	184	184	184	
	FF/ENG	2370	2350	2340	2370	
40	%N1	74.7	77.4	81.8	86.2	91.7
	KIAS	177	177	177	177	177
	FF/ENG	2150	2130	2110	2120	2140

This table includes 5% additional fuel for holding in a racetrack pattern.



**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 25****Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

---

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.





737-700W CFM56-7B24A+26B2\_BUMP C M KG FAA CATF/M  
HIGH\_ALT PAX GAS

**Pkg Model Identification . . . . . PI-QRH.ModID.30.1**

**General . . . . . PI-QRH.30.1**

Flight With Unreliable Airspeed/Turbulent Air

Penetration . . . . . PI-QRH.30.1

Max Climb %N1 . . . . . PI-QRH.30.3

Go-around %N1 . . . . . PI-QRH.30.4

VREF . . . . . PI-QRH.30.6

**Advisory Information . . . . . PI-QRH.31.1**

Normal Configuration Landing Distance . . . . . PI-QRH.31.1

Non-Normal Configuration Landing Distance . . . . . PI-QRH.31.4

Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.31.4

Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.31.5

Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.31.6

All Flaps Up Landing . . . . . PI-QRH.31.7

ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.31.8

ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.31.9

ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.31.10

Jammed or Restricted Flight Controls (Flaps 15) . . . . . PI-QRH.31.11

LEADING EDGE FLAPS TRANSIT (Flaps 15) . . . . . PI-QRH.31.12

LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.31.13

LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.31.14

LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.31.15

LOSS OF SYSTEM A AND SYSTEM B  
(Flaps 15) . . . . . PI-QRH.31.16

LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.31.17

MANUAL REVERSION (Flaps 15) . . . . . PI-QRH.31.18

One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.31.19

One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.31.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.31.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.31.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.31.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.31.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.31.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.31.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.31.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.31.28
Recommended Brake Cooling Schedule . . . . .	PI-QRH.31.29
Recommended Brake Cooling Schedule - High Altitudes . . . . .	PI-QRH.31.31

**Engine Inoperative . . . . .PI-QRH.32.1**

Initial Max Continuous %N1 . . . . .	PI-QRH.32.1
Max Continuous %N1 . . . . .	PI-QRH.32.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.32.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.32.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.32.8
Long Range Cruise Control . . . . .	PI-QRH.32.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.32.10
Holding . . . . .	PI-QRH.32.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.32.12

**Gear Down . . . . .PI-QRH.33.1**

Long Range Cruise Altitude Capability . . . . .	PI-QRH.33.1
Long Range Cruise Control . . . . .	PI-QRH.33.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.33.3
Descent . . . . .	PI-QRH.33.4
Holding . . . . .	PI-QRH.33.5





737 Flight Crew Operations Manual

---

<b>Gear Down, Engine Inoperative</b> .....	<b>PI-QRH.34.1</b>
Driftdown Speed/Level Off Altitude .....	PI-QRH.34.1
Long Range Cruise Altitude Capability .....	PI-QRH.34.1
Long Range Cruise Control .....	PI-QRH.34.2
Long Range Cruise Diversion Fuel and Time .....	PI-QRH.34.3
Holding .....	PI-QRH.34.4
<b>Text</b> .....	<b>PI-QRH.35.1</b>
Introduction .....	PI-QRH.35.1
General .....	PI-QRH.35.1
Advisory Information .....	PI-QRH.35.2
Engine Inoperative .....	PI-QRH.35.4
Gear Down .....	PI-QRH.35.6



Intentionally  
Blank

**General**

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-5277	38381	YN531
B-5279	38384	YN532
B-5278	38383	YN533
B-5280	38385	YN534

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 30

**Flight With Unreliable Airspeed/Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.5</b>		
	V/S (FT/MIN)	1800	1200	600		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2600	2000	1500	1200	900
20000	<b>PITCH ATT</b>	<b>7.5</b>	<b>6.5</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4200	3300	2700	2200	1800
10000	<b>PITCH ATT</b>	<b>11.0</b>	<b>9.5</b>	<b>8.5</b>	<b>8.5</b>	<b>8.0</b>
	V/S (FT/MIN)	5700	4500	3700	3000	2600
SEA LEVEL	<b>PITCH ATT</b>	<b>15.0</b>	<b>12.5</b>	<b>11.5</b>	<b>10.5</b>	<b>10.0</b>
	V/S (FT/MIN)	6900	5400	4400	3700	3200

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	82.4	85.0	89.0		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	80.7	82.1	84.1	86.5	90.5
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	80.2	81.0	82.2	83.8	85.7
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>
	%N1	76.6	77.4	78.5	80.0	81.9
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	73.0	73.8	74.8	76.1	77.9
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	69.2	70.0	71.1	72.3	74.0

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>	<b>1.0</b>	<b>1.5</b>
	V/S (FT/MIN)	-2800	-2500	-2400	-2600	-2700
30000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-3000	-2500	-2200	-2000	-1900
20000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2700	-2300	-2000	-1800	-1700
10000	<b>PITCH ATT</b>	<b>-3.0</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2400	-2000	-1800	-1600	-1500
SEA LEVEL	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>1.0</b>
	V/S (FT/MIN)	-2200	-1800	-1600	-1500	-1400

### Flight With Unreliable Airspeed/Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Holding (VREF40 + 70)

Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	55.8	61.5	65.8	69.7	73.1
	KIAS	177	195	214	231	247
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	52.2	57.2	61.9	65.8	69.0
	KIAS	177	194	213	230	246
5000	<b>PITCH ATT</b>	<b>5.5</b>	<b>5.5</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>
	%N1	48.6	53.6	57.8	61.7	65.4
	KIAS	177	193	212	229	245

### Terminal Area (5000 FT)

%N1 for Level Flight

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	49.0	53.0	58.0	61.0	65.0
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	50.0	56.0	60.0	64.0	67.0
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT.</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	50.0	56.0	61.0	65.0	68.0
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT.</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>	<b>7.0</b>
	%N1	59.0	65.0	70.0	74.0	78.0

### Final Approach (1500 FT)

Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	<b>PITCH ATT</b>	<b>3.5</b>	<b>3.5</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	%N1	41.5	45.4	49.3	53.1	56.2
FLAPS 30 (VREF30 + 10)	<b>PITCH ATT</b>	<b>1.5</b>	<b>2.0</b>	<b>2.0</b>	<b>2.0</b>	<b>2.5</b>
	%N1	45.4	50.4	54.6	58.2	61.7
FLAPS 40 (VREF40 + 10)	<b>PITCH ATT</b>	<b>0.0</b>	<b>0.0</b>	<b>0.5</b>	<b>0.5</b>	<b>1.0</b>
	%N1	52.4	57.5	62.3	66.0	69.7

### Go-Around

Flaps 15, Gear Up, Set Go-Around Thrust

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>21.0</b>	<b>17.0</b>	<b>14.5</b>	<b>12.5</b>	<b>11.0</b>
	V/S (FT/MIN)	3900	3000	2500	2000	1600
	KIAS	126	139	151	163	174
5000	<b>PITCH ATT</b>	<b>24.0</b>	<b>19.5</b>	<b>16.5</b>	<b>14.5</b>	<b>12.5</b>
	V/S (FT/MIN)	4300	3400	2800	2300	1900
	KIAS	126	138	150	161	172
SEA LEVEL	<b>PITCH ATT</b>	<b>27.0</b>	<b>22.0</b>	<b>18.5</b>	<b>16.0</b>	<b>14.0</b>
	V/S (FT/MIN)	4600	3700	3000	2500	2100
	KIAS	126	138	149	160	170

**Max Climb %N1****Based on engine bleed for packs on or off and anti-ice off**

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	89.4	89.7	89.7	89.8	89.6	91.4	93.0	94.4	94.5	92.8
55	90.2	90.5	90.5	90.7	90.0	90.8	92.4	93.7	93.8	92.1
50	90.9	91.2	91.3	91.5	91.0	90.8	91.7	93.0	93.1	91.4
45	91.6	91.9	92.1	92.3	91.9	91.7	91.7	92.3	92.4	90.7
40	92.4	92.6	92.9	93.1	92.7	92.5	92.5	91.6	91.7	90.0
35	92.9	93.3	93.6	93.8	93.6	93.3	93.3	92.4	91.7	90.1
30	92.2	94.1	94.3	94.6	94.4	94.1	94.0	93.2	92.6	91.1
25	91.5	94.1	95.0	95.2	95.2	94.8	94.7	94.0	93.4	92.1
20	90.7	93.3	95.8	96.0	95.9	95.6	95.4	94.7	94.2	93.0
15	90.0	92.5	95.2	96.8	96.7	96.3	96.1	95.5	95.0	94.0
10	89.2	91.8	94.4	97.1	97.6	97.0	96.7	96.2	95.8	94.9
5	88.4	91.0	93.6	96.3	98.5	97.9	97.4	97.0	96.6	95.8
0	87.7	90.2	92.8	95.5	97.9	99.0	98.4	97.8	97.5	96.7
-5	86.9	89.4	92.0	94.7	97.2	98.9	99.4	98.6	98.3	97.7
-10	86.1	88.6	91.2	93.9	96.4	98.1	99.7	99.5	99.2	98.7
-15	85.3	87.8	90.3	93.1	95.6	97.4	98.9	100.5	100.1	99.7
-20	84.5	87.0	89.5	92.3	94.8	96.6	98.1	100.2	100.7	100.3
-25	83.7	86.1	88.7	91.4	94.1	95.8	97.3	99.3	99.9	99.5
-30	82.9	85.3	87.8	90.6	93.3	95.0	96.5	98.5	99.0	98.7
-35	82.0	84.5	87.0	89.8	92.4	94.1	95.6	97.6	98.2	97.8
-40	81.2	83.6	86.1	88.9	91.6	93.3	94.8	96.8	97.3	96.9

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

**Go-around %N1**

**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)												
°C	°F		-2000	-1000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	95.2											
52	125	55	95.9	96.5	96.7	96.6									
47	116	50	96.6	97.1	97.6	97.8	97.8	97.7	97.6						
42	108	45	97.3	97.9	98.3	98.5	98.6	98.7	98.9	98.8	98.5				
37	99	40	98.0	98.6	99.1	99.2	99.3	99.5	99.5	99.7	99.5	99.2	98.9	99.9	
32	90	35	98.1	99.2	99.9	100.0	100.2	100.2	100.4	100.4	100.3	100.0	99.6	100.7	101.8
27	81	30	97.3	98.5	99.8	100.4	100.7	100.7	100.8	100.8	100.8	100.7	100.4	101.3	102.3
22	72	25	96.5	97.7	99.1	99.7	100.3	100.6	101.0	100.9	100.9	100.9	100.9	101.6	102.5
17	63	20	95.8	97.0	98.3	98.9	99.5	99.9	100.2	100.6	100.9	101.1	101.1	101.7	102.5
12	54	15	95.0	96.2	97.5	98.1	98.8	99.1	99.5	99.8	100.2	100.6	100.9	101.8	102.5
7	45	10	94.2	95.4	96.8	97.4	98.0	98.4	98.8	99.1	99.5	99.8	100.2	101.1	102.1
2	36	5	93.4	94.6	96.0	96.6	97.2	97.6	98.0	98.4	98.7	99.1	99.4	100.4	101.3
-3	27	0	92.6	93.8	95.2	95.8	96.4	96.8	97.2	97.6	98.0	98.3	98.7	99.6	100.5
-8	18	-5	91.8	93.0	94.4	95.0	95.7	96.1	96.5	96.9	97.2	97.6	97.9	98.8	99.8
-13	9	-10	91.0	92.2	93.6	94.2	94.9	95.3	95.7	96.1	96.5	96.8	97.2	98.1	99.0
-17	1	-15	90.2	91.4	92.8	93.4	94.1	94.5	94.9	95.3	95.7	96.0	96.4	97.3	98.2
-22	-8	-20	89.3	90.6	91.9	92.6	93.2	93.7	94.1	94.5	94.9	95.2	95.6	96.5	97.4
-27	-17	-25	88.5	89.7	91.1	91.8	92.4	92.8	93.3	93.7	94.1	94.5	94.8	95.7	96.6
-32	-26	-30	87.6	88.9	90.3	90.9	91.6	92.0	92.5	92.9	93.3	93.7	94.0	94.9	95.8
-37	-35	-35	86.8	88.0	89.4	90.1	90.8	91.2	91.7	92.1	92.5	92.8	93.2	94.1	95.0
-42	-44	-40	85.9	87.2	88.6	89.2	89.9	90.3	90.8	91.3	91.7	92.0	92.4	93.2	94.1
-47	-53	-45	85.0	86.3	87.7	88.4	89.0	89.5	90.0	90.5	90.8	91.2	91.5	92.4	93.3
-52	-62	-50	84.1	85.4	86.8	87.5	88.2	88.6	89.1	89.6	90.0	90.4	90.7	91.6	92.4

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)														
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000			
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1



## Go-around %N1 - High Altitudes

Based on engine bleeds for packs on, engine anti-ice off, wing anti-ice on or off

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)						
°C	°F		10000	11000	12000	13000	14000	14500	
32	90	35	101.8	101.6					
27	81	30	102.3	102.4					
22	72	25	102.5	102.5	102.3	102.1	102.1		
17	63	20	102.5	102.5	102.5	102.4	102.3	102.2	
12	54	15	102.5	102.5	102.4	102.4	102.3	102.3	102.3
7	45	10	102.1	102.5	102.4	102.4	102.3	102.2	102.2
2	36	5	101.3	102.0	102.5	102.4	102.3	102.3	102.3
-3	27	0	100.5	101.2	101.9	102.1	102.3	102.3	102.3
-8	18	-5	99.8	100.4	101.1	101.3	101.5	101.7	101.7
-13	9	-10	99.0	99.6	100.3	100.6	100.8	100.9	100.9
-17	1	-15	98.2	98.8	99.5	99.8	100.0	100.1	100.1
-22	-8	-20	97.4	98.0	98.7	98.9	99.1	99.2	99.2
-27	-17	-25	96.6	97.2	97.9	98.1	98.3	98.4	98.4
-32	-26	-30	95.8	96.4	97.0	97.3	97.5	97.6	97.6
-37	-35	-35	95.0	95.6	96.2	96.5	96.6	96.7	96.7
-42	-44	-40	94.1	94.7	95.4	95.6	95.8	95.9	95.9
-47	-53	-45	93.3	93.9	94.5	94.7	94.9	95.0	95.0
-52	-62	-50	92.4	93.0	93.6	93.9	94.1	94.2	94.2

## %N1 Adjustments for Engine Bleed

BLEED CONFIGURATION	AIRPORT PRESSURE ALTITUDE (FT)					
	10000	11000	12000	13000	14000	14500
PACKS OFF	0.9	0.9	0.9	1.0	1.0	1.0
ENGINE ANTI-ICE	0.0	-0.8	-1.5	-1.5	-1.5	-1.4

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	159	161	167
80	154	156	162
75	149	151	157
70	144	146	152
65	139	141	147
60	133	135	140
55	127	129	134
50	120	123	127
45	114	117	121



## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 31

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	880	55/-50	20/25	-30/110	10/-10	20/-20	30	15	35
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1570	95/-100	40/60	-70/230	0/0	40/-40	90	0	0
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Good Reported Braking Action

MAX MANUAL	1220	70/-75	30/45	-55/190	30/-25	30/-30	45	65	145
AUTOBRAKE MAX	1290	75/-80	35/45	-55/195	25/-20	30/-30	55	70	160
AUTOBRAKE 3	1575	95/-100	40/60	-70/235	5/0	40/-40	90	5	15
AUTOBRAKE 2	2020	135/-150	60/85	-95/325	15/-30	55/-55	100	25	25
AUTOBRAKE 1	2255	170/-180	75/105	-110/385	50/-65	65/-65	95	185	205

## Medium Reported Braking Action

MAX MANUAL	1680	115/-115	50/70	-85/320	75/-60	40/-45	60	185	455
AUTOBRAKE MAX	1690	115/-115	50/75	-90/320	70/-55	45/-45	70	180	450
AUTOBRAKE 3	1750	115/-120	50/75	-90/325	60/-35	45/-45	90	150	425
AUTOBRAKE 2	2070	140/-150	60/85	-105/365	45/-45	55/-60	100	65	195
AUTOBRAKE 1	2270	170/-180	75/105	-115/400	70/-70	65/-65	95	200	265

## Poor Reported Braking Action

MAX MANUAL	2210	165/-165	70/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE MAX	2210	165/-165	75/105	-135/505	185/-120	55/-60	75	405	1120
AUTOBRAKE 3	2210	165/-165	75/105	-135/505	185/-115	55/-60	80	405	1120
AUTOBRAKE 2	2340	170/-175	75/110	-140/520	165/-105	60/-65	95	310	1005
AUTOBRAKE 1	2460	185/-195	80/115	-145/540	170/-120	65/-70	95	365	920

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
Flaps 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	855	50/-45	15/25	-30/110	10/-10	15/-15	30	15	30
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 3	1490	85/-95	40/55	-65/225	0/0	40/-40	85	0	0
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Good Reported Braking Action**

MAX MANUAL	1180	65/-70	30/40	-55/190	30/-25	25/-30	45	60	135
AUTOBRAKE MAX	1250	70/-75	30/45	-55/195	25/-20	30/-30	55	65	145
AUTOBRAKE 3	1490	90/-95	40/55	-65/230	5/0	40/-40	85	5	15
AUTOBRAKE 2	1900	125/-135	55/80	-90/315	15/-30	55/-55	90	30	30
AUTOBRAKE 1	2110	155/-160	70/95	-110/370	50/-60	60/-60	85	165	195

**Medium Reported Braking Action**

MAX MANUAL	1610	105/-110	45/65	-85/310	70/-55	40/-40	60	165	400
AUTOBRAKE MAX	1620	110/-110	50/70	-85/315	70/-50	40/-40	70	165	400
AUTOBRAKE 3	1670	110/-110	50/70	-90/320	60/-35	45/-45	85	140	385
AUTOBRAKE 2	1955	130/-140	55/80	-100/355	45/-45	55/-55	90	65	180
AUTOBRAKE 1	2125	155/-165	70/95	-110/385	70/-65	60/-60	85	180	255

**Poor Reported Braking Action**

MAX MANUAL	2090	155/-155	65/100	-130/495	175/-115	55/-60	70	355	955
AUTOBRAKE MAX	2095	155/-155	65/100	-130/495	180/-115	55/-60	70	355	960
AUTOBRAKE 3	2095	155/-155	65/100	-130/495	175/-110	55/-60	80	355	960
AUTOBRAKE 2	2210	160/-160	70/100	-135/510	160/-105	55/-60	90	280	860
AUTOBRAKE 1	2310	170/-175	75/105	-140/525	165/-115	60/-65	85	330	805

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

## Dry Runway

MAX MANUAL	840	50/-40	15/25	-30/105	10/-10	15/-15	30	15	30
AUTOBRAKE MAX	1045	50/-55	25/35	-40/130	0/0	20/-25	50	0	0
AUTOBRAKE 3	1440	85/-90	40/55	-65/220	0/0	35/-35	85	0	0
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

## Good Reported Braking Action

MAX MANUAL	1165	65/-70	30/45	-55/190	30/-25	25/-25	45	55	130
AUTOBRAKE MAX	1235	70/-75	30/45	-55/195	25/-20	30/-30	55	60	140
AUTOBRAKE 3	1445	85/-90	40/55	-65/225	10/-5	35/-35	85	5	15
AUTOBRAKE 2	1835	120/-130	55/80	-90/305	10/-30	50/-50	90	20	20
AUTOBRAKE 1	2045	150/-155	65/90	-105/365	45/-55	60/-55	85	145	175

## Medium Reported Braking Action

MAX MANUAL	1575	105/-105	45/65	-85/310	70/-55	40/-40	60	155	375
AUTOBRAKE MAX	1590	105/-110	45/70	-85/310	70/-50	40/-40	70	155	370
AUTOBRAKE 3	1630	105/-110	50/70	-85/315	60/-40	40/-45	85	140	370
AUTOBRAKE 2	1895	125/-135	55/80	-100/350	45/-45	50/-50	90	60	175
AUTOBRAKE 1	2055	150/-155	65/95	-110/380	70/-65	55/-60	85	160	235

## Poor Reported Braking Action

MAX MANUAL	2040	150/-150	65/95	-130/490	175/-110	50/-55	70	330	875
AUTOBRAKE MAX	2045	150/-150	65/100	-130/490	175/-115	50/-55	70	330	875
AUTOBRAKE 3	2050	155/-150	65/100	-130/490	175/-110	50/-55	80	330	875
AUTOBRAKE 2	2150	155/-155	70/100	-130/500	155/-105	55/-60	85	260	795
AUTOBRAKE 1	2240	165/-170	70/105	-135/515	165/-115	60/-65	85	305	745

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 50 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Airspeed Unreliable (Flaps 15)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	945	65/-55	20/30	-35/115	10/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1230	60/-65	30/40	-45/145	0/0	30/-30	N/A	0	0
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

#### Good Reported Braking Action

MAX MANUAL	1300	75/-75	35/45	-55/195	30/-25	30/-30	N/A	75	175
AUTOBRAKE MAX	1385	80/-80	35/50	-60/205	25/-20	35/-35	N/A	85	190
AUTOBRAKE 2	2195	150/-160	70/95	-100/340	30/-45	60/-60	N/A	105	105

#### Medium Reported Braking Action

MAX MANUAL	1775	120/-120	55/75	-90/325	75/-60	45/-45	N/A	210	525
AUTOBRAKE MAX	1800	120/-120	55/75	-90/325	70/-55	45/-50	N/A	210	525
AUTOBRAKE 3	1915	120/-125	55/80	-95/340	50/-35	50/-50	N/A	135	445

#### Poor Reported Braking Action

MAX MANUAL	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	445	1250
AUTOBRAKE MAX	2305	170/-170	75/110	-135/510	180/-120	60/-65	N/A	440	1250
AUTOBRAKE 3	2320	170/-170	75/110	-135/510	175/-105	60/-65	N/A	440	1250

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****Airspeed Unreliable (Flaps 30)****VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	915	55/-50	20/25	-35/115	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1175	55/-60	25/35	-45/145	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

**Good Reported Braking Action**

MAX MANUAL	1265	70/-75	35/45	-55/195	30/-25	30/-30	N/A	70	165
AUTOBRAKE MAX	1350	75/-80	35/50	-60/200	25/-25	30/-30	N/A	80	180
AUTOBRAKE 2	2065	135/-145	65/85	-95/325	35/-40	60/-60	N/A	100	100

**Medium Reported Braking Action**

MAX MANUAL	1705	110/-115	50/70	-85/320	70/-55	45/-45	N/A	190	465
AUTOBRAKE MAX	1735	115/-115	50/70	-90/320	65/-55	45/-45	N/A	190	470
AUTOBRAKE 3	1830	115/-115	55/75	-90/330	50/-35	50/-50	N/A	125	405

**Poor Reported Braking Action**

MAX MANUAL	2185	160/-155	70/100	-130/500	170/-115	55/-60	N/A	390	1070
AUTOBRAKE MAX	2190	160/-160	70/100	-130/500	175/-115	55/-60	N/A	390	1070
AUTOBRAKE 3	2210	160/-160	70/100	-130/500	165/-100	55/-60	N/A	390	1075

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	905	55/-45	20/25	-30/110	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1145	55/-60	25/35	-40/140	0/0	25/-25	N/A	0	0
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	30/-40	55/-55	N/A	90	90

**Good Reported Braking Action**

MAX MANUAL	1250	70/-70	35/45	-55/195	30/-25	30/-30	N/A	70	155
AUTOBRAKE MAX	1335	75/-80	35/50	-60/200	25/-25	30/-30	N/A	75	170
AUTOBRAKE 2	1995	135/-140	60/85	-95/320	35/-40	55/-55	N/A	90	90

**Medium Reported Braking Action**

MAX MANUAL	1675	110/-110	50/70	-85/315	70/-60	40/-45	N/A	180	435
AUTOBRAKE MAX	1705	115/-115	50/75	-90/320	65/-55	45/-45	N/A	180	440
AUTOBRAKE 3	1785	110/-115	50/75	-90/330	50/-40	45/-50	N/A	125	390

**Poor Reported Braking Action**

MAX MANUAL	2140	155/-155	70/100	-130/495	170/-110	55/-60	N/A	365	975
AUTOBRAKE MAX	2145	155/-155	70/100	-130/495	170/-110	55/-60	N/A	360	975
AUTOBRAKE 3	2165	160/-155	70/100	-130/495	165/-105	55/-60	N/A	365	985

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## All Flaps Up Landing

## VREF40 + 55

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1195	155/-70	30/70	-40/135	15/-10	30/-30	35	35	70
AUTOBRAKE MAX	1725	85/-80	45/60	-55/180	5/-5	45/-45	70	0	5
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

## Good Reported Braking Action

MAX MANUAL	1635	85/-90	45/65	-65/220	35/-30	40/-45	45	105	240
AUTOBRAKE MAX	1860	90/-95	50/70	-70/235	25/-20	50/-50	65	80	215
AUTOBRAKE 2	3090	195/-215	105/145	-120/405	70/-75	95/-95	95	275	320

## Medium Reported Braking Action

MAX MANUAL	2305	145/-150	75/105	-100/360	90/-75	65/-65	60	295	735
AUTOBRAKE MAX	2380	145/-150	75/110	-105/365	85/-70	65/-65	70	300	760
AUTOBRAKE 3	2720	140/-160	85/120	-115/395	55/-50	80/-80	105	150	485

## Poor Reported Braking Action

MAX MANUAL	3050	215/-215	110/155	-155/570	215/-150	85/-90	75	640	1825
AUTOBRAKE MAX	3050	215/-215	110/155	-155/570	215/-140	85/-90	85	635	1810
AUTOBRAKE 3	3165	205/-210	110/155	-155/580	190/-130	90/-95	105	555	1750

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### ANTISKID INOPERATIVE (Flaps 15)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1570	95/-100	40/60	-75/265	45/-40	35/-40	60	125	295
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Good Reported Braking Action

MAX MANUAL	1760	115/-115	50/70	-90/325	70/-55	40/-45	65	185	460
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Medium Reported Braking Action

MAX MANUAL	2250	165/-160	70/105	-135/505	170/-110	55/-60	75	400	1135
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

#### Poor Reported Braking Action

MAX MANUAL	3015	240/-235	100/150	-220/935	1360/-260	65/-90	90	985	3725
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****ANTISKID INOPERATIVE (Flaps 30)****VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1510	90/-95	40/55	-75/260	45/-40	35/-35	60	110	265
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1685	105/-110	45/65	-85/320	65/-55	40/-40	65	165	405
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2140	150/-150	65/95	-130/495	165/-105	50/-55	75	350	970
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2845	225/-215	90/140	-215/915	1265/-245	60/-85	85	865	3105
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1480	90/-90	40/55	-75/260	45/-40	35/-35	60	105	250
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1650	105/-105	45/65	-85/315	65/-55	40/-40	65	155	375
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2090	150/-145	65/95	-130/490	165/-105	50/-55	75	325	885
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2765	215/-210	90/135	-210/905	1220/-240	60/-80	80	805	2815
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance  
Jammed or Restricted Flight Controls (Flaps 15)**
**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	880	60/-50	20/25	-30/110	10/-10	15/-20	30	15	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

**\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.**

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LEADING EDGE FLAPS TRANSIT (Flaps 15)**

**VREF15 + 15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	990	65/-55	20/30	-35/120	10/-10	20/-20	35	25	50
AUTOBRAKE MAX	1290	65/-70	30/40	-45/150	0/0	30/-30	60	0	0
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Good Reported Braking Action**

MAX MANUAL	1385	80/-80	35/50	-60/205	30/-30	35/-35	50	90	205
AUTOBRAKE MAX	1465	85/-85	40/55	-60/210	30/-25	35/-35	55	95	220
AUTOBRAKE 2	2345	155/-170	75/100	-105/350	30/-45	70/-65	100	95	95

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/85	-95/335	80/-65	50/-50	65	240	610
AUTOBRAKE MAX	1915	130/-130	60/85	-95/335	75/-60	50/-50	70	240	610
AUTOBRAKE 3	2025	125/-130	60/85	-95/350	55/-35	55/-55	95	165	540

**Poor Reported Braking Action**

MAX MANUAL	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE MAX	2470	185/-180	85/120	-140/525	195/-130	65/-70	75	510	1460
AUTOBRAKE 3	2475	185/-180	85/125	-140/525	195/-115	65/-70	90	505	1460

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM A (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	965	65/-50	20/30	-35/120	15/-10	20/-20	40	25	40
AUTOBRAKE MAX	1125	55/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

## Good Reported Braking Action

MAX MANUAL	1395	85/-85	40/55	-60/210	40/-35	35/-35	60	110	220
AUTOBRAKE MAX	1395	85/-90	40/55	-60/210	35/-25	35/-35	65	105	215
AUTOBRAKE 2	2050	135/-145	60/80	-95/325	0/-5	60/-60	125	0	0

## Medium Reported Braking Action

MAX MANUAL	1920	135/-135	60/85	-95/345	95/-75	50/-50	80	295	705
AUTOBRAKE MAX	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695
AUTOBRAKE 3	1905	135/-135	60/85	-95/345	100/-75	50/-50	80	290	695

## Poor Reported Braking Action

MAX MANUAL	2495	195/-190	85/125	-145/540	220/-145	65/-70	95	605	1765
AUTOBRAKE MAX	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765
AUTOBRAKE 3	2490	195/-190	85/125	-145/540	225/-150	65/-70	95	605	1765

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	935	60/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1070	55/-60	25/30	-40/135	0/0	25/-25	50	5	10
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1350	80/-80	35/50	-60/210	40/-35	30/-35	65	100	200
AUTOBRAKE MAX	1350	80/-85	35/50	-60/210	30/-30	30/-35	65	100	195
AUTOBRAKE 2	1930	125/-135	55/75	-95/315	0/0	55/-55	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	1830	125/-125	55/80	-95/340	90/-70	45/-50	80	260	615
AUTOBRAKE MAX	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610
AUTOBRAKE 3	1820	125/-125	55/80	-95/340	95/-75	45/-50	80	260	610

**Poor Reported Braking Action**

MAX MANUAL	2360	180/-175	80/115	-140/530	210/-135	60/-65	90	530	1475
AUTOBRAKE MAX	2355	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475
AUTOBRAKE 3	2360	180/-175	80/115	-140/530	215/-140	60/-65	90	530	1475

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM A (Flaps 40)

## VREF40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	935	55/-45	20/30	-35/115	15/-10	20/-20	45	25	35
AUTOBRAKE MAX	1045	55/-55	25/35	-40/135	5/0	25/-25	50	10	20
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

## Good Reported Braking Action

MAX MANUAL	1330	80/-80	35/50	-60/210	40/-35	30/-30	65	95	190
AUTOBRAKE MAX	1335	80/-85	35/55	-60/210	35/-30	30/-30	70	95	185
AUTOBRAKE 2	1860	120/-130	55/75	-90/310	0/0	50/-50	115	0	0

## Medium Reported Braking Action

MAX MANUAL	1790	125/-120	55/80	-95/335	90/-70	45/-45	80	240	560
AUTOBRAKE MAX	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560
AUTOBRAKE 3	1785	125/-120	55/80	-95/335	95/-75	45/-45	80	240	560

## Poor Reported Braking Action

MAX MANUAL	2285	175/-170	75/115	-140/525	205/-135	60/-65	90	480	1305
AUTOBRAKE MAX	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305
AUTOBRAKE 3	2290	175/-170	75/115	-140/525	210/-140	60/-65	90	480	1305

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1440	75/-80	35/50	-60/195	35/-30	35/-35	75	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1670	95/-100	45/60	-70/240	55/-45	40/-40	85	10	145
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2295	150/-150	70/100	-110/385	120/-95	55/-60	105	150	665
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2955	215/-210	95/145	-160/590	260/-175	75/-80	120	450	1910
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****LOSS OF SYSTEM B (Flaps 15)****VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1015	50/-55	25/30	-40/135	15/-15	20/-20	40	35	55
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1280	75/-75	35/45	-55/195	30/-25	30/-30	50	80	155
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	1755	120/-120	50/75	-90/325	80/-60	45/-45	65	225	510
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2285	175/-170	75/110	-135/515	190/-125	55/-65	80	475	1290
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1440	75/-80	35/50	-60/195	35/-30	35/-35	75	-10	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1670	95/-100	45/60	-70/240	55/-45	40/-40	85	10	145
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2295	150/-150	70/100	-110/385	120/-95	55/-60	105	150	665
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2955	215/-210	95/145	-160/590	260/-175	75/-80	120	450	1910
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## One Engine Inoperative Landing (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	890	60/-50	20/30	-35/110	10/-10	20/-20	35	0	20
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

## Good Reported Braking Action

MAX MANUAL	1260	75/-75	35/50	-55/200	30/-30	30/-30	50	0	85
AUTOBRAKE MAX	1340	80/-85	40/50	-60/205	30/-25	30/-30	55	0	90
AUTOBRAKE 2	2045	135/-145	65/90	-95/325	0/-10	60/-60	120	0	0

## Medium Reported Braking Action

MAX MANUAL	1800	120/-125	60/80	-95/340	90/-70	45/-50	70	0	270
AUTOBRAKE MAX	1815	125/-125	60/85	-95/345	85/-65	50/-50	80	0	270
AUTOBRAKE 3	1845	125/-130	60/85	-95/345	85/-55	50/-50	85	0	275

## Poor Reported Braking Action

MAX MANUAL	2470	185/-185	90/125	-150/560	245/-155	65/-70	85	0	685
AUTOBRAKE MAX	2470	185/-185	90/125	-150/560	250/-160	70/-70	85	0	685
AUTOBRAKE 3	2475	190/-190	90/125	-150/560	250/-150	70/-70	95	0	685

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### One Engine Inoperative Landing (Flaps 30)

#### VREF30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	860	55/-45	20/25	-30/110	10/-10	15/-15	35	0	15
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

#### Good Reported Braking Action

MAX MANUAL	1215	70/-75	35/45	-55/195	30/-25	30/-30	50	0	75
AUTOBRAKE MAX	1295	75/-80	35/50	-60/205	30/-25	30/-30	60	0	85
AUTOBRAKE 2	1920	125/-130	60/85	-95/315	5/-10	55/-55	115	0	0

#### Medium Reported Braking Action

MAX MANUAL	1710	115/-115	55/75	-90/335	90/-70	45/-45	65	0	235
AUTOBRAKE MAX	1730	115/-120	55/75	-95/335	80/-60	45/-45	75	0	235
AUTOBRAKE 3	1755	115/-120	55/80	-95/335	85/-55	45/-45	85	0	245

#### Poor Reported Braking Action

MAX MANUAL	2315	170/-170	80/115	-145/545	230/-145	65/-65	80	0	575
AUTOBRAKE MAX	2315	170/-170	80/115	-145/545	235/-150	65/-65	85	0	575
AUTOBRAKE 3	2330	175/-175	80/115	-145/545	230/-140	65/-65	90	0	580

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance  
Stabilizer Trim Inoperative (Flaps 15)**

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	880	60/-50	20/25	-30/110	10/-10	15/-20	30	15	40
AUTOBRAKE MAX	1125	60/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	30/45	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/45	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	60/85	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	50/70	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	50/70	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	50/70	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	70/105	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	70/105	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15)  
VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1025	80/-60	25/35	-35/125	10/-10	20/-20	35	25	55
AUTOBRAKE MAX	1400	65/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)**

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	880	60/-50	20/30	-30/110	10/-10	15/-20	30	15	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Good Reported Braking Action**

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

**Medium Reported Braking Action**

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

**Poor Reported Braking Action**

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### Trailing Edge Flap Asymmetry (Flap Lever 30)

#### VREF30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	855	50/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

#### Good Reported Braking Action

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

#### Medium Reported Braking Action

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

#### Poor Reported Braking Action

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15)  
 VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1025	80/-60	25/35	-35/125	10/-10	20/-20	35	25	55
AUTOBRAKE MAX	1400	65/-70	35/50	-50/160	5/-5	35/-35	65	0	5
AUTOBRAKE 2	2495	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Good Reported Braking Action**

MAX MANUAL	1410	75/-80	40/60	-60/205	30/-25	35/-35	45	85	195
AUTOBRAKE MAX	1540	80/-85	45/65	-60/215	25/-20	40/-40	60	90	215
AUTOBRAKE 2	2500	160/-175	90/125	-110/360	45/-55	75/-70	95	155	160

**Medium Reported Braking Action**

MAX MANUAL	1955	125/-125	65/95	-95/335	80/-65	50/-55	60	235	590
AUTOBRAKE MAX	2000	125/-130	70/100	-95/340	75/-60	50/-55	70	240	600
AUTOBRAKE 3	2180	125/-130	70/105	-100/360	50/-35	60/-60	100	135	450

**Poor Reported Braking Action**

MAX MANUAL	2555	185/-185	95/140	-140/530	195/-130	70/-75	75	505	1425
AUTOBRAKE MAX	2555	185/-180	95/140	-140/530	195/-130	70/-75	75	500	1420
AUTOBRAKE 3	2595	180/-180	95/140	-140/535	180/-110	70/-75	95	485	1410

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	880	60/-50	20/30	-30/110	10/-10	15/-20	30	15	40
AUTOBRAKE MAX	1125	60/-60	30/40	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

#### Good Reported Braking Action

MAX MANUAL	1210	70/-70	35/50	-55/190	25/-25	30/-30	45	70	155
AUTOBRAKE MAX	1280	75/-80	35/50	-55/195	25/-20	30/-30	50	75	170
AUTOBRAKE 2	2000	140/-150	70/90	-95/320	20/-30	55/-55	100	45	45

#### Medium Reported Braking Action

MAX MANUAL	1655	110/-110	55/75	-85/315	70/-55	40/-45	60	190	480
AUTOBRAKE MAX	1665	115/-115	55/80	-85/315	65/-50	40/-45	70	190	475
AUTOBRAKE 3	1735	115/-115	55/80	-90/325	55/-35	45/-45	90	145	440

#### Poor Reported Braking Action

MAX MANUAL	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE MAX	2155	165/-160	80/115	-130/500	175/-115	55/-60	75	415	1170
AUTOBRAKE 3	2155	165/-160	80/115	-130/500	175/-110	55/-60	75	415	1170

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40)  
VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	PER 5 KTS ABOVE VREF	ONE REV	NO REV
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA				

**Dry Runway**

MAX MANUAL	855	50/-45	20/25	-30/110	10/-10	15/-15	30	15	35
AUTOBRAKE MAX	1070	55/-60	25/35	-40/135	0/0	25/-25	50	0	0
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Good Reported Braking Action**

MAX MANUAL	1175	65/-70	30/45	-55/185	25/-25	25/-25	45	65	145
AUTOBRAKE MAX	1240	70/-75	35/50	-55/195	25/-20	30/-30	55	70	155
AUTOBRAKE 2	1885	125/-135	60/85	-90/310	20/-30	50/-50	90	45	45

**Medium Reported Braking Action**

MAX MANUAL	1585	105/-105	50/70	-85/310	70/-55	40/-40	60	170	425
AUTOBRAKE MAX	1600	110/-110	50/75	-85/310	65/-50	40/-40	65	170	420
AUTOBRAKE 3	1655	105/-110	50/75	-85/315	55/-35	40/-45	85	135	400

**Poor Reported Braking Action**

MAX MANUAL	2045	150/-150	70/105	-125/485	165/-110	50/-55	70	365	1000
AUTOBRAKE MAX	2050	150/-150	70/105	-125/485	170/-110	50/-55	70	365	1000
AUTOBRAKE 3	2050	155/-150	75/105	-125/485	170/-100	50/-55	80	365	1005

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### Trailing Edge Flaps Up Landing

#### VREF40 + 40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	60000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 60000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1080	100/-65	30/40	-35/125	10/-10	25/-25	30	25	60
AUTOBRAKE MAX	1525	75/-75	40/55	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

#### Good Reported Braking Action

MAX MANUAL	1480	80/-85	45/60	-60/205	30/-30	35/-35	45	90	200
AUTOBRAKE MAX	1655	80/-85	50/70	-65/220	25/-20	40/-40	65	75	195
AUTOBRAKE 2	2695	175/-190	100/135	-110/375	60/-65	80/-80	90	215	250

#### Medium Reported Braking Action

MAX MANUAL	2055	130/-135	70/100	-95/345	80/-65	55/-55	60	245	615
AUTOBRAKE MAX	2125	130/-135	75/105	-100/350	75/-60	55/-60	65	255	630
AUTOBRAKE 3	2385	130/-145	80/110	-105/375	50/-45	65/-70	100	130	420

#### Poor Reported Braking Action

MAX MANUAL	2700	190/-190	105/150	-145/540	195/-135	75/-80	75	530	1490
AUTOBRAKE MAX	2705	190/-190	105/150	-145/540	195/-125	75/-80	80	525	1480
AUTOBRAKE 3	2790	185/-190	105/150	-145/550	175/-115	75/-80	100	475	1445

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Recommended Brake Cooling Schedule

## Reference Brake Energy Per Brake (Millions of Foot Pounds)

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																		
				80			100			120			140			160			180			
				PRESSURE ALTITUDE (1000 FT)																		
				0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	
80	0	15.3	17.2	19.4	22.9	25.8	29.3	31.7	35.8	40.9	41.5	47.1	54.2	52.2	59.6	69.0	62.4	71.4	83.3			
	10	15.8	17.7	20.0	23.6	26.6	30.2	32.7	37.0	42.2	42.8	48.7	55.9	53.9	61.5	71.2	64.4	73.7	86.0			
	15	16.0	18.0	20.3	24.0	27.1	30.7	33.2	37.6	42.9	43.5	49.4	56.8	54.7	62.4	72.3	65.3	74.8	87.3			
	20	16.3	18.3	20.6	24.4	27.5	31.1	33.7	38.1	43.5	44.1	50.1	57.6	55.6	63.4	73.4	66.3	75.9	88.6			
	30	16.7	18.8	21.2	25.0	28.2	32.0	34.6	39.2	44.7	45.4	51.5	59.3	57.1	65.1	75.4	68.2	78.0	91.0			
	40	16.8	18.9	21.5	25.2	28.5	32.3	35.0	39.6	45.3	46.0	52.3	60.2	58.0	66.3	77.0	69.5	79.7	93.3			
50	16.8	19.0	21.4	25.3	28.6	32.5	35.2	40.0	45.8	46.4	52.9	61.1	58.8	67.4	78.5	70.7	81.3	95.6				
70	0	13.9	15.6	17.6	20.6	23.3	26.3	28.4	32.1	36.5	37.1	42.1	48.2	46.6	53.0	61.2	56.4	64.4	74.8			
	10	14.4	16.2	18.2	21.3	24.0	27.2	29.3	33.1	37.7	38.3	43.4	49.7	48.1	54.7	63.1	58.2	66.5	77.2			
	15	14.6	16.4	18.5	21.6	24.4	27.6	29.8	33.6	38.3	38.9	44.1	50.5	48.8	55.6	64.1	59.1	67.5	78.4			
	20	14.8	16.7	18.8	22.0	24.8	28.0	30.2	34.2	38.9	39.5	44.7	51.3	49.5	56.4	65.1	60.0	68.5	79.6			
	30	15.2	17.1	19.3	22.6	25.5	28.8	31.1	35.1	40.0	40.6	46.0	52.7	50.9	58.0	66.9	61.6	70.4	81.8			
	40	15.3	17.2	19.4	22.7	25.6	29.1	31.3	35.5	40.4	41.0	46.6	53.5	51.7	58.9	68.1	62.7	71.8	83.6			
50	15.3	17.2	19.4	22.8	25.8	29.2	31.5	35.7	40.8	41.4	47.1	54.2	52.3	59.7	69.3	63.7	73.1	85.4				
60	0	12.6	14.1	15.9	18.4	20.7	23.4	25.1	28.3	32.2	32.5	36.9	42.1	40.7	46.3	53.1	49.6	56.5	65.3			
	10	13.0	14.6	16.4	19.0	21.4	24.2	25.9	29.2	33.2	33.6	38.0	43.4	42.0	47.7	54.9	51.2	58.3	67.4			
	15	13.2	14.8	16.6	19.3	21.7	24.6	26.3	29.7	33.7	34.1	38.6	44.1	42.7	48.5	55.7	51.9	59.2	68.4			
	20	13.4	15.0	16.9	19.6	22.1	24.9	26.7	30.1	34.2	34.6	39.2	44.8	43.4	49.2	56.5	52.7	60.1	69.5			
	30	13.7	15.4	17.4	20.1	22.7	25.6	27.4	31.0	35.2	35.6	40.3	46.0	44.5	50.6	58.1	54.2	61.7	71.4			
	40	13.8	15.5	17.5	20.3	22.8	25.8	27.7	31.3	35.6	36.0	40.8	46.6	45.1	51.3	59.0	55.0	62.8	72.8			
50	13.8	15.5	17.5	20.3	22.9	25.9	27.8	31.5	35.8	36.2	41.1	47.1	45.6	51.9	59.9	55.7	63.8	74.2				
50	0	11.2	12.6	14.1	16.2	18.2	20.5	21.8	24.6	27.9	28.0	31.7	36.1	34.8	39.5	45.1	42.1	47.9	55.1			
	10	11.6	13.0	14.6	16.7	18.8	21.2	22.5	25.4	28.8	28.9	32.7	37.2	35.9	40.7	46.6	43.5	49.4	56.8			
	15	11.7	13.2	14.8	16.9	19.1	21.5	22.8	25.8	29.2	29.4	33.2	37.8	36.5	41.4	47.3	44.2	50.2	57.7			
	20	11.9	13.4	15.1	17.2	19.4	21.9	23.2	26.2	29.6	29.8	33.7	38.4	37.0	42.0	48.0	44.8	50.9	58.6			
	30	12.3	13.8	15.5	17.7	19.9	22.5	23.8	26.9	30.5	30.7	34.7	39.4	38.1	43.2	49.4	46.1	52.4	60.2			
	40	12.3	13.8	15.6	17.8	20.0	22.6	24.0	27.1	30.7	30.9	35.0	39.9	38.5	43.7	50.0	46.7	53.1	61.2			
50	12.3	13.8	15.6	17.8	20.1	22.7	24.1	27.2	30.9	31.1	35.2	40.2	38.8	44.1	50.6	47.2	53.8	62.1				
40	0	9.9	11.1	12.5	14.0	15.7	17.7	18.5	20.8	23.5	23.5	26.5	30.1	28.9	32.7	37.3	34.8	39.4	45.1			
	10	10.2	11.5	12.9	14.4	16.2	18.2	19.1	21.5	24.3	24.3	27.4	31.1	29.9	33.8	38.5	35.9	40.7	46.5			
	15	10.4	11.7	13.1	14.6	16.5	18.5	19.4	21.8	24.7	24.6	27.8	31.5	30.3	34.3	39.1	36.4	41.3	47.2			
	20	10.6	11.9	13.3	14.9	16.7	18.8	19.7	22.2	25.1	25.0	28.2	32.0	30.8	34.8	39.7	37.0	41.9	47.9			
	30	10.9	12.2	13.7	15.3	17.2	19.3	20.2	22.8	25.8	25.7	29.0	32.9	31.7	35.8	40.8	38.0	43.1	49.3			
	40	10.9	12.2	13.7	15.3	17.3	19.5	20.4	22.9	26.0	25.9	29.3	33.2	31.9	36.2	41.2	38.4	43.6	50.0			
50	10.9	12.2	13.8	15.4	17.3	19.5	20.4	23.0	26.1	26.0	29.4	33.4	32.1	36.4	41.6	38.7	44.0	50.5				

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

## Adjusted Brake Energy Per Brake (Millions of Foot Pounds)

## No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.5	15.8	24.6	33.8	43.5	53.5	63.6	73.9	84.2
	MAX AUTO	7.3	15.0	23.2	31.9	41.2	51.0	61.3	72.2	83.7
	AUTOBRAKE 3	7.0	14.2	21.8	29.7	38.1	47.1	56.7	67.1	78.3
	AUTOBRAKE 2	6.6	13.3	20.2	27.3	34.7	42.6	51.0	59.9	69.6
	AUTOBRAKE 1	6.3	12.4	18.6	24.9	31.6	38.6	46.2	54.4	63.5

**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule  
Adjusted Brake Energy Per Brake (Millions of Foot Pounds)  
Two Engine Detent Reverse Thrust**

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	6.9	14.5	22.7	31.4	40.4	49.7	59.3	68.9	78.5
	MAX AUTO	6.0	12.6	19.8	27.6	36.0	45.1	54.8	65.3	76.5
	AUTOBRAKE 3	4.5	9.5	15.1	21.3	28.1	35.6	43.7	52.5	62.0
	AUTOBRAKE 2	2.6	5.9	9.7	14.1	19.1	24.7	31.0	37.9	45.4
AUTOBRAKE 1		1.8	3.8	6.3	9.1	12.5	16.4	21.0	26.3	32.5

**Cooling Time (Minutes) - Category F Steel Brakes**

*(Note: A placard showing carbon brakes configuration will be put at the Center Forward Panel upon modification.)*

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED	10	20	30	40	50	60			

**Cooling Time (Minutes) - Category M Carbon Brakes**

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED	6.7	16.0	24.1	34.2	45.9	53.3			

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.





**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule - High Altitudes**

**Reference Brake Energy Per Brake (Millions of Foot Pounds)**

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*															
				60				100				140				180			
				PRESSURE ALTITUDE (1000 FT)															
		10	12	14	14.5	10	12	14	14.5	10	12	14	14.5	10	12	14	14.5		
80	0	11.4	11.9	12.5	12.7	29.3	30.9	32.7	33.2	54.2	57.7	61.6	62.7	83.3	89.5				
	10	11.7	12.3	12.9	13.1	30.2	31.9	33.8	34.3	55.9	59.5	63.6	64.8	86.0	92.3				
	15	11.9	12.5	13.1	13.3	30.7	32.4	34.3	34.8	56.8	60.4	64.6	65.8	87.3	93.7				
	20	12.1	12.7	13.3	13.5	31.1	32.9	34.8	35.3	57.6	61.3	65.5	66.7	88.6	95.0				
	30	12.4	13.0	13.7	13.9	32.0	33.8	35.8	36.3	59.3	63.0	67.4	68.6	91.0	97.7				
	40	12.5	13.1	13.8	14.0	32.3	34.1	36.1	36.7	60.2	64.2	68.6	69.9	93.3	100.3				
50	12.5	13.1	13.8	14.0	32.5	34.4	36.4	37.0	61.1	65.2	69.8	71.1	95.6	103.0					
70	0	10.5	11.0	11.5	11.7	26.3	27.8	29.4	29.8	48.2	51.2	54.6	55.6	74.8	80.1	86.3	88.0		
	10	10.8	11.3	11.9	12.1	27.2	28.7	30.3	30.8	49.7	52.8	56.3	57.3	77.2	82.7	89.0	90.8		
	15	11.0	11.5	12.1	12.3	27.6	29.1	30.8	31.3	50.5	53.6	57.2	58.2	78.4	83.9	90.4	92.2		
	20	11.2	11.7	12.3	12.5	28.0	29.6	31.3	31.8	51.3	54.4	58.1	59.1	79.6	85.2	91.7	93.5		
	30	11.5	12.0	12.6	12.8	28.8	30.4	32.1	32.6	52.7	56.0	59.7	60.7	81.8	87.5	94.2	96.1		
	40	11.5	12.1	12.7	12.9	29.1	30.7	32.4	32.9	53.5	56.9	60.7	61.8	83.6	89.7	96.7	98.7		
50	11.5	12.1	12.7	12.9	29.2	30.8	32.6	33.1	54.2	57.6	61.6	62.7	85.4	91.8	99.1	101.2			
60	0	9.6	10.1	10.6	10.7	23.4	24.7	26.1	26.5	42.1	44.6	47.5	48.3	65.3	69.8	74.8	76.3		
	10	9.9	10.4	10.9	11.1	24.2	25.5	26.9	27.3	43.4	46.1	49.0	49.8	67.4	72.0	77.2	78.7		
	15	10.1	10.6	11.1	11.3	24.6	25.9	27.3	27.7	44.1	46.8	49.7	50.6	68.4	73.1	78.4	79.9		
	20	10.2	10.7	11.3	11.4	24.9	26.3	27.7	28.1	44.8	47.5	50.5	51.4	69.5	74.2	79.6	81.1		
	30	10.5	11.0	11.6	11.8	25.6	27.0	28.5	28.9	46.0	48.8	51.9	52.8	71.4	76.2	81.8	83.4		
	40	10.5	11.1	11.6	11.8	25.8	27.2	28.7	29.2	46.6	49.5	52.7	53.6	72.8	77.8	83.6	85.3		
50	10.5	11.1	11.6	11.8	25.9	27.3	28.9	29.3	47.1	50.0	53.3	54.2	74.2	79.4	85.4	87.1			
50	0	8.8	9.2	9.7	9.8	20.5	21.6	22.8	23.1	36.1	38.1	40.5	41.2	55.1	58.6	62.7	63.8		
	10	9.1	9.5	10.0	10.1	21.2	22.3	23.5	23.9	37.2	39.4	41.8	42.5	56.8	60.5	64.7	65.9		
	15	9.2	9.6	10.1	10.3	21.5	22.7	23.9	24.3	37.8	40.0	42.4	43.1	57.7	61.4	65.7	66.9		
	20	9.3	9.8	10.3	10.4	21.9	23.0	24.3	24.6	38.4	40.6	43.1	43.8	58.6	62.3	66.6	67.8		
	30	9.6	10.1	10.6	10.7	22.5	23.6	24.9	25.3	39.4	41.7	44.3	45.0	60.2	64.1	68.5	69.7		
	40	9.6	10.1	10.6	10.8	22.6	23.8	25.1	25.5	39.9	42.2	44.8	45.6	61.2	65.2	69.8	71.1		
50	9.6	10.1	10.6	10.8	22.7	23.9	25.2	25.6	40.2	42.6	45.3	46.1	62.1	66.3	71.0	72.4			
40	0	8.1	8.4	8.9	9.0	17.7	18.6	19.6	19.9	30.1	31.8	33.6	34.2	45.1	47.8	50.9	51.8		
	10	8.3	8.7	9.2	9.3	18.2	19.2	20.2	20.5	31.1	32.8	34.7	35.3	46.5	49.3	52.6	53.5		
	15	8.5	8.9	9.3	9.4	18.5	19.5	20.5	20.8	31.5	33.3	35.3	35.8	47.2	50.1	53.4	54.3		
	20	8.6	9.0	9.4	9.6	18.8	19.8	20.8	21.1	32.0	33.8	35.8	36.4	47.9	50.9	54.2	55.1		
	30	8.8	9.2	9.7	9.8	19.3	20.3	21.4	21.7	32.9	34.8	36.8	37.4	49.3	52.3	55.7	56.6		
	40	8.9	9.3	9.7	9.9	19.5	20.5	21.6	21.9	33.2	35.1	37.2	37.8	50.0	53.0	56.5	57.5		
50	8.8	9.3	9.7	9.9	19.5	20.5	21.6	21.9	33.4	35.4	37.5	38.1	50.5	53.7	57.3	58.3			

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

### ADVISORY INFORMATION

#### Recommended Brake Cooling Schedule - High Altitudes Adjusted Brake Energy Per Brake (Millions of Foot Pounds) No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
AUTOBRAKE 1		6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

#### Two Engine Detent Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
AUTOBRAKE 1		1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

#### Cooling Time (Minutes) - Category F Steel Brakes

*(Note: A placard showing carbon brake configuration will be put at the Center Forward Panel upon modification.)*

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								CAUTION		FUSE PLUG MELT ZONE		
		16 & BELOW	17	20	23	25	28	32	33 TO 48					49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS												
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE				
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6							
GROUND	REQUIRED	10	20	30	40	50	60							

#### Cooling Time (Minutes) - Category M Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								CAUTION		FUSE PLUG MELT ZONE		
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41					41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS												
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE				
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6							
GROUND	REQUIRED	6.7	16.0	24.1	34.2	45.9	53.3							

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.



# Performance Inflight - QRH

## Engine Inoperative

# Chapter PI-QRH

## Section 32

### ENGINE INOP

#### Initial Max Continuous %N1

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)								
	25	27	29	31	33	35	37	39	41
20	96.8	96.6	96.3	96.1	95.9	95.4	95.0	94.7	93.9
15	97.4	97.2	96.9	96.8	96.6	96.2	95.7	95.5	94.8
10	98.0	97.8	97.5	97.4	97.4	96.9	96.5	96.3	95.7
5	98.3	98.6	98.3	98.1	98.1	97.7	97.3	97.1	96.6
0	97.5	98.7	99.2	99.0	98.9	98.5	98.2	98.0	97.5
-5	96.7	98.0	99.1	99.8	99.7	99.3	98.9	98.7	98.4
-10	96.0	97.2	98.4	99.6	100.5	100.2	99.8	99.6	99.4
-15	95.2	96.4	97.6	98.8	100.1	101.0	100.8	100.6	100.3
-20	94.4	95.6	96.8	98.0	99.3	100.5	101.0	100.8	100.6
-25	93.6	94.9	96.0	97.2	98.5	99.7	100.2	100.0	99.8
-30	92.8	94.1	95.2	96.4	97.7	98.8	99.4	99.2	99.0
-35	92.0	93.2	94.4	95.6	96.8	98.0	98.5	98.3	98.1
-40	91.2	92.4	93.5	94.7	96.0	97.1	97.6	97.4	97.2

#### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

## ENGINE INOP

### Max Continuous %N1 37000 FT to 29000 FT Pressure Altitudes

37000 FT PRESS ALT													TAT (°C)	
KLAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.5	97.4	98.3	99.2	100.1	99.6	98.8	97.6	96.3	94.7	93.2	91.8	
200	.63	96.0	96.9	97.8	98.7	99.6	100.4	100.1	99.3	98.4	97.5	96.3	95.2	
240	.74	95.0	96.0	96.8	97.7	98.6	99.4	100.3	100.7	100.0	99.2	98.4	97.5	
280	.86	94.3	95.2	96.1	97.0	97.8	98.7	99.5	100.4	101.2	100.9	100.0	99.1	
35000 FT PRESS ALT													TAT (°C)	
KLAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	96.3	97.2	98.1	99.0	99.9	99.8	99.0	98.0	96.8	95.4	94.0	92.7	
200	.60	96.1	97.0	97.9	98.8	99.7	100.6	100.5	99.6	98.6	97.6	96.5	95.4	
240	.71	95.0	95.9	96.8	97.7	98.6	99.4	100.3	100.8	100.2	99.5	98.6	97.7	
280	.82	93.8	94.6	95.5	96.4	97.2	98.1	98.9	99.8	100.6	100.3	99.5	98.8	
33000 FT PRESS ALT													TAT (°C)	
KLAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	97.1	98.0	98.9	99.8	100.6	100.0	99.1	97.9	96.7	95.3	93.9	92.6	
200	.58	97.0	97.9	98.8	99.7	100.6	101.4	100.6	99.6	98.6	97.5	96.3	95.1	
240	.68	95.9	96.8	97.7	98.5	99.4	100.2	101.1	100.9	100.2	99.4	98.4	97.4	
280	.79	94.3	95.1	96.0	96.8	97.7	98.5	99.3	100.2	100.5	99.7	98.9	98.1	
320	.89	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	100.3	101.1	100.7	99.8	
31000 FT PRESS ALT													TAT (°C)	
KLAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	97.0	97.9	98.8	99.7	100.5	101.1	100.2	99.2	98.0	96.6	95.2	93.9	
200	.55	97.0	97.9	98.8	99.7	100.5	101.4	101.6	100.7	99.7	98.6	97.4	96.2	
240	.66	95.6	96.5	97.4	98.3	99.1	100.0	100.8	101.3	100.5	99.8	98.8	97.8	
280	.76	93.8	94.7	95.5	96.4	97.2	98.0	98.8	99.7	100.5	99.8	98.9	98.0	
320	.85	92.4	93.2	94.1	94.9	95.7	96.5	97.4	98.2	98.9	99.7	99.9	99.1	
29000 FT PRESS ALT													TAT (°C)	
KLAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	97.8	98.7	99.6	100.4	101.3	101.2	100.2	99.1	97.9	96.4	95.1	93.8	
200	.53	97.5	98.4	99.3	100.2	101.0	101.9	101.3	100.4	99.3	98.2	96.9	95.8	
240	.63	96.3	97.1	98.0	98.9	99.7	100.5	101.4	101.1	100.2	99.2	98.3	97.2	
280	.73	94.2	95.0	95.9	96.7	97.5	98.3	99.2	99.9	100.1	99.2	98.2	97.5	
320	.82	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	98.5	97.6	
360	.91	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.7	98.5	99.2	100.0	100.1	

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7



**ENGINE INOP**

**Max Continuous %N1  
 27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT		TAT (°C)											
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	97.7	98.6	99.5	100.3	101.2	102.0	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.5	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT		TAT (°C)											
KIASS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.5	99.4	100.2	101.1	101.9	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.8	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT		TAT (°C)											
CIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.5	99.3	100.2	101.1	101.9	102.7	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT		TAT (°C)											
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT		TAT (°C)											
CIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0

## ENGINE INOP

### Max Continuous %N1 18000 FT to 12000 FT Pressure Altitudes

18000 FT PRESS ALT													TAT (°C)	
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.34	97.0	97.8	98.7	99.5	100.3	101.1	101.1	100.3	99.2	98.1	97.0	95.9	
200	.42	96.3	97.2	98.0	98.8	99.6	100.4	100.9	100.9	100.4	99.3	98.3	97.3	
240	.51	96.3	97.1	97.9	98.7	99.5	100.3	101.1	101.4	101.1	99.9	99.0	98.1	
280	.59	96.3	97.1	97.9	98.7	99.5	100.3	101.0	101.8	101.6	100.5	99.6	98.8	
320	.67	94.8	95.6	96.4	97.2	97.9	98.7	99.5	100.2	101.0	100.9	100.0	99.2	
360	.75	93.0	93.8	94.6	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.2	99.6	
16000 FT PRESS ALT													TAT (°C)	
KLAS	M	-30	-25	-20	-15	-10	-5	0	5	10	15	20	25	
160	.33	96.7	97.5	98.3	99.1	99.9	100.7	101.1	99.9	98.7	97.7	96.7	95.8	
200	.41	96.6	97.4	98.2	99.0	99.8	100.6	101.4	101.4	100.3	99.2	98.4	97.5	
240	.49	96.0	96.8	97.6	98.4	99.2	100.0	100.7	101.5	101.4	100.1	99.2	98.4	
280	.57	95.4	96.2	97.0	97.8	98.6	99.3	100.1	100.9	101.6	100.7	99.6	98.8	
320	.64	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	100.0	100.7	99.9	99.1	
360	.72	91.8	92.6	93.5	94.3	95.1	95.9	96.6	97.4	98.2	99.0	99.7	99.3	
14000 FT PRESS ALT													TAT (°C)	
KLAS	M	-25	-20	-15	-10	-5	0	5	10	15	20	25	30	
160	.31	95.6	96.4	97.2	97.9	98.7	99.5	99.3	98.2	97.3	96.4	95.5	94.6	
200	.39	94.5	95.3	96.1	96.8	97.6	98.4	99.1	99.0	98.9	98.2	97.5	96.7	
240	.47	95.0	95.8	96.6	97.4	98.1	98.9	99.6	100.1	99.4	98.7	98.0	97.3	
280	.54	94.8	95.6	96.4	97.2	98.0	98.7	99.5	100.2	100.4	99.4	98.5	97.8	
320	.62	93.3	94.2	94.9	95.7	96.5	97.3	98.0	98.8	99.5	99.7	98.9	98.1	
360	.69	91.5	92.3	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	99.0	98.4	
12000 FT PRESS ALT													TAT (°C)	
KLAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35	
160	.30	95.6	96.3	97.1	97.9	98.6	99.4	98.6	97.4	96.4	95.6	94.7	93.8	
200	.38	94.5	95.3	96.1	96.9	97.6	98.4	99.0	98.8	98.6	97.9	97.1	96.3	
240	.45	94.3	95.1	95.9	96.7	97.5	98.2	99.0	99.0	98.4	97.8	97.1	96.4	
280	.52	94.8	95.6	96.4	97.1	97.9	98.6	99.4	100.1	99.6	98.7	98.0	97.3	
320	.60	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.8	99.5	99.0	98.2	97.5	
360	.67	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.8	

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	12	14	16	18
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.9	-0.9
ENGINE & WING ANTI-ICE ON	-3.2	-3.4	-3.4	-3.5

## ENGINE INOP

### Max Continuous %N1

#### 10000 FT to 1000 FT Pressure Altitudes

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	94.5	95.3	96.1	96.9	97.6	98.4	99.1	97.9	96.8	96.0	95.1	94.3
200	.36	93.6	94.4	95.2	96.0	96.8	97.5	98.3	98.5	98.1	97.6	96.8	96.0
240	.43	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.0	97.4	96.8	96.1
280	.51	93.7	94.5	95.3	96.1	96.9	97.7	98.4	99.2	99.7	98.9	98.0	97.3
320	.58	92.3	93.1	93.9	94.8	95.5	96.3	97.1	97.9	98.7	99.0	98.3	97.6
360	.65	90.7	91.5	92.3	93.1	93.9	94.7	95.5	96.3	97.1	97.8	98.2	97.7
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	92.1	92.9	93.7	94.5	95.3	96.1	96.7	96.6	96.4	95.7	94.9	94.1
200	.33	91.6	92.4	93.2	94.0	94.8	95.6	96.3	96.6	96.6	96.1	95.4	94.7
240	.40	90.8	91.6	92.4	93.2	94.0	94.8	95.5	96.2	96.1	96.0	95.4	94.7
280	.46	90.3	91.1	91.9	92.7	93.5	94.3	95.0	95.8	96.2	96.1	95.8	95.2
320	.53	89.6	90.4	91.2	92.0	92.8	93.6	94.4	95.1	95.9	96.2	96.5	96.1
360	.59	88.5	89.3	90.1	90.9	91.7	92.5	93.2	94.0	94.8	95.5	95.9	96.2
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	91.1	91.9	92.7	93.5	94.3	95.1	95.6	95.9	95.8	95.1	94.3	93.5
200	.32	90.7	91.5	92.3	93.1	93.8	94.6	95.4	95.7	96.1	95.4	94.7	93.9
240	.38	90.0	90.8	91.6	92.4	93.2	93.9	94.7	95.3	95.7	95.7	95.0	94.3
280	.45	89.4	90.2	91.0	91.8	92.5	93.3	94.1	94.8	95.1	95.4	94.9	94.2
320	.51	88.7	89.5	90.3	91.1	91.9	92.6	93.4	94.1	94.9	95.4	96.0	95.3
360	.57	87.8	88.6	89.3	90.1	90.9	91.6	92.4	93.1	93.9	94.6	95.2	95.5
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	89.1	89.9	90.7	91.5	92.3	93.0	93.8	94.5	95.1	94.9	94.2	93.5
200	.31	88.8	89.6	90.4	91.2	91.9	92.7	93.5	94.2	94.8	95.2	94.5	93.8
240	.37	88.3	89.0	89.8	90.6	91.4	92.1	92.9	93.6	94.3	95.0	94.7	94.0
280	.43	87.7	88.5	89.3	90.0	90.8	91.6	92.3	93.1	93.8	94.3	94.7	94.0
320	.49	87.1	87.9	88.6	89.4	90.2	90.9	91.7	92.4	93.1	93.9	94.6	94.8
360	.55	86.2	87.0	87.8	88.6	89.3	90.1	90.8	91.5	92.3	93.0	93.7	94.5

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-3.1	-3.2

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Driftdown Speed/Level Off Altitude

#### 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	82	271	18700	17400	15900
80	77	264	20300	19100	17700
75	72	256	21700	20700	19500
70	67	247	23200	22300	21200
65	62	238	24900	23900	22900
60	57	229	27000	25900	24800
55	53	220	29200	28300	27100
50	48	210	31300	30600	29500
45	43	200	33400	32700	31800
40	38	190	35800	35100	34200

Includes APU fuel burn.



## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Driftdown/LRC Cruise Range Capability Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
138	128	120	112	106	100	95	90	86	82	78
276	256	240	225	212	200	190	180	172	164	157
414	385	359	337	317	300	284	270	257	246	235
552	513	479	449	423	400	379	360	343	328	314
690	641	599	562	529	500	474	450	429	410	392
828	770	719	674	635	600	569	540	515	492	470
966	898	839	787	741	700	663	630	601	573	549
1105	1027	959	899	847	800	758	720	686	655	627
1243	1155	1079	1012	953	900	853	811	772	737	705
1382	1284	1199	1124	1058	1000	948	901	858	819	784
1520	1412	1319	1237	1164	1100	1042	990	944	901	862
1659	1541	1439	1349	1270	1200	1137	1080	1029	983	940
1797	1670	1559	1462	1376	1300	1232	1170	1115	1064	1018
1936	1798	1679	1574	1482	1400	1327	1260	1201	1146	1096
2075	1927	1799	1687	1588	1500	1421	1350	1286	1228	1175
2214	2056	1919	1800	1694	1600	1516	1440	1372	1309	1253
2353	2185	2040	1912	1800	1700	1611	1530	1457	1391	1331
2492	2314	2160	2025	1906	1800	1705	1620	1543	1473	1409

#### Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.5	0:16
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.2	1.2	1.3	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0	2.1	0:49
400	1.6	1.8	1.9	2.0	2.2	2.3	2.5	2.6	2.8	2.9	1:06
500	2.0	2.2	2.4	2.5	2.7	2.9	3.1	3.3	3.5	3.7	1:22
600	2.4	2.6	2.8	3.1	3.3	3.5	3.8	4.0	4.2	4.5	1:38
700	2.8	3.1	3.3	3.6	3.9	4.1	4.4	4.7	4.9	5.2	1:55
800	3.2	3.5	3.8	4.1	4.4	4.7	5.0	5.3	5.6	6.0	2:11
900	3.6	3.9	4.2	4.6	4.9	5.3	5.6	6.0	6.3	6.7	2:28
1000	3.9	4.3	4.7	5.1	5.5	5.9	6.2	6.6	7.0	7.4	2:45
1100	4.3	4.7	5.1	5.6	6.0	6.4	6.8	7.3	7.7	8.2	3:01
1200	4.7	5.1	5.6	6.0	6.5	7.0	7.5	7.9	8.4	8.9	3:18
1300	5.0	5.5	6.0	6.5	7.0	7.6	8.1	8.6	9.1	9.6	3:34
1400	5.4	5.9	6.5	7.0	7.6	8.1	8.6	9.2	9.7	10.3	3:51
1500	5.8	6.3	6.9	7.5	8.1	8.7	9.2	9.8	10.4	11.0	4:08
1600	6.1	6.7	7.3	8.0	8.6	9.2	9.8	10.5	11.1	11.7	4:24
1700	6.5	7.1	7.8	8.4	9.1	9.8	10.4	11.1	11.7	12.4	4:41
1800	6.8	7.5	8.2	8.9	9.6	10.3	11.0	11.7	12.4	13.1	4:58

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at Long Range Cruise speed.

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
80	18100	16400	14000
75	20100	18500	16600
70	21600	20500	18800
65	23100	22100	20700
60	24800	23800	22500
55	27300	25900	24400
50	29800	28800	27200
45	32100	31300	30100
40	34500	33700	32700

With engine anti-ice on, decrease altitude capability by 1300 ft.

With engine and wing anti-ice on, decrease altitude capability by 5500 ft.

## ENGINE INOP

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	15	17	19	21	25	27	29	31
85	%N1	90.9	94.6	96.8						
	MACH	.557	.596	.612						
	KIAS	309	302	298						
	FF/ENG	2970	2937	2952						
80	%N1	89.3	93.0	94.8	97.4					
	MACH	.542	.585	.600	.617					
	KIAS	301	296	292	289					
	FF/ENG	2794	2768	2755	2784					
75	%N1	87.7	91.5	93.0	95.1	97.9				
	MACH	.527	.573	.588	.604	.622				
	KIAS	292	290	286	283	280				
	FF/ENG	2618	2608	2581	2576	2624				
70	%N1	85.9	89.8	91.4	92.9	95.2				
	MACH	.510	.557	.576	.590	.607				
	KIAS	282	281	280	276	273				
	FF/ENG	2442	2435	2423	2395	2402				
65	%N1	83.9	87.9	89.5	91.1	92.8				
	MACH	.492	.540	.559	.577	.592				
	KIAS	272	272	272	270	266				
	FF/ENG	2265	2261	2251	2237	2215				
60	%N1	81.9	85.9	87.5	89.1	90.7	95.1			
	MACH	.473	.520	.540	.560	.578	.610			
	KIAS	262	262	262	261	260	253			
	FF/ENG	2088	2086	2077	2067	2055	2066			
55	%N1	79.6	83.6	85.3	86.9	88.6	92.2	94.9	98.4	
	MACH	.455	.499	.519	.539	.559	.593	.610	.631	
	KIAS	251	251	252	251	251	245	242	241	
	FF/ENG	1917	1910	1903	1894	1886	1868	1897	1972	
50	%N1	77.2	81.2	82.8	84.5	86.2	89.5	91.5	94.3	97.9
	MACH	.435	.477	.496	.516	.536	.576	.592	.609	.630
	KIAS	241	240	240	240	240	238	234	232	230
	FF/ENG	1754	1733	1728	1721	1714	1703	1700	1725	1795
45	%N1	74.8	78.5	80.1	81.8	83.5	86.9	88.5	90.5	93.5
	MACH	.416	.454	.471	.490	.511	.552	.572	.589	.606
	KIAS	230	228	228	228	228	228	226	223	220
	FF/ENG	1596	1564	1554	1546	1542	1533	1535	1533	1551
40	%N1	72.1	75.6	77.2	78.8	80.5	83.9	85.6	87.2	89.2
	MACH	.395	.431	.447	.464	.482	.524	.545	.566	.584
	KIAS	218	216	216	215	215	215	215	214	212
	FF/ENG	1442	1402	1388	1376	1367	1364	1366	1368	1366

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
297	272	249	230	214	200	190	180	172	164	157
599	546	500	461	429	400	379	361	344	328	315
902	822	751	693	644	600	569	541	516	492	472
1206	1099	1004	926	859	800	759	722	687	656	629
1513	1377	1257	1158	1074	1000	949	902	859	820	786
1821	1656	1511	1391	1290	1200	1138	1081	1030	983	942
2132	1937	1766	1625	1506	1400	1328	1262	1202	1147	1098
2444	2219	2022	1859	1722	1600	1517	1441	1372	1310	1254
2759	2502	2278	2093	1938	1800	1707	1621	1543	1473	1410

#### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.3	0:43	1.2	0:41	1.0	0:39	0.9	0:38	0.9	0:37
400	2.8	1:23	2.5	1:19	2.3	1:15	2.1	1:12	2.0	1:09
600	4.2	2:04	3.8	1:57	3.5	1:51	3.3	1:46	3.1	1:42
800	5.5	2:45	5.1	2:36	4.7	2:27	4.4	2:20	4.2	2:15
1000	6.9	3:27	6.4	3:15	6.0	3:04	5.5	2:55	5.3	2:48
1200	8.3	4:09	7.7	3:54	7.1	3:41	6.7	3:29	6.4	3:22
1400	9.6	4:52	9.0	4:35	8.3	4:18	7.8	4:05	7.4	3:55
1600	10.9	5:35	10.2	5:15	9.5	4:56	8.8	4:40	8.5	4:29
1800	12.3	6:19	11.4	5:56	10.6	5:34	9.9	5:16	9.5	5:03

#### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.1	-0.1	0.0	0.1	0.3
2	-0.3	-0.1	0.0	0.3	0.6
3	-0.4	-0.2	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.6	1.4
5	-0.7	-0.4	0.0	0.8	1.7
6	-0.9	-0.4	0.0	1.0	2.1
7	-1.0	-0.5	0.0	1.1	2.4
8	-1.2	-0.6	0.0	1.2	2.7
9	-1.4	-0.7	0.0	1.4	3.0
10	-1.5	-0.8	0.0	1.5	3.3
11	-1.7	-0.8	0.0	1.6	3.6
12	-1.8	-0.9	0.0	1.8	3.9
13	-2.0	-1.0	0.0	1.9	4.2

Includes APU fuel burn

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Holding

### Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
80	%N1	79.3	82.2	86.4	90.9	98.0			
	KIAS	244	245	246	247	249			
	FF/ENG	2560	2550	2560	2600	2730			
75	%N1	77.6	80.3	84.6	89.0	94.8			
	KIAS	236	237	238	239	241			
	FF/ENG	2400	2390	2390	2420	2480			
70	%N1	75.7	78.4	82.7	87.0	92.0			
	KIAS	228	229	230	231	232			
	FF/ENG	2240	2230	2220	2240	2270			
65	%N1	73.6	76.5	80.6	84.9	89.5	97.4		
	KIAS	220	220	222	223	224	225		
	FF/ENG	2080	2070	2060	2060	2080	2220		
60	%N1	71.3	74.3	78.3	82.7	87.2	93.4		
	KIAS	211	212	213	213	215	216		
	FF/ENG	1920	1910	1900	1900	1900	1960		
55	%N1	69.0	71.9	76.0	80.3	84.7	89.8		
	KIAS	202	203	203	204	205	206		
	FF/ENG	1770	1750	1740	1730	1720	1750		
50	%N1	66.5	69.2	73.5	77.6	82.1	86.8	94.6	
	KIAS	192	193	194	195	195	197	198	
	FF/ENG	1620	1600	1580	1570	1560	1570	1670	
45	%N1	63.8	66.5	70.6	74.8	79.3	83.8	89.4	
	KIAS	184	184	184	184	185	186	187	
	FF/ENG	1480	1450	1430	1410	1390	1400	1440	
40	%N1	60.6	63.5	67.5	71.8	76.0	80.6	85.3	93.9
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1330	1310	1280	1260	1240	1230	1260	1350

This table includes 5% additional fuel for holding in a racetrack pattern.

**ENGINE INOP**

**ADVISORY INFORMATION**

**Gear Down Landing Rate of Climb Available  
Flaps 15**

**TO BE SUPPLIED**

**Flaps 30**

**TO BE SUPPLIED**

**Gear Down Landing Rate of Climb Available - High Altitude  
Flaps 15**

**TO BE SUPPLIED**

## **ENGINE INOP**

### **ADVISORY INFORMATION**

**Gear Down Landing Rate of Climb Available - High Altitude  
Flaps 30**

# TO BE SUPPLIED

Intentionally  
Blank





## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 33

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15600	12500	9400
80	18500	15600	12700
75	21200	18500	15700
70	23700	21500	18600
65	26200	24500	21900
60	28700	27200	25400
55	30900	29700	28200
50	33000	32000	30800
45	35200	34200	33100
40	37600	36600	35500

# GEAR DOWN

## Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	21	23	25	27	29	31	33	35	37
85	%N1	85.9									
	MACH	.482									
	KIAS	267									
	FF/ENG	2417									
80	%N1	84.2									
	MACH	.468									
	KIAS	259									
	FF/ENG	2266									
75	%N1	82.5	91.7								
	MACH	.454	.554								
	KIAS	251	248								
	FF/ENG	2116	2095								
70	%N1	80.5	89.8	91.7	94.3						
	MACH	.440	.541	.557	.575						
	KIAS	243	242	240	238						
	FF/ENG	1969	1955	1943	1965						
65	%N1	78.5	87.8	89.5	91.5	94.4					
	MACH	.425	.524	.543	.560	.578					
	KIAS	235	234	233	231	229					
	FF/ENG	1826	1807	1800	1797	1826					
60	%N1	76.4	85.6	87.4	89.1	91.2	94.4				
	MACH	.409	.504	.525	.544	.562	.580				
	KIAS	226	225	225	224	222	220				
	FF/ENG	1686	1656	1655	1652	1656	1686				
55	%N1	74.2	83.3	85.0	86.8	88.5	90.8	94.0			
	MACH	.393	.484	.504	.525	.545	.562	.581			
	KIAS	217	216	216	216	215	213	211			
	FF/ENG	1548	1509	1506	1509	1511	1515	1545			
50	%N1	71.7	80.7	82.4	84.2	86.0	87.7	90.0	93.3		
	MACH	.376	.463	.482	.502	.523	.544	.561	.580		
	KIAS	207	206	206	206	206	205	203	201		
	FF/ENG	1412	1364	1361	1362	1368	1371	1373	1401		
45	%N1	68.9	77.9	79.6	81.4	83.1	84.9	86.7	89.0	92.3	
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578	
	KIAS	197	196	196	196	196	196	195	193	191	
	FF/ENG	1281	1223	1217	1218	1224	1229	1231	1231	1255	
40	%N1	66.0	74.8	76.5	78.2	80.0	81.7	83.6	85.4	87.5	91.3
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554	.573
	KIAS	187	185	185	185	185	185	185	185	183	181
	FF/ENG	1156	1089	1077	1076	1082	1086	1088	1090	1090	1113

## GEAR DOWN

### Long Range Cruise Enroute Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2380	2102	1865	1680	1530	1400	1320	1247	1181	1122	1070
2742	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3111	2736	2418	2171	1972	1800	1695	1600	1514	1438	1371

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.3	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.3	1:54
800	9.7	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.2	3:50	10.1	3:31	9.4	3:18	8.9	3:08
1200	14.3	4:56	13.4	4:39	12.0	4:14	11.3	3:59	10.7	3:46
1400	16.6	5:49	15.5	5:28	13.9	4:58	13.1	4:40	12.4	4:24
1600	18.8	6:43	17.5	6:18	15.8	5:44	14.8	5:22	14.0	5:03
1800	20.9	7:38	19.6	7:10	17.6	6:30	16.5	6:05	15.7	5:43

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.4
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.4	-0.7	0.0	1.2	2.6
10	-1.7	-0.9	0.0	1.4	3.2
12	-2.1	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.8	-1.4	0.0	2.0	4.6
18	-3.2	-1.6	0.0	2.2	5.0
20	-3.5	-1.7	0.0	2.4	5.3
22	-3.9	-1.9	0.0	2.5	5.6

## GEAR DOWN

### Descent

#### VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	270	90
39000	21	270	86
37000	20	260	81
35000	19	260	77
33000	19	250	73
31000	18	250	68
29000	17	240	64
27000	16	240	60
25000	15	230	56
23000	15	220	52
21000	14	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	9	160	26
5000	6	130	16
1500	4	100	9

Allowances for a straight-in approach are included.

## GEAR DOWN

### Holding

#### Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
80	%N1	73.9	76.7	80.8	85.1	89.7			
	KIAS	224	224	224	224	224			
	FF/ENG	2090	2080	2070	2080	2090			
75	%N1	72.2	75.2	79.1	83.5	88.0	94.4		
	KIAS	219	219	219	219	219	219		
	FF/ENG	1980	1960	1950	1950	1950	2020		
70	%N1	70.4	73.4	77.4	81.7	86.2	91.5		
	KIAS	214	214	214	214	214	214		
	FF/ENG	1860	1840	1830	1820	1820	1850		
65	%N1	68.6	71.5	75.6	79.9	84.3	89.0		
	KIAS	209	209	209	209	209	209		
	FF/ENG	1750	1720	1710	1700	1690	1710		
60	%N1	66.7	69.5	73.7	77.8	82.2	86.8	93.9	
	KIAS	203	203	203	203	203	203	203	
	FF/ENG	1630	1610	1590	1580	1560	1570	1650	
55	%N1	64.7	67.4	71.6	75.6	80.0	84.6	90.1	
	KIAS	197	197	197	197	197	197	197	
	FF/ENG	1520	1490	1470	1460	1440	1440	1480	
50	%N1	62.3	65.2	69.2	73.4	77.7	82.2	86.9	
	KIAS	190	190	190	190	190	190	190	
	FF/ENG	1400	1380	1360	1340	1320	1310	1340	
45	%N1	59.9	62.8	66.8	71.1	75.2	79.7	84.3	91.1
	KIAS	184	184	184	184	184	184	184	184
	FF/ENG	1290	1270	1250	1230	1200	1190	1210	1250
40	%N1	57.5	60.2	64.3	68.4	72.7	77.0	81.5	86.5
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1180	1160	1140	1120	1090	1070	1090	1100

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 34

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	70	218	4400	3200	2400
70	66	213	7700	6600	5300
65	62	208	10300	9500	8200
60	57	202	12600	12000	11200
55	52	196	15500	14500	13900
50	47	190	17800	17400	16500
45	43	184	20900	20100	19200
40	38	177	23300	22500	21700

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
65	4700	3300	2400
60	9300	8100	6600
55	12300	11500	10700
50	16100	14500	13900
45	18500	18100	17300
40	22400	21600	20700

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
65	%N1	92.5	94.3								
	MACH	.376	.389								
	KIAS	228	227								
	FF/ENG	3467	3476								
60	%N1	90.1	91.8	93.6							
	MACH	.364	.375	.388							
	KIAS	220	219	218							
	FF/ENG	3180	3181	3188							
55	%N1	87.6	89.2	90.9	92.7	95.2					
	MACH	.351	.362	.374	.387	.400					
	KIAS	212	211	210	209	209					
	FF/ENG	2909	2898	2897	2904	2940					
50	%N1	85.1	86.6	88.1	89.8	91.6	94.1	98.0			
	MACH	.338	.348	.359	.371	.384	.398	.412			
	KIAS	204	203	202	201	200	199	198			
	FF/ENG	2652	2632	2618	2616	2624	2647	2725			
45	%N1	82.4	83.8	85.3	86.8	88.5	90.3	92.6	96.4		
	MACH	.325	.334	.344	.355	.367	.380	.393	.408		
	KIAS	196	195	193	192	191	190	189	189		
	FF/ENG	2407	2379	2358	2344	2341	2343	2350	2406		
40	%N1	79.5	80.8	82.2	83.7	85.2	86.9	88.7	90.7	93.9	98.2
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.417
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2178	2141	2111	2090	2075	2066	2060	2057	2091	2183



## GEAR DOWN

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1652	1430	1244	1103	994	900	838	782	733	690	653
1844	1595	1385	1228	1105	1000	931	868	813	765	724

#### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.2	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.6	1:15	3.5	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	5.9	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.0	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.5	3:58	10.8	3:46	10.5	3:35
1000	12.7	4:25	12.0	4:12	11.6	3:59

#### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.7	-0.4	0.0	0.7	1.3
5	-0.9	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.1	2.0
7	-1.2	-0.6	0.0	1.2	2.4
8	-1.4	-0.7	0.0	1.4	2.8
9	-1.5	-0.8	0.0	1.6	3.1
10	-1.7	-0.9	0.0	1.8	3.5
11	-1.9	-0.9	0.0	2.0	3.8
12	-2.0	-1.0	0.0	2.1	4.2
13	-2.2	-1.1	0.0	2.3	4.6
14	-2.4	-1.2	0.0	2.5	5.0

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
70	%N1	89.1	92.3		
	KIAS	214	214		
	FF/ENG	3560	3600		
65	%N1	87.1	90.1	95.4	
	KIAS	209	209	209	
	FF/ENG	3310	3330	3410	
60	%N1	84.8	87.8	92.5	
	KIAS	203	203	203	
	FF/ENG	3060	3070	3110	
55	%N1	82.5	85.5	90.0	96.7
	KIAS	197	197	197	197
	FF/ENG	2820	2820	2840	2960
50	%N1	79.9	82.9	87.3	92.4
	KIAS	190	190	190	190
	FF/ENG	2580	2570	2580	2630
45	%N1	77.4	80.2	84.6	89.3
	KIAS	184	184	184	184
	FF/ENG	2370	2350	2340	2370
40	%N1	74.7	77.4	81.8	86.2
	KIAS	177	177	177	177
	FF/ENG	2150	2130	2110	2120

This table includes 5% additional fuel for holding in a racetrack pattern.

**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 35**

---

**Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

---

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

---

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.







737-800W CFM56-7B24 KG M FAA CATC/N

**Pkg Model Identification . . . . . PI-QRH.ModID.40.1**

**General . . . . . PI-QRH.40.1**

- Flight With Unreliable Airspeed/
- Turbulent Air Penetration . . . . . PI-QRH.40.1
- Max Climb %N1 . . . . . PI-QRH.40.3
- Go-around %N1 . . . . . PI-QRH.40.4
- VREF . . . . . PI-QRH.40.5

**Advisory Information . . . . . PI-QRH.41.1**

- Normal Configuration Landing Distance . . . . . PI-QRH.41.1
- Non-Normal Configuration Landing Distance . . . . . PI-QRH.41.4
  - Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.41.4
  - Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.41.5
  - Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.41.6
  - All Flaps Up Landing . . . . . PI-QRH.41.7
  - ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.41.8
  - ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.41.9
  - ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.41.10
  - Jammed or Restricted Flight Controls (Flaps 15) . . PI-QRH.41.11
  - LEADING EDGE FLAPS TRANSIT (Flaps 15) . PI-QRH.41.12
  - LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.41.13
  - LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.41.14
  - LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.41.15
  - LOSS OF SYSTEM A AND SYSTEM B  
(Flaps 15). . . . . PI-QRH.41.16
  - LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.41.17
  - MANUAL REVERSION (Flaps 15). . . . . PI-QRH.41.18
  - One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.41.19
  - One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.41.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.41.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.41.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.41.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.41.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.41.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.41.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.41.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.41.28
Recommended Brake Cooling Schedule. . . . .	PI-QRH.41.29
<b>Engine Inoperative . . . . .</b>	<b>PI-QRH.42.1</b>
Initial Max Continuous %N1 . . . . .	PI-QRH.42.1
Max Continuous %N1 . . . . .	PI-QRH.42.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.42.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.42.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.42.8
Long Range Cruise Control . . . . .	PI-QRH.42.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.42.10
Holding . . . . .	PI-QRH.42.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.42.12
<b>Gear Down . . . . .</b>	<b>PI-QRH.43.1</b>
Long Range Cruise Altitude Capability . . . . .	PI-QRH.43.1
Long Range Cruise Control . . . . .	PI-QRH.43.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.43.3
Descent . . . . .	PI-QRH.43.4
Holding . . . . .	PI-QRH.43.5
<b>Gear Down, Engine Inoperative . . . . .</b>	<b>PI-QRH.44.1</b>
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.44.1



**737 Flight Crew Operations Manual**

---

Long Range Cruise Altitude Capability . . . . .	PI-QRH.44.1
Long Range Cruise Control . . . . .	PI-QRH.44.2
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.44.3
Holding . . . . .	PI-QRH.44.4
<b>Text . . . . .</b>	<b>PI-QRH.45.1</b>
Introduction . . . . .	PI-QRH.45.1
General . . . . .	PI-QRH.45.1
Advisory Information . . . . .	PI-QRH.45.2
Engine Inoperative . . . . .	PI-QRH.45.4
Gear Down . . . . .	PI-QRH.45.6



Intentionally  
Blank

**General**

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-5511	37576	YF921
B-5512	37577	YF922
B-5528	37578	YF923
B-5529	37150	YF924
B-5532	37151	YF925
B-5533	37152	YF926
B-5535	37579	YF927
B-5566	37153	YF928
B-5159	35044	YK961



737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-5160	35045	YK962
B-5161	35046	YK963
B-5162	35047	YK964
B-5301	35048	YK965
B-5302	35049	YK966
B-5303	35050	YK968
B-5305	35051	YK969
B-5306	35052	YK970
B-5307	35053	YK971
B-5459	35057	YK973
B-5458	35055	YK974
B-5476	35056	YK975
B-5488	37148	YK976
B-5489	37149	YK977
B-5487	35058	YK978
B-5498	37574	YK979
B-5499	37575	YK980
B-5630	38386	YS151
B-5631	38387	YS152
B-5632	38388	YS153
B-5633	38389	YS154
B-5635	38390	YS155
B-5653	38391	YS156
B-5655	38392	YS157
B-5656	38393	YS158
B-5657	38394	YS159
B-5659	38396	YS160



737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-5658	38395	YS166
B-5706	38398	YS168
B-5708	38403	YS169
B-5707	38399	YS170
B-5751	38400	YS171
B-5752	38404	YS172
B-5750	38380	YS173
B-5788	38382	YS174
B-5789	38401	YS175
B-5790	38402	YS176
B-1911	39907	YS179
B-1912	39908	YS180
B-1913	39900	YS181
B-1915	39901	YS182
B-1970	39903	YS183
B-1969	39902	YS184
B-1971	39904	YS185
B-1706	39905	YS186
B-1708	39911	YS187
B-1707	39906	YS188
B-1709	39912	YS189
B-1749	39909	YS190
B-1966	39910	YT501
B-6485	39913	YT502
B-6483	39918	YT503
B-6482	41391	YT504
B-6487	39919	YT505



737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-6486	41395	YT506
B-1964	39914	YT507
B-6489	39915	YT508
B-6490	41392	YT509
B-6488	41396	YT510
B-6818	39916	YT511
B-6819	39917	YT512
B-6849	40959	YT513
B-6842	40957	YT514
B-7176	41393	YT515
B-7177	41394	YT516
B-7179	40960	YT517
B-7178	40958	YT518
B-7197	42925	YV741
B-7557	42926	YV742
B-7558	42927	YV743
B-7559	42928	YV744
B-7847	42930	YV745
B-7846	42929	YV746
B-7848	42931	YV747
B-7849	42932	YV748
B-1557	42933	YV749
B-1550	42934	YV750
B-1558	42935	YV751
B-1579	42936	YV752
B-1580	42937	YV753
B-7816	42938	YV754





737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-7826	42939	YV755
B-7819	42945	YV756
B-7821	42946	YV757
B-7823	42947	YV758
B-7831	42949	YV759
B-7818	42941	YV760
B-7825	42948	YV761
B-1455	42950	YV762
B-1457	63682	YV763
B-1456	42951	YV764
B-1302	63683	YV765
B-1301	42944	YV766
B-1300	42940	YV767

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 40

**Flight With Unreliable Airspeed/ Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (.280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>		
	V/S (FT/MIN)	1700	1100	600		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2500	1900	1500	1100	800
20000	<b>PITCH ATT</b>	<b>7.0</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4200	3300	2600	2100	1700
10000	<b>PITCH ATT</b>	<b>11.0</b>	<b>9.5</b>	<b>8.5</b>	<b>8.0</b>	<b>8.0</b>
	V/S (FT/MIN)	5600	4400	3600	3000	2500
SEA LEVEL	<b>PITCH ATT</b>	<b>14.5</b>	<b>12.5</b>	<b>11.0</b>	<b>10.0</b>	<b>9.5</b>
	V/S (FT/MIN)	6700	5300	4400	3700	3100

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	83	85	90		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	81	83	84	87	90
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	81	82	83	84	86
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	77	78	79	81	82
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>
	%N1	74	74	75	77	78
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	70	71	72	73	74

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>	<b>1.0</b>	<b>1.5</b>
	V/S (FT/MIN)	-2700	-2400	-2300	-2500	-2700
30000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-3100	-2600	-2300	-2100	-2000
20000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2800	-2300	-2000	-1900	-1700
10000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2500	-2100	-1800	-1700	-1500
SEA LEVEL	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.5</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-2300	-1900	-1700	-1500	-1400

**Flight With Unreliable Airspeed/ Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Holding (VREF40 + 70)**

**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	56	62	66	70	73
	KIAS	178	193	212	229	246
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	53	58	62	66	70
	KIAS	178	192	211	228	244
5000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	49	54	58	62	66
	KIAS	178	192	210	227	243

**Terminal Area (5000 FT)**

**%N1 for Level Flight**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>
	%N1	48	54	58	62	65
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>
	%N1	51	56	60	65	68
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>
	%N1	51	56	61	65	69
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	60	66	71	75	79

**Final Approach (1500 FT)**

**Gear Down, %N1 for 3° Glideslope**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>2.5</b>	<b>2.5</b>	<b>2.5</b>
	%N1	43	47	51	55	58
FLAPS 30 (VREF30 + 10)	<b>PITCH ATT</b>	<b>0.5</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>
	%N1	47	52	57	60	64
FLAPS 40 (VREF40 + 10)	<b>PITCH ATT</b>	<b>-0.5</b>	<b>0.0</b>	<b>0.0</b>	<b>0.0</b>	<b>0.0</b>
	%N1	53	58	63	67	70

**Go-Around**

**Flaps 15, Gear Up, Set Go-Around Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>16.0</b>	<b>12.0</b>	<b>9.5</b>	<b>7.5</b>	<b>6.5</b>
	V/S (FT/MIN)	4100	3200	2500	1900	1400
	KIAS	151	168	183	197	209
5000	<b>PITCH ATT</b>	<b>18.5</b>	<b>14.0</b>	<b>11.0</b>	<b>9.0</b>	<b>7.5</b>
	V/S (FT/MIN)	4600	3600	2900	2300	1800
	KIAS	151	168	183	196	208
SEA LEVEL	<b>PITCH ATT</b>	<b>21.5</b>	<b>16.0</b>	<b>12.5</b>	<b>10.5</b>	<b>9.0</b>
	V/S (FT/MIN)	4900	3900	3200	2600	2100
	KIAS	151	167	182	196	208

## Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	89.4	89.7	89.7	89.8	89.6	91.4	93.0	94.4	94.5	92.8
55	90.2	90.5	90.5	90.7	90.0	90.8	92.4	93.7	93.8	92.1
50	90.9	91.2	91.3	91.5	91.0	90.8	91.7	93.0	93.1	91.4
45	91.6	91.9	92.1	92.3	91.9	91.7	91.7	92.3	92.4	90.7
40	92.4	92.6	92.9	93.1	92.7	92.5	92.5	91.6	91.7	90.0
35	92.9	93.3	93.6	93.8	93.6	93.3	93.3	92.4	91.7	90.1
30	92.2	94.1	94.3	94.6	94.4	94.1	94.0	93.2	92.6	91.1
25	91.5	94.1	95.0	95.2	95.2	94.8	94.7	94.0	93.4	92.1
20	90.7	93.3	95.8	96.0	95.9	95.6	95.4	94.7	94.2	93.0
15	90.0	92.5	95.2	96.8	96.7	96.3	96.1	95.5	95.0	94.0
10	89.2	91.8	94.4	97.1	97.6	97.0	96.7	96.2	95.8	94.9
5	88.4	91.0	93.6	96.3	98.5	97.9	97.4	97.0	96.6	95.8
0	87.7	90.2	92.8	95.5	97.9	99.0	98.4	97.8	97.5	96.7
-5	86.9	89.4	92.0	94.7	97.2	98.9	99.4	98.6	98.3	97.7
-10	86.1	88.6	91.2	93.9	96.4	98.1	99.7	99.5	99.2	98.7
-15	85.3	87.8	90.3	93.1	95.6	97.4	98.9	100.5	100.1	99.7
-20	84.5	87.0	89.5	92.3	94.8	96.6	98.1	100.2	100.7	100.3
-25	83.7	86.1	88.7	91.4	94.1	95.8	97.3	99.3	99.9	99.5
-30	82.9	85.3	87.8	90.6	93.3	95.0	96.5	98.5	99.0	98.7
-35	82.0	84.5	87.0	89.8	92.4	94.1	95.6	97.6	98.2	97.8
-40	81.2	83.6	86.1	88.9	91.6	93.3	94.8	96.8	97.3	96.9

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

### Go-around %N1

Based on engine bleed for packs on, engine and wing anti-ice on or off

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	91.0	91.8	91.8									
52	125	55	91.7	92.6	92.6	92.5	92.5							
47	116	50	92.5	93.3	93.3	93.3	93.3	93.3	93.2					
42	108	45	93.3	94.1	94.1	94.1	94.0	94.0	93.9	93.9	93.8			
37	99	40	94.1	94.9	94.9	94.8	94.8	94.7	94.7	94.6	94.6	94.6	94.5	94.4
32	90	35	94.3	95.8	95.8	95.7	95.7	95.6	95.5	95.5	95.4	95.3	95.3	95.2
27	81	30	93.5	95.7	96.3	96.5	96.5	96.4	96.4	96.3	96.2	96.2	96.1	96.0
22	72	25	92.8	94.9	95.5	96.1	96.7	97.3	97.3	97.2	97.1	97.0	97.0	96.9
17	63	20	92.0	94.2	94.7	95.3	95.9	96.5	97.2	97.9	98.3	98.2	98.1	98.0
12	54	15	91.3	93.4	94.0	94.5	95.1	95.8	96.5	97.2	97.9	98.7	99.4	99.4
7	45	10	90.5	92.6	93.2	93.8	94.4	95.0	95.7	96.4	97.1	97.9	98.7	99.5
2	36	5	89.7	91.8	92.4	93.0	93.6	94.2	94.9	95.6	96.4	97.1	98.0	98.8
-3	27	0	89.0	91.0	91.6	92.2	92.8	93.4	94.1	94.8	95.6	96.4	97.2	98.1
-8	18	-5	88.2	90.2	90.8	91.4	92.0	92.6	93.3	94.0	94.8	95.6	96.4	97.3
-13	9	-10	87.4	89.4	90.0	90.6	91.1	91.8	92.5	93.2	94.0	94.8	95.7	96.5
-17	1	-15	86.6	88.6	89.2	89.7	90.3	90.9	91.7	92.4	93.2	94.0	94.9	95.8
-22	-8	-20	85.8	87.8	88.3	88.9	89.5	90.1	90.8	91.6	92.3	93.2	94.1	95.0
-27	-17	-25	84.9	86.9	87.5	88.1	88.6	89.3	90.0	90.7	91.5	92.3	93.3	94.2
-32	-26	-30	84.1	86.1	86.7	87.2	87.8	88.4	89.2	89.9	90.7	91.5	92.5	93.4
-37	-35	-35	83.3	85.2	85.8	86.3	86.9	87.6	88.3	89.0	89.8	90.7	91.6	92.6
-42	-44	-40	82.4	84.4	84.9	85.5	86.1	86.7	87.4	88.2	89.0	89.8	90.8	91.8
-47	-53	-45	81.6	83.5	84.1	84.6	85.2	85.8	86.6	87.3	88.1	89.0	90.0	90.9
-52	-62	-50	80.7	82.6	83.2	83.7	84.3	84.9	85.7	86.4	87.2	88.1	89.1	90.1

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)												
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.6	0.8	0.8	0.8	0.8	0.8	0.8	0.9	0.9	0.9	1.0	0.9	
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	160	168	177
80	155	163	172
75	151	158	167
70	146	153	161
65	141	148	156
60	135	142	149
55	128	136	143
50	122	129	136
45	115	122	128
40	108	115	121

Intentionally  
Blank





## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 41

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1010	70/-60	25/30	-35/125	15/-10	25/-25	35	25	50
AUTOBRAKE MAX	1300	65/-75	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 3	1870	105/-120	50/65	-80/260	0/0	55/-55	100	0	0
AUTOBRAKE 2	2385	155/-170	75/95	-105/360	30/-45	70/-70	100	70	70
AUTOBRAKE 1	2640	185/-200	90/115	-125/425	70/-85	80/-80	95	240	335

## Good Reported Braking Action

MAX MANUAL	1395	80/-85	40/50	-60/210	35/-30	35/-35	50	75	175
AUTOBRAKE MAX	1485	85/-90	40/55	-65/215	30/-25	35/-40	55	85	190
AUTOBRAKE 3	1870	105/-120	50/65	-80/265	5/0	55/-55	100	5	15
AUTOBRAKE 2	2385	155/-170	75/95	-105/360	30/-45	70/-70	100	70	70
AUTOBRAKE 1	2640	185/-200	90/115	-125/425	70/-85	80/-80	95	240	335

## Medium Reported Braking Action

MAX MANUAL	1930	125/-130	60/80	-95/345	90/-70	55/-55	65	215	520
AUTOBRAKE MAX	1965	130/-135	60/85	-100/350	85/-65	55/-55	75	215	520
AUTOBRAKE 3	2065	130/-140	60/85	-100/360	65/-45	60/-60	100	150	450
AUTOBRAKE 2	2440	160/-175	75/100	-115/405	65/-65	70/-75	100	115	250
AUTOBRAKE 1	2655	185/-200	90/120	-130/440	90/-90	80/-80	95	255	395

## Poor Reported Braking Action

MAX MANUAL	2545	180/-185	85/120	-145/550	215/-140	70/-75	80	465	1245
AUTOBRAKE MAX	2545	185/-185	90/120	-145/550	220/-145	70/-75	80	465	1245
AUTOBRAKE 3	2560	185/-185	90/120	-145/550	210/-130	70/-75	95	465	1255
AUTOBRAKE 2	2730	190/-200	90/125	-155/565	200/-130	75/-80	100	375	1090
AUTOBRAKE 1	2855	205/-215	100/135	-160/585	205/-145	80/-85	95	440	1080

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 55 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
Flaps 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	40
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	0/0	30/-30	55	0	5
AUTOBRAKE 3	1725	95/-110	45/60	-75/250	0/0	50/-50	95	0	0
AUTOBRAKE 2	2190	140/-150	65/90	-100/345	30/-40	65/-65	95	60	60
AUTOBRAKE 1	2415	165/-180	80/105	-120/405	65/-75	70/-70	85	195	290

**Good Reported Braking Action**

MAX MANUAL	1330	75/-80	35/45	-60/205	35/-30	35/-35	50	70	155
AUTOBRAKE MAX	1415	80/-85	40/50	-60/210	30/-25	35/-35	60	75	170
AUTOBRAKE 3	1725	95/-110	45/60	-75/250	5/0	50/-50	95	5	15
AUTOBRAKE 2	2190	140/-150	65/90	-100/345	30/-40	65/-65	95	60	60
AUTOBRAKE 1	2415	165/-180	80/105	-120/405	65/-75	70/-70	85	195	290

**Medium Reported Braking Action**

MAX MANUAL	1815	115/-120	55/75	-95/335	85/-65	50/-50	65	190	450
AUTOBRAKE MAX	1850	120/-125	55/75	-95/340	80/-60	50/-50	75	190	455
AUTOBRAKE 3	1925	120/-125	55/75	-95/345	65/-45	55/-55	95	140	410
AUTOBRAKE 2	2245	140/-155	70/90	-110/390	65/-60	65/-65	95	105	225
AUTOBRAKE 1	2430	165/-180	80/105	-120/420	85/-80	70/-75	85	210	350

**Poor Reported Braking Action**

MAX MANUAL	2365	165/-170	80/110	-140/530	205/-135	65/-70	75	400	1045
AUTOBRAKE MAX	2370	165/-170	80/110	-140/530	205/-135	65/-70	80	400	1050
AUTOBRAKE 3	2385	170/-170	80/110	-140/535	200/-125	65/-70	85	400	1055
AUTOBRAKE 2	2525	175/-180	85/115	-145/550	190/-125	70/-75	90	335	925
AUTOBRAKE 1	2630	185/-190	85/120	-150/565	195/-135	75/-80	85	380	930

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 55 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfavored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
 Flaps 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	915	55/-50	20/25	-35/115	10/-10	20/-20	35	15	35
AUTOBRAKE MAX	1135	55/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1590	85/-100	40/55	-70/235	0/0	45/-45	90	0	0
AUTOBRAKE 2	2030	125/-140	60/80	-95/330	20/-35	60/-60	95	35	35
AUTOBRAKE 1	2260	150/-165	75/95	-115/390	55/-65	65/-65	85	155	220

**Good Reported Braking Action**

MAX MANUAL	1270	70/-75	35/45	-55/200	35/-30	30/-30	50	65	140
AUTOBRAKE MAX	1350	75/-80	35/45	-60/205	30/-25	35/-35	60	70	150
AUTOBRAKE 3	1600	85/-100	40/55	-70/240	10/-5	45/-45	95	5	15
AUTOBRAKE 2	2030	125/-140	60/80	-95/330	20/-35	60/-60	95	35	35
AUTOBRAKE 1	2260	150/-165	75/95	-115/390	55/-65	65/-65	85	155	220

**Medium Reported Braking Action**

MAX MANUAL	1730	105/-115	50/70	-90/330	85/-65	45/-45	65	170	405
AUTOBRAKE MAX	1750	110/-120	55/70	-90/335	75/-60	45/-50	75	170	405
AUTOBRAKE 3	1800	110/-120	55/70	-95/340	70/-45	50/-50	90	150	390
AUTOBRAKE 2	2090	130/-145	60/85	-105/375	55/-55	60/-60	95	75	190
AUTOBRAKE 1	2275	150/-165	75/95	-115/405	80/-75	65/-65	85	170	275

**Poor Reported Braking Action**

MAX MANUAL	2245	155/-160	75/100	-140/520	200/-130	60/-65	75	360	930
AUTOBRAKE MAX	2250	155/-160	75/105	-140/520	200/-130	60/-65	75	360	930
AUTOBRAKE 3	2260	155/-165	75/105	-140/525	195/-125	60/-65	85	360	935
AUTOBRAKE 2	2370	160/-165	75/105	-140/535	185/-120	65/-70	90	290	830
AUTOBRAKE 1	2470	170/-180	80/110	-145/550	190/-130	70/-75	85	335	815

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Airspeed Unreliable (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1075	80/-65	25/35	-40/130	15/-10	25/-25	N/A	30	60
AUTOBRAKE MAX	1435	70/-80	35/45	-50/165	5/-5	35/-35	N/A	0	5
AUTOBRAKE 2	2550	165/-180	85/110	-110/370	50/-55	75/-75	N/A	165	180

**Good Reported Braking Action**

MAX MANUAL	1475	80/-85	40/55	-60/215	35/-30	40/-40	N/A	90	205
AUTOBRAKE MAX	1600	85/-95	45/60	-65/225	30/-25	40/-40	N/A	100	230
AUTOBRAKE 2	2550	165/-180	85/110	-110/370	55/-55	75/-75	N/A	165	180

**Medium Reported Braking Action**

MAX MANUAL	2025	130/-135	65/85	-100/350	90/-70	55/-55	N/A	240	595
AUTOBRAKE MAX	2080	130/-140	65/90	-100/355	85/-65	55/-60	N/A	245	605
AUTOBRAKE 3	2255	135/-145	70/90	-105/370	60/-45	65/-65	N/A	145	460

**Poor Reported Braking Action**

MAX MANUAL	2635	185/-190	90/125	-145/550	210/-140	75/-80	N/A	505	1385
AUTOBRAKE MAX	2635	185/-190	90/125	-145/550	210/-135	75/-80	N/A	500	1380
AUTOBRAKE 3	2685	185/-190	90/125	-150/555	195/-125	75/-80	N/A	485	1375

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1025	60/-60	25/30	-35/125	15/-10	25/-25	N/A	25	55
AUTOBRAKE MAX	1335	60/-70	30/40	-45/155	5/-5	30/-35	N/A	0	5
AUTOBRAKE 2	2345	150/-160	75/95	-105/355	45/-50	70/-70	N/A	140	160

**Good Reported Braking Action**

MAX MANUAL	1415	75/-80	40/50	-60/210	35/-30	35/-35	N/A	80	185
AUTOBRAKE MAX	1525	80/-90	40/55	-65/220	30/-30	40/-40	N/A	90	205
AUTOBRAKE 2	2345	150/-160	75/95	-105/355	45/-50	70/-70	N/A	140	160

**Medium Reported Braking Action**

MAX MANUAL	1915	120/-125	60/80	-95/340	85/-70	50/-55	N/A	215	520
AUTOBRAKE MAX	1965	120/-130	60/80	-95/345	80/-65	55/-55	N/A	215	530
AUTOBRAKE 3	2100	120/-135	60/85	-100/360	60/-50	60/-60	N/A	135	420

**Poor Reported Braking Action**

MAX MANUAL	2460	170/-170	85/115	-140/535	200/-130	65/-70	N/A	435	1165
AUTOBRAKE MAX	2470	170/-175	85/115	-140/535	200/-125	70/-75	N/A	430	1160
AUTOBRAKE 3	2510	170/-175	85/115	-145/540	190/-125	70/-75	N/A	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	985	55/-55	20/30	-35/120	15/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1245	55/-65	30/35	-45/150	5/0	30/-30	N/A	0	0
AUTOBRAKE 2	2195	135/-150	70/90	-100/340	40/-45	65/-65	N/A	105	110

**Good Reported Braking Action**

MAX MANUAL	1360	70/-80	35/50	-60/205	35/-30	35/-35	N/A	75	170
AUTOBRAKE MAX	1455	75/-85	40/50	-60/215	30/-25	35/-35	N/A	85	185
AUTOBRAKE 2	2195	135/-150	70/90	-100/340	40/-45	65/-65	N/A	105	110

**Medium Reported Braking Action**

MAX MANUAL	1830	110/-120	55/75	-95/335	85/-65	50/-50	N/A	195	465
AUTOBRAKE MAX	1870	115/-125	60/80	-95/340	80/-60	50/-50	N/A	195	475
AUTOBRAKE 3	1965	115/-125	60/80	-100/350	60/-50	55/-55	N/A	135	405

**Poor Reported Braking Action**

MAX MANUAL	2345	160/-165	80/110	-140/525	195/-130	65/-70	N/A	395	1035
AUTOBRAKE MAX	2355	160/-165	80/110	-140/525	195/-125	65/-70	N/A	390	1035
AUTOBRAKE 3	2380	160/-165	80/110	-140/530	190/-125	65/-70	N/A	395	1045

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**All Flaps Up Landing**

**VREF40 + 55**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1330	185/-85	50/105	-45/205	20/-15	35/-35	45	45	95
AUTOBRAKE MAX	1855	85/-90	45/70	-60/195	5/-5	50/-50	75	5	20
AUTOBRAKE 2	3360	195/-225	115/150	-130/430	75/-85	105/-105	100	280	330

**Good Reported Braking Action**

MAX MANUAL	1755	85/-95	50/65	-65/230	40/-35	45/-50	45	110	255
AUTOBRAKE MAX	2000	90/-100	55/75	-75/245	30/-25	55/-55	70	85	225
AUTOBRAKE 2	3360	195/-225	115/150	-130/430	75/-85	105/-105	100	280	330

**Medium Reported Braking Action**

MAX MANUAL	2495	145/-155	80/110	-110/385	105/-85	70/-75	65	315	775
AUTOBRAKE MAX	2580	150/-160	85/115	-110/390	100/-80	75/-75	75	325	800
AUTOBRAKE 3	2950	145/-170	90/120	-120/420	65/-60	90/-90	110	165	510

**Poor Reported Braking Action**

MAX MANUAL	3320	220/-225	120/165	-165/605	250/-170	95/-100	80	690	1915
AUTOBRAKE MAX	3325	215/-225	120/165	-165/605	245/-160	100/-100	90	685	1905
AUTOBRAKE 3	3445	210/-225	120/165	-170/615	220/-150	100/-105	110	600	1840

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1795	105/-110	50/65	-80/290	55/-45	45/-45	60	145	345
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2015	125/-130	60/80	-100/350	85/-65	50/-55	70	215	530
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2585	180/-180	85/120	-145/545	200/-135	70/-75	80	460	1280
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3450	260/-260	120/175	-245/1005	625/-305	85/-105	95	1100	3915
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****ANTISKID INOPERATIVE (Flaps 30)****VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1695	95/-105	45/60	-80/280	55/-45	40/-45	60	125	300
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1895	115/-120	55/75	-95/340	80/-65	50/-50	65	185	455
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2415	165/-165	80/105	-140/530	190/-125	65/-70	80	395	1075
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3205	235/-235	110/155	-235/980	590/-285	75/-100	90	945	3215
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1615	90/-100	45/60	-80/275	55/-45	40/-40	60	115	265
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1805	105/-115	50/70	-95/335	80/-60	45/-45	65	170	405
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2290	150/-155	70/100	-140/520	185/-120	60/-65	80	355	950
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3040	220/-225	100/145	-230/960	575/-275	70/-95	85	860	2860
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Jammed or Restricted Flight Controls (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LEADING EDGE FLAPS TRANSIT (Flaps 15)**

**VREF15 + 15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1130	80/-70	25/35	-40/135	15/-15	25/-25	35	30	70
AUTOBRAKE MAX	1500	70/-80	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2725	175/-190	90/115	-115/385	50/-60	85/-85	100	155	160

**Good Reported Braking Action**

MAX MANUAL	1570	85/-95	45/60	-65/220	40/-35	40/-40	50	105	240
AUTOBRAKE MAX	1690	90/-100	45/60	-65/230	35/-30	45/-45	60	115	260
AUTOBRAKE 2	2730	175/-190	90/115	-115/385	50/-60	85/-85	100	160	160

**Medium Reported Braking Action**

MAX MANUAL	2170	140/-145	70/95	-100/365	95/-75	60/-60	70	275	695
AUTOBRAKE MAX	2210	140/-150	70/95	-105/365	90/-70	60/-65	75	280	700
AUTOBRAKE 3	2375	140/-150	75/100	-110/380	65/-45	70/-70	110	175	570

**Poor Reported Braking Action**

MAX MANUAL	2825	200/-205	100/140	-155/570	225/-150	80/-85	80	580	1620
AUTOBRAKE MAX	2825	200/-205	100/140	-155/570	230/-155	80/-85	85	575	1615
AUTOBRAKE 3	2855	200/-200	100/140	-155/570	215/-130	80/-85	100	565	1615

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM A (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1120	70/-65	25/35	-40/135	15/-15	25/-25	45	35	60
AUTOBRAKE MAX	1300	65/-75	30/40	-45/155	0/0	30/-30	60	0	10
AUTOBRAKE 2	2465	150/-175	75/95	-110/365	0/-10	75/-75	140	0	0

## Good Reported Braking Action

MAX MANUAL	1620	95/-100	45/60	-70/235	50/-40	40/-45	70	135	275
AUTOBRAKE MAX	1630	95/-105	45/65	-70/235	40/-35	45/-45	75	135	275
AUTOBRAKE 2	2465	150/-175	75/95	-110/365	0/-10	75/-75	140	0	0

## Medium Reported Braking Action

MAX MANUAL	2235	150/-155	75/100	-110/380	115/-90	60/-65	90	350	840
AUTOBRAKE MAX	2220	150/-155	75/100	-105/380	120/-95	60/-65	90	345	830
AUTOBRAKE 3	2220	150/-155	75/100	-105/380	120/-85	60/-65	90	345	830

## Poor Reported Braking Action

MAX MANUAL	2905	215/-215	105/145	-160/590	265/-175	80/-85	105	710	2025
AUTOBRAKE MAX	2900	215/-215	105/150	-160/590	265/-180	80/-85	105	710	2025
AUTOBRAKE 3	2900	215/-215	105/150	-160/590	265/-180	80/-85	105	710	2025

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1060	65/-55	25/35	-40/130	15/-15	25/-25	45	30	50
AUTOBRAKE MAX	1215	60/-65	30/35	-45/145	0/0	30/-30	55	10	15
AUTOBRAKE 2	2260	135/-155	65/85	-105/350	0/-10	70/-70	135	0	0

**Good Reported Braking Action**

MAX MANUAL	1535	85/-95	45/60	-65/225	45/-40	40/-40	70	120	240
AUTOBRAKE MAX	1550	90/-95	45/60	-65/230	40/-35	40/-40	75	120	240
AUTOBRAKE 2	2260	135/-155	65/85	-105/350	0/-10	70/-70	135	0	0

**Medium Reported Braking Action**

MAX MANUAL	2090	135/-140	65/90	-105/370	110/-85	55/-60	85	305	710
AUTOBRAKE MAX	2085	135/-140	70/90	-105/370	115/-90	55/-60	90	300	705
AUTOBRAKE 3	2085	135/-140	70/90	-105/370	115/-80	55/-60	90	300	705

**Poor Reported Braking Action**

MAX MANUAL	2695	195/-195	95/130	-155/570	250/-165	75/-80	100	605	1650
AUTOBRAKE MAX	2695	195/-195	95/135	-155/570	250/-165	75/-80	100	605	1650
AUTOBRAKE 3	2695	195/-195	95/135	-155/570	250/-165	75/-80	100	605	1650

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1015	60/-55	25/30	-35/125	15/-15	25/-25	50	30	45
AUTOBRAKE MAX	1140	55/-60	25/35	-40/140	5/0	25/-25	55	10	20
AUTOBRAKE 2	2075	125/-140	60/80	-100/335	0/-5	60/-60	130	0	0

**Good Reported Braking Action**

MAX MANUAL	1460	80/-90	40/55	-65/225	45/-40	35/-40	70	105	210
AUTOBRAKE MAX	1470	85/-90	40/55	-65/225	40/-35	40/-40	75	105	210
AUTOBRAKE 2	2075	125/-140	60/80	-100/335	0/-5	60/-60	130	0	0

**Medium Reported Braking Action**

MAX MANUAL	1970	125/-135	60/85	-100/360	105/-85	55/-55	85	265	615
AUTOBRAKE MAX	1970	125/-135	60/85	-100/360	110/-85	55/-55	85	265	615
AUTOBRAKE 3	1970	125/-135	60/85	-100/360	110/-80	55/-55	90	265	615

**Poor Reported Braking Action**

MAX MANUAL	2525	180/-185	85/120	-150/560	240/-155	70/-75	95	525	1400
AUTOBRAKE MAX	2530	180/-185	90/125	-150/560	245/-160	70/-75	95	530	1405
AUTOBRAKE 3	2530	180/-185	90/125	-150/560	245/-160	70/-75	95	530	1405

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	80/-90	40/50	-60/195	35/-35	40/-40	75	-10	65
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2290	135/-145	65/90	-100/335	100/-80	60/-60	105	95	440
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	3035	200/-210	100/140	-150/525	215/-160	80/-85	120	365	1415
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3770	275/-275	135/190	-210/785	475/-270	100/-110	130	815	3380
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM B (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)									
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ		
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV	

**Dry Runway**

MAX MANUAL	1140	55/-60	25/35	-45/145	20/-15	25/-25	40	40	70
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1630	95/-100	45/65	-75/255	50/-45	45/-45	60	140	285
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2215	150/-155	70/100	-115/410	125/-95	60/-65	75	340	815
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2835	210/-210	100/140	-170/640	295/-180	75/-85	90	665	1870
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	80/-90	40/50	-60/195	35/-35	40/-40	75	-10	65
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2290	135/-145	65/90	-100/335	100/-80	60/-60	105	95	440
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	3035	200/-210	100/140	-150/525	215/-160	80/-85	120	365	1415
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3770	275/-275	135/190	-210/785	475/-270	100/-110	130	815	3380
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 One Engine Inoperative Landing (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1020	75/-65	25/30	-35/130	15/-10	25/-25	35	0	25
AUTOBRAKE MAX	1300	70/-75	30/40	-45/155	0/0	30/-30	60	0	0
AUTOBRAKE 2	2450	150/-170	75/95	-110/365	10/-25	75/-75	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1440	80/-85	40/50	-65/215	40/-35	40/-40	50	0	100
AUTOBRAKE MAX	1545	85/-95	40/55	-65/225	35/-30	40/-40	60	0	110
AUTOBRAKE 2	2450	150/-170	75/95	-110/365	10/-25	75/-75	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	2075	135/-140	65/85	-105/370	110/-85	60/-60	70	0	310
AUTOBRAKE MAX	2115	135/-145	65/85	-105/375	105/-80	60/-60	80	0	315
AUTOBRAKE 3	2165	135/-150	65/85	-105/380	90/-65	60/-65	100	0	295

**Poor Reported Braking Action**

MAX MANUAL	2850	200/-210	95/130	-165/605	290/-185	85/-85	90	0	765
AUTOBRAKE MAX	2850	200/-210	95/130	-165/605	290/-185	85/-85	95	0	765
AUTOBRAKE 3	2875	205/-210	95/130	-165/610	280/-180	85/-85	100	0	775

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
One Engine Inoperative Landing (Flaps 30)  
VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	970	60/-55	20/30	-35/125	15/-10	20/-20	35	0	25
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	0/0	30/-30	55	0	0
AUTOBRAKE 2	2240	135/-150	65/85	-105/350	10/-25	65/-65	110	0	0

**Good Reported Braking Action**

MAX MANUAL	1370	75/-80	35/50	-60/210	35/-30	35/-35	50	0	90
AUTOBRAKE MAX	1465	80/-90	40/50	-65/220	35/-30	35/-40	60	0	100
AUTOBRAKE 2	2240	135/-150	65/85	-105/350	10/-25	65/-65	110	0	0

**Medium Reported Braking Action**

MAX MANUAL	1940	120/-130	60/80	-100/360	105/-80	55/-55	70	0	265
AUTOBRAKE MAX	1975	125/-135	60/80	-100/365	95/-75	55/-55	80	0	270
AUTOBRAKE 3	2015	125/-135	60/80	-105/365	90/-65	55/-60	90	0	260

**Poor Reported Braking Action**

MAX MANUAL	2625	180/-190	85/115	-155/585	265/-170	75/-80	85	0	635
AUTOBRAKE MAX	2625	180/-190	85/115	-155/585	270/-165	75/-80	90	0	635
AUTOBRAKE 3	2655	185/-190	90/120	-160/585	260/-170	75/-80	90	0	640

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Stabilizer Trim Inoperative (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15)  
VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1110	90/-65	25/40	-40/135	15/-15	25/-25	35	30	60
AUTOBRAKE MAX	1510	70/-75	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2730	165/-185	90/115	-115/385	55/-60	85/-85	100	165	175

**Good Reported Braking Action**

MAX MANUAL	1525	80/-85	40/55	-60/215	35/-30	40/-40	45	90	210
AUTOBRAKE MAX	1665	80/-90	45/60	-65/225	30/-25	45/-45	65	95	225
AUTOBRAKE 2	2735	160/-185	90/115	-115/385	55/-65	85/-85	95	165	175

**Medium Reported Braking Action**

MAX MANUAL	2125	125/-135	70/90	-100/360	90/-75	60/-60	65	255	625
AUTOBRAKE MAX	2180	130/-140	70/95	-100/360	85/-70	60/-60	75	260	640
AUTOBRAKE 3	2385	125/-140	70/95	-110/380	60/-45	70/-70	110	150	470

**Poor Reported Braking Action**

MAX MANUAL	2795	190/-195	100/135	-150/565	220/-150	80/-85	80	545	1510
AUTOBRAKE MAX	2790	185/-195	100/135	-150/565	220/-145	80/-85	85	540	1500
AUTOBRAKE 3	2845	185/-190	100/135	-155/570	205/-130	80/-85	105	525	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flap Asymmetry (Flap Lever 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	5/0	30/-30	60	0	5
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	30/-45	65/-65	90	85	85

**Good Reported Braking Action**

MAX MANUAL	1315	70/-75	35/45	-60/200	30/-30	35/-35	50	75	165
AUTOBRAKE MAX	1410	75/-85	35/50	-60/210	30/-25	35/-35	60	80	185
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	35/-45	65/-65	90	85	85

**Medium Reported Braking Action**

MAX MANUAL	1790	115/-120	55/75	-90/330	80/-65	50/-50	65	195	480
AUTOBRAKE MAX	1820	115/-120	55/75	-95/335	75/-60	50/-50	70	200	480
AUTOBRAKE 3	1910	115/-125	55/75	-95/345	60/-40	50/-55	95	140	425

**Poor Reported Braking Action**

MAX MANUAL	2315	160/-165	80/105	-140/525	195/-125	60/-65	75	410	1100
AUTOBRAKE MAX	2320	165/-165	80/110	-140/525	195/-130	65/-70	75	410	1100
AUTOBRAKE 3	2335	165/-165	80/110	-140/525	190/-115	65/-70	90	410	1110

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance**  
**Trailing Edge Flap Disagree ( $1 \leq$  Indicated Flaps  $<15$ )**  
**VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1110	90/-65	25/40	-40/135	15/-15	25/-25	35	30	60
AUTOBRAKE MAX	1510	70/-75	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2730	165/-185	90/115	-115/385	55/-60	85/-85	100	165	175

**Good Reported Braking Action**

MAX MANUAL	1525	80/-85	40/55	-60/215	35/-30	40/-40	45	90	210
AUTOBRAKE MAX	1665	80/-90	45/60	-65/225	30/-25	45/-45	65	95	225
AUTOBRAKE 2	2735	160/-185	90/115	-115/385	55/-65	85/-85	95	165	175

**Medium Reported Braking Action**

MAX MANUAL	2125	125/-135	70/90	-100/360	90/-75	60/-60	65	255	625
AUTOBRAKE MAX	2180	130/-140	70/95	-100/360	85/-70	60/-60	75	260	640
AUTOBRAKE 3	2385	125/-140	70/95	-110/380	60/-45	70/-70	110	150	470

**Poor Reported Braking Action**

MAX MANUAL	2795	190/-195	100/135	-150/565	220/-150	80/-85	80	545	1510
AUTOBRAKE MAX	2790	185/-195	100/135	-150/565	220/-145	80/-85	85	540	1500
AUTOBRAKE 3	2845	185/-190	100/135	-155/570	205/-130	80/-85	105	525	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**  
**Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30)**  
**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40)  
 VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	5/0	30/-30	60	0	5
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	30/-45	65/-65	90	85	85

**Good Reported Braking Action**

MAX MANUAL	1315	70/-75	35/45	-60/200	30/-30	35/-35	50	75	165
AUTOBRAKE MAX	1410	75/-85	35/50	-60/210	30/-25	35/-35	60	80	185
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	35/-45	65/-65	90	85	85

**Medium Reported Braking Action**

MAX MANUAL	1790	115/-120	55/75	-90/330	80/-65	50/-50	65	195	480
AUTOBRAKE MAX	1820	115/-120	55/75	-95/335	75/-60	50/-50	70	200	480
AUTOBRAKE 3	1910	115/-125	55/75	-95/345	60/-40	50/-55	95	140	425

**Poor Reported Braking Action**

MAX MANUAL	2315	160/-165	80/105	-140/525	195/-125	60/-65	75	410	1100
AUTOBRAKE MAX	2320	165/-165	80/110	-140/525	195/-130	65/-70	75	410	1100
AUTOBRAKE 3	2335	165/-165	80/110	-140/525	190/-115	65/-70	90	410	1110

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flaps Up Landing**

**VREF40 + 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1185	110/-70	30/70	-40/140	15/-15	30/-30	45	30	70
AUTOBRAKE MAX	1645	75/-80	40/55	-55/180	5/-5	40/-45	70	5	10
AUTOBRAKE 2	2970	175/-195	100/130	-120/400	65/-70	90/-90	95	205	235

**Good Reported Braking Action**

MAX MANUAL	1600	80/-90	45/60	-65/220	35/-30	40/-45	45	90	205
AUTOBRAKE MAX	1795	85/-95	50/65	-70/235	25/-25	45/-50	65	80	200
AUTOBRAKE 2	2970	175/-195	100/130	-120/400	65/-70	90/-90	95	205	235

**Medium Reported Braking Action**

MAX MANUAL	2255	135/-140	70/95	-105/365	95/-75	65/-65	65	260	625
AUTOBRAKE MAX	2330	135/-145	75/100	-105/370	90/-75	65/-65	70	265	645
AUTOBRAKE 3	2605	135/-155	80/105	-115/395	60/-55	75/-80	105	145	435

**Poor Reported Braking Action**

MAX MANUAL	2990	200/-205	105/145	-155/580	230/-155	85/-90	80	565	1530
AUTOBRAKE MAX	2995	195/-205	105/145	-155/580	230/-150	85/-90	90	560	1520
AUTOBRAKE 3	3080	190/-205	105/145	-160/585	210/-140	90/-95	100	520	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule**

**Reference Brake Energy Per Brake (Millions of Foot Pounds)**

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
				80			100			120			140			160			180		
				PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10		
80	0	15.1	17.0	19.3	22.4	25.3	28.9	30.9	35.0	40.2	40.4	45.9	53.0	50.8	57.9	67.3	60.8	69.6	81.2		
	10	15.6	17.6	20.0	23.1	26.1	29.8	31.9	36.2	41.5	41.8	47.5	54.8	52.5	59.9	69.5	62.8	71.9	83.9		
	15	15.8	17.8	20.2	23.5	26.5	30.3	32.4	36.7	42.1	42.4	48.2	55.6	53.3	60.7	70.5	63.7	72.9	85.1		
	20	16.0	18.1	20.5	23.8	26.9	30.7	32.8	37.2	42.7	42.9	48.8	56.3	54.0	61.5	71.4	64.6	73.9	86.2		
	30	16.4	18.5	21.1	24.4	27.6	31.5	33.7	38.2	43.8	44.0	50.0	57.7	55.3	63.1	73.2	66.2	75.7	88.4		
	40	16.6	18.7	21.3	24.7	27.9	31.9	34.1	38.7	44.4	44.7	50.9	58.8	56.3	64.3	74.8	67.5	77.4	90.5		
50	16.6	18.7	21.3	24.8	28.0	32.1	34.3	39.0	44.9	45.2	51.5	59.7	57.1	65.4	76.3	68.7	79.0	92.9			
70	0	13.7	15.4	17.5	20.2	22.8	26.0	27.7	31.3	35.9	36.1	41.0	47.2	45.3	51.6	59.7	54.9	62.7	72.9		
	10	14.2	15.9	18.1	20.8	23.5	26.8	28.6	32.4	37.1	37.3	42.3	48.7	46.8	53.3	61.6	56.7	64.8	75.4		
	15	14.4	16.2	18.4	21.1	23.9	27.2	29.0	32.8	37.6	37.8	43.0	49.4	47.5	54.0	62.5	57.5	65.7	76.4		
	20	14.6	16.4	18.6	21.4	24.2	27.6	29.4	33.3	38.1	38.4	43.5	50.1	48.1	54.8	63.4	58.3	66.5	77.4		
	30	14.9	16.8	19.1	22.0	24.8	28.3	30.2	34.1	39.1	39.3	44.6	51.4	49.3	56.1	64.9	59.8	68.2	79.4		
	40	15.1	17.0	19.3	22.2	25.1	28.6	30.5	34.6	39.6	39.9	45.3	52.2	50.1	57.1	66.2	60.9	69.6	81.2		
50	15.1	17.0	19.3	22.3	25.2	28.8	30.7	34.8	40.0	40.2	45.8	52.9	50.7	58.0	67.4	61.8	70.9	83.0			
60	0	12.3	13.9	15.7	18.0	20.3	23.1	24.4	27.6	31.6	31.7	35.9	41.2	39.6	45.0	51.8	48.1	54.8	63.5		
	10	12.7	14.3	16.3	18.5	20.9	23.8	25.2	28.5	32.6	32.7	37.1	42.6	40.9	46.5	53.6	49.7	56.6	65.6		
	15	12.9	14.6	16.5	18.8	21.2	24.2	25.6	29.0	33.1	33.2	37.6	43.2	41.5	47.1	54.4	50.4	57.4	66.5		
	20	13.1	14.8	16.7	19.1	21.5	24.5	26.0	29.4	33.5	33.6	38.1	43.8	42.0	47.8	55.1	51.1	58.2	67.4		
	30	13.4	15.1	17.2	19.6	22.1	25.1	26.6	30.1	34.4	34.5	39.1	44.9	43.1	49.0	56.5	52.3	59.6	69.1		
	40	13.6	15.3	17.3	19.8	22.3	25.4	26.9	30.5	34.9	35.0	39.7	45.6	43.8	49.8	57.5	53.2	60.7	70.5		
50	13.5	15.3	17.3	19.8	22.4	25.5	27.0	30.6	35.1	35.2	40.0	46.0	44.2	50.4	58.3	53.9	61.7	71.9			
50	0	11.0	12.3	14.0	15.7	17.7	20.2	21.2	23.9	27.3	27.2	30.8	35.3	33.8	38.3	44.1	40.9	46.4	53.6		
	10	11.3	12.7	14.4	16.3	18.3	20.8	21.9	24.7	28.2	28.1	31.8	36.5	34.9	39.6	45.5	42.2	48.0	55.4		
	15	11.5	12.9	14.7	16.5	18.6	21.1	22.2	25.1	28.6	28.6	32.3	37.0	35.4	40.2	46.2	42.8	48.7	56.2		
	20	11.6	13.1	14.9	16.7	18.9	21.4	22.5	25.4	29.0	28.9	32.8	37.5	35.9	40.7	46.8	43.4	49.3	56.9		
	30	11.9	13.4	15.2	17.2	19.3	22.0	23.1	26.1	29.7	29.7	33.6	38.4	36.8	41.8	48.0	44.5	50.6	58.4		
	40	12.1	13.6	15.4	17.3	19.5	22.2	23.4	26.4	30.1	30.1	34.0	39.0	37.4	42.4	48.8	45.2	51.4	59.4		
50	12.0	13.6	15.4	17.3	19.6	22.3	23.4	26.5	30.3	30.2	34.2	39.3	37.6	42.8	49.3	45.7	52.1	60.3			
40	0	9.6	10.8	12.3	13.5	15.2	17.3	17.9	20.2	23.0	22.8	25.8	29.4	28.1	31.8	36.4	33.7	38.2	43.9		
	10	10.0	11.2	12.7	14.0	15.8	17.9	18.5	20.9	23.8	23.6	26.6	30.4	29.0	32.8	37.6	34.8	39.5	45.4		
	15	10.1	11.4	12.9	14.2	16.0	18.1	18.8	21.2	24.1	23.9	27.0	30.8	29.4	33.3	38.2	35.3	40.0	46.0		
	20	10.2	11.5	13.1	14.4	16.2	18.4	19.1	21.5	24.5	24.2	27.4	31.3	29.8	33.8	38.7	35.8	40.6	46.6		
	30	10.5	11.8	13.4	14.8	16.6	18.9	19.6	22.1	25.1	24.9	28.1	32.1	30.6	34.6	39.7	36.7	41.6	47.8		
	40	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.4	25.2	28.4	32.5	31.0	35.1	40.2	37.2	42.2	48.6		
50	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.5	25.2	28.6	32.7	31.1	35.3	40.6	37.5	42.6	49.1			

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

## ADVISORY INFORMATION

### Recommended Brake Cooling Schedule Adjusted Brake Energy Per Brake (Millions of Foot Pounds) No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
AUTOBRAKE 1		6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

### Two Engine Detent Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

### Cooling Time (Minutes) - Category C Steel Brakes

*(Note: A placard showing carbon brake configuration will be put at the Center Forward Panel upon modification.)*

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								CAUTION	FUSE PLUG MELT ZONE	
		16 & BELOW	17	20	23	25	28	32	33 TO 48			49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS										
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE		
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6					
GROUND	REQUIRED	10	20	30	40	50	60					

### Cooling Time (Minutes) - Category N Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								CAUTION	FUSE PLUG MELT ZONE	
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41			41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS										
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE		
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6					
GROUND	REQUIRED	6.7	16.0	24.1	34.2	45.9	53.3					

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

## Performance Inflight - QRH

## Chapter PI-QRH

## Engine Inoperative

## Section 42

## ENGINE INOP

**Initial Max Continuous %N1**

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.1	95.9	95.6	95.5	95.2	94.8	94.3	94.0	93.2
15	96.7	96.5	96.2	96.1	96.0	95.5	95.1	94.8	94.1
10	97.3	97.2	96.8	96.7	96.7	96.2	95.8	95.6	95.0
5	97.5	97.9	97.6	97.4	97.4	97.0	96.6	96.4	95.9
0	96.8	98.1	98.5	98.3	98.2	97.8	97.5	97.2	96.8
-5	96.0	97.3	98.5	99.2	99.1	98.6	98.3	98.1	97.8
-10	95.2	96.5	97.7	99.0	99.9	99.5	99.2	99.0	98.7
-15	94.4	95.8	96.9	98.2	99.5	100.4	100.1	99.9	99.7
-20	93.6	95.0	96.2	97.4	98.7	99.8	100.4	100.2	100.0
-25	92.8	94.2	95.4	96.6	97.9	99.0	99.6	99.4	99.2
-30	91.9	93.4	94.6	95.8	97.0	98.2	98.7	98.5	98.3
-35	91.1	92.6	93.7	94.9	96.2	97.3	97.9	97.7	97.5
-40	90.3	91.8	92.9	94.1	95.3	96.5	97.0	96.8	96.6

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8

## ENGINE INOP

### Max Continuous %N1 37000 FT to 29000 FT Pressure Altitudes

37000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.51	96.0	97.0	97.9	98.7	99.6	98.9	98.1	96.9	95.6	94.0	92.5	91.1	
200	.63	95.4	96.3	97.2	98.1	98.9	99.8	99.5	98.7	97.8	96.8	95.6	94.5	
240	.74	94.4	95.3	96.2	97.1	98.0	98.8	99.7	100.1	99.3	98.5	97.7	96.7	
280	.86	93.7	94.6	95.5	96.4	97.2	98.1	98.9	99.7	100.5	100.2	99.3	98.5	
35000 FT PRESS ALT													TAT (°C)	
CIAS	M	-55	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	
160	.49	95.9	96.8	97.7	98.6	99.5	99.2	98.4	97.3	96.1	94.7	93.3	92.0	
200	.60	95.5	96.4	97.3	98.2	99.1	100.0	99.9	98.9	98.0	97.0	95.8	94.7	
240	.71	94.4	95.3	96.2	97.1	98.0	98.8	99.6	100.2	99.5	98.9	98.0	97.0	
280	.82	93.2	94.0	94.9	95.8	96.6	97.5	98.3	99.1	99.9	99.7	98.9	98.1	
33000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.47	96.8	97.7	98.5	99.4	100.2	99.3	98.5	97.3	96.0	94.6	93.2	92.0	
200	.58	96.4	97.3	98.2	99.1	99.9	100.8	99.9	99.0	98.0	96.8	95.6	94.5	
240	.68	95.3	96.2	97.1	97.9	98.8	99.6	100.4	100.2	99.6	98.7	97.7	96.7	
280	.79	93.6	94.5	95.4	96.2	97.1	97.9	98.7	99.5	99.9	99.1	98.2	97.4	
320	.89	93.0	93.9	94.7	95.6	96.4	97.2	98.1	98.9	99.7	100.4	100.0	99.2	
31000 FT PRESS ALT													TAT (°C)	
CIAS	M	-50	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	
160	.45	96.7	97.6	98.5	99.4	100.3	100.4	99.5	98.5	97.3	95.9	94.5	93.2	
200	.55	96.5	97.3	98.2	99.1	100.0	100.8	101.0	100.1	99.1	98.0	96.7	95.5	
240	.66	95.0	95.9	96.8	97.6	98.5	99.3	100.2	100.7	99.9	99.1	98.1	97.1	
280	.76	93.2	94.0	94.9	95.7	96.6	97.4	98.2	99.0	99.8	99.1	98.2	97.3	
320	.85	91.8	92.6	93.5	94.3	95.1	95.9	96.7	97.5	98.3	99.1	99.3	98.4	
29000 FT PRESS ALT													TAT (°C)	
CIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	
160	.43	97.5	98.4	99.3	100.1	101.0	100.5	99.6	98.5	97.2	95.7	94.4	93.1	
200	.53	96.9	97.8	98.7	99.5	100.4	101.2	100.7	99.7	98.7	97.5	96.2	95.1	
240	.63	95.7	96.5	97.4	98.2	99.1	99.9	100.7	100.4	99.5	98.6	97.5	96.6	
280	.73	93.6	94.4	95.2	96.1	96.9	97.7	98.5	99.3	99.4	98.5	97.5	96.8	
320	.82	91.4	92.3	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	97.8	97.0	
360	.91	91.4	92.3	93.1	93.9	94.7	95.5	96.3	97.0	97.8	98.6	99.3	99.4	

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	29	31	33	35	37
ENGINE ANTI-ICE ON	-0.9	-0.9	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-4.1	-4.3	-4.5	-4.7	-4.7



# ENGINE INOP

## Max Continuous %N1 27000 FT to 20000 FT Pressure Altitudes

27000 FT PRESS ALT		TAT (°C)											
KIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	97.3	98.2	99.1	100.0	100.8	101.5	100.6	99.6	98.4	97.0	95.7	94.4
200	.51	96.3	97.2	98.1	98.9	99.8	100.6	101.1	100.2	99.2	98.1	96.9	95.7
240	.60	95.0	95.9	96.7	97.6	98.4	99.2	100.1	100.7	99.7	98.7	97.7	96.8
280	.70	93.0	93.8	94.6	95.5	96.3	97.1	97.9	98.7	99.4	98.7	97.7	96.9
320	.79	90.9	91.7	92.6	93.4	94.2	95.0	95.7	96.5	97.3	98.0	97.9	97.2
360	.88	90.2	91.0	91.8	92.7	93.5	94.3	95.1	95.9	96.6	97.4	98.2	98.7
25000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.2	99.0	99.9	100.7	101.6	101.7	100.7	99.6	98.4	97.0	95.8	94.5
200	.49	96.8	97.7	98.5	99.4	100.2	101.0	100.9	99.9	98.9	97.7	96.6	95.5
240	.58	95.1	95.9	96.8	97.6	98.4	99.2	100.0	99.8	98.9	97.9	96.9	96.0
280	.67	93.2	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	97.9	96.9	96.2
320	.76	90.9	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	97.9	97.2	96.5
360	.85	89.6	90.5	91.3	92.1	93.0	93.8	94.6	95.4	96.2	97.0	97.7	97.5
24000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	97.7	98.5	99.4	100.3	101.1	101.9	100.8	99.7	98.5	97.2	96.0	94.7
200	.48	96.4	97.2	98.1	98.9	99.7	100.6	101.0	99.9	98.9	97.8	96.7	95.6
240	.57	94.7	95.6	96.4	97.2	98.0	98.8	99.6	99.9	99.0	97.9	97.0	96.1
280	.66	93.0	93.8	94.6	95.4	96.2	97.0	97.8	98.6	99.1	98.0	97.0	96.3
320	.75	90.6	91.4	92.3	93.1	93.9	94.7	95.5	96.3	97.1	97.8	97.2	96.5
360	.83	89.0	89.8	90.7	91.5	92.4	93.2	94.0	94.8	95.6	96.4	97.2	97.2
22000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	97.5	98.4	99.2	100.1	100.9	101.0	99.9	98.7	97.5	96.3	95.2	94.0
200	.46	96.3	97.1	98.0	98.8	99.6	100.4	100.1	98.9	97.8	96.8	95.8	94.8
240	.55	94.8	95.6	96.4	97.2	98.0	98.8	99.6	99.1	98.1	97.1	96.2	95.4
280	.63	93.2	94.0	94.8	95.6	96.4	97.1	97.9	98.7	98.4	97.4	96.6	95.8
320	.72	90.9	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.4	97.5	96.8	96.1
360	.80	89.0	89.9	90.7	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.0	96.4
20000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	96.5	97.4	98.2	99.0	99.8	100.6	100.2	98.9	97.7	96.6	95.5	94.4
200	.44	95.4	96.2	97.0	97.9	98.7	99.4	100.2	99.1	97.8	96.8	95.8	94.9
240	.53	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.3	98.2	97.1	96.2	95.4
280	.61	92.4	93.3	94.1	94.8	95.6	96.4	97.2	97.9	98.5	97.6	96.7	95.9
320	.69	90.3	91.1	92.0	92.8	93.6	94.4	95.2	96.0	96.8	97.6	96.9	96.2
360	.77	88.5	89.3	90.2	91.0	91.8	92.6	93.5	94.3	95.1	95.8	96.6	96.4

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0



# ENGINE INOP

## Max Continuous %N1 10000 FT to 1000 FT Pressure Altitudes

10000 FT PRESS ALT		TAT (°C)											
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	92.7	93.5	94.4	95.2	95.9	96.7	97.5	96.5	95.6	94.9	94.2	93.4
200	.36	91.3	92.1	93.0	93.8	94.6	95.4	96.1	96.1	95.2	94.4	93.7	92.9
240	.43	90.3	91.1	92.0	92.8	93.6	94.4	95.2	95.9	95.4	94.6	93.8	93.1
280	.51	89.5	90.3	91.1	91.9	92.7	93.5	94.3	95.1	95.7	95.0	94.2	93.5
320	.58	88.6	89.4	90.2	91.0	91.8	92.6	93.4	94.2	95.0	95.4	94.7	93.9
360	.65	87.5	88.3	89.2	90.0	90.8	91.6	92.3	93.1	93.9	94.7	95.0	94.3
5000 FT PRESS ALT		TAT (°C)											
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	90.5	91.4	92.2	93.0	93.8	94.5	95.1	94.4	93.6	92.9	92.2	91.4
200	.33	90.0	90.8	91.6	92.4	93.2	93.9	94.7	94.4	93.7	93.0	92.3	91.5
240	.40	89.2	90.0	90.8	91.6	92.4	93.2	93.9	94.4	93.7	92.9	92.2	91.5
280	.46	88.5	89.3	90.1	90.9	91.7	92.5	93.3	94.0	94.0	93.2	92.5	91.8
320	.53	87.8	88.6	89.4	90.2	90.9	91.7	92.5	93.2	94.0	93.6	92.9	92.2
360	.59	86.9	87.7	88.5	89.3	90.1	90.8	91.6	92.3	93.1	93.8	93.3	92.6
3000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	90.5	91.3	92.1	92.8	93.6	94.4	94.6	93.9	93.2	92.4	91.6	90.7
200	.32	89.9	90.7	91.5	92.3	93.1	93.8	94.6	94.0	93.3	92.5	91.8	91.0
240	.38	88.8	89.6	90.4	91.2	92.0	92.7	93.5	93.5	92.8	92.0	91.3	90.6
280	.45	88.3	89.1	89.9	90.6	91.4	92.2	92.9	93.7	93.1	92.4	91.7	91.0
320	.51	87.6	88.4	89.2	90.0	90.7	91.5	92.2	93.0	93.5	92.8	92.0	91.3
360	.57	86.8	87.6	88.4	89.1	89.9	90.6	91.4	92.1	92.8	93.1	92.4	91.7
1000 FT PRESS ALT		TAT (°C)											
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	89.0	89.8	90.6	91.4	92.2	92.9	93.7	93.4	92.7	91.9	91.2	90.3
200	.31	88.7	89.5	90.3	91.0	91.8	92.6	93.3	93.7	93.0	92.2	91.5	90.7
240	.37	87.8	88.6	89.4	90.2	90.9	91.7	92.5	93.2	92.8	92.0	91.3	90.6
280	.43	87.3	88.1	88.8	89.6	90.4	91.1	91.9	92.6	93.1	92.3	91.6	90.9
320	.49	86.7	87.5	88.2	89.0	89.8	90.5	91.3	92.0	92.7	92.7	91.9	91.2
360	.55	85.9	86.7	87.5	88.2	89.0	89.7	90.5	91.2	91.9	92.6	92.3	91.6

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-2.7	-3.2





**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Driftdown/LRC Cruise Range Capability  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)					
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)	20	40	60	80	100
100	80	60	40	20							
138	128	120	112	106	100	95	90	86	82	78	
275	256	239	225	212	200	190	180	172	164	157	
413	384	359	337	317	300	284	270	258	246	235	
551	512	479	449	423	400	379	360	344	328	314	
689	640	598	562	529	500	474	451	429	410	392	
826	768	718	674	635	600	569	541	515	492	471	
964	896	838	786	741	700	664	631	601	574	549	
1102	1025	957	898	846	800	758	721	687	656	628	
1240	1153	1077	1011	952	900	853	811	773	738	706	
1377	1281	1197	1123	1058	1000	948	901	859	820	785	
1515	1409	1317	1235	1164	1100	1043	991	945	902	863	
1653	1537	1436	1348	1270	1200	1138	1081	1030	984	942	
1792	1666	1556	1460	1375	1300	1232	1171	1116	1066	1020	
1930	1794	1676	1573	1481	1400	1327	1261	1202	1148	1098	
2068	1922	1796	1685	1587	1500	1422	1351	1288	1230	1177	
2207	2051	1916	1798	1693	1600	1517	1441	1373	1312	1255	
2345	2180	2036	1910	1799	1700	1611	1531	1459	1393	1333	
2484	2309	2156	2023	1905	1800	1706	1621	1545	1475	1411	

**Driftdown/Cruise Fuel and Time**

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.5	0:17
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.2	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.7	1.8	1.9	2.0	0:50
400	1.6	1.8	1.9	2.0	2.2	2.3	2.4	2.6	2.7	2.9	1:06
500	2.0	2.2	2.4	2.6	2.8	3.0	3.1	3.3	3.5	3.7	1:23
600	2.4	2.7	2.9	3.1	3.3	3.6	3.8	4.0	4.2	4.5	1:39
700	2.8	3.1	3.4	3.6	3.9	4.2	4.4	4.7	5.0	5.2	1:56
800	3.2	3.6	3.9	4.2	4.5	4.8	5.0	5.4	5.7	6.0	2:12
900	3.6	4.0	4.3	4.7	5.0	5.4	5.7	6.0	6.4	6.8	2:29
1000	4.0	4.4	4.8	5.2	5.6	6.0	6.3	6.7	7.1	7.6	2:46
1100	4.4	4.8	5.3	5.7	6.1	6.6	6.9	7.4	7.8	8.3	3:02
1200	4.8	5.3	5.7	6.2	6.7	7.1	7.6	8.1	8.6	9.1	3:19
1300	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.3	9.8	3:36
1400	5.5	6.1	6.6	7.2	7.7	8.3	8.8	9.4	10.0	10.6	3:52
1500	5.9	6.5	7.1	7.7	8.3	8.9	9.4	10.0	10.7	11.3	4:09
1600	6.3	6.9	7.5	8.2	8.8	9.4	10.0	10.7	11.3	12.1	4:26
1700	6.6	7.3	8.0	8.6	9.3	10.0	10.6	11.3	12.0	12.8	4:43
1800	7.0	7.7	8.4	9.1	9.8	10.5	11.2	12.0	12.7	13.5	4:59

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at long range cruise speed.

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	9500	6400	3400
80	12400	9500	6500
75	15300	12800	9800
70	18400	15800	13200
65	21100	18600	16300
60	23700	21800	19400
55	26300	24700	22400
50	29000	27700	25800
45	31400	30500	29200
40	33800	33000	31800

With engine anti-ice on, decrease altitude capability by 2000 ft.

With engine and wing anti-ice on, decrease altitude capability by 6500 ft.



**ENGINE INOP**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
85	%N1	91.8									
	MACH	.561									
	KIAS	311									
	FF/ENG	3067									
80	%N1	90.1	94.0								
	MACH	.545	.590								
	KIAS	302	299								
	FF/ENG	2875	2870								
75	%N1	88.4	92.5	94.0							
	MACH	.528	.579	.593							
	KIAS	293	293	288							
	FF/ENG	2684	2709	2674							
70	%N1	86.5	90.7	92.3	94.0						
	MACH	.510	.562	.582	.595						
	KIAS	282	284	283	278						
	FF/ENG	2494	2518	2520	2481						
65	%N1	84.5	88.7	90.4	92.2	93.9					
	MACH	.491	.542	.563	.584	.596					
	KIAS	271	274	274	273	268					
	FF/ENG	2306	2327	2330	2330	2295					
60	%N1	82.3	86.5	88.3	90.0	91.9	93.7	96.4			
	MACH	.471	.521	.543	.564	.585	.597	.614			
	KIAS	261	263	263	263	263	258	254			
	FF/ENG	2124	2137	2139	2140	2143	2114	2146			
55	%N1	80.2	84.2	85.9	87.7	89.5	91.4	93.3	96.2		
	MACH	.453	.498	.520	.541	.563	.585	.597	.614		
	KIAS	250	251	252	252	253	252	247	244		
	FF/ENG	1954	1948	1950	1950	1953	1958	1938	1971		
50	%N1	77.8	81.6	83.4	85.2	87.0	88.7	90.7	92.7	95.7	
	MACH	.434	.475	.495	.516	.538	.561	.583	.596	.613	
	KIAS	240	239	239	240	241	241	241	236	233	
	FF/ENG	1791	1764	1762	1762	1764	1767	1777	1765	1793	
45	%N1	75.5	79.1	80.6	82.3	84.1	85.9	87.7	89.7	91.8	94.8
	MACH	.415	.452	.469	.489	.511	.533	.556	.578	.593	.610
	KIAS	229	227	227	227	228	229	229	229	225	222
	FF/ENG	1636	1594	1582	1575	1577	1580	1586	1600	1593	1613
40	%N1	73.0	76.2	77.8	79.4	81.0	82.8	84.6	86.4	88.3	90.7
	MACH	.395	.429	.445	.462	.480	.502	.525	.548	.571	.589
	KIAS	218	215	215	214	214	215	216	216	216	214
	FF/ENG	1485	1434	1416	1402	1392	1394	1400	1410	1421	1424

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
298	272	249	230	214	200	190	180	172	164	158
600	547	501	462	429	400	379	361	344	328	315
903	823	753	694	644	600	570	542	517	494	473
1209	1100	1005	926	859	800	759	721	687	657	630
1516	1379	1259	1159	1075	1000	949	902	859	820	786
1825	1659	1513	1393	1290	1200	1139	1082	1031	984	943
2137	1940	1768	1626	1506	1400	1328	1262	1202	1147	1099
2450	2222	2024	1860	1722	1600	1518	1442	1373	1311	1256
2766	2507	2281	2095	1938	1800	1707	1622	1544	1474	1412
3083	2792	2539	2331	2155	2000	1896	1801	1715	1637	1568

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.4	0:43	1.2	0:41	1.1	0:39	1.0	0:38	0.9	0:37
400	2.8	1:23	2.6	1:19	2.4	1:14	2.2	1:11	2.1	1:09
600	4.3	2:04	3.9	1:57	3.6	1:50	3.4	1:45	3.2	1:42
800	5.7	2:46	5.2	2:36	4.9	2:26	4.5	2:19	4.4	2:14
1000	7.1	3:28	6.6	3:15	6.1	3:03	5.7	2:53	5.5	2:47
1200	8.5	4:10	7.9	3:55	7.3	3:40	6.8	3:28	6.6	3:21
1400	9.8	4:53	9.1	4:36	8.5	4:18	8.0	4:02	7.7	3:54
1600	11.2	5:36	10.4	5:16	9.7	4:55	9.1	4:38	8.7	4:28
1800	12.5	6:20	11.7	5:58	10.9	5:34	10.2	5:13	9.8	5:02
2000	13.9	7:05	12.9	6:39	12.0	6:13	11.3	5:49	10.8	5:36

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)									
	40	45	50	55	60	65	70	75	80	
1	-0.1	-0.1	-0.1	0.0	0.0	0.1	0.1	0.2	0.3	
2	-0.3	-0.2	-0.1	-0.1	0.0	0.2	0.3	0.6	0.8	
3	-0.4	-0.3	-0.2	-0.1	0.0	0.3	0.5	0.9	1.2	
4	-0.6	-0.4	-0.3	-0.1	0.0	0.3	0.7	1.2	1.6	
5	-0.7	-0.5	-0.4	-0.2	0.0	0.4	0.9	1.4	2.0	
6	-0.8	-0.6	-0.4	-0.2	0.0	0.5	1.1	1.7	2.4	
7	-1.0	-0.8	-0.5	-0.3	0.0	0.6	1.2	2.0	2.8	
8	-1.1	-0.9	-0.6	-0.3	0.0	0.6	1.4	2.2	3.2	
9	-1.3	-1.0	-0.7	-0.3	0.0	0.7	1.5	2.4	3.5	
10	-1.4	-1.1	-0.7	-0.4	0.0	0.7	1.6	2.6	3.8	
11	-1.6	-1.2	-0.8	-0.4	0.0	0.8	1.7	2.8	4.1	
12	-1.7	-1.3	-0.9	-0.4	0.0	0.8	1.9	3.0	4.4	
13	-1.9	-1.4	-0.9	-0.5	0.0	0.9	2.0	3.2	4.7	
14	-2.0	-1.5	-1.0	-0.5	0.0	0.9	2.0	3.4	4.9	

Includes APU fuel burn.





**ENGINE INOP**  
**MAX CONTINUOUS THRUST**

**Holding  
 Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	81.1	84.1	88.3	92.8				
	KIAS	250	251	252	253				
	FF/ENG	2740	2730	2750	2800				
80	%N1	79.5	82.4	86.5	91.0				
	KIAS	242	243	244	245				
	FF/ENG	2580	2570	2570	2610				
75	%N1	77.8	80.5	84.7	89.1	95.0			
	KIAS	235	236	236	238	239			
	FF/ENG	2420	2400	2400	2420	2490			
70	%N1	76.0	78.6	82.8	87.1	92.1			
	KIAS	227	227	228	229	231			
	FF/ENG	2260	2240	2230	2250	2270			
65	%N1	74.0	76.7	80.8	85.0	89.7	97.7		
	KIAS	219	219	220	221	222	224		
	FF/ENG	2100	2090	2070	2070	2080	2230		
60	%N1	71.7	74.6	78.5	82.8	87.4	93.7		
	KIAS	210	210	211	212	213	214		
	FF/ENG	1950	1930	1910	1910	1910	1970		
55	%N1	69.4	72.3	76.3	80.5	84.9	90.0		
	KIAS	200	201	202	203	204	205		
	FF/ENG	1800	1770	1750	1740	1730	1760		
50	%N1	66.9	69.7	73.8	77.8	82.3	87.0	94.9	
	KIAS	192	192	192	193	194	195	196	
	FF/ENG	1650	1620	1600	1580	1570	1570	1680	
45	%N1	64.2	66.9	70.9	75.0	79.4	84.0	89.6	
	KIAS	185	185	185	185	185	185	186	
	FF/ENG	1500	1470	1440	1420	1400	1400	1450	
40	%N1	61.1	64.0	67.8	72.0	76.2	80.7	85.4	94.0
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1350	1330	1300	1270	1250	1240	1260	1360

This table includes 5% additional fuel for holding in a racetrack pattern.

# ENGINE INOP

## ADVISORY INFORMATION

### Gear Down Landing Rate of Climb Available Flaps 15

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	-220	-290				
50	-200	-270	-370			
48	-170	-240	-350			
46	-140	-210	-320	-430		
44	-120	-190	-300	-410		
42	-90	-160	-270	-380	-490	
40	-60	-130	-250	-360	-470	
38	-30	-110	-220	-330	-450	-560
36	-20	-80	-190	-310	-420	-540
34	-10	-50	-160	-280	-400	-520
32	-10	-30	-140	-260	-370	-490
30	-10	-30	-110	-230	-350	-470
20	0	-30	-100	-170	-240	-340
10	0	-20	-90	-170	-240	-320
0	10	-20	-90	-160	-240	-320
-20	10	-10	-90	-160	-250	-330
-40	10	-10	-90	-170	-250	-340

Rate of climb capability shown is valid for 60000 kg, gear down at VREF15+5.  
 Decrease rate of climb 130 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 180 ft/min per 5000 kg less than 60000 kg.

### Flaps 30

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	-400	-470				
50	-370	-440	-550			
48	-350	-420	-530			
46	-320	-400	-500	-610		
44	-300	-370	-480	-590		
42	-270	-340	-460	-570	-680	
40	-250	-320	-430	-540	-660	
38	-220	-290	-410	-520	-640	-750
36	-200	-270	-380	-500	-610	-730
34	-200	-240	-360	-470	-590	-710
32	-200	-220	-330	-450	-570	-690
30	-200	-220	-300	-420	-540	-660
20	-200	-220	-290	-360	-440	-540
10	-190	-220	-290	-370	-440	-530
0	-190	-220	-290	-370	-450	-530
-20	-200	-220	-300	-380	-460	-550
-40	-200	-230	-310	-390	-480	-570

Rate of climb capability shown is valid for 60000 kg, gear down at VREF30+5.  
 Decrease rate of climb 130 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 180 ft/min per 5000 kg less than 60000 kg.



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 43

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15500	12500	9300
80	18400	15500	12600
75	21100	18500	15700
70	23700	21500	18600
65	26100	24400	21800
60	28600	27100	25300
55	30800	29600	28100
50	32900	31900	30700
45	35100	34100	33000
40	37500	36500	35400

## GEAR DOWN

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	21	23	25	27	29	31	33	35
85	%N1	85.9								
	MACH	.482								
	KIAS	267								
	FF/ENG	2421								
80	%N1	84.2								
	MACH	.468								
	KIAS	259								
	FF/ENG	2271								
75	%N1	82.5	91.7							
	MACH	.454	.554							
	KIAS	251	248							
	FF/ENG	2123	2101							
70	%N1	80.6	89.8	91.7						
	MACH	.440	.541	.557						
	KIAS	243	242	240						
	FF/ENG	1977	1960	1950						
65	%N1	78.6	87.9	89.5	91.6	94.5				
	MACH	.425	.524	.543	.560	.578				
	KIAS	235	234	233	231	229				
	FF/ENG	1835	1812	1806	1805	1836				
60	%N1	76.5	85.6	87.4	89.1	91.3	94.5			
	MACH	.409	.504	.525	.544	.562	.580			
	KIAS	226	225	225	224	222	220			
	FF/ENG	1696	1661	1661	1658	1664	1696			
55	%N1	74.4	83.3	85.0	86.8	88.5	90.9	94.1		
	MACH	.393	.484	.504	.525	.545	.562	.581		
	KIAS	217	216	216	216	215	213	211		
	FF/ENG	1559	1515	1512	1515	1517	1523	1555		
50	%N1	71.9	80.7	82.5	84.2	86.0	87.8	90.2	93.5	
	MACH	.376	.463	.482	.502	.523	.544	.561	.580	
	KIAS	207	206	206	206	206	205	203	201	
	FF/ENG	1424	1371	1367	1368	1374	1377	1381	1411	
45	%N1	69.1	78.0	79.7	81.4	83.1	85.0	86.8	89.1	92.5
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578
	KIAS	197	196	196	196	196	196	195	193	191
	FF/ENG	1294	1231	1224	1224	1230	1235	1237	1239	1265
40	%N1	66.2	74.9	76.6	78.3	80.0	81.8	83.6	85.5	87.7
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554
	KIAS	187	185	185	185	185	185	185	185	183
	FF/ENG	1170	1098	1085	1083	1089	1092	1094	1096	1097



**GEAR DOWN**

**Long Range Cruise Enroute Fuel and Time  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2381	2103	1865	1680	1530	1400	1320	1247	1181	1122	1070
2743	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3113	2737	2418	2171	1972	1800	1695	1600	1514	1438	1371

**Reference Fuel and Time Required at Check Point**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.4	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.4	1:54
800	9.8	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.3	3:50	10.1	3:30	9.5	3:18	9.0	3:08
1200	14.4	4:56	13.5	4:39	12.1	4:14	11.3	3:58	10.7	3:46
1400	16.7	5:49	15.6	5:28	14.0	4:58	13.1	4:40	12.4	4:24
1600	18.9	6:43	17.7	6:18	15.9	5:44	14.9	5:22	14.1	5:03
1800	21.1	7:38	19.7	7:10	17.7	6:30	16.6	6:05	15.7	5:43

**Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.3
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.3	-0.7	0.0	1.2	2.6
10	-1.7	-0.8	0.0	1.4	3.2
12	-2.0	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.7	-1.3	0.0	2.0	4.6
18	-3.0	-1.5	0.0	2.2	5.0
20	-3.4	-1.7	0.0	2.4	5.3
22	-3.7	-1.8	0.0	2.5	5.6

## GEAR DOWN

### Descent

#### VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	280	91
39000	20	270	86
37000	19	270	81
35000	19	260	77
33000	18	260	72
31000	17	250	68
29000	17	250	64
27000	16	240	60
25000	15	230	56
23000	14	230	52
21000	13	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	8	170	26
5000	6	140	16
1500	4	110	9

Allowances for a straight-in approach are included.

## GEAR DOWN

### Holding

#### Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	75.8	78.5	82.7	87.0	92.0			
	KIAS	230	230	230	230	230			
	FF/ENG	2240	2230	2220	2240	2260			
80	%N1	74.2	77.0	81.1	85.4	90.0			
	KIAS	225	225	225	225	225			
	FF/ENG	2120	2110	2100	2100	2110			
75	%N1	72.5	75.4	79.4	83.7	88.3	94.8		
	KIAS	220	220	220	220	220	220		
	FF/ENG	2000	1990	1970	1970	1970	2050		
70	%N1	70.8	73.7	77.6	81.9	86.4	91.8		
	KIAS	216	216	216	216	216	216		
	FF/ENG	1890	1870	1850	1840	1840	1870		
65	%N1	69.0	71.9	75.9	80.1	84.5	89.3		
	KIAS	211	211	211	211	211	211		
	FF/ENG	1770	1750	1730	1720	1710	1730		
60	%N1	67.1	69.8	74.0	78.0	82.5	87.1	94.3	
	KIAS	204	204	204	204	204	204	204	
	FF/ENG	1660	1630	1610	1600	1580	1590	1670	
55	%N1	65.1	67.8	71.9	75.9	80.3	84.8	90.4	
	KIAS	198	198	198	198	198	198	198	
	FF/ENG	1540	1520	1490	1480	1460	1460	1500	
50	%N1	62.8	65.6	69.6	73.7	78.0	82.4	87.1	
	KIAS	192	192	192	192	192	192	192	
	FF/ENG	1430	1400	1380	1360	1330	1330	1350	
45	%N1	60.3	63.3	67.1	71.4	75.5	79.9	84.5	91.5
	KIAS	185	185	185	185	185	185	185	185
	FF/ENG	1310	1290	1270	1250	1220	1210	1220	1270
40	%N1	57.9	60.6	64.6	68.7	72.9	77.3	81.7	86.8
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1200	1180	1160	1130	1110	1090	1100	1110

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank





## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 44

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	70	218	1500		
70	66	213	4700	2200	
65	61	208	8000	5900	3400
60	57	202	11100	9300	7100
55	52	196	14000	12900	10900
50	47	190	16900	16000	14800
45	43	183	19800	18700	17600
40	38	176	22800	21700	20600

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
65	1600		
60	6300	3200	
55	10600	8200	5300
50	14400	13000	10400
45	18000	16900	15700
40	21700	20500	19300

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
60	%N1	90.2	91.9								
	MACH	.364	.375								
	KIAS	220	219								
	FF/ENG	3192	3191								
55	%N1	87.8	89.3	91.0	92.8						
	MACH	.351	.362	.374	.387						
	KIAS	212	211	210	209						
	FF/ENG	2924	2909	2906	2913						
50	%N1	85.3	86.7	88.2	89.9	91.7	94.2				
	MACH	.338	.348	.359	.371	.384	.398				
	KIAS	204	203	202	201	200	199				
	FF/ENG	2672	2647	2630	2626	2633	2657				
45	%N1	82.7	84.0	85.4	86.9	88.6	90.4	92.7	96.6		
	MACH	.325	.334	.344	.355	.367	.380	.393	.408		
	KIAS	196	195	193	192	191	190	189	189		
	FF/ENG	2432	2400	2374	2356	2351	2352	2359	2417		
40	%N1	79.8	81.1	82.5	83.9	85.4	87.0	88.8	90.8	94.1	98.4
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.418
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2206	2166	2133	2107	2088	2076	2069	2065	2101	2201



**GEAR DOWN**  
**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Diversion Fuel and Time**  
**Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1653	1431	1245	1104	994	900	838	782	733	690	653
1845	1595	1386	1228	1105	1000	931	868	813	765	724

**Reference Fuel and Time Required at Check Point**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.3	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.7	1:15	3.6	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	6.0	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.1	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.6	3:58	10.9	3:46	10.5	3:35
1000	12.8	4:25	12.0	4:12	11.6	3:59

**Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.7	1.3
5	-0.8	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.0	2.0
7	-1.1	-0.6	0.0	1.2	2.4
8	-1.3	-0.7	0.0	1.4	2.7
9	-1.5	-0.7	0.0	1.6	3.1
10	-1.6	-0.8	0.0	1.8	3.5
11	-1.8	-0.9	0.0	1.9	3.8
12	-1.9	-1.0	0.0	2.1	4.2
13	-2.1	-1.1	0.0	2.3	4.5
14	-2.3	-1.1	0.0	2.5	4.9

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
70	%N1	89.4			
	KIAS	216			
	FF/ENG	3610			
65	%N1	87.4	90.5		
	KIAS	211	211		
	FF/ENG	3360	3380		
60	%N1	85.2	88.2	92.9	
	KIAS	204	204	204	
	FF/ENG	3110	3110	3150	
55	%N1	82.9	85.9	90.4	
	KIAS	198	198	198	
	FF/ENG	2860	2860	2880	
50	%N1	80.4	83.4	87.7	92.8
	KIAS	192	192	192	192
	FF/ENG	2630	2620	2620	2670
45	%N1	77.8	80.7	85.0	89.6
	KIAS	185	185	185	185
	FF/ENG	2400	2380	2380	2400
40	%N1	75.1	77.8	82.1	86.5
	KIAS	178	178	178	178
	FF/ENG	2180	2160	2140	2140

This table includes 5% additional fuel for holding in a racetrack pattern.

**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 45**

---

**Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

---

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.



To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.





737-800W CFM56-7B26 KG M FAA CATC/N

**Pkg Model Identification . . . . . PI-QRH.ModID.50.1**

**General . . . . . PI-QRH.50.1**

- Flight With Unreliable Airspeed/
- Turbulent Air Penetration . . . . . PI-QRH.50.1
- Max Climb %N1 . . . . . PI-QRH.50.3
- Go-around %N1 . . . . . PI-QRH.50.4
- VREF . . . . . PI-QRH.50.5

**Advisory Information . . . . . PI-QRH.51.1**

- Normal Configuration Landing Distance . . . . . PI-QRH.51.1
- Non-Normal Configuration Landing Distance . . . . . PI-QRH.51.4
  - Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.51.4
  - Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.51.5
  - Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.51.6
  - All Flaps Up Landing . . . . . PI-QRH.51.7
  - ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.51.8
  - ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.51.9
  - ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.51.10
  - Jammed or Restricted Flight Controls (Flaps 15) . . PI-QRH.51.11
  - LEADING EDGE FLAPS TRANSIT (Flaps 15) . PI-QRH.51.12
  - LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.51.13
  - LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.51.14
  - LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.51.15
  - LOSS OF SYSTEM A AND SYSTEM B  
(Flaps 15). . . . . PI-QRH.51.16
  - LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.51.17
  - MANUAL REVERSION (Flaps 15). . . . . PI-QRH.51.18
  - One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.51.19
  - One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.51.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.51.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.51.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.51.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.51.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.51.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.51.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.51.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.51.28
Recommended Brake Cooling Schedule . . . . .	PI-QRH.51.29
<b>Engine Inoperative . . . . .</b>	<b>PI-QRH.52.1</b>
Initial Max Continuous %N1 . . . . .	PI-QRH.52.1
Max Continuous %N1 . . . . .	PI-QRH.52.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.52.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.52.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.52.8
Long Range Cruise Control . . . . .	PI-QRH.52.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.52.10
Holding . . . . .	PI-QRH.52.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.52.12
<b>Gear Down . . . . .</b>	<b>PI-QRH.53.1</b>
Long Range Cruise Altitude Capability . . . . .	PI-QRH.53.1
Long Range Cruise Control . . . . .	PI-QRH.53.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.53.3
Descent . . . . .	PI-QRH.53.4
Holding . . . . .	PI-QRH.53.5
<b>Gear Down, Engine Inoperative . . . . .</b>	<b>PI-QRH.54.1</b>
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.54.1



**737 Flight Crew Operations Manual**

---

Long Range Cruise Altitude Capability . . . . .	PI-QRH.54.1
Long Range Cruise Control . . . . .	PI-QRH.54.2
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.54.3
Holding . . . . .	PI-QRH.54.4
<b>Text . . . . .</b>	<b>PI-QRH.55.1</b>
Introduction . . . . .	PI-QRH.55.1
General . . . . .	PI-QRH.55.1
Advisory Information . . . . .	PI-QRH.55.2
Engine Inoperative . . . . .	PI-QRH.55.4
Gear Down . . . . .	PI-QRH.55.6



Intentionally  
Blank

**General**

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-5552	37425	YF048
B-5551	36697	YF049
B-5151	34255	YK622
B-5152	34256	YK623
B-5308	32687	YK624
B-5309	32689	YK625
B-5382	36540	YK626
B-5383	35631	YK627
B-5386	35634	YK628



737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-5385	35633	YK629
B-5388	35635	YK630
B-5318	30723	YK967
B-5319	35102	YL076
B-5355	35104	YL077
B-5389	35636	YL541
B-5432	35641	YL542
B-5433	35642	YL543
B-5435	35644	YL544
B-5563	38012	YL545
B-5565	38015	YL546
B-5595	38017	YL547
B-5603	38020	YL548
B-5605	38022	YL549
B-5602	36824	YL550
B-5601	36823	YL551
B-5791	39930	YS177
B-5845	39931	YS178
B-5792	41790	YS191
B-5846	41791	YS192
B-5688	41792	YS193
B-5847	41793	YS194
B-7195	43885	YT519
B-7196	43886	YT520
B-7560	43887	YT521





## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 50

**Flight With Unreliable Airspeed/ Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>		
	V/S (FT/MIN)	1700	1100	600		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2500	1900	1500	1100	800
20000	<b>PITCH ATT</b>	<b>7.0</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4200	3300	2600	2100	1700
10000	<b>PITCH ATT</b>	<b>11.0</b>	<b>9.5</b>	<b>8.5</b>	<b>8.0</b>	<b>8.0</b>
	V/S (FT/MIN)	5600	4400	3600	3000	2500
SEA LEVEL	<b>PITCH ATT</b>	<b>14.5</b>	<b>12.5</b>	<b>11.0</b>	<b>10.0</b>	<b>9.5</b>
	V/S (FT/MIN)	6700	5300	4400	3700	3100

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	83	85	90		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	81	83	84	87	90
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	81	82	83	84	86
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	77	78	79	81	82
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>
	%N1	74	74	75	77	78
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	70	71	72	73	74

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>	<b>1.0</b>	<b>1.5</b>
	V/S (FT/MIN)	-2700	-2400	-2300	-2500	-2700
30000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-3100	-2600	-2300	-2100	-2000
20000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2800	-2300	-2000	-1900	-1700
10000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2500	-2100	-1800	-1700	-1500
SEA LEVEL	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.5</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-2300	-1900	-1700	-1500	-1400

**Flight With Unreliable Airspeed/ Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Holding (VREF40 + 70)**

**Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	56	62	66	70	73
	KIAS	178	193	212	229	246
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	53	58	62	66	70
	KIAS	178	192	211	228	244
5000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	49	54	58	62	66
	KIAS	178	192	210	227	243

**Terminal Area (5000 FT)**

**%N1 for Level Flight**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>
	%N1	48	54	58	62	65
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>
	%N1	51	56	60	65	68
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>
	%N1	51	56	61	65	69
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>	<b>6.5</b>
	%N1	60	66	71	75	79

**Final Approach (1500 FT)**

**Gear Down, %N1 for 3° Glideslope**

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>2.5</b>	<b>2.5</b>	<b>2.5</b>
	%N1	43	47	51	55	58
FLAPS 30 (VREF30 + 10)	<b>PITCH ATT</b>	<b>0.5</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>
	%N1	47	52	57	60	64
FLAPS 40 (VREF40 + 10)	<b>PITCH ATT</b>	<b>-0.5</b>	<b>0.0</b>	<b>0.0</b>	<b>0.0</b>	<b>0.0</b>
	%N1	53	58	63	67	70

**Go-Around**

**Flaps 15, Gear Up, Set Go-Around Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>16.0</b>	<b>12.0</b>	<b>9.5</b>	<b>8.0</b>	<b>7.0</b>
	V/S (FT/MIN)	4200	3200	2600	2000	1600
	KIAS	151	168	183	197	209
5000	<b>PITCH ATT</b>	<b>20.0</b>	<b>15.0</b>	<b>12.0</b>	<b>10.0</b>	<b>8.5</b>
	V/S (FT/MIN)	4900	3900	3100	2600	2100
	KIAS	151	168	183	196	208
SEA LEVEL	<b>PITCH ATT</b>	<b>24.0</b>	<b>18.0</b>	<b>14.5</b>	<b>12.0</b>	<b>10.0</b>
	V/S (FT/MIN)	5600	4500	3700	3100	2500
	KIAS	151	167	182	196	208

## Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	95.1	95.2	93.5
55	91.0	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.5	92.8
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.7	93.8	92.1
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	93.0	93.1	91.4
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.3	92.4	90.7
35	93.6	94.0	94.3	94.5	94.3	94.0	94.0	93.0	92.4	90.8
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	93.9	93.3	91.8
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.7	94.1	92.8
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.4	94.9	93.7
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.2	95.7	94.6
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	96.9	96.5	95.6
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.7	97.3	96.5
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.5	98.2	97.5
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.2	99.0	98.4
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.2	99.8	99.4
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.4
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.8	101.3	101.0
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	100.0	100.5	100.1
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	99.1	99.6	99.3
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	98.3	98.8	98.4
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	97.4	97.9	97.6

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

**Go-around %N1**

**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)												
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	160	168	177
80	155	163	172
75	151	158	167
70	146	153	161
65	141	148	156
60	135	142	149
55	128	136	143
50	122	129	136
45	115	122	128
40	108	115	121

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 51

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1010	70/-60	25/30	-35/125	15/-10	25/-25	35	25	50
AUTOBRAKE MAX	1300	65/-75	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 3	1870	105/-120	50/65	-80/260	0/0	55/-55	100	0	0
AUTOBRAKE 2	2385	155/-170	75/95	-105/360	30/-45	70/-70	100	70	70
AUTOBRAKE 1	2640	185/-200	90/115	-125/425	70/-85	80/-80	95	240	335

## Good Reported Braking Action

MAX MANUAL	1395	80/-85	40/50	-60/210	35/-30	35/-35	50	75	175
AUTOBRAKE MAX	1485	85/-90	40/55	-65/215	30/-25	35/-40	55	85	190
AUTOBRAKE 3	1870	105/-120	50/65	-80/265	5/0	55/-55	100	5	15
AUTOBRAKE 2	2385	155/-170	75/95	-105/360	30/-45	70/-70	100	70	70
AUTOBRAKE 1	2640	185/-200	90/115	-125/425	70/-85	80/-80	95	240	335

## Medium Reported Braking Action

MAX MANUAL	1930	125/-130	60/80	-95/345	90/-70	55/-55	65	215	520
AUTOBRAKE MAX	1965	130/-135	60/85	-100/350	85/-65	55/-55	75	215	520
AUTOBRAKE 3	2065	130/-140	60/85	-100/360	65/-45	60/-60	100	150	450
AUTOBRAKE 2	2440	160/-175	75/100	-115/405	65/-65	70/-75	100	115	250
AUTOBRAKE 1	2655	185/-200	90/120	-130/440	90/-90	80/-80	95	255	395

## Poor Reported Braking Action

MAX MANUAL	2545	180/-185	85/120	-145/550	215/-140	70/-75	80	465	1245
AUTOBRAKE MAX	2545	185/-185	90/120	-145/550	220/-145	70/-75	80	465	1245
AUTOBRAKE 3	2560	185/-185	90/120	-145/550	210/-130	70/-75	95	465	1255
AUTOBRAKE 2	2730	190/-200	90/125	-155/565	200/-130	75/-80	100	375	1090
AUTOBRAKE 1	2855	205/-215	100/135	-160/585	205/-145	80/-85	95	440	1080

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 55 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Normal Configuration Landing Distance

#### Flaps 30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	40
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	0/0	30/-30	55	0	5
AUTOBRAKE 3	1725	95/-110	45/60	-75/250	0/0	50/-50	95	0	0
AUTOBRAKE 2	2190	140/-150	65/90	-100/345	30/-40	65/-65	95	60	60
AUTOBRAKE 1	2415	165/-180	80/105	-120/405	65/-75	70/-70	85	195	290

#### Good Reported Braking Action

MAX MANUAL	1330	75/-80	35/45	-60/205	35/-30	35/-35	50	70	155
AUTOBRAKE MAX	1415	80/-85	40/50	-60/210	30/-25	35/-35	60	75	170
AUTOBRAKE 3	1725	95/-110	45/60	-75/250	5/0	50/-50	95	5	15
AUTOBRAKE 2	2190	140/-150	65/90	-100/345	30/-40	65/-65	95	60	60
AUTOBRAKE 1	2415	165/-180	80/105	-120/405	65/-75	70/-70	85	195	290

#### Medium Reported Braking Action

MAX MANUAL	1815	115/-120	55/75	-95/335	85/-65	50/-50	65	190	450
AUTOBRAKE MAX	1850	120/-125	55/75	-95/340	80/-60	50/-50	75	190	455
AUTOBRAKE 3	1925	120/-125	55/75	-95/345	65/-45	55/-55	95	140	410
AUTOBRAKE 2	2245	140/-155	70/90	-110/390	65/-60	65/-65	95	105	225
AUTOBRAKE 1	2430	165/-180	80/105	-120/420	85/-80	70/-75	85	210	350

#### Poor Reported Braking Action

MAX MANUAL	2365	165/-170	80/110	-140/530	205/-135	65/-70	75	400	1045
AUTOBRAKE MAX	2370	165/-170	80/110	-140/530	205/-135	65/-70	80	400	1050
AUTOBRAKE 3	2385	170/-170	80/110	-140/535	200/-125	65/-70	85	400	1055
AUTOBRAKE 2	2525	175/-180	85/115	-145/550	190/-125	70/-75	90	335	925
AUTOBRAKE 1	2630	185/-190	85/120	-150/565	195/-135	75/-80	85	380	930

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 55 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfavored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
 Flaps 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	915	55/-50	20/25	-35/115	10/-10	20/-20	35	15	35
AUTOBRAKE MAX	1135	55/-60	25/35	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1590	85/-100	40/55	-70/235	0/0	45/-45	90	0	0
AUTOBRAKE 2	2030	125/-140	60/80	-95/330	20/-35	60/-60	95	35	35
AUTOBRAKE 1	2260	150/-165	75/95	-115/390	55/-65	65/-65	85	155	220

**Good Reported Braking Action**

MAX MANUAL	1270	70/-75	35/45	-55/200	35/-30	30/-30	50	65	140
AUTOBRAKE MAX	1350	75/-80	35/45	-60/205	30/-25	35/-35	60	70	150
AUTOBRAKE 3	1600	85/-100	40/55	-70/240	10/-5	45/-45	95	5	15
AUTOBRAKE 2	2030	125/-140	60/80	-95/330	20/-35	60/-60	95	35	35
AUTOBRAKE 1	2260	150/-165	75/95	-115/390	55/-65	65/-65	85	155	220

**Medium Reported Braking Action**

MAX MANUAL	1730	105/-115	50/70	-90/330	85/-65	45/-45	65	170	405
AUTOBRAKE MAX	1750	110/-120	55/70	-90/335	75/-60	45/-50	75	170	405
AUTOBRAKE 3	1800	110/-120	55/70	-95/340	70/-45	50/-50	90	150	390
AUTOBRAKE 2	2090	130/-145	60/85	-105/375	55/-55	60/-60	95	75	190
AUTOBRAKE 1	2275	150/-165	75/95	-115/405	80/-75	65/-65	85	170	275

**Poor Reported Braking Action**

MAX MANUAL	2245	155/-160	75/100	-140/520	200/-130	60/-65	75	360	930
AUTOBRAKE MAX	2250	155/-160	75/105	-140/520	200/-130	60/-65	75	360	930
AUTOBRAKE 3	2260	155/-165	75/105	-140/525	195/-125	60/-65	85	360	935
AUTOBRAKE 2	2370	160/-165	75/105	-140/535	185/-120	65/-70	90	290	830
AUTOBRAKE 1	2470	170/-180	80/110	-145/550	190/-130	70/-75	85	335	815

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Airspeed Unreliable (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1075	80/-65	25/35	-40/130	15/-10	25/-25	N/A	30	60
AUTOBRAKE MAX	1435	70/-80	35/45	-50/165	5/-5	35/-35	N/A	0	5
AUTOBRAKE 2	2550	165/-180	85/110	-110/370	50/-55	75/-75	N/A	165	180

**Good Reported Braking Action**

MAX MANUAL	1475	80/-85	40/55	-60/215	35/-30	40/-40	N/A	90	205
AUTOBRAKE MAX	1600	85/-95	45/60	-65/225	30/-25	40/-40	N/A	100	230
AUTOBRAKE 2	2550	165/-180	85/110	-110/370	55/-55	75/-75	N/A	165	180

**Medium Reported Braking Action**

MAX MANUAL	2025	130/-135	65/85	-100/350	90/-70	55/-55	N/A	240	595
AUTOBRAKE MAX	2080	130/-140	65/90	-100/355	85/-65	55/-60	N/A	245	605
AUTOBRAKE 3	2255	135/-145	70/90	-105/370	60/-45	65/-65	N/A	145	460

**Poor Reported Braking Action**

MAX MANUAL	2635	185/-190	90/125	-145/550	210/-140	75/-80	N/A	505	1385
AUTOBRAKE MAX	2635	185/-190	90/125	-145/550	210/-135	75/-80	N/A	500	1380
AUTOBRAKE 3	2685	185/-190	90/125	-150/555	195/-125	75/-80	N/A	485	1375

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Airspeed Unreliable (Flaps 30)  
 VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1025	60/-60	25/30	-35/125	15/-10	25/-25	N/A	25	55
AUTOBRAKE MAX	1335	60/-70	30/40	-45/155	5/-5	30/-35	N/A	0	5
AUTOBRAKE 2	2345	150/-160	75/95	-105/355	45/-50	70/-70	N/A	140	160

**Good Reported Braking Action**

MAX MANUAL	1415	75/-80	40/50	-60/210	35/-30	35/-35	N/A	80	185
AUTOBRAKE MAX	1525	80/-90	40/55	-65/220	30/-30	40/-40	N/A	90	205
AUTOBRAKE 2	2345	150/-160	75/95	-105/355	45/-50	70/-70	N/A	140	160

**Medium Reported Braking Action**

MAX MANUAL	1915	120/-125	60/80	-95/340	85/-70	50/-55	N/A	215	520
AUTOBRAKE MAX	1965	120/-130	60/80	-95/345	80/-65	55/-55	N/A	215	530
AUTOBRAKE 3	2100	120/-135	60/85	-100/360	60/-50	60/-60	N/A	135	420

**Poor Reported Braking Action**

MAX MANUAL	2460	170/-170	85/115	-140/535	200/-130	65/-70	N/A	435	1165
AUTOBRAKE MAX	2470	170/-175	85/115	-140/535	200/-125	70/-75	N/A	430	1160
AUTOBRAKE 3	2510	170/-175	85/115	-145/540	190/-125	70/-75	N/A	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Airspeed Unreliable (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	985	55/-55	20/30	-35/120	15/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1245	55/-65	30/35	-45/150	5/0	30/-30	N/A	0	0
AUTOBRAKE 2	2195	135/-150	70/90	-100/340	40/-45	65/-65	N/A	105	110

**Good Reported Braking Action**

MAX MANUAL	1360	70/-80	35/50	-60/205	35/-30	35/-35	N/A	75	170
AUTOBRAKE MAX	1455	75/-85	40/50	-60/215	30/-25	35/-35	N/A	85	185
AUTOBRAKE 2	2195	135/-150	70/90	-100/340	40/-45	65/-65	N/A	105	110

**Medium Reported Braking Action**

MAX MANUAL	1830	110/-120	55/75	-95/335	85/-65	50/-50	N/A	195	465
AUTOBRAKE MAX	1870	115/-125	60/80	-95/340	80/-60	50/-50	N/A	195	475
AUTOBRAKE 3	1965	115/-125	60/80	-100/350	60/-50	55/-55	N/A	135	405

**Poor Reported Braking Action**

MAX MANUAL	2345	160/-165	80/110	-140/525	195/-130	65/-70	N/A	395	1035
AUTOBRAKE MAX	2355	160/-165	80/110	-140/525	195/-125	65/-70	N/A	390	1035
AUTOBRAKE 3	2380	160/-165	80/110	-140/530	190/-125	65/-70	N/A	395	1045

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**All Flaps Up Landing**

**VREF40 + 55**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1330	185/-85	50/105	-45/205	20/-15	35/-35	45	45	95
AUTOBRAKE MAX	1855	85/-90	45/70	-60/195	5/-5	50/-50	75	5	20
AUTOBRAKE 2	3360	195/-225	115/150	-130/430	75/-85	105/-105	100	280	330

**Good Reported Braking Action**

MAX MANUAL	1755	85/-95	50/65	-65/230	40/-35	45/-50	45	110	255
AUTOBRAKE MAX	2000	90/-100	55/75	-75/245	30/-25	55/-55	70	85	225
AUTOBRAKE 2	3360	195/-225	115/150	-130/430	75/-85	105/-105	100	280	330

**Medium Reported Braking Action**

MAX MANUAL	2495	145/-155	80/110	-110/385	105/-85	70/-75	65	315	775
AUTOBRAKE MAX	2580	150/-160	85/115	-110/390	100/-80	75/-75	75	325	800
AUTOBRAKE 3	2950	145/-170	90/120	-120/420	65/-60	90/-90	110	165	510

**Poor Reported Braking Action**

MAX MANUAL	3320	220/-225	120/165	-165/605	250/-170	95/-100	80	690	1915
AUTOBRAKE MAX	3325	215/-225	120/165	-165/605	245/-160	100/-100	90	685	1905
AUTOBRAKE 3	3445	210/-225	120/165	-170/615	220/-150	100/-105	110	600	1840

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1795	105/-110	50/65	-80/290	55/-45	45/-45	60	145	345
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2015	125/-130	60/80	-100/350	85/-65	50/-55	70	215	530
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2585	180/-180	85/120	-145/545	200/-135	70/-75	80	460	1280
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3450	260/-260	120/175	-245/1005	625/-305	85/-105	95	1100	3915
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 ANTISKID INOPERATIVE (Flaps 30)  
 VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1695	95/-105	45/60	-80/280	55/-45	40/-45	60	125	300
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1895	115/-120	55/75	-95/340	80/-65	50/-50	65	185	455
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2415	165/-165	80/105	-140/530	190/-125	65/-70	80	395	1075
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3205	235/-235	110/155	-235/980	590/-285	75/-100	90	945	3215
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1615	90/-100	45/60	-80/275	55/-45	40/-40	60	115	265
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1805	105/-115	50/70	-95/335	80/-60	45/-45	65	170	405
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2290	150/-155	70/100	-140/520	185/-120	60/-65	80	355	950
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3040	220/-225	100/145	-230/960	575/-275	70/-95	85	860	2860
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Jammed or Restricted Flight Controls (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LEADING EDGE FLAPS TRANSIT (Flaps 15)**

**VREF15 + 15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1130	80/-70	25/35	-40/135	15/-15	25/-25	35	30	70
AUTOBRAKE MAX	1500	70/-80	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2725	175/-190	90/115	-115/385	50/-60	85/-85	100	155	160

**Good Reported Braking Action**

MAX MANUAL	1570	85/-95	45/60	-65/220	40/-35	40/-40	50	105	240
AUTOBRAKE MAX	1690	90/-100	45/60	-65/230	35/-30	45/-45	60	115	260
AUTOBRAKE 2	2730	175/-190	90/115	-115/385	50/-60	85/-85	100	160	160

**Medium Reported Braking Action**

MAX MANUAL	2170	140/-145	70/95	-100/365	95/-75	60/-60	70	275	695
AUTOBRAKE MAX	2210	140/-150	70/95	-105/365	90/-70	60/-65	75	280	700
AUTOBRAKE 3	2375	140/-150	75/100	-110/380	65/-45	70/-70	110	175	570

**Poor Reported Braking Action**

MAX MANUAL	2825	200/-205	100/140	-155/570	225/-150	80/-85	80	580	1620
AUTOBRAKE MAX	2825	200/-205	100/140	-155/570	230/-155	80/-85	85	575	1615
AUTOBRAKE 3	2855	200/-200	100/140	-155/570	215/-130	80/-85	100	565	1615

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1120	70/-65	25/35	-40/135	15/-15	25/-25	45	35	60
AUTOBRAKE MAX	1300	65/-75	30/40	-45/155	0/0	30/-30	60	0	10
AUTOBRAKE 2	2465	150/-175	75/95	-110/365	0/-10	75/-75	140	0	0

**Good Reported Braking Action**

MAX MANUAL	1620	95/-100	45/60	-70/235	50/-40	40/-45	70	135	275
AUTOBRAKE MAX	1630	95/-105	45/65	-70/235	40/-35	45/-45	75	135	275
AUTOBRAKE 2	2465	150/-175	75/95	-110/365	0/-10	75/-75	140	0	0

**Medium Reported Braking Action**

MAX MANUAL	2235	150/-155	75/100	-110/380	115/-90	60/-65	90	350	840
AUTOBRAKE MAX	2220	150/-155	75/100	-105/380	120/-95	60/-65	90	345	830
AUTOBRAKE 3	2220	150/-155	75/100	-105/380	120/-85	60/-65	90	345	830

**Poor Reported Braking Action**

MAX MANUAL	2905	215/-215	105/145	-160/590	265/-175	80/-85	105	710	2025
AUTOBRAKE MAX	2900	215/-215	105/150	-160/590	265/-180	80/-85	105	710	2025
AUTOBRAKE 3	2900	215/-215	105/150	-160/590	265/-180	80/-85	105	710	2025

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1060	65/-55	25/35	-40/130	15/-15	25/-25	45	30	50
AUTOBRAKE MAX	1215	60/-65	30/35	-45/145	0/0	30/-30	55	10	15
AUTOBRAKE 2	2260	135/-155	65/85	-105/350	0/-10	70/-70	135	0	0

**Good Reported Braking Action**

MAX MANUAL	1535	85/-95	45/60	-65/225	45/-40	40/-40	70	120	240
AUTOBRAKE MAX	1550	90/-95	45/60	-65/230	40/-35	40/-40	75	120	240
AUTOBRAKE 2	2260	135/-155	65/85	-105/350	0/-10	70/-70	135	0	0

**Medium Reported Braking Action**

MAX MANUAL	2090	135/-140	65/90	-105/370	110/-85	55/-60	85	305	710
AUTOBRAKE MAX	2085	135/-140	70/90	-105/370	115/-90	55/-60	90	300	705
AUTOBRAKE 3	2085	135/-140	70/90	-105/370	115/-80	55/-60	90	300	705

**Poor Reported Braking Action**

MAX MANUAL	2695	195/-195	95/130	-155/570	250/-165	75/-80	100	605	1650
AUTOBRAKE MAX	2695	195/-195	95/135	-155/570	250/-165	75/-80	100	605	1650
AUTOBRAKE 3	2695	195/-195	95/135	-155/570	250/-165	75/-80	100	605	1650

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 LOSS OF SYSTEM A (Flaps 40)**

**VREF40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1015	60/-55	25/30	-35/125	15/-15	25/-25	50	30	45
AUTOBRAKE MAX	1140	55/-60	25/35	-40/140	5/0	25/-25	55	10	20
AUTOBRAKE 2	2075	125/-140	60/80	-100/335	0/-5	60/-60	130	0	0

**Good Reported Braking Action**

MAX MANUAL	1460	80/-90	40/55	-65/225	45/-40	35/-40	70	105	210
AUTOBRAKE MAX	1470	85/-90	40/55	-65/225	40/-35	40/-40	75	105	210
AUTOBRAKE 2	2075	125/-140	60/80	-100/335	0/-5	60/-60	130	0	0

**Medium Reported Braking Action**

MAX MANUAL	1970	125/-135	60/85	-100/360	105/-85	55/-55	85	265	615
AUTOBRAKE MAX	1970	125/-135	60/85	-100/360	110/-85	55/-55	85	265	615
AUTOBRAKE 3	1970	125/-135	60/85	-100/360	110/-80	55/-55	90	265	615

**Poor Reported Braking Action**

MAX MANUAL	2525	180/-185	85/120	-150/560	240/-155	70/-75	95	525	1400
AUTOBRAKE MAX	2530	180/-185	90/125	-150/560	245/-160	70/-75	95	530	1405
AUTOBRAKE 3	2530	180/-185	90/125	-150/560	245/-160	70/-75	95	530	1405

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	80/-90	40/50	-60/195	35/-35	40/-40	75	-10	65
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2290	135/-145	65/90	-100/335	100/-80	60/-60	105	95	440
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	3035	200/-210	100/140	-150/525	215/-160	80/-85	120	365	1415
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3770	275/-275	135/190	-210/785	475/-270	100/-110	130	815	3380
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM B (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1140	55/-60	25/35	-45/145	20/-15	25/-25	40	40	70
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

## Good Reported Braking Action

MAX MANUAL	1630	95/-100	45/65	-75/255	50/-45	45/-45	60	140	285
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

## Medium Reported Braking Action

MAX MANUAL	2215	150/-155	70/100	-115/410	125/-95	60/-65	75	340	815
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

## Poor Reported Braking Action

MAX MANUAL	2835	210/-210	100/140	-170/640	295/-180	75/-85	90	665	1870
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1570	80/-90	40/50	-60/195	35/-35	40/-40	75	-10	65
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2290	135/-145	65/90	-100/335	100/-80	60/-60	105	95	440
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	3035	200/-210	100/140	-150/525	215/-160	80/-85	120	365	1415
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3770	275/-275	135/190	-210/785	475/-270	100/-110	130	815	3380
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 One Engine Inoperative Landing (Flaps 15)  
 VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1020	75/-65	25/30	-35/130	15/-10	25/-25	35	0	25
AUTOBRAKE MAX	1300	70/-75	30/40	-45/155	0/0	30/-30	60	0	0
AUTOBRAKE 2	2450	150/-170	75/95	-110/365	10/-25	75/-75	120	0	0

**Good Reported Braking Action**

MAX MANUAL	1440	80/-85	40/50	-65/215	40/-35	40/-40	50	0	100
AUTOBRAKE MAX	1545	85/-95	40/55	-65/225	35/-30	40/-40	60	0	110
AUTOBRAKE 2	2450	150/-170	75/95	-110/365	10/-25	75/-75	120	0	0

**Medium Reported Braking Action**

MAX MANUAL	2075	135/-140	65/85	-105/370	110/-85	60/-60	70	0	310
AUTOBRAKE MAX	2115	135/-145	65/85	-105/375	105/-80	60/-60	80	0	315
AUTOBRAKE 3	2165	135/-150	65/85	-105/380	90/-65	60/-65	100	0	295

**Poor Reported Braking Action**

MAX MANUAL	2850	200/-210	95/130	-165/605	290/-185	85/-85	90	0	765
AUTOBRAKE MAX	2850	200/-210	95/130	-165/605	290/-185	85/-85	95	0	765
AUTOBRAKE 3	2875	205/-210	95/130	-165/610	280/-180	85/-85	100	0	775

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**One Engine Inoperative Landing (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	970	60/-55	20/30	-35/125	15/-10	20/-20	35	0	25
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	0/0	30/-30	55	0	0
AUTOBRAKE 2	2240	135/-150	65/85	-105/350	10/-25	65/-65	110	0	0

**Good Reported Braking Action**

MAX MANUAL	1370	75/-80	35/50	-60/210	35/-30	35/-35	50	0	90
AUTOBRAKE MAX	1465	80/-90	40/50	-65/220	35/-30	35/-40	60	0	100
AUTOBRAKE 2	2240	135/-150	65/85	-105/350	10/-25	65/-65	110	0	0

**Medium Reported Braking Action**

MAX MANUAL	1940	120/-130	60/80	-100/360	105/-80	55/-55	70	0	265
AUTOBRAKE MAX	1975	125/-135	60/80	-100/365	95/-75	55/-55	80	0	270
AUTOBRAKE 3	2015	125/-135	60/80	-105/365	90/-65	55/-60	90	0	260

**Poor Reported Braking Action**

MAX MANUAL	2625	180/-190	85/115	-155/585	265/-170	75/-80	85	0	635
AUTOBRAKE MAX	2625	180/-190	85/115	-155/585	270/-165	75/-80	90	0	635
AUTOBRAKE 3	2655	185/-190	90/120	-160/585	260/-170	75/-80	90	0	640

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## Stabilizer Trim Inoperative (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

## Good Reported Braking Action

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

## Medium Reported Braking Action

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

## Poor Reported Braking Action

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15)  
VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1110	90/-65	25/40	-40/135	15/-15	25/-25	35	30	60
AUTOBRAKE MAX	1510	70/-75	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2730	165/-185	90/115	-115/385	55/-60	85/-85	100	165	175

**Good Reported Braking Action**

MAX MANUAL	1525	80/-85	40/55	-60/215	35/-30	40/-40	45	90	210
AUTOBRAKE MAX	1665	80/-90	45/60	-65/225	30/-25	45/-45	65	95	225
AUTOBRAKE 2	2735	160/-185	90/115	-115/385	55/-65	85/-85	95	165	175

**Medium Reported Braking Action**

MAX MANUAL	2125	125/-135	70/90	-100/360	90/-75	60/-60	65	255	625
AUTOBRAKE MAX	2180	130/-140	70/95	-100/360	85/-70	60/-60	75	260	640
AUTOBRAKE 3	2385	125/-140	70/95	-110/380	60/-45	70/-70	110	150	470

**Poor Reported Braking Action**

MAX MANUAL	2795	190/-195	100/135	-150/565	220/-150	80/-85	80	545	1510
AUTOBRAKE MAX	2790	185/-195	100/135	-150/565	220/-145	80/-85	85	540	1500
AUTOBRAKE 3	2845	185/-190	100/135	-155/570	205/-130	80/-85	105	525	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)  
 VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (Flap Lever 30)  
VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	5/0	30/-30	60	0	5
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	30/-45	65/-65	90	85	85

**Good Reported Braking Action**

MAX MANUAL	1315	70/-75	35/45	-60/200	30/-30	35/-35	50	75	165
AUTOBRAKE MAX	1410	75/-85	35/50	-60/210	30/-25	35/-35	60	80	185
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	35/-45	65/-65	90	85	85

**Medium Reported Braking Action**

MAX MANUAL	1790	115/-120	55/75	-90/330	80/-65	50/-50	65	195	480
AUTOBRAKE MAX	1820	115/-120	55/75	-95/335	75/-60	50/-50	70	200	480
AUTOBRAKE 3	1910	115/-125	55/75	-95/345	60/-40	50/-55	95	140	425

**Poor Reported Braking Action**

MAX MANUAL	2315	160/-165	80/105	-140/525	195/-125	60/-65	75	410	1100
AUTOBRAKE MAX	2320	165/-165	80/110	-140/525	195/-130	65/-70	75	410	1100
AUTOBRAKE 3	2335	165/-165	80/110	-140/525	190/-115	65/-70	90	410	1110

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15)  
 VREF40 + 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								REVERSE THRUST ADJ	
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	ONE REV	NO REV	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF			

**Dry Runway**

MAX MANUAL	1110	90/-65	25/40	-40/135	15/-15	25/-25	35	30	60
AUTOBRAKE MAX	1510	70/-75	35/45	-50/170	5/-5	40/-40	65	0	5
AUTOBRAKE 2	2730	165/-185	90/115	-115/385	55/-60	85/-85	100	165	175

**Good Reported Braking Action**

MAX MANUAL	1525	80/-85	40/55	-60/215	35/-30	40/-40	45	90	210
AUTOBRAKE MAX	1665	80/-90	45/60	-65/225	30/-25	45/-45	65	95	225
AUTOBRAKE 2	2735	160/-185	90/115	-115/385	55/-65	85/-85	95	165	175

**Medium Reported Braking Action**

MAX MANUAL	2125	125/-135	70/90	-100/360	90/-75	60/-60	65	255	625
AUTOBRAKE MAX	2180	130/-140	70/95	-100/360	85/-70	60/-60	75	260	640
AUTOBRAKE 3	2385	125/-140	70/95	-110/380	60/-45	70/-70	110	150	470

**Poor Reported Braking Action**

MAX MANUAL	2795	190/-195	100/135	-150/565	220/-150	80/-85	80	545	1510
AUTOBRAKE MAX	2790	185/-195	100/135	-150/565	220/-145	80/-85	85	540	1500
AUTOBRAKE 3	2845	185/-190	100/135	-155/570	205/-130	80/-85	105	525	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1005	70/-60	25/30	-35/125	10/-10	20/-25	35	25	50
AUTOBRAKE MAX	1310	65/-75	30/40	-45/155	5/-5	30/-30	65	0	5
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Good Reported Braking Action**

MAX MANUAL	1380	75/-80	35/50	-60/205	35/-30	35/-35	50	80	185
AUTOBRAKE MAX	1485	85/-90	40/55	-60/215	30/-25	35/-35	55	90	205
AUTOBRAKE 2	2360	155/-170	75/100	-105/355	35/-50	70/-70	95	100	100

**Medium Reported Braking Action**

MAX MANUAL	1900	125/-130	60/80	-95/340	85/-65	50/-55	65	225	550
AUTOBRAKE MAX	1935	125/-130	60/80	-95/345	80/-65	50/-55	75	225	555
AUTOBRAKE 3	2055	125/-135	60/85	-100/355	60/-40	55/-60	100	145	465

**Poor Reported Braking Action**

MAX MANUAL	2480	180/-180	85/120	-145/540	205/-135	70/-75	75	475	1310
AUTOBRAKE MAX	2480	180/-180	85/120	-145/540	205/-135	70/-75	80	475	1305
AUTOBRAKE 3	2500	180/-180	85/120	-145/540	200/-120	70/-75	95	475	1310

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
 Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40)  
 VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	960	55/-55	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1215	60/-65	30/35	-45/150	5/0	30/-30	60	0	5
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	30/-45	65/-65	90	85	85

**Good Reported Braking Action**

MAX MANUAL	1315	70/-75	35/45	-60/200	30/-30	35/-35	50	75	165
AUTOBRAKE MAX	1410	75/-85	35/50	-60/210	30/-25	35/-35	60	80	185
AUTOBRAKE 2	2165	140/-150	65/90	-100/340	35/-45	65/-65	90	85	85

**Medium Reported Braking Action**

MAX MANUAL	1790	115/-120	55/75	-90/330	80/-65	50/-50	65	195	480
AUTOBRAKE MAX	1820	115/-120	55/75	-95/335	75/-60	50/-50	70	200	480
AUTOBRAKE 3	1910	115/-125	55/75	-95/345	60/-40	50/-55	95	140	425

**Poor Reported Braking Action**

MAX MANUAL	2315	160/-165	80/105	-140/525	195/-125	60/-65	75	410	1100
AUTOBRAKE MAX	2320	165/-165	80/110	-140/525	195/-130	65/-70	75	410	1100
AUTOBRAKE 3	2335	165/-165	80/110	-140/525	190/-115	65/-70	90	410	1110

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flaps Up Landing**

**VREF40 + 40**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1185	110/-70	30/70	-40/140	15/-15	30/-30	45	30	70
AUTOBRAKE MAX	1645	75/-80	40/55	-55/180	5/-5	40/-45	70	5	10
AUTOBRAKE 2	2970	175/-195	100/130	-120/400	65/-70	90/-90	95	205	235

**Good Reported Braking Action**

MAX MANUAL	1600	80/-90	45/60	-65/220	35/-30	40/-45	45	90	205
AUTOBRAKE MAX	1795	85/-95	50/65	-70/235	25/-25	45/-50	65	80	200
AUTOBRAKE 2	2970	175/-195	100/130	-120/400	65/-70	90/-90	95	205	235

**Medium Reported Braking Action**

MAX MANUAL	2255	135/-140	70/95	-105/365	95/-75	65/-65	65	260	625
AUTOBRAKE MAX	2330	135/-145	75/100	-105/370	90/-75	65/-65	70	265	645
AUTOBRAKE 3	2605	135/-155	80/105	-115/395	60/-55	75/-80	105	145	435

**Poor Reported Braking Action**

MAX MANUAL	2990	200/-205	105/145	-155/580	230/-155	85/-90	80	565	1530
AUTOBRAKE MAX	2995	195/-205	105/145	-155/580	230/-150	85/-90	90	560	1520
AUTOBRAKE 3	3080	190/-205	105/145	-160/585	210/-140	90/-95	100	520	1495

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule**

**Reference Brake Energy Per Brake (Millions of Foot Pounds)**

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																	
				80			100			120			140			160			180		
				PRESSURE ALTITUDE (1000 FT)																	
		0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10		
80	0	15.1	17.0	19.3	22.4	25.3	28.9	30.9	35.0	40.2	40.4	45.9	53.0	50.8	57.9	67.3	60.8	69.6	81.2		
	10	15.6	17.6	20.0	23.1	26.1	29.8	31.9	36.2	41.5	41.8	47.5	54.8	52.5	59.9	69.5	62.8	71.9	83.9		
	15	15.8	17.8	20.2	23.5	26.5	30.3	32.4	36.7	42.1	42.4	48.2	55.6	53.3	60.7	70.5	63.7	72.9	85.1		
	20	16.0	18.1	20.5	23.8	26.9	30.7	32.8	37.2	42.7	42.9	48.8	56.3	54.0	61.5	71.4	64.6	73.9	86.2		
	30	16.4	18.5	21.1	24.4	27.6	31.5	33.7	38.2	43.8	44.0	50.0	57.7	55.3	63.1	73.2	66.2	75.7	88.4		
	40	16.6	18.7	21.3	24.7	27.9	31.9	34.1	38.7	44.4	44.7	50.9	58.8	56.3	64.3	74.8	67.5	77.4	90.5		
50	16.6	18.7	21.3	24.8	28.0	32.1	34.3	39.0	44.9	45.2	51.5	59.7	57.1	65.4	76.3	68.7	79.0	92.9			
70	0	13.7	15.4	17.5	20.2	22.8	26.0	27.7	31.3	35.9	36.1	41.0	47.2	45.3	51.6	59.7	54.9	62.7	72.9		
	10	14.2	15.9	18.1	20.8	23.5	26.8	28.6	32.4	37.1	37.3	42.3	48.7	46.8	53.3	61.6	56.7	64.8	75.4		
	15	14.4	16.2	18.4	21.1	23.9	27.2	29.0	32.8	37.6	37.8	43.0	49.4	47.5	54.0	62.5	57.5	65.7	76.4		
	20	14.6	16.4	18.6	21.4	24.2	27.6	29.4	33.3	38.1	38.4	43.5	50.1	48.1	54.8	63.4	58.3	66.5	77.4		
	30	14.9	16.8	19.1	22.0	24.8	28.3	30.2	34.1	39.1	39.3	44.6	51.4	49.3	56.1	64.9	59.8	68.2	79.4		
	40	15.1	17.0	19.3	22.2	25.1	28.6	30.5	34.6	39.6	39.9	45.3	52.2	50.1	57.1	66.2	60.9	69.6	81.2		
50	15.1	17.0	19.3	22.3	25.2	28.8	30.7	34.8	40.0	40.2	45.8	52.9	50.7	58.0	67.4	61.8	70.9	83.0			
60	0	12.3	13.9	15.7	18.0	20.3	23.1	24.4	27.6	31.6	31.7	35.9	41.2	39.6	45.0	51.8	48.1	54.8	63.5		
	10	12.7	14.3	16.3	18.5	20.9	23.8	25.2	28.5	32.6	32.7	37.1	42.6	40.9	46.5	53.6	49.7	56.6	65.6		
	15	12.9	14.6	16.5	18.8	21.2	24.2	25.6	29.0	33.1	33.2	37.6	43.2	41.5	47.1	54.4	50.4	57.4	66.5		
	20	13.1	14.8	16.7	19.1	21.5	24.5	26.0	29.4	33.5	33.6	38.1	43.8	42.0	47.8	55.1	51.1	58.2	67.4		
	30	13.4	15.1	17.2	19.6	22.1	25.1	26.6	30.1	34.4	34.5	39.1	44.9	43.1	49.0	56.5	52.3	59.6	69.1		
	40	13.6	15.3	17.3	19.8	22.3	25.4	26.9	30.5	34.9	35.0	39.7	45.6	43.8	49.8	57.5	53.2	60.7	70.5		
50	13.5	15.3	17.3	19.8	22.4	25.5	27.0	30.6	35.1	35.2	40.0	46.0	44.2	50.4	58.3	53.9	61.7	71.9			
50	0	11.0	12.3	14.0	15.7	17.7	20.2	21.2	23.9	27.3	27.2	30.8	35.3	33.8	38.3	44.1	40.9	46.4	53.6		
	10	11.3	12.7	14.4	16.3	18.3	20.8	21.9	24.7	28.2	28.1	31.8	36.5	34.9	39.6	45.5	42.2	48.0	55.4		
	15	11.5	12.9	14.7	16.5	18.6	21.1	22.2	25.1	28.6	28.6	32.3	37.0	35.4	40.2	46.2	42.8	48.7	56.2		
	20	11.6	13.1	14.9	16.7	18.9	21.4	22.5	25.4	29.0	28.9	32.8	37.5	35.9	40.7	46.8	43.4	49.3	56.9		
	30	11.9	13.4	15.2	17.2	19.3	22.0	23.1	26.1	29.7	29.7	33.6	38.4	36.8	41.8	48.0	44.5	50.6	58.4		
	40	12.1	13.6	15.4	17.3	19.5	22.2	23.4	26.4	30.1	30.1	34.0	39.0	37.4	42.4	48.8	45.2	51.4	59.4		
50	12.0	13.6	15.4	17.3	19.6	22.3	23.4	26.5	30.3	30.2	34.2	39.3	37.6	42.8	49.3	45.7	52.1	60.3			
40	0	9.6	10.8	12.3	13.5	15.2	17.3	17.9	20.2	23.0	22.8	25.8	29.4	28.1	31.8	36.4	33.7	38.2	43.9		
	10	10.0	11.2	12.7	14.0	15.8	17.9	18.5	20.9	23.8	23.6	26.6	30.4	29.0	32.8	37.6	34.8	39.5	45.4		
	15	10.1	11.4	12.9	14.2	16.0	18.1	18.8	21.2	24.1	23.9	27.0	30.8	29.4	33.3	38.2	35.3	40.0	46.0		
	20	10.2	11.5	13.1	14.4	16.2	18.4	19.1	21.5	24.5	24.2	27.4	31.3	29.8	33.8	38.7	35.8	40.6	46.6		
	30	10.5	11.8	13.4	14.8	16.6	18.9	19.6	22.1	25.1	24.9	28.1	32.1	30.6	34.6	39.7	36.7	41.6	47.8		
	40	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.4	25.2	28.4	32.5	31.0	35.1	40.2	37.2	42.2	48.6		
50	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.5	25.2	28.6	32.7	31.1	35.3	40.6	37.5	42.6	49.1			

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

## ADVISORY INFORMATION

### Recommended Brake Cooling Schedule Adjusted Brake Energy Per Brake (Millions of Foot Pounds) No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
AUTOBRAKE 1		6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

### Two Engine Detent Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
AUTOBRAKE 1		1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

### Cooling Time (Minutes) - Category C Steel Brakes

*(Note: A placard showing carbon brake configuration will be put at the Center Forward Panel upon modification.)*

EVENT		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED	10	20	30	40	50	60			

### Cooling Time (Minutes) - Category N Carbon Brakes

EVENT		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED	6.7	16.0	24.1	34.2	45.9	53.3			

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

## Performance Inflight - QRH

## Chapter PI-QRH

## Engine Inoperative

## Section 52

## ENGINE INOP

**Initial Max Continuous %N1**

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.8	96.6	96.3	96.1	95.9	95.4	95.0	94.7	93.9
15	97.4	97.2	96.9	96.8	96.6	96.2	95.7	95.5	94.8
10	98.0	97.8	97.5	97.4	97.4	96.9	96.5	96.3	95.7
5	98.3	98.6	98.3	98.1	98.1	97.7	97.3	97.1	96.6
0	97.5	98.7	99.2	99.0	98.9	98.5	98.2	98.0	97.5
-5	96.7	98.0	99.1	99.8	99.7	99.3	98.9	98.7	98.4
-10	96.0	97.2	98.4	99.6	100.5	100.2	99.8	99.6	99.4
-15	95.2	96.4	97.6	98.8	100.1	101.0	100.8	100.6	100.3
-20	94.4	95.6	96.8	98.0	99.3	100.5	101.1	100.8	100.6
-25	93.6	94.9	96.0	97.2	98.5	99.7	100.2	100.0	99.8
-30	92.8	94.1	95.2	96.4	97.7	98.8	99.4	99.2	99.0
-35	92.0	93.2	94.4	95.6	96.8	98.0	98.5	98.3	98.1
-40	91.2	92.4	93.5	94.7	96.0	97.1	97.6	97.4	97.2

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8





**ENGINE INOP**

**Max Continuous %N1  
 27000 FT to 20000 FT Pressure Altitudes**

27000 FT PRESS ALT			TAT (°C)										
KIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT			TAT (°C)										
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT			TAT (°C)										
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT			TAT (°C)										
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT			TAT (°C)										
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0







**ENGINE INOP**

**Max Continuous %N1  
 10000 FT to 1000 FT Pressure Altitudes**

10000 FT PRESS ALT			TAT (°C)										
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT			TAT (°C)										
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT			TAT (°C)										
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT			TAT (°C)										
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-2.7	-3.2

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Driftdown Speed/Level Off Altitude

100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	82	271	18500	17300	15900
80	77	263	20200	19000	17700
75	72	255	21600	20600	19400
70	67	247	23100	22200	21100
65	62	238	24700	23800	22800
60	57	229	26800	25800	24700
55	53	219	29100	28100	27000
50	48	209	31200	30400	29400
45	43	199	33300	32600	31700
40	38	187	35600	34900	34000

Includes APU fuel burn.



**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Driftdown/LRC Cruise Range Capability  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)					
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)	20	40	60	80	100
100	80	60	40	20							
138	128	120	112	106	100	95	90	86	82	78	
275	256	239	225	212	200	190	180	172	164	157	
413	384	359	337	317	300	284	270	258	246	235	
551	512	479	449	423	400	379	360	344	328	314	
689	640	598	562	529	500	474	451	429	410	392	
826	768	718	674	635	600	569	541	515	492	471	
964	896	838	786	741	700	664	631	601	574	549	
1102	1025	957	898	846	800	758	721	687	656	628	
1240	1153	1077	1011	952	900	853	811	773	738	706	
1377	1281	1197	1123	1058	1000	948	901	859	820	785	
1515	1409	1317	1235	1164	1100	1043	991	945	902	863	
1653	1537	1436	1348	1270	1200	1138	1081	1030	984	942	
1792	1666	1556	1460	1375	1300	1232	1171	1116	1066	1020	
1930	1794	1676	1573	1481	1400	1327	1261	1202	1148	1098	
2068	1922	1796	1685	1587	1500	1422	1351	1288	1230	1177	
2207	2051	1916	1798	1693	1600	1517	1441	1373	1312	1255	
2345	2180	2036	1910	1799	1700	1611	1531	1459	1393	1333	
2484	2309	2156	2023	1905	1800	1706	1621	1545	1475	1411	

**Driftdown/Cruise Fuel and Time**

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.5	0:16
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.3	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0	2.1	0:49
400	1.6	1.8	1.9	2.0	2.2	2.3	2.5	2.6	2.8	2.9	1:06
500	2.0	2.2	2.4	2.6	2.8	3.0	3.2	3.3	3.5	3.7	1:22
600	2.4	2.7	2.9	3.1	3.3	3.6	3.8	4.0	4.3	4.5	1:39
700	2.8	3.1	3.4	3.6	3.9	4.2	4.5	4.7	5.0	5.3	1:55
800	3.2	3.6	3.9	4.2	4.5	4.8	5.1	5.4	5.7	6.1	2:11
900	3.6	4.0	4.3	4.7	5.0	5.4	5.7	6.1	6.4	6.8	2:28
1000	4.0	4.4	4.8	5.2	5.6	6.0	6.4	6.7	7.1	7.6	2:44
1100	4.4	4.8	5.3	5.7	6.1	6.6	7.0	7.4	7.9	8.3	3:01
1200	4.8	5.3	5.7	6.2	6.7	7.1	7.6	8.1	8.6	9.0	3:17
1300	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.8	3:34
1400	5.5	6.1	6.6	7.2	7.7	8.3	8.8	9.4	9.9	10.5	3:51
1500	5.9	6.5	7.1	7.7	8.3	8.9	9.4	10.0	10.6	11.2	4:07
1600	6.3	6.9	7.5	8.2	8.8	9.4	10.0	10.7	11.3	12.0	4:24
1700	6.6	7.3	8.0	8.6	9.3	10.0	10.6	11.3	12.0	12.7	4:41
1800	7.0	7.7	8.4	9.1	9.8	10.5	11.2	11.9	12.6	13.4	4:57

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at long range cruise speed.

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15200	12600	9900
80	17200	15300	12500
75	19200	17400	15000
70	20900	19700	17300
65	22500	21300	19800
60	24100	23000	21600
55	26300	24800	23500
50	29000	27700	25800
45	31400	30500	29200
40	33800	33000	31800

With engine anti-ice on, decrease altitude capability by 1200 ft.

With engine and wing anti-ice on, decrease altitude capability by 5500 ft.



**ENGINE INOP**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
85	%N1	91.8	95.5	97.9							
	MACH	.561	.600	.616							
	KIAS	311	303	300							
	FF/ENG	3067	3033	3052							
80	%N1	90.1	94.0	95.9	98.5						
	MACH	.545	.590	.603	.621						
	KIAS	302	299	294	291						
	FF/ENG	2875	2870	2846	2886						
75	%N1	88.4	92.5	94.0	96.1						
	MACH	.528	.579	.593	.607						
	KIAS	293	293	288	284						
	FF/ENG	2684	2709	2674	2662						
70	%N1	86.5	90.7	92.3	94.0	96.2					
	MACH	.510	.562	.582	.595	.610					
	KIAS	282	284	283	278	274					
	FF/ENG	2494	2518	2520	2481	2487					
65	%N1	84.5	88.7	90.4	92.2	93.9	96.4				
	MACH	.491	.542	.563	.584	.596	.612				
	KIAS	271	274	274	273	268	265				
	FF/ENG	2306	2327	2330	2330	2295	2317				
60	%N1	82.3	86.5	88.3	90.0	91.9	93.7	96.4			
	MACH	.471	.521	.543	.564	.585	.597	.614			
	KIAS	261	263	263	263	263	258	254			
	FF/ENG	2124	2137	2139	2140	2143	2114	2146			
55	%N1	80.2	84.2	85.9	87.7	89.5	91.4	93.3	96.2		
	MACH	.453	.498	.520	.541	.563	.585	.597	.614		
	KIAS	250	251	252	252	253	252	247	244		
	FF/ENG	1954	1948	1950	1950	1953	1958	1938	1971		
50	%N1	77.8	81.6	83.4	85.2	87.0	88.7	90.7	92.7	95.7	
	MACH	.434	.475	.495	.516	.538	.561	.583	.596	.613	
	KIAS	240	239	239	240	241	241	241	236	233	
	FF/ENG	1791	1764	1762	1762	1764	1767	1777	1765	1793	
45	%N1	75.5	79.1	80.6	82.3	84.1	85.9	87.7	89.7	91.8	94.8
	MACH	.415	.452	.469	.489	.511	.533	.556	.578	.593	.610
	KIAS	229	227	227	227	228	229	229	229	225	222
	FF/ENG	1636	1594	1582	1575	1577	1580	1586	1600	1593	1613
40	%N1	73.0	76.2	77.8	79.4	81.0	82.8	84.6	86.4	88.3	90.7
	MACH	.395	.429	.445	.462	.480	.502	.525	.548	.571	.589
	KIAS	218	215	215	214	214	215	216	216	216	214
	FF/ENG	1485	1434	1416	1402	1392	1394	1400	1410	1421	1424

# ENGINE INOP

## MAX CONTINUOUS THRUST

### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
298	272	249	230	214	200	190	180	172	164	158
600	547	501	462	429	400	379	361	344	328	315
903	823	753	694	644	600	570	542	517	494	473
1209	1100	1005	926	859	800	759	721	687	657	630
1516	1379	1259	1159	1075	1000	949	902	859	820	786
1825	1659	1513	1393	1290	1200	1139	1082	1031	984	943
2137	1940	1768	1626	1506	1400	1328	1262	1202	1147	1099
2450	2222	2024	1860	1722	1600	1518	1442	1373	1311	1256
2766	2507	2281	2095	1938	1800	1707	1622	1544	1474	1412
3083	2792	2539	2331	2155	2000	1896	1801	1715	1637	1568

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		18		22		26	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	1.4	0:43	1.2	0:41	1.1	0:39	1.0	0:38	0.9	0:37
400	2.8	1:23	2.6	1:19	2.4	1:14	2.2	1:11	2.1	1:09
600	4.3	2:04	3.9	1:57	3.6	1:50	3.4	1:45	3.2	1:42
800	5.7	2:46	5.2	2:36	4.9	2:26	4.5	2:19	4.4	2:14
1000	7.1	3:28	6.6	3:15	6.1	3:03	5.7	2:53	5.5	2:47
1200	8.5	4:10	7.9	3:55	7.3	3:40	6.8	3:28	6.6	3:21
1400	9.8	4:53	9.1	4:36	8.5	4:18	8.0	4:02	7.7	3:54
1600	11.2	5:36	10.4	5:16	9.7	4:55	9.1	4:38	8.7	4:28
1800	12.5	6:20	11.7	5:58	10.9	5:34	10.2	5:13	9.8	5:02
2000	13.9	7:05	12.9	6:39	12.0	6:13	11.3	5:49	10.8	5:36

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)									
	40	45	50	55	60	65	70	75	80	
1	-0.1	-0.1	-0.1	0.0	0.0	0.1	0.1	0.2	0.3	
2	-0.3	-0.2	-0.1	-0.1	0.0	0.2	0.3	0.6	0.8	
3	-0.4	-0.3	-0.2	-0.1	0.0	0.3	0.5	0.9	1.2	
4	-0.6	-0.4	-0.3	-0.1	0.0	0.3	0.7	1.2	1.6	
5	-0.7	-0.5	-0.4	-0.2	0.0	0.4	0.9	1.4	2.0	
6	-0.8	-0.6	-0.4	-0.2	0.0	0.5	1.1	1.7	2.4	
7	-1.0	-0.8	-0.5	-0.3	0.0	0.6	1.2	2.0	2.8	
8	-1.1	-0.9	-0.6	-0.3	0.0	0.6	1.4	2.2	3.2	
9	-1.3	-1.0	-0.7	-0.3	0.0	0.7	1.5	2.4	3.5	
10	-1.4	-1.1	-0.7	-0.4	0.0	0.7	1.6	2.6	3.8	
11	-1.6	-1.2	-0.8	-0.4	0.0	0.8	1.7	2.8	4.1	
12	-1.7	-1.3	-0.9	-0.4	0.0	0.8	1.9	3.0	4.4	
13	-1.9	-1.4	-0.9	-0.5	0.0	0.9	2.0	3.2	4.7	
14	-2.0	-1.5	-1.0	-0.5	0.0	0.9	2.0	3.4	4.9	

Includes APU fuel burn.



**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
 Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	81.1	84.1	88.3	92.8				
	KIAS	250	251	252	253				
	FF/ENG	2740	2730	2750	2800				
80	%N1	79.5	82.4	86.5	91.0	98.3			
	KIAS	242	243	244	245	247			
	FF/ENG	2580	2570	2570	2610	2740			
75	%N1	77.8	80.5	84.7	89.1	95.0			
	KIAS	235	236	236	238	239			
	FF/ENG	2420	2400	2400	2420	2490			
70	%N1	76.0	78.6	82.8	87.1	92.1			
	KIAS	227	227	228	229	231			
	FF/ENG	2260	2240	2230	2250	2270			
65	%N1	74.0	76.7	80.8	85.0	89.7	97.7		
	KIAS	219	219	220	221	222	224		
	FF/ENG	2100	2090	2070	2070	2080	2230		
60	%N1	71.7	74.6	78.5	82.8	87.4	93.7		
	KIAS	210	210	211	212	213	214		
	FF/ENG	1950	1930	1910	1910	1910	1970		
55	%N1	69.4	72.3	76.3	80.5	84.9	90.0		
	KIAS	200	201	202	203	204	205		
	FF/ENG	1800	1770	1750	1740	1730	1760		
50	%N1	66.9	69.7	73.8	77.8	82.3	87.0	94.9	
	KIAS	192	192	192	193	194	195	196	
	FF/ENG	1650	1620	1600	1580	1570	1570	1680	
45	%N1	64.2	66.9	70.9	75.0	79.4	84.0	89.6	
	KIAS	185	185	185	185	185	185	186	
	FF/ENG	1500	1470	1440	1420	1400	1400	1450	
40	%N1	61.1	64.0	67.8	72.0	76.2	80.7	85.4	94.0
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1350	1330	1300	1270	1250	1240	1260	1360

This table includes 5% additional fuel for holding in a racetrack pattern.

# ENGINE INOP

## ADVISORY INFORMATION

### Gear Down Landing Rate of Climb Available Flaps 15

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	-80	-140				
50	-50	-110	-220			
48	-20	-90	-190			
46	10	-60	-160	-270		
44	40	-30	-140	-250		
42	70	0	-110	-220	-340	
40	100	30	-80	-190	-310	
38	120	60	-50	-160	-290	-430
36	140	90	-30	-140	-260	-400
34	140	120	0	-120	-240	-380
32	140	130	20	-100	-220	-360
30	140	130	40	-80	-210	-340
20	150	140	60	-50	-160	-280
10	170	150	60	-50	-160	-280
0	170	160	70	-50	-160	-280
-20	190	170	80	-40	-160	-280
-40	200	180	80	-40	-170	-290

Rate of climb capability shown is valid for 60000 kg, gear down at VREF15+5.  
Decrease rate of climb 130 ft/min per 5000 kg greater than 60000 kg.  
Increase rate of climb 160 ft/min per 5000 kg less than 60000 kg.

### Flaps 30

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	-260	-320				
50	-230	-300	-400			
48	-200	-270	-380			
46	-180	-250	-350	-460		
44	-150	-220	-330	-430		
42	-120	-190	-300	-410	-530	
40	-100	-170	-280	-390	-500	
38	-70	-140	-250	-360	-480	-620
36	-60	-110	-220	-340	-460	-600
34	-50	-80	-200	-320	-440	-570
32	-50	-70	-180	-300	-420	-550
30	-50	-60	-160	-280	-410	-540
20	-40	-60	-150	-260	-370	-490
10	-40	-50	-140	-260	-370	-480
0	-30	-50	-140	-260	-370	-490
-20	-30	-40	-140	-260	-380	-500
-40	-20	-40	-140	-270	-400	-520

Rate of climb capability shown is valid for 60000 kg, gear down at VREF30+5.  
Decrease rate of climb 130 ft/min per 5000 kg greater than 60000 kg.  
Increase rate of climb 160 ft/min per 5000 kg less than 60000 kg.





## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 53

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15600	12500	9400
80	18400	15500	12600
75	21100	18500	15700
70	23600	21400	18600
65	26100	24400	21800
60	28600	27100	25300
55	30800	29600	28100
50	32900	31900	30700
45	35100	34100	33000
40	37500	36500	35400

## GEAR DOWN

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	21	23	25	27	29	31	33	35
85	%N1	85.9								
	MACH	.482								
	KIAS	267								
	FF/ENG	2421								
80	%N1	84.2								
	MACH	.468								
	KIAS	259								
	FF/ENG	2271								
75	%N1	82.5	91.7							
	MACH	.454	.554							
	KIAS	251	248							
	FF/ENG	2123	2101							
70	%N1	80.6	89.8	91.7						
	MACH	.440	.541	.557						
	KIAS	243	242	240						
	FF/ENG	1977	1960	1950						
65	%N1	78.6	87.9	89.5	91.6	94.5				
	MACH	.425	.524	.543	.560	.578				
	KIAS	235	234	233	231	229				
	FF/ENG	1835	1812	1806	1805	1836				
60	%N1	76.5	85.6	87.4	89.1	91.3	94.5			
	MACH	.409	.504	.525	.544	.562	.580			
	KIAS	226	225	225	224	222	220			
	FF/ENG	1696	1661	1661	1658	1664	1696			
55	%N1	74.4	83.3	85.0	86.8	88.5	90.9	94.1		
	MACH	.393	.484	.504	.525	.545	.562	.581		
	KIAS	217	216	216	216	215	213	211		
	FF/ENG	1559	1515	1512	1515	1517	1523	1555		
50	%N1	71.9	80.7	82.5	84.2	86.0	87.8	90.2	93.5	
	MACH	.376	.463	.482	.502	.523	.544	.561	.580	
	KIAS	207	206	206	206	206	205	203	201	
	FF/ENG	1424	1371	1367	1368	1374	1377	1381	1411	
45	%N1	69.1	78.0	79.7	81.4	83.1	85.0	86.8	89.1	92.5
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578
	KIAS	197	196	196	196	196	196	195	193	191
	FF/ENG	1294	1231	1224	1224	1230	1235	1237	1239	1265
40	%N1	66.2	74.9	76.6	78.3	80.0	81.8	83.6	85.5	87.7
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554
	KIAS	187	185	185	185	185	185	185	185	183
	FF/ENG	1170	1098	1085	1083	1089	1092	1094	1096	1097



**GEAR DOWN**

**Long Range Cruise Enroute Fuel and Time  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2381	2103	1865	1680	1530	1400	1320	1247	1181	1122	1070
2743	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3113	2737	2418	2171	1972	1800	1695	1600	1514	1438	1371

**Reference Fuel and Time Required at Check Point**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.4	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.4	1:54
800	9.8	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.3	3:50	10.1	3:30	9.5	3:18	9.0	3:08
1200	14.4	4:56	13.5	4:39	12.1	4:14	11.3	3:58	10.7	3:46
1400	16.7	5:49	15.6	5:28	14.0	4:58	13.1	4:40	12.4	4:24
1600	18.9	6:43	17.7	6:18	15.9	5:44	14.9	5:22	14.1	5:03
1800	21.1	7:38	19.7	7:10	17.7	6:30	16.6	6:05	15.7	5:43

**Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.3
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.3	-0.7	0.0	1.2	2.6
10	-1.7	-0.8	0.0	1.4	3.2
12	-2.0	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.7	-1.3	0.0	2.0	4.6
18	-3.0	-1.5	0.0	2.2	5.0
20	-3.4	-1.7	0.0	2.4	5.3
22	-3.7	-1.8	0.0	2.5	5.6

## GEAR DOWN

### Descent

#### VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	280	91
39000	20	270	86
37000	19	270	81
35000	19	260	77
33000	18	260	72
31000	17	250	68
29000	17	250	64
27000	16	240	60
25000	15	230	56
23000	14	230	52
21000	13	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	8	170	26
5000	6	140	16
1500	4	110	9

Allowances for a straight-in approach are included.

# GEAR DOWN

## Holding Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	75.8	78.5	82.7	87.0	92.0			
	KIAS	230	230	230	230	230			
	FF/ENG	2240	2230	2220	2240	2260			
80	%N1	74.2	77.0	81.1	85.4	90.0			
	KIAS	225	225	225	225	225			
	FF/ENG	2120	2110	2100	2100	2110			
75	%N1	72.5	75.4	79.4	83.7	88.3	94.8		
	KIAS	220	220	220	220	220	220		
	FF/ENG	2000	1990	1970	1970	1970	2050		
70	%N1	70.8	73.7	77.6	81.9	86.4	91.8		
	KIAS	216	216	216	216	216	216		
	FF/ENG	1890	1870	1850	1840	1840	1870		
65	%N1	69.0	71.9	75.9	80.1	84.5	89.3		
	KIAS	211	211	211	211	211	211		
	FF/ENG	1770	1750	1730	1720	1710	1730		
60	%N1	67.1	69.8	74.0	78.0	82.5	87.1	94.3	
	KIAS	204	204	204	204	204	204	204	
	FF/ENG	1660	1630	1610	1600	1580	1590	1670	
55	%N1	65.1	67.8	71.9	75.9	80.3	84.8	90.4	
	KIAS	198	198	198	198	198	198	198	
	FF/ENG	1540	1520	1490	1480	1460	1460	1500	
50	%N1	62.8	65.6	69.6	73.7	78.0	82.4	87.1	
	KIAS	192	192	192	192	192	192	192	
	FF/ENG	1430	1400	1380	1360	1330	1330	1350	
45	%N1	60.3	63.3	67.1	71.4	75.5	79.9	84.5	91.5
	KIAS	185	185	185	185	185	185	185	185
	FF/ENG	1310	1290	1270	1250	1220	1210	1220	1270
40	%N1	57.9	60.6	64.6	68.7	72.9	77.3	81.7	86.8
	KIAS	178	178	178	178	178	178	178	178
	FF/ENG	1200	1180	1160	1130	1110	1090	1100	1110

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 54

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	80	227	1700		
80	76	223	4000	2300	200
75	71	218	6300	4900	2800
70	66	213	8600	7300	5300
65	62	208	10900	9800	8000
60	57	202	13200	12300	10900
55	52	196	15600	14800	13900
50	47	190	18100	17300	16500
45	43	183	20600	19800	18900
40	38	176	23100	22300	21400

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	1500		
70	4500	2500	
65	7500	5900	3400
60	10600	9200	6900
55	13300	12300	10600
50	16200	15400	14500
45	19300	18300	17500
40	22200	21400	20500

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
70	%N1	94.8									
	MACH	.389									
	KIAS	235									
	FF/ENG	3774									
65	%N1	92.6	94.3	96.9							
	MACH	.376	.389	.402							
	KIAS	228	227	226							
	FF/ENG	3477	3485	3527							
60	%N1	90.2	91.9	93.7	96.3						
	MACH	.364	.375	.388	.402						
	KIAS	220	219	218	218						
	FF/ENG	3192	3191	3198	3240						
55	%N1	87.8	89.3	91.0	92.8	95.4					
	MACH	.351	.362	.374	.387	.400					
	KIAS	212	211	210	209	209					
	FF/ENG	2924	2909	2906	2913	2951					
50	%N1	85.3	86.7	88.2	89.9	91.7	94.2	98.2			
	MACH	.338	.348	.359	.371	.384	.398	.412			
	KIAS	204	203	202	201	200	199	198			
	FF/ENG	2672	2647	2630	2626	2633	2657	2737			
45	%N1	82.7	84.0	85.4	86.9	88.6	90.4	92.7	96.6		
	MACH	.325	.334	.344	.355	.367	.380	.393	.408		
	KIAS	196	195	193	192	191	190	189	189		
	FF/ENG	2432	2400	2374	2356	2351	2352	2359	2417		
40	%N1	79.8	81.1	82.5	83.9	85.4	87.0	88.8	90.8	94.1	98.4
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.418
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2206	2166	2133	2107	2088	2076	2069	2065	2101	2201





**GEAR DOWN**  
**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Diversion Fuel and Time  
 Ground to Air Miles Conversion**

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1653	1431	1245	1104	994	900	838	782	733	690	653
1845	1595	1386	1228	1105	1000	931	868	813	765	724

**Reference Fuel and Time Required at Check Point**

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.3	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.7	1:15	3.6	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	6.0	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.1	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.6	3:58	10.9	3:46	10.5	3:35
1000	12.8	4:25	12.0	4:12	11.6	3:59

**Fuel Required Adjustments (1000 KG)**

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.7	1.3
5	-0.8	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.0	2.0
7	-1.1	-0.6	0.0	1.2	2.4
8	-1.3	-0.7	0.0	1.4	2.7
9	-1.5	-0.7	0.0	1.6	3.1
10	-1.6	-0.8	0.0	1.8	3.5
11	-1.8	-0.9	0.0	1.9	3.8
12	-1.9	-1.0	0.0	2.1	4.2
13	-2.1	-1.1	0.0	2.3	4.5
14	-2.3	-1.1	0.0	2.5	4.9

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
80	%N1	93.4			
	KIAS	225			
	FF/ENG	4140			
75	%N1	91.4	94.7		
	KIAS	220	220		
	FF/ENG	3870	3910		
70	%N1	89.4	92.6		
	KIAS	216	216		
	FF/ENG	3610	3640		
65	%N1	87.4	90.5	95.9	
	KIAS	211	211	211	
	FF/ENG	3360	3380	3460	
60	%N1	85.2	88.2	92.9	
	KIAS	204	204	204	
	FF/ENG	3110	3110	3150	
55	%N1	82.9	85.9	90.4	97.2
	KIAS	198	198	198	198
	FF/ENG	2860	2860	2880	3010
50	%N1	80.4	83.4	87.7	92.8
	KIAS	192	192	192	192
	FF/ENG	2630	2620	2620	2670
45	%N1	77.8	80.7	85.0	89.6
	KIAS	185	185	185	185
	FF/ENG	2400	2380	2380	2400
40	%N1	75.1	77.8	82.1	86.5
	KIAS	178	178	178	178
	FF/ENG	2180	2160	2140	2140

This table includes 5% additional fuel for holding in a racetrack pattern.

**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 55**

---

**Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

---

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

---

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

## Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

## Gear Down Landing Rate of Climb Available

Rate of climb data is provided as guidance information in the event an engine inoperative landing (manual or autoland) is planned. The tables show gear down rate of climb available for Flaps 15 and Flaps 30. Enter the table with TAT and pressure altitude to read rate of climb available. Apply adjustments shown to correct for weight.

---

## Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

**Note:** The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.





**Performance Inflight - QRH**

**Chapter PI-QRH**

**Table of Contents**

**Section 60**

**737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC Model 737-800W.1)**

**Pkg Model Identification . . . . . PI-QRH.ModID.60.1**

**General . . . . . PI-QRH.60.1**

- Flight With Unreliable Airspeed/
- Turbulent Air Penetration . . . . . PI-QRH.60.1
- Max Climb %N1 . . . . . PI-QRH.60.3
- Go-around %N1 . . . . . PI-QRH.60.4
- VREF . . . . . PI-QRH.60.5

**Advisory Information . . . . . PI-QRH.61.1**

- Normal Configuration Landing Distance . . . . . PI-QRH.61.1
- Non-Normal Configuration Landing Distance . . . . . PI-QRH.61.4
  - Airspeed Unreliable (Flaps 15) . . . . . PI-QRH.61.4
  - Airspeed Unreliable (Flaps 30) . . . . . PI-QRH.61.5
  - Airspeed Unreliable (Flaps 40) . . . . . PI-QRH.61.6
  - All Flaps Up Landing . . . . . PI-QRH.61.7
  - ANTISKID INOPERATIVE (Flaps 15) . . . . . PI-QRH.61.8
  - ANTISKID INOPERATIVE (Flaps 30) . . . . . PI-QRH.61.9
  - ANTISKID INOPERATIVE (Flaps 40) . . . . . PI-QRH.61.10
  - Jammed or Restricted Flight Controls (Flaps 15) . . PI-QRH.61.11
  - LEADING EDGE FLAPS TRANSIT (Flaps 15) . PI-QRH.61.12
  - LOSS OF SYSTEM A (Flaps 15) . . . . . PI-QRH.61.13
  - LOSS OF SYSTEM A (Flaps 30) . . . . . PI-QRH.61.14
  - LOSS OF SYSTEM A (Flaps 40) . . . . . PI-QRH.61.15
  - LOSS OF SYSTEM A AND SYSTEM B  
(Flaps 15). . . . . PI-QRH.61.16
  - LOSS OF SYSTEM B (Flaps 15) . . . . . PI-QRH.61.17
  - MANUAL REVERSION (Flaps 15). . . . . PI-QRH.61.18
  - One Engine Inoperative Landing (Flaps 15) . . . . . PI-QRH.61.19
  - One Engine Inoperative Landing (Flaps 30) . . . . . PI-QRH.61.20



---

Stabilizer Trim Inoperative (Flaps 15) . . . . .	PI-QRH.61.21
Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) . . . . .	PI-QRH.61.22
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25) . . . . .	PI-QRH.61.23
Trailing Edge Flap Asymmetry (Flap Lever 30) . .	PI-QRH.61.24
Trailing Edge Flap Disagree (1 ≤ Indicated Flaps <15) . . . . .	PI-QRH.61.25
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30) . . . . .	PI-QRH.61.26
Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40) . . . . .	PI-QRH.61.27
Trailing Edge Flaps Up Landing . . . . .	PI-QRH.61.28
Recommended Brake Cooling Schedule. . . . .	PI-QRH.61.29
<b>Engine Inoperative . . . . .</b>	<b>PI-QRH.62.1</b>
Initial Max Continuous %N1 . . . . .	PI-QRH.62.1
Max Continuous %N1 . . . . .	PI-QRH.62.2
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.62.6
Driftdown/LRC Cruise Range Capability . . . . .	PI-QRH.62.7
Long Range Cruise Altitude Capability . . . . .	PI-QRH.62.8
Long Range Cruise Control . . . . .	PI-QRH.62.9
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.62.10
Holding . . . . .	PI-QRH.62.11
Gear Down Landing Rate of Climb Available . . . . .	PI-QRH.62.12
<b>Gear Down . . . . .</b>	<b>PI-QRH.63.1</b>
Long Range Cruise Altitude Capability . . . . .	PI-QRH.63.1
Long Range Cruise Control . . . . .	PI-QRH.63.2
Long Range Cruise Enroute Fuel and Time . . . . .	PI-QRH.63.3
Descent . . . . .	PI-QRH.63.4
Holding . . . . .	PI-QRH.63.5
<b>Gear Down, Engine Inoperative . . . . .</b>	<b>PI-QRH.64.1</b>
Driftdown Speed/Level Off Altitude . . . . .	PI-QRH.64.1



**737 Flight Crew Operations Manual**

---

Long Range Cruise Altitude Capability . . . . .	PI-QRH.64.1
Long Range Cruise Control . . . . .	PI-QRH.64.2
Long Range Cruise Diversion Fuel and Time . . . . .	PI-QRH.64.3
Holding . . . . .	PI-QRH.64.4
<b>Text . . . . .</b>	<b>PI-QRH.65.1</b>
Introduction . . . . .	PI-QRH.65.1
General . . . . .	PI-QRH.65.1
Advisory Information . . . . .	PI-QRH.65.2
Engine Inoperative . . . . .	PI-QRH.65.4
Gear Down . . . . .	PI-QRH.65.6



Intentionally  
Blank



## General

The table below shows the airplanes that have been identified with the following performance package. Note, some airplanes may be identified with more than one performance package. This configuration table information reflects the Boeing delivered configuration updated for service bulletin incorporations in conformance with the policy stated in the introduction section of the FCOM. The performance data is prepared for the owner/operator named on the title page. The intent of this information is to assist flight crews and airlines in knowing which performance package is applicable to a given airplane. The performance package model identification information is based on Boeing's knowledge of the airline's fleet at a point in time approximately three months prior to the page date. Notice of Errata (NOE) will not be provided to airlines to identify airplanes that are moved between performance packages within this manual or airplanes added to the airline's fleet whose performance packages are already represented in this manual. These types of changes will be updated in the next block revision.

Owners/operators are responsible for ensuring the operational documentation they are using is complete and matches the current configuration of their airplanes, and the accuracy and validity of all information furnished by the owner/operator or any other party. Owners/operators receiving active revision service are responsible to ensure that any modifications to the listed airplanes are properly reflected in this manual.

Serial and tabulation number are supplied by Boeing.

Registry Number	Serial Number	Tabulation Number
B-6887	43884	YV604
B-6889	43914	YV605

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## General

## Section 60

**Flight With Unreliable Airspeed/ Turbulent Air Penetration**

Altitude and/or vertical speed indications may also be unreliable.

**Climb (280/.76)****Flaps Up, Set Max Climb Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>4.0</b>		
	V/S (FT/MIN)	1700	1100	600		
30000	<b>PITCH ATT</b>	<b>4.0</b>	<b>4.0</b>	<b>3.5</b>	<b>4.0</b>	<b>4.0</b>
	V/S (FT/MIN)	2500	1900	1500	1100	800
20000	<b>PITCH ATT</b>	<b>7.0</b>	<b>6.5</b>	<b>6.0</b>	<b>6.0</b>	<b>6.0</b>
	V/S (FT/MIN)	4200	3300	2600	2100	1700
10000	<b>PITCH ATT</b>	<b>11.0</b>	<b>9.5</b>	<b>8.5</b>	<b>8.0</b>	<b>8.0</b>
	V/S (FT/MIN)	5600	4400	3600	3000	2500
SEA LEVEL	<b>PITCH ATT</b>	<b>14.5</b>	<b>12.5</b>	<b>11.0</b>	<b>10.0</b>	<b>9.5</b>
	V/S (FT/MIN)	6700	5300	4400	3700	3100

**Cruise (.76/280)****Flaps Up, %N1 for Level Flight**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>		
	%N1	83	85	90		
35000	<b>PITCH ATT</b>	<b>1.0</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>	<b>3.5</b>
	%N1	81	83	84	87	90
30000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	81	82	83	84	86
25000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.0</b>
	%N1	77	78	79	81	82
20000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>2.5</b>	<b>3.5</b>
	%N1	74	74	75	77	78
15000	<b>PITCH ATT</b>	<b>1.0</b>	<b>1.5</b>	<b>2.0</b>	<b>3.0</b>	<b>3.5</b>
	%N1	70	71	72	73	74

**Descent (.76/280)****Flaps Up, Set Idle Thrust**

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
40000	<b>PITCH ATT</b>	<b>-1.5</b>	<b>-0.5</b>	<b>0.5</b>	<b>1.0</b>	<b>1.5</b>
	V/S (FT/MIN)	-2700	-2400	-2300	-2500	-2700
30000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-3100	-2600	-2300	-2100	-2000
20000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2800	-2300	-2000	-1900	-1700
10000	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.0</b>	<b>-1.0</b>	<b>0.0</b>	<b>0.5</b>
	V/S (FT/MIN)	-2500	-2100	-1800	-1700	-1500
SEA LEVEL	<b>PITCH ATT</b>	<b>-3.5</b>	<b>-2.5</b>	<b>-1.0</b>	<b>0.5</b>	<b>0.5</b>
	V/S (FT/MIN)	-2300	-1900	-1700	-1500	-1400

### Flight With Unreliable Airspeed/ Turbulent Air Penetration

Altitude and/or vertical speed indications may also be unreliable.

Holding (VREF40 + 70)

Flaps Up, %N1 for Level Flight

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
15000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	56	62	66	70	73
	KIAS	177	193	212	229	246
10000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	52	58	62	66	69
	KIAS	177	192	211	228	244
5000	<b>PITCH ATT</b>	<b>5.0</b>	<b>5.5</b>	<b>5.0</b>	<b>5.0</b>	<b>5.0</b>
	%N1	49	54	58	62	66
	KIAS	177	191	210	227	243

### Terminal Area (5000 FT)

%N1 for Level Flight

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS UP (GEAR UP) (VREF40 + 70)	<b>PITCH ATT.</b>	<b>4.5</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>
	%N1	49	54	58	62	65
FLAPS 1 (GEAR UP) (VREF40 + 50)	<b>PITCH ATT.</b>	<b>4.5</b>	<b>5.0</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>
	%N1	51	56	60	64	68
FLAPS 5 (GEAR UP) (VREF40 + 30)	<b>PITCH ATT.</b>	<b>5.5</b>	<b>5.5</b>	<b>6.0</b>	<b>6.5</b>	<b>6.5</b>
	%N1	51	57	61	65	69
FLAPS 15 (GEAR DOWN) (VREF40 + 20)	<b>PITCH ATT.</b>	<b>5.0</b>	<b>5.5</b>	<b>5.5</b>	<b>6.0</b>	<b>6.0</b>
	%N1	58	63	68	73	76

### Final Approach (1500 FT)

Gear Down, %N1 for 3° Glideslope

FLAP POSITION (VREF + INCREMENT)		WEIGHT (1000 KG)				
		40	50	60	70	80
FLAPS 15 (VREF15 + 10)	<b>PITCH ATT</b>	<b>2.0</b>	<b>2.0</b>	<b>2.0</b>	<b>2.5</b>	<b>2.5</b>
	%N1	40	44	48	51	54
FLAPS 30 (VREF30 + 10)	<b>PITCH ATT</b>	<b>0.5</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>	<b>1.0</b>
	%N1	47	52	56	60	63
FLAPS 40 (VREF40 + 10)	<b>PITCH ATT</b>	<b>-0.5</b>	<b>-0.5</b>	<b>-0.5</b>	<b>0.0</b>	<b>0.0</b>
	%N1	52	58	62	66	70

### Go-Around

Flaps 15, Gear Up, Set Go-Around Thrust

PRESSURE ALTITUDE (FT)		WEIGHT (1000 KG)				
		40	50	60	70	80
10000	<b>PITCH ATT</b>	<b>20.0</b>	<b>16.0</b>	<b>13.5</b>	<b>11.5</b>	<b>10.5</b>
	V/S (FT/MIN)	3900	3100	2500	2000	1600
	KIAS	128	142	155	165	175
5000	<b>PITCH ATT</b>	<b>24.0</b>	<b>19.0</b>	<b>16.0</b>	<b>14.0</b>	<b>12.0</b>
	V/S (FT/MIN)	4600	3700	3000	2500	2100
	KIAS	128	142	154	164	175
SEA LEVEL	<b>PITCH ATT</b>	<b>28.0</b>	<b>22.0</b>	<b>18.0</b>	<b>16.0</b>	<b>14.0</b>
	V/S (FT/MIN)	5200	4200	3500	2900	2500
	KIAS	128	142	154	164	174



## Max Climb %N1

Based on engine bleed for packs on or off and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (FT)/SPEED (KIAS/MACH)									
	0	5000	10000	15000	20000	25000	30000	35000	37000	41000
	280	280	280	280	280	280	280	.78	.78	.78
60	90.2	90.5	90.4	90.6	90.4	92.1	93.8	95.1	95.2	93.5
55	91.0	91.2	91.3	91.4	90.8	91.5	93.1	94.4	94.5	92.8
50	91.7	92.0	92.1	92.2	91.7	91.5	92.4	93.7	93.8	92.1
45	92.4	92.6	92.8	93.0	92.6	92.4	92.4	93.0	93.1	91.4
40	93.1	93.3	93.6	93.8	93.4	93.2	93.2	92.3	92.4	90.7
35	93.6	94.0	94.3	94.5	94.3	94.0	94.0	93.0	92.4	90.8
30	92.9	94.8	95.0	95.2	95.1	94.8	94.7	93.9	93.3	91.8
25	92.2	94.8	95.7	95.9	95.9	95.5	95.4	94.7	94.1	92.8
20	91.4	94.0	96.5	96.7	96.6	96.2	96.1	95.4	94.9	93.7
15	90.6	93.2	95.9	97.5	97.4	96.9	96.7	96.2	95.7	94.6
10	89.9	92.5	95.1	97.8	98.3	97.7	97.4	96.9	96.5	95.6
5	89.1	91.7	94.3	97.0	99.2	98.6	98.1	97.7	97.3	96.5
0	88.3	90.9	93.5	96.2	98.6	99.6	99.1	98.5	98.2	97.5
-5	87.6	90.1	92.7	95.4	97.8	99.6	100.0	99.2	99.0	98.4
-10	86.8	89.3	91.9	94.6	97.1	98.8	100.3	100.2	99.8	99.4
-15	86.0	88.5	91.0	93.8	96.3	98.0	99.6	101.1	100.8	100.4
-20	85.2	87.6	90.2	93.0	95.5	97.2	98.7	100.8	101.3	101.0
-25	84.3	86.8	89.4	92.2	94.7	96.4	97.9	100.0	100.5	100.1
-30	83.5	86.0	88.5	91.3	93.9	95.6	97.1	99.1	99.6	99.3
-35	82.7	85.1	87.7	90.5	93.1	94.8	96.3	98.3	98.8	98.4
-40	81.8	84.3	86.8	89.6	92.3	93.9	95.4	97.4	97.9	97.6

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)					
	0	10	20	30	35	41
ENGINE ANTI-ICE	-0.6	-0.8	-0.9	-0.9	-0.8	-0.8
ENGINE & WING ANTI-ICE*	-1.8	-2.1	-2.5	-2.7	-3.0	-3.0

\*Dual bleed sources

**Go-around %N1**

**Based on engine bleed for packs on, engine and wing anti-ice on or off**

AIRPORT OAT		TAT (°C)	AIRPORT PRESSURE ALTITUDE (FT)											
°C	°F		-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000
57	134	60	95.0	96.2	96.8									
52	125	55	95.9	96.7	96.6	96.8	97.5							
47	116	50	96.6	97.6	97.8	97.8	97.7	97.5	98.2	98.8				
42	108	45	97.4	98.4	98.5	98.6	98.7	98.8	98.7	98.5	98.5	99.0		
37	99	40	98.0	99.1	99.2	99.3	99.4	99.5	99.6	99.5	99.1	98.9	98.8	99.1
32	90	35	98.1	99.9	100.0	100.1	100.1	100.3	100.3	100.2	99.9	99.6	99.6	99.5
27	81	30	97.3	99.8	100.4	100.7	100.7	100.7	100.7	100.7	100.6	100.4	100.4	100.3
22	72	25	96.6	99.1	99.7	100.2	100.6	100.9	100.9	100.9	100.9	100.9	100.9	100.8
17	63	20	95.8	98.3	98.9	99.5	99.8	100.2	100.5	100.9	101.0	101.1	101.0	101.0
12	54	15	95.0	97.5	98.1	98.7	99.1	99.4	99.8	100.1	100.5	100.9	101.3	101.2
7	45	10	94.2	96.8	97.4	98.0	98.3	98.7	99.0	99.4	99.8	100.2	100.5	100.9
2	36	5	93.4	96.0	96.6	97.2	97.6	97.9	98.3	98.7	99.0	99.4	99.8	100.2
-3	27	0	92.6	95.2	95.8	96.4	96.8	97.2	97.5	97.9	98.3	98.7	99.0	99.4
-8	18	-5	91.8	94.4	95.0	95.6	96.0	96.4	96.8	97.2	97.5	97.9	98.3	98.6
-13	9	-10	91.0	93.6	94.2	94.8	95.2	95.6	96.0	96.4	96.8	97.1	97.5	97.9
-17	1	-15	90.2	92.8	93.4	94.0	94.4	94.8	95.2	95.6	96.0	96.4	96.7	97.1
-22	-8	-20	89.3	92.0	92.6	93.2	93.6	94.0	94.4	94.8	95.2	95.6	95.9	96.3
-27	-17	-25	88.5	91.1	91.8	92.4	92.8	93.2	93.6	94.0	94.4	94.8	95.1	95.5
-32	-26	-30	87.6	90.3	90.9	91.6	92.0	92.4	92.8	93.3	93.6	94.0	94.3	94.7
-37	-35	-35	86.8	89.4	90.1	90.7	91.1	91.6	92.0	92.4	92.8	93.2	93.5	93.9
-42	-44	-40	85.9	88.6	89.2	89.9	90.3	90.7	91.2	91.6	92.0	92.4	92.7	93.0
-47	-53	-45	85.0	87.7	88.4	89.0	89.4	89.9	90.3	90.8	91.2	91.5	91.9	92.2
-52	-62	-50	84.1	86.8	87.5	88.2	88.6	89.0	89.5	90.0	90.3	90.7	91.0	91.4

**%N1 Adjustments for Engine Bleeds**

BLEED CONFIGURATION	PRESSURE ALTITUDE (FT)												
	-2000	0	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	
PACKS OFF	0.7	0.8	0.8	0.8	0.8	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9
A/C HIGH	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1




---

**VREF**

WEIGHT (1000 KG)	FLAPS		
	40	30	15
85	159	167	174
80	154	162	169
75	148	156	163
70	143	151	157
65	139	147	153
60	133	141	147
55	127	134	140
50	121	128	133
45	114	121	126
40	107	114	119

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Advisory Information

## Section 61

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF15	ONE REV	NO REV

## Dry Runway

MAX MANUAL	975	75/-60	20/30	-35/120	10/-10	20/-20	35	20	40
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 3	1815	105/-115	50/65	-75/255	0/0	50/-50	100	0	0
AUTOBRAKE 2	2300	150/-160	70/95	-105/350	30/-45	70/-70	95	80	80
AUTOBRAKE 1	2530	180/-190	85/110	-120/410	70/-80	75/-75	90	220	335

## Good Reported Braking Action

MAX MANUAL	1330	75/-80	35/45	-60/200	30/-25	35/-35	45	65	145
AUTOBRAKE MAX	1430	80/-85	40/50	-60/210	30/-25	35/-35	55	75	165
AUTOBRAKE 3	1820	105/-115	50/65	-75/260	5/-5	50/-50	100	5	10
AUTOBRAKE 2	2300	150/-160	70/95	-105/350	30/-45	70/-70	95	80	80
AUTOBRAKE 1	2530	180/-190	85/110	-120/410	70/-80	75/-75	90	220	335

## Medium Reported Braking Action

MAX MANUAL	1845	120/-120	60/75	-95/335	80/-65	50/-50	60	190	455
AUTOBRAKE MAX	1885	125/-125	60/80	-95/340	75/-60	50/-55	70	190	460
AUTOBRAKE 3	2005	125/-130	60/80	-100/350	60/-40	55/-60	100	130	375
AUTOBRAKE 2	2350	155/-165	75/95	-115/395	65/-60	70/-70	95	115	230
AUTOBRAKE 1	2540	180/-190	85/110	-125/430	90/-85	75/-75	90	235	390

## Poor Reported Braking Action

MAX MANUAL	2430	175/-175	85/115	-140/535	205/-135	70/-75	75	415	1105
AUTOBRAKE MAX	2430	175/-175	85/115	-140/535	205/-130	70/-75	80	415	1105
AUTOBRAKE 3	2460	175/-175	85/115	-145/535	195/-125	70/-75	90	420	1115
AUTOBRAKE 2	2625	185/-190	90/125	-150/555	190/-125	75/-80	95	350	960
AUTOBRAKE 1	2740	195/-200	95/130	-155/570	195/-140	80/-85	90	400	990

Reference distance is based on sea level, standard day, no wind or slope, VREF15 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 50 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Normal Configuration Landing Distance  
Flaps 30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF30	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	935	60/-55	20/25	-35/120	10/-10	20/-20	35	15	35
AUTOBRAKE MAX	1200	60/-65	25/35	-45/145	0/0	30/-30	55	0	5
AUTOBRAKE 3	1700	100/-105	45/60	-75/245	0/-5	45/-45	85	0	0
AUTOBRAKE 2	2120	140/-145	65/85	-100/335	30/-40	60/-60	85	80	80
AUTOBRAKE 1	2325	160/-170	75/100	-115/395	65/-70	70/-70	80	185	300

**Good Reported Braking Action**

MAX MANUAL	1275	70/-75	35/45	-55/195	30/-25	30/-30	45	60	130
AUTOBRAKE MAX	1375	75/-80	35/45	-60/205	30/-25	35/-35	55	65	145
AUTOBRAKE 3	1705	100/-105	45/60	-75/250	5/-10	45/-45	85	5	10
AUTOBRAKE 2	2120	140/-145	65/85	-100/335	30/-40	60/-60	85	80	80
AUTOBRAKE 1	2325	160/-170	75/100	-115/395	65/-70	70/-70	80	185	300

**Medium Reported Braking Action**

MAX MANUAL	1740	110/-115	55/70	-90/325	80/-60	45/-50	60	165	390
AUTOBRAKE MAX	1790	115/-120	55/75	-90/330	75/-60	50/-50	70	165	400
AUTOBRAKE 3	1885	115/-120	55/75	-95/340	55/-45	55/-55	85	115	330
AUTOBRAKE 2	2175	140/-150	65/90	-110/380	65/-60	65/-65	85	115	215
AUTOBRAKE 1	2340	160/-170	75/100	-120/410	90/-75	70/-70	80	195	350

**Poor Reported Braking Action**

MAX MANUAL	2265	160/-160	75/105	-135/520	190/-125	65/-70	70	355	920
AUTOBRAKE MAX	2275	160/-160	80/105	-135/520	190/-120	65/-70	80	350	920
AUTOBRAKE 3	2305	160/-160	80/105	-140/520	185/-120	65/-70	80	360	930
AUTOBRAKE 2	2435	170/-170	80/110	-145/535	180/-120	70/-75	85	315	810
AUTOBRAKE 1	2530	175/-180	85/115	-145/550	190/-130	75/-80	80	340	845

Reference distance is based on sea level, standard day, no wind or slope, VREF30 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 60 m.

For autobrake and manual speedbrakes, increase reference landing distance by 50 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

*Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.*

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Normal Configuration Landing Distance

## Flaps 40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF40	ONE REV	NO REV

## Dry Runway

MAX MANUAL	890	50/-50	20/25	-35/115	10/-10	20/-20	35	15	30
AUTOBRAKE MAX	1120	55/-60	25/30	-40/140	0/0	25/-25	55	0	0
AUTOBRAKE 3	1565	90/-100	40/55	-70/235	0/-5	40/-40	85	0	0
AUTOBRAKE 2	1980	125/-135	60/75	-95/325	25/-35	55/-55	90	40	40
AUTOBRAKE 1	2185	150/-155	70/90	-110/380	55/-65	65/-65	85	145	225

## Good Reported Braking Action

MAX MANUAL	1220	65/-70	30/40	-55/195	30/-25	30/-30	45	55	120
AUTOBRAKE MAX	1310	70/-75	35/45	-60/200	25/-25	30/-30	55	60	130
AUTOBRAKE 3	1570	90/-100	40/55	-70/240	10/-5	40/-45	90	5	10
AUTOBRAKE 2	1980	125/-135	60/75	-95/325	25/-35	55/-55	90	40	40
AUTOBRAKE 1	2185	150/-155	70/90	-110/380	55/-65	65/-65	85	145	225

## Medium Reported Braking Action

MAX MANUAL	1660	105/-105	50/65	-90/320	75/-60	45/-45	60	150	350
AUTOBRAKE MAX	1695	110/-110	50/70	-90/325	70/-55	45/-45	70	150	355
AUTOBRAKE 3	1760	110/-115	50/70	-90/330	60/-45	50/-50	85	115	325
AUTOBRAKE 2	2035	130/-140	60/80	-105/370	60/-55	60/-60	90	80	175
AUTOBRAKE 1	2195	150/-155	70/95	-115/400	80/-70	65/-65	85	160	275

## Poor Reported Braking Action

MAX MANUAL	2160	150/-150	70/100	-135/510	190/-120	60/-65	70	325	830
AUTOBRAKE MAX	2165	150/-150	75/100	-135/510	190/-120	60/-65	75	325	830
AUTOBRAKE 3	2185	155/-155	75/100	-135/510	185/-120	60/-65	80	330	840
AUTOBRAKE 2	2300	160/-160	75/105	-140/525	175/-115	65/-70	85	275	730
AUTOBRAKE 1	2390	165/-170	80/110	-145/540	180/-125	70/-75	80	305	745

Reference distance is based on sea level, standard day, no wind or slope, VREF40 approach speed, two-engine detent No. 2 reverse thrust, and auto speedbrakes.

For max manual braking and manual speedbrakes, increase reference landing distance by 55 m.

For autobrake and manual speedbrakes, increase reference landing distance by 45 m.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Airspeed Unreliable (Flaps 15)

#### VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1035	85/-60	25/30	-35/125	10/-10	25/-25	N/A	25	50
AUTOBRAKE MAX	1390	70/-75	35/45	-50/160	0/0	35/-35	N/A	0	5
AUTOBRAKE 2	2450	160/-170	80/105	-110/360	50/-55	75/-75	N/A	160	185

#### Good Reported Braking Action

MAX MANUAL	1410	80/-80	40/50	-60/205	30/-30	35/-35	N/A	75	175
AUTOBRAKE MAX	1530	85/-90	40/55	-60/215	30/-20	40/-40	N/A	85	195
AUTOBRAKE 2	2450	160/-170	80/105	-110/360	50/-55	75/-75	N/A	160	185

#### Medium Reported Braking Action

MAX MANUAL	1935	125/-125	60/80	-95/340	80/-65	55/-55	N/A	215	520
AUTOBRAKE MAX	1995	125/-130	65/85	-95/345	75/-60	55/-55	N/A	220	535
AUTOBRAKE 3	2185	130/-140	65/90	-100/365	55/-50	65/-65	N/A	125	385

#### Poor Reported Braking Action

MAX MANUAL	2515	175/-175	90/120	-145/535	195/-130	75/-80	N/A	455	1230
AUTOBRAKE MAX	2530	180/-180	90/125	-145/535	195/-125	75/-80	N/A	450	1225
AUTOBRAKE 3	2590	175/-180	90/125	-145/540	185/-120	75/-80	N/A	430	1215

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****Airspeed Unreliable (Flaps 30)****VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	995	65/-55	20/30	-35/125	10/-10	20/-20	N/A	20	45
AUTOBRAKE MAX	1315	65/-70	30/40	-45/155	0/0	30/-30	N/A	0	5
AUTOBRAKE 2	2265	145/-155	70/95	-105/345	45/-50	65/-65	N/A	135	185

**Good Reported Braking Action**

MAX MANUAL	1355	75/-75	35/50	-60/200	30/-25	35/-35	N/A	70	155
AUTOBRAKE MAX	1465	80/-85	40/50	-60/210	30/-20	35/-35	N/A	80	175
AUTOBRAKE 2	2265	145/-155	70/95	-105/345	45/-50	65/-65	N/A	135	185

**Medium Reported Braking Action**

MAX MANUAL	1830	115/-115	55/75	-90/330	80/-60	50/-50	N/A	185	450
AUTOBRAKE MAX	1895	120/-120	60/80	-95/335	75/-60	50/-55	N/A	190	465
AUTOBRAKE 3	2040	120/-125	60/80	-100/350	60/-50	60/-60	N/A	115	340

**Poor Reported Braking Action**

MAX MANUAL	2360	160/-160	80/110	-140/520	185/-125	65/-70	N/A	390	1025
AUTOBRAKE MAX	2385	165/-165	85/110	-140/525	180/-120	70/-75	N/A	390	1025
AUTOBRAKE 3	2420	165/-165	80/110	-140/525	180/-115	70/-75	N/A	365	1010

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### Airspeed Unreliable (Flaps 40)

#### VREF40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	955	55/-50	20/30	-35/120	10/-10	20/-20	N/A	20	40
AUTOBRAKE MAX	1225	60/-65	30/35	-45/150	0/0	30/-30	N/A	0	0
AUTOBRAKE 2	2130	135/-145	65/85	-100/335	40/-45	60/-60	N/A	105	125

#### Good Reported Braking Action

MAX MANUAL	1305	70/-75	35/45	-55/200	30/-25	35/-35	N/A	65	145
AUTOBRAKE MAX	1400	75/-80	35/50	-60/210	30/-25	35/-35	N/A	70	160
AUTOBRAKE 2	2130	135/-145	65/85	-100/335	40/-45	60/-60	N/A	105	125

#### Medium Reported Braking Action

MAX MANUAL	1755	110/-110	55/70	-90/325	75/-60	50/-50	N/A	170	410
AUTOBRAKE MAX	1810	110/-115	55/75	-90/330	75/-60	50/-50	N/A	175	420
AUTOBRAKE 3	1910	110/-120	55/75	-95/345	60/-45	55/-55	N/A	115	335

#### Poor Reported Braking Action

MAX MANUAL	2255	155/-155	75/105	-135/515	185/-120	65/-70	N/A	355	925
AUTOBRAKE MAX	2275	155/-155	80/105	-135/515	185/-115	65/-70	N/A	355	925
AUTOBRAKE 3	2300	155/-155	75/105	-135/520	180/-115	65/-70	N/A	355	935

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****All Flaps Up Landing****VREF40 + 55**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1320	190/-80	50/105	-45/200	20/-15	35/-35	45	40	85
AUTOBRAKE MAX	1815	90/-85	45/75	-60/190	5/0	50/-50	75	5	15
AUTOBRAKE 2	3435	195/-225	115/150	-130/435	60/-75	105/-105	115	215	225

**Good Reported Braking Action**

MAX MANUAL	1800	90/-100	50/70	-70/235	40/-35	50/-50	50	110	255
AUTOBRAKE MAX	1985	90/-100	55/75	-75/245	30/-25	55/-55	75	95	250
AUTOBRAKE 2	3435	195/-225	115/150	-130/435	60/-75	105/-105	115	215	225

**Medium Reported Braking Action**

MAX MANUAL	2570	155/-160	85/115	-110/390	110/-90	75/-75	70	320	795
AUTOBRAKE MAX	2625	155/-160	90/115	-115/395	105/-85	75/-80	80	325	805
AUTOBRAKE 3	2930	150/-165	90/120	-120/420	65/-45	90/-90	125	185	570

**Poor Reported Braking Action**

MAX MANUAL	3440	230/-235	130/175	-170/620	270/-180	105/-110	90	715	1990
AUTOBRAKE MAX	3430	230/-235	130/175	-170/615	270/-175	105/-110	95	710	1975
AUTOBRAKE 3	3510	225/-225	130/175	-170/625	245/-155	110/-115	120	675	1955

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**ANTISKID INOPERATIVE (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1710	100/-105	50/65	-80/280	50/-45	45/-45	60	125	295
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1920	120/-120	55/75	-95/340	75/-60	50/-50	65	185	460
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2465	170/-170	85/115	-140/535	190/-125	70/-75	75	410	1125
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3305	250/-245	120/175	-235/985	600/-290	90/-110	90	1005	3480
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****ANTISKID INOPERATIVE (Flaps 30)****VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1635	95/-100	45/60	-75/275	50/-40	40/-40	55	110	260
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1825	110/-115	55/70	-90/335	75/-60	45/-50	65	165	395
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2320	155/-155	75/105	-135/520	180/-120	65/-70	75	355	940
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3085	225/-225	110/160	-230/960	560/-270	85/-105	85	860	2845
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### ANTISKID INOPERATIVE (Flaps 40)

#### VREF40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1565	90/-95	40/55	-75/270	50/-40	40/-40	60	100	235
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Good Reported Braking Action

MAX MANUAL	1750	105/-110	50/65	-90/330	75/-60	45/-45	65	150	360
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

#### Medium Reported Braking Action

MAX MANUAL	2220	150/-150	70/100	-135/510	180/-115	60/-65	75	325	850
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

#### Poor Reported Braking Action

MAX MANUAL	2955	215/-215	105/150	-225/945	550/-265	80/-100	85	795	2590
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

Non-Normal Configuration Landing Distance  
Jammed or Restricted Flight Controls (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	970	75/-60	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

## Good Reported Braking Action

MAX MANUAL	1320	75/-75	35/45	-55/200	30/-25	35/-35	45	70	160
AUTOBRAKE MAX	1420	80/-85	40/50	-60/210	30/-20	35/-35	55	80	175
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

## Medium Reported Braking Action

MAX MANUAL	1815	120/-120	55/75	-90/330	80/-65	50/-50	60	195	485
AUTOBRAKE MAX	1860	120/-125	60/80	-95/335	75/-60	50/-55	70	200	490
AUTOBRAKE 3	1990	125/-130	60/80	-95/350	55/-40	55/-60	100	125	390

## Poor Reported Braking Action

MAX MANUAL	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1165
AUTOBRAKE MAX	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1160
AUTOBRAKE 3	2405	170/-170	85/115	-140/530	185/-115	70/-75	90	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### LEADING EDGE FLAPS TRANSIT (Flaps 15)

#### VREF15 + 15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1080	80/-65	25/35	-40/130	15/-10	25/-25	35	25	55
AUTOBRAKE MAX	1450	75/-75	35/45	-50/165	0/0	35/-35	65	0	5
AUTOBRAKE 2	2575	170/-180	85/110	-110/370	50/-60	75/-75	90	175	210

#### Good Reported Braking Action

MAX MANUAL	1480	80/-85	40/55	-60/210	35/-30	40/-40	45	85	195
AUTOBRAKE MAX	1605	85/-90	45/60	-65/220	30/-20	40/-40	65	95	215
AUTOBRAKE 2	2575	170/-180	85/110	-110/370	50/-60	75/-75	90	175	210

#### Medium Reported Braking Action

MAX MANUAL	2030	130/-130	65/90	-100/350	85/-70	55/-60	60	235	575
AUTOBRAKE MAX	2095	135/-135	70/90	-100/355	80/-65	60/-60	70	240	590
AUTOBRAKE 3	2295	135/-145	70/95	-105/370	60/-50	65/-70	95	140	430

#### Poor Reported Braking Action

MAX MANUAL	2635	185/-185	95/130	-145/545	205/-140	75/-80	75	490	1340
AUTOBRAKE MAX	2655	185/-185	95/130	-145/550	205/-130	80/-85	85	490	1340
AUTOBRAKE 3	2715	185/-185	95/130	-150/555	190/-125	80/-85	90	465	1325

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****LOSS OF SYSTEM A (Flaps 15)****VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1085	70/-60	25/35	-40/130	15/-15	25/-25	45	30	50
AUTOBRAKE MAX	1275	65/-70	30/40	-45/150	5/0	30/-30	60	0	5
AUTOBRAKE 2	2395	150/-165	70/90	-105/360	0/-10	70/-70	140	0	0

**Good Reported Braking Action**

MAX MANUAL	1570	90/-95	45/60	-65/230	45/-40	40/-40	70	120	245
AUTOBRAKE MAX	1605	95/-100	45/60	-70/230	40/-35	40/-45	75	125	255
AUTOBRAKE 2	2395	150/-165	70/90	-105/360	5/-10	70/-70	140	0	0

**Medium Reported Braking Action**

MAX MANUAL	2165	145/-150	70/95	-105/375	110/-90	60/-65	90	325	775
AUTOBRAKE MAX	2165	150/-150	70/100	-105/375	115/-90	60/-65	90	325	775
AUTOBRAKE 3	2165	150/-150	70/100	-105/375	115/-80	60/-65	90	325	775

**Poor Reported Braking Action**

MAX MANUAL	2820	210/-210	105/145	-160/580	255/-170	80/-90	105	675	1905
AUTOBRAKE MAX	2820	215/-210	105/145	-160/580	260/-175	85/-90	105	675	1910
AUTOBRAKE 3	2820	215/-210	105/145	-160/580	260/-175	85/-90	105	675	1910

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**LOSS OF SYSTEM A (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1035	65/-55	25/30	-40/125	15/-15	25/-25	45	25	45
AUTOBRAKE MAX	1200	60/-65	25/35	-45/145	0/0	30/-30	55	0	5
AUTOBRAKE 2	2230	140/-150	65/85	-105/345	0/-10	65/-65	130	0	0

**Good Reported Braking Action**

MAX MANUAL	1490	85/-90	40/55	-65/220	45/-40	40/-40	65	105	210
AUTOBRAKE MAX	1515	90/-95	40/55	-65/225	40/-35	40/-40	70	105	215
AUTOBRAKE 2	2230	140/-150	65/85	-105/345	0/-10	65/-65	130	0	0

**Medium Reported Braking Action**

MAX MANUAL	2035	135/-135	65/90	-100/360	105/-85	55/-60	85	275	645
AUTOBRAKE MAX	2025	135/-135	65/90	-100/360	110/-85	55/-60	85	275	640
AUTOBRAKE 3	2030	135/-135	65/90	-100/360	105/-75	55/-60	90	275	645

**Poor Reported Braking Action**

MAX MANUAL	2625	190/-190	95/130	-150/565	240/-155	75/-80	95	565	1530
AUTOBRAKE MAX	2625	195/-190	95/130	-150/565	245/-160	75/-80	95	565	1530
AUTOBRAKE 3	2625	195/-190	95/130	-150/565	245/-160	75/-80	95	565	1530

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## LOSS OF SYSTEM A (Flaps 40)

## VREF40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	990	60/-50	20/30	-35/125	15/-15	20/-20	45	25	35
AUTOBRAKE MAX	1120	55/-60	25/30	-40/140	0/0	25/-25	55	5	10
AUTOBRAKE 2	2035	125/-140	60/75	-95/330	0/-5	60/-60	125	0	0

## Good Reported Braking Action

MAX MANUAL	1420	80/-85	40/50	-65/220	45/-35	35/-35	70	95	190
AUTOBRAKE MAX	1420	80/-90	40/50	-65/220	35/-30	35/-35	70	95	185
AUTOBRAKE 2	2035	125/-140	60/75	-95/330	0/-5	60/-60	125	0	0

## Medium Reported Braking Action

MAX MANUAL	1920	125/-130	60/85	-100/355	100/-80	55/-55	85	245	560
AUTOBRAKE MAX	1905	125/-130	60/85	-100/355	105/-80	55/-55	85	240	555
AUTOBRAKE 3	1910	125/-130	60/85	-100/355	105/-75	55/-55	90	240	555

## Poor Reported Braking Action

MAX MANUAL	2470	180/-180	85/120	-150/550	230/-150	70/-75	95	495	1305
AUTOBRAKE MAX	2465	180/-180	90/120	-145/550	235/-155	70/-75	95	495	1305
AUTOBRAKE 3	2465	180/-180	90/120	-145/550	235/-155	70/-75	95	495	1305

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
LOSS OF SYSTEM A AND SYSTEM B (Flaps 15)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1535	80/-85	40/50	-60/195	35/-30	40/-40	75	-5	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2240	135/-140	65/90	-100/335	100/-80	60/-60	105	90	425
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2980	200/-205	100/135	-145/520	215/-160	85/-85	125	355	1385
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3710	275/-270	140/195	-210/780	475/-270	105/-115	135	805	3355
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****LOSS OF SYSTEM B (Flaps 15)****VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1095	55/-60	25/35	-40/145	15/-15	25/-25	40	35	55
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	1565	95/-95	45/60	-70/245	45/-40	40/-40	55	120	250
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2125	145/-145	70/95	-110/400	115/-90	60/-60	75	305	730
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	2725	200/-200	100/140	-165/625	285/-170	80/-85	85	610	1695
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**MANUAL REVERSION (Flaps 15)**

**VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	1535	80/-85	40/50	-60/195	35/-30	40/-40	75	-5	60
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Good Reported Braking Action**

MAX MANUAL	2240	135/-140	65/90	-100/335	100/-80	60/-60	105	90	425
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 2	Autobrake Inoperative								

**Medium Reported Braking Action**

MAX MANUAL	2980	200/-205	100/135	-145/520	215/-160	85/-85	125	355	1385
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

**Poor Reported Braking Action**

MAX MANUAL	3710	275/-270	140/195	-210/780	475/-270	105/-115	135	805	3355
AUTOBRAKE MAX	Autobrake Inoperative								
AUTOBRAKE 3	Autobrake Inoperative								

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

## Non-Normal Configuration Landing Distance

## One Engine Inoperative Landing (Flaps 15)

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

## Dry Runway

MAX MANUAL	980	80/-60	20/30	-35/125	10/-10	20/-20	35	0	20
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	0
AUTOBRAKE 2	2370	150/-160	70/90	-105/355	10/-30	70/-70	115	0	5

## Good Reported Braking Action

MAX MANUAL	1370	75/-80	35/50	-60/210	35/-30	35/-35	50	0	85
AUTOBRAKE MAX	1485	85/-90	40/50	-65/220	35/-25	40/-40	60	0	95
AUTOBRAKE 2	2370	150/-160	70/90	-105/355	10/-30	70/-70	115	0	5

## Medium Reported Braking Action

MAX MANUAL	1965	125/-130	60/80	-100/360	100/-80	55/-55	70	0	270
AUTOBRAKE MAX	2025	130/-135	60/80	-100/365	95/-75	60/-60	80	0	275
AUTOBRAKE 3	2085	135/-140	65/85	-105/370	80/-60	60/-60	95	0	245

## Poor Reported Braking Action

MAX MANUAL	2700	190/-195	90/120	-160/590	270/-170	80/-85	85	0	675
AUTOBRAKE MAX	2705	195/-195	90/125	-160/590	270/-165	80/-85	95	0	680
AUTOBRAKE 3	2740	195/-200	95/125	-160/590	265/-170	80/-85	90	0	685

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**One Engine Inoperative Landing (Flaps 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	940	60/-55	20/25	-35/120	10/-10	20/-20	35	0	20
AUTOBRAKE MAX	1200	60/-65	25/35	-45/145	0/0	30/-30	55	0	0
AUTOBRAKE 2	2185	140/-145	65/85	-100/340	15/-35	65/-65	100	0	10

**Good Reported Braking Action**

MAX MANUAL	1310	75/-75	35/45	-60/205	35/-30	35/-35	50	0	75
AUTOBRAKE MAX	1420	80/-85	35/50	-60/215	30/-25	35/-35	60	0	85
AUTOBRAKE 2	2185	140/-145	65/85	-100/340	15/-35	65/-65	100	0	10

**Medium Reported Braking Action**

MAX MANUAL	1850	115/-120	55/75	-95/350	95/-75	50/-55	65	0	230
AUTOBRAKE MAX	1905	120/-125	55/75	-100/355	90/-70	55/-55	75	0	235
AUTOBRAKE 3	1955	120/-130	60/75	-100/360	80/-65	55/-55	85	0	210

**Poor Reported Braking Action**

MAX MANUAL	2500	175/-175	85/110	-150/565	245/-155	75/-75	80	0	555
AUTOBRAKE MAX	2505	175/-180	85/110	-150/565	245/-150	75/-80	90	0	555
AUTOBRAKE 3	2535	175/-180	85/110	-155/570	245/-160	75/-80	80	0	565

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.



---

**ADVISORY INFORMATION**
**Non-Normal Configuration Landing Distance****Stabilizer Trim Inoperative (Flaps 15)****VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	970	75/-60	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Good Reported Braking Action**

MAX MANUAL	1320	75/-75	35/45	-55/200	30/-25	35/-35	45	70	160
AUTOBRAKE MAX	1420	80/-85	40/50	-60/210	30/-20	35/-35	55	80	175
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Medium Reported Braking Action**

MAX MANUAL	1815	120/-120	55/75	-90/330	80/-65	50/-50	60	195	485
AUTOBRAKE MAX	1860	120/-125	60/80	-95/335	75/-60	50/-55	70	200	490
AUTOBRAKE 3	1990	125/-130	60/80	-95/350	55/-40	55/-60	100	125	390

**Poor Reported Braking Action**

MAX MANUAL	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1165
AUTOBRAKE MAX	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1160
AUTOBRAKE 3	2405	170/-170	85/115	-140/530	185/-115	70/-75	90	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Trailing Edge Flap Asymmetry (1 ≤ Flap Lever <15) VREF40 + 30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1075	95/-60	25/40	-40/130	15/-10	25/-25	40	25	55
AUTOBRAKE MAX	1475	70/-75	35/45	-50/170	0/0	35/-35	65	0	5
AUTOBRAKE 2	2615	160/-175	85/110	-110/375	55/-60	80/-80	90	180	220

#### Good Reported Braking Action

MAX MANUAL	1450	75/-80	40/55	-60/210	30/-30	35/-40	45	80	175
AUTOBRAKE MAX	1610	80/-85	45/55	-65/220	25/-20	40/-40	65	70	175
AUTOBRAKE 2	2615	160/-175	85/110	-110/375	55/-60	80/-80	90	180	220

#### Medium Reported Braking Action

MAX MANUAL	2015	120/-125	65/85	-95/345	85/-65	55/-60	60	220	535
AUTOBRAKE MAX	2090	125/-130	65/90	-100/350	80/-65	60/-60	70	225	550
AUTOBRAKE 3	2325	125/-135	70/95	-105/375	55/-50	70/-70	95	125	375

#### Poor Reported Braking Action

MAX MANUAL	2650	180/-180	95/130	-145/545	205/-135	80/-85	75	480	1290
AUTOBRAKE MAX	2670	180/-180	95/130	-145/550	200/-130	80/-85	80	475	1290
AUTOBRAKE 3	2740	175/-180	95/130	-150/555	190/-125	80/-85	95	435	1260

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Asymmetry (Flap Lever 15 or 25)**

## VREF15

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	970	75/-60	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Good Reported Braking Action**

MAX MANUAL	1320	75/-75	35/45	-55/200	30/-25	35/-35	45	70	160
AUTOBRAKE MAX	1420	80/-85	40/50	-60/210	30/-20	35/-35	55	80	175
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Medium Reported Braking Action**

MAX MANUAL	1815	120/-120	55/75	-90/330	80/-65	50/-50	60	195	485
AUTOBRAKE MAX	1860	120/-125	60/80	-95/335	75/-60	50/-55	70	200	490
AUTOBRAKE 3	1990	125/-130	60/80	-95/350	55/-40	55/-60	100	125	390

**Poor Reported Braking Action**

MAX MANUAL	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1165
AUTOBRAKE MAX	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1160
AUTOBRAKE 3	2405	170/-170	85/115	-140/530	185/-115	70/-75	90	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance**

**Trailing Edge Flap Asymmetry (Flap Lever 30)**

**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	930	60/-55	20/25	-35/120	10/-10	20/-20	35	20	35
AUTOBRAKE MAX	1200	60/-65	25/35	-45/145	0/0	30/-30	55	0	5
AUTOBRAKE 2	2100	140/-145	65/85	-100/335	35/-45	60/-60	85	95	100

**Good Reported Braking Action**

MAX MANUAL	1265	70/-70	35/45	-55/195	30/-25	30/-30	45	65	140
AUTOBRAKE MAX	1355	75/-80	35/45	-60/205	25/-20	35/-35	55	70	155
AUTOBRAKE 2	2100	140/-145	65/85	-100/335	35/-45	60/-60	85	95	100

**Medium Reported Braking Action**

MAX MANUAL	1715	110/-110	55/70	-90/325	75/-60	45/-50	60	170	415
AUTOBRAKE MAX	1760	115/-115	55/70	-90/325	70/-55	50/-50	70	175	425
AUTOBRAKE 3	1870	115/-120	55/75	-95/340	55/-45	50/-55	85	115	340

**Poor Reported Braking Action**

MAX MANUAL	2220	155/-155	75/105	-135/510	180/-120	65/-70	70	365	970
AUTOBRAKE MAX	2230	155/-155	75/105	-135/510	185/-115	65/-70	80	365	965
AUTOBRAKE 3	2260	160/-160	75/105	-135/515	175/-115	65/-70	80	365	975

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance Trailing Edge Flap Disagree ( $1 \leq$ Indicated Flaps $<15$ ) VREF40 + 30

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1075	95/-60	25/40	-40/130	15/-10	25/-25	40	25	55
AUTOBRAKE MAX	1475	70/-75	35/45	-50/170	0/0	35/-35	65	0	5
AUTOBRAKE 2	2615	160/-175	85/110	-110/375	55/-60	80/-80	90	180	220

#### Good Reported Braking Action

MAX MANUAL	1450	75/-80	40/55	-60/210	30/-30	35/-40	45	80	175
AUTOBRAKE MAX	1610	80/-85	45/55	-65/220	25/-20	40/-40	65	70	175
AUTOBRAKE 2	2615	160/-175	85/110	-110/375	55/-60	80/-80	90	180	220

#### Medium Reported Braking Action

MAX MANUAL	2015	120/-125	65/85	-95/345	85/-65	55/-60	60	220	535
AUTOBRAKE MAX	2090	125/-130	65/90	-100/350	80/-65	60/-60	70	225	550
AUTOBRAKE 3	2325	125/-135	70/95	-105/375	55/-50	70/-70	95	125	375

#### Poor Reported Braking Action

MAX MANUAL	2650	180/-180	95/130	-145/545	205/-135	80/-85	75	480	1290
AUTOBRAKE MAX	2670	180/-180	95/130	-145/550	200/-130	80/-85	80	475	1290
AUTOBRAKE 3	2740	175/-180	95/130	-150/555	190/-125	80/-85	95	435	1260

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

**ADVISORY INFORMATION**

**Non-Normal Configuration Landing Distance  
Trailing Edge Flap Disagree (15 ≤ Indicated Flaps <30)  
VREF15**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	970	75/-60	20/30	-35/120	10/-10	20/-20	35	20	45
AUTOBRAKE MAX	1270	70/-70	30/40	-45/155	0/0	30/-30	60	0	5
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Good Reported Braking Action**

MAX MANUAL	1320	75/-75	35/45	-55/200	30/-25	35/-35	45	70	160
AUTOBRAKE MAX	1420	80/-85	40/50	-60/210	30/-20	35/-35	55	80	175
AUTOBRAKE 2	2270	150/-160	70/95	-105/350	35/-45	65/-65	90	105	105

**Medium Reported Braking Action**

MAX MANUAL	1815	120/-120	55/75	-90/330	80/-65	50/-50	60	195	485
AUTOBRAKE MAX	1860	120/-125	60/80	-95/335	75/-60	50/-55	70	200	490
AUTOBRAKE 3	1990	125/-130	60/80	-95/350	55/-40	55/-60	100	125	390

**Poor Reported Braking Action**

MAX MANUAL	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1165
AUTOBRAKE MAX	2375	170/-170	85/115	-140/525	195/-125	70/-75	75	425	1160
AUTOBRAKE 3	2405	170/-170	85/115	-140/530	185/-115	70/-75	90	425	1165

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

**Non-Normal Configuration Landing Distance**  
**Trailing Edge Flap Disagree (30 ≤ Indicated Flaps <40)**  
**VREF30**

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

**Dry Runway**

MAX MANUAL	930	60/-55	20/25	-35/120	10/-10	20/-20	35	20	35
AUTOBRAKE MAX	1200	60/-65	25/35	-45/145	0/0	30/-30	55	0	5
AUTOBRAKE 2	2100	140/-145	65/85	-100/335	35/-45	60/-60	85	95	100

**Good Reported Braking Action**

MAX MANUAL	1265	70/-70	35/45	-55/195	30/-25	30/-30	45	65	140
AUTOBRAKE MAX	1355	75/-80	35/45	-60/205	25/-20	35/-35	55	70	155
AUTOBRAKE 2	2100	140/-145	65/85	-100/335	35/-45	60/-60	85	95	100

**Medium Reported Braking Action**

MAX MANUAL	1715	110/-110	55/70	-90/325	75/-60	45/-50	60	170	415
AUTOBRAKE MAX	1760	115/-115	55/70	-90/325	70/-55	50/-50	70	175	425
AUTOBRAKE 3	1870	115/-120	55/75	-95/340	55/-45	50/-55	85	115	340

**Poor Reported Braking Action**

MAX MANUAL	2220	155/-155	75/105	-135/510	180/-120	65/-70	70	365	970
AUTOBRAKE MAX	2230	155/-155	75/105	-135/510	185/-115	65/-70	80	365	965
AUTOBRAKE 3	2260	160/-160	75/105	-135/515	175/-115	65/-70	80	365	975

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.

## ADVISORY INFORMATION

### Non-Normal Configuration Landing Distance

#### Trailing Edge Flaps Up Landing

VREF40 + 40

	LANDING DISTANCE AND ADJUSTMENTS (M)								
	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ADJ	
BRAKING CONFIGURATION	65000 KG LANDING WEIGHT	PER 5000 KG ABV/BLW 65000 KG	PER 1000 FT STD/HIGH*	PER 10 KTS HEAD/ TAIL WIND	PER 1% DOWN/ UP HILL	PER 10°C ABV/ BLW ISA	PER 5 KTS ABOVE VREF	ONE REV	NO REV

#### Dry Runway

MAX MANUAL	1175	110/-70	30/70	-40/140	15/-15	30/-30	40	30	65
AUTOBRAKE MAX	1605	75/-75	40/50	-55/175	0/0	40/-40	70	0	10
AUTOBRAKE 2	2980	175/-195	100/125	-120/400	55/-65	90/-90	105	170	180

#### Good Reported Braking Action

MAX MANUAL	1620	85/-90	45/60	-65/225	40/-35	45/-45	50	95	210
AUTOBRAKE MAX	1770	85/-95	50/65	-70/235	30/-20	45/-50	70	90	220
AUTOBRAKE 2	2980	175/-195	100/125	-120/400	55/-65	90/-90	105	170	180

#### Medium Reported Braking Action

MAX MANUAL	2285	135/-145	75/100	-105/370	100/-80	65/-70	65	270	655
AUTOBRAKE MAX	2335	140/-145	75/100	-105/375	95/-75	65/-70	75	270	665
AUTOBRAKE 3	2565	135/-150	80/105	-115/395	60/-45	75/-80	115	160	485

#### Poor Reported Braking Action

MAX MANUAL	3035	205/-210	110/150	-160/585	240/-160	90/-95	85	590	1610
AUTOBRAKE MAX	3025	205/-210	110/150	-160/585	240/-155	90/-95	90	585	1600
AUTOBRAKE 3	3090	200/-205	110/150	-160/590	225/-140	95/-100	110	565	1595

Reference distance is based on sea level, standard day, no wind or slope, and maximum available reverse thrust.

MAX MANUAL assumes maximum achievable manual braking.

Reference Distance includes an air distance allowance of 305 m from threshold to touchdown.

Unfactored distances are shown. For wet/contaminated runways, the distances above should be multiplied by 1.15 to obtain the actual landing distances.

\*For landing distance at or below 8000 ft pressure altitude, apply the STD adjustment. For altitudes higher than 8000 ft, first apply the STD adjustment to derive a new reference landing distance for 8000 ft then apply the HIGH adjustment to this new reference distance.





**ADVISORY INFORMATION**

**Recommended Brake Cooling Schedule**

**Reference Brake Energy Per Brake (Millions of Foot Pounds)**

WEIGHT (1000 KG)		OAT (°C)		WIND CORRECTED BRAKES ON SPEED (KIAS)*																		
				80			100			120			140			160			180			
				PRESSURE ALTITUDE (1000 FT)																		
				0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	0	5	10	
80	0	15.1	17.0	19.3	22.4	25.3	28.9	30.9	35.0	40.2	40.4	45.9	53.0	50.8	57.9	67.3	60.8	69.6	81.2			
	10	15.6	17.6	20.0	23.1	26.1	29.8	31.9	36.2	41.5	41.8	47.5	54.8	52.5	59.9	69.5	62.8	71.9	83.9			
	15	15.8	17.8	20.2	23.5	26.5	30.3	32.4	36.7	42.1	42.4	48.2	55.6	53.3	60.7	70.5	63.7	72.9	85.1			
	20	16.0	18.1	20.5	23.8	26.9	30.7	32.8	37.2	42.7	42.9	48.8	56.3	54.0	61.5	71.4	64.6	73.9	86.2			
	30	16.4	18.5	21.1	24.4	27.6	31.5	33.7	38.2	43.8	44.0	50.0	57.7	55.3	63.1	73.2	66.2	75.7	88.4			
	40	16.6	18.7	21.3	24.7	27.9	31.9	34.1	38.7	44.4	44.7	50.9	58.8	56.3	64.3	74.8	67.5	77.4	90.5			
50	16.6	18.7	21.3	24.8	28.0	32.1	34.3	39.0	44.9	45.2	51.5	59.7	57.1	65.4	76.3	68.7	79.0	92.9				
70	0	13.7	15.4	17.5	20.2	22.8	26.0	27.7	31.3	35.9	36.1	41.0	47.2	45.3	51.6	59.7	54.9	62.7	72.9			
	10	14.2	15.9	18.1	20.8	23.5	26.8	28.6	32.4	37.1	37.3	42.3	48.7	46.8	53.3	61.6	56.7	64.8	75.4			
	15	14.4	16.2	18.4	21.1	23.9	27.2	29.0	32.8	37.6	37.8	43.0	49.4	47.5	54.0	62.5	57.5	65.7	76.4			
	20	14.6	16.4	18.6	21.4	24.2	27.6	29.4	33.3	38.1	38.4	43.5	50.1	48.1	54.8	63.4	58.3	66.5	77.4			
	30	14.9	16.8	19.1	22.0	24.8	28.3	30.2	34.1	39.1	39.3	44.6	51.4	49.3	56.1	64.9	59.8	68.2	79.4			
	40	15.1	17.0	19.3	22.2	25.1	28.6	30.5	34.6	39.6	39.9	45.3	52.2	50.1	57.1	66.2	60.9	69.6	81.2			
50	15.1	17.0	19.3	22.3	25.2	28.8	30.7	34.8	40.0	40.2	45.8	52.9	50.7	58.0	67.4	61.8	70.9	83.0				
60	0	12.3	13.9	15.7	18.0	20.3	23.1	24.4	27.6	31.6	31.7	35.9	41.2	39.6	45.0	51.8	48.1	54.8	63.5			
	10	12.7	14.3	16.3	18.5	20.9	23.8	25.2	28.5	32.6	32.7	37.1	42.6	40.9	46.5	53.6	49.7	56.6	65.6			
	15	12.9	14.6	16.5	18.8	21.2	24.2	25.6	29.0	33.1	33.2	37.6	43.2	41.5	47.1	54.4	50.4	57.4	66.5			
	20	13.1	14.8	16.7	19.1	21.5	24.5	26.0	29.4	33.5	33.6	38.1	43.8	42.0	47.8	55.1	51.1	58.2	67.4			
	30	13.4	15.1	17.2	19.6	22.1	25.1	26.6	30.1	34.4	34.5	39.1	44.9	43.1	49.0	56.5	52.3	59.6	69.1			
	40	13.6	15.3	17.3	19.8	22.3	25.4	26.9	30.5	34.9	35.0	39.7	45.6	43.8	49.8	57.5	53.2	60.7	70.5			
50	13.5	15.3	17.3	19.8	22.4	25.5	27.0	30.6	35.1	35.2	40.0	46.0	44.2	50.4	58.3	53.9	61.7	71.9				
50	0	11.0	12.3	14.0	15.7	17.7	20.2	21.2	23.9	27.3	27.2	30.8	35.3	33.8	38.3	44.1	40.9	46.4	53.6			
	10	11.3	12.7	14.4	16.3	18.3	20.8	21.9	24.7	28.2	28.1	31.8	36.5	34.9	39.6	45.5	42.2	48.0	55.4			
	15	11.5	12.9	14.7	16.5	18.6	21.1	22.2	25.1	28.6	28.6	32.3	37.0	35.4	40.2	46.2	42.8	48.7	56.2			
	20	11.6	13.1	14.9	16.7	18.9	21.4	22.5	25.4	29.0	28.9	32.8	37.5	35.9	40.7	46.8	43.4	49.3	56.9			
	30	11.9	13.4	15.2	17.2	19.3	22.0	23.1	26.1	29.7	29.7	33.6	38.4	36.8	41.8	48.0	44.5	50.6	58.4			
	40	12.1	13.6	15.4	17.3	19.5	22.2	23.4	26.4	30.1	30.1	34.0	39.0	37.4	42.4	48.8	45.2	51.4	59.4			
50	12.0	13.6	15.4	17.3	19.6	22.3	23.4	26.5	30.3	30.2	34.2	39.3	37.6	42.8	49.3	45.7	52.1	60.3				
40	0	9.6	10.8	12.3	13.5	15.2	17.3	17.9	20.2	23.0	22.8	25.8	29.4	28.1	31.8	36.4	33.7	38.2	43.9			
	10	10.0	11.2	12.7	14.0	15.8	17.9	18.5	20.9	23.8	23.6	26.6	30.4	29.0	32.8	37.6	34.8	39.5	45.4			
	15	10.1	11.4	12.9	14.2	16.0	18.1	18.8	21.2	24.1	23.9	27.0	30.8	29.4	33.3	38.2	35.3	40.0	46.0			
	20	10.2	11.5	13.1	14.4	16.2	18.4	19.1	21.5	24.5	24.2	27.4	31.3	29.8	33.8	38.7	35.8	40.6	46.6			
	30	10.5	11.8	13.4	14.8	16.6	18.9	19.6	22.1	25.1	24.9	28.1	32.1	30.6	34.6	39.7	36.7	41.6	47.8			
	40	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.4	25.2	28.4	32.5	31.0	35.1	40.2	37.2	42.2	48.6			
50	10.6	11.9	13.5	14.9	16.8	19.1	19.8	22.3	25.5	25.2	28.6	32.7	31.1	35.3	40.6	37.5	42.6	49.1				

\*To correct for wind, enter table with the brakes on speed minus one half the headwind or plus 1.5 times the tailwind. If ground speed is used for brakes on speed, ignore wind and enter table with sea level, 15°C.

## ADVISORY INFORMATION

### Recommended Brake Cooling Schedule Adjusted Brake Energy Per Brake (Millions of Foot Pounds) No Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.8	16.3	25.3	34.7	44.7	55.0	65.7	76.6	87.9
	MAX AUTO	7.5	15.4	23.6	32.4	41.8	51.8	62.5	74.1	86.5
	AUTOBRAKE 3	7.3	14.7	22.3	30.2	38.6	47.6	57.4	68.1	80.0
	AUTOBRAKE 2	7.0	13.8	20.5	27.4	34.8	42.7	51.5	61.3	72.4
AUTOBRAKE 1		6.7	13.1	19.2	25.3	31.8	38.8	46.6	55.4	65.5

### Two Engine Detent Reverse Thrust

EVENT		REFERENCE BRAKE ENERGY PER BRAKE (MILLIONS OF FOOT POUNDS)								
		10	20	30	40	50	60	70	80	90
RTO MAX MAN		10	20	30	40	50	60	70	80	90
LANDING	MAX MAN	7.0	14.6	22.8	31.4	40.5	49.9	59.7	69.8	80.0
	MAX AUTO	5.8	12.3	19.5	27.2	35.6	44.5	53.9	63.7	74.1
	AUTOBRAKE 3	4.3	9.2	14.7	20.7	27.2	34.4	42.0	50.2	59.0
	AUTOBRAKE 2	2.5	5.6	9.1	13.1	17.8	23.0	28.8	35.2	42.3
	AUTOBRAKE 1	1.8	3.8	6.1	8.8	11.9	15.5	19.6	24.4	29.8

### Cooling Time (Minutes) - Category C Steel Brakes

*(Note: A placard showing carbon brake configuration will be put at the Center Forward Panel upon modification.)*

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	20	23	25	28	32	33 TO 48	49 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.4	2.6	3.1	3.5	3.9	4.4	4.9	5.0 TO 7.5	7.5 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	2	3	4	5	6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED									10

### Cooling Time (Minutes) - Category N Carbon Brakes

		EVENT ADJUSTED BRAKE ENERGY (MILLIONS OF FOOT POUNDS)								
		16 & BELOW	17	19	20.9	23.5	26.9	29.4	30 TO 41	41 & ABOVE
		BRAKE TEMPERATURE MONITOR SYSTEM INDICATION ON CDS								
		UP TO 2.5	2.6	3	3.3	3.8	4.5	4.9	5.0 TO 7.1	7.1 & ABOVE
INFLIGHT GEAR DOWN	NO SPECIAL PROCEDURE	1	4	5	6	7	7.6	CAUTION	FUSE PLUG MELT ZONE	
GROUND	REQUIRED									6.7

Observe maximum quick turnaround limit.

Table shows energy per brake added by a single stop with all brakes operating. Energy is assumed to be equally distributed among the operating brakes. Total energy is the sum of residual energy plus energy added.

Add 1.0 million foot pounds per brake for each taxi mile.

When in caution zone, wheel fuse plugs may melt. Delay takeoff and inspect after one hour. If overheat occurs after takeoff, extend gear soon for at least 7 minutes.

When in fuse plug melt zone, clear runway immediately. Unless required, do not set parking brake. Do not approach gear or attempt to taxi for one hour. Tire, wheel and brake replacement may be required. If overheat occurs after takeoff, extend gear soon for at least 12 minutes.

Brake temperature monitor system (BTMS) indication on CDS systems page may be used 10 to 15 minutes after airplane has come to a complete stop or inflight with gear retracted to determine recommended cooling schedule.

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.



## Performance Inflight - QRH

## Chapter PI-QRH

## Engine Inoperative

## Section 62

## ENGINE INOP

## Initial Max Continuous %N1

Based on .79M, A/C high and anti-ice off

TAT (°C)	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
20	96.8	96.6	96.3	96.1	95.9	95.4	95.0	94.7	93.9
15	97.4	97.2	96.9	96.8	96.6	96.2	95.7	95.5	94.8
10	98.0	97.8	97.5	97.4	97.4	96.9	96.5	96.3	95.7
5	98.3	98.6	98.3	98.1	98.1	97.7	97.3	97.1	96.6
0	97.5	98.7	99.2	99.0	98.9	98.5	98.2	98.0	97.5
-5	96.7	98.0	99.1	99.8	99.7	99.3	98.9	98.7	98.4
-10	96.0	97.2	98.4	99.6	100.5	100.2	99.8	99.6	99.4
-15	95.2	96.4	97.6	98.8	100.1	101.0	100.8	100.6	100.3
-20	94.4	95.6	96.8	98.0	99.3	100.5	101.1	100.8	100.6
-25	93.6	94.9	96.0	97.2	98.5	99.7	100.2	100.0	99.8
-30	92.8	94.1	95.2	96.4	97.7	98.8	99.4	99.2	99.0
-35	92.0	93.2	94.4	95.6	96.8	98.0	98.5	98.3	98.1
-40	91.2	92.4	93.5	94.7	96.0	97.1	97.6	97.4	97.2

## %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)								
	25	27	29	31	33	35	37	39	41
ENGINE ANTI-ICE	-1.2	-1.1	-1.0	-0.9	-0.8	-0.8	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE	-4.2	-4.4	-4.5	-4.7	-5.0	-4.8	-4.8	-4.8	-4.8



## ENGINE INOP

### Max Continuous %N1

#### 27000 FT to 20000 FT Pressure Altitudes

27000 FT PRESS ALT		TAT (°C)											
KIAS	M	-45	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10
160	.41	98.0	98.8	99.7	100.6	101.4	102.2	101.2	100.2	99.0	97.8	96.4	95.1
200	.51	96.9	97.8	98.7	99.6	100.4	101.2	101.8	100.8	99.9	98.8	97.6	96.4
240	.60	95.6	96.5	97.4	98.2	99.1	99.9	100.7	101.3	100.4	99.4	98.5	97.5
280	.70	93.6	94.4	95.3	96.1	96.9	97.7	98.5	99.3	100.1	99.4	98.4	97.6
320	.79	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	98.6	97.8
360	.88	91.0	91.8	92.6	93.4	94.2	95.0	95.8	96.6	97.3	98.1	98.8	99.4
25000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.39	98.8	99.7	100.5	101.4	102.2	102.4	101.4	100.3	99.1	97.7	96.5	95.2
200	.49	97.5	98.3	99.2	100.0	100.9	101.7	101.5	100.6	99.5	98.4	97.3	96.2
240	.58	95.7	96.5	97.4	98.2	99.0	99.9	100.7	100.5	99.5	98.6	97.6	96.7
280	.67	93.9	94.7	95.5	96.3	97.1	97.9	98.7	99.5	99.5	98.6	97.6	96.9
320	.76	91.7	92.6	93.4	94.2	95.0	95.8	96.5	97.3	98.0	98.6	97.8	97.2
360	.85	90.4	91.2	92.1	92.9	93.7	94.5	95.3	96.1	96.9	97.6	98.4	98.2
24000 FT PRESS ALT		TAT (°C)											
KIAS	M	-40	-35	-30	-25	-20	-15	-10	-5	0	5	10	15
160	.38	98.6	99.5	100.4	101.2	102.1	102.9	101.9	100.8	99.6	98.4	97.1	95.8
200	.48	97.5	98.4	99.2	100.1	100.9	101.8	102.2	101.1	100.1	99.0	97.8	96.7
240	.57	95.9	96.8	97.6	98.5	99.3	100.1	100.9	101.2	100.2	99.2	98.2	97.3
280	.66	94.2	95.1	95.9	96.7	97.5	98.3	99.1	99.9	100.4	99.4	98.3	97.5
320	.75	92.1	93.0	93.8	94.6	95.4	96.2	96.9	97.7	98.5	99.2	98.6	97.8
360	.83	90.6	91.4	92.2	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.6
22000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.37	99.1	100.0	100.9	101.7	102.5	102.8	101.8	100.7	99.5	98.2	97.0	95.8
200	.46	98.4	99.3	100.1	101.0	101.8	102.6	102.3	101.2	100.0	98.9	97.8	96.8
240	.55	97.2	98.1	98.9	99.7	100.5	101.3	102.1	101.6	100.5	99.4	98.5	97.5
280	.63	95.7	96.5	97.4	98.2	99.0	99.8	100.6	101.3	101.0	99.8	98.9	98.1
320	.72	93.9	94.7	95.5	96.3	97.1	97.9	98.6	99.4	100.1	100.2	99.3	98.6
360	.80	92.2	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	99.2	99.7	99.1
20000 FT PRESS ALT		TAT (°C)											
KIAS	M	-35	-30	-25	-20	-15	-10	-5	0	5	10	15	20
160	.35	98.7	99.5	100.4	101.2	102.0	102.8	102.5	101.5	100.4	99.2	98.0	96.8
200	.44	98.3	99.2	100.0	100.9	101.7	102.5	103.3	102.3	101.1	100.0	98.9	97.8
240	.53	97.5	98.4	99.2	100.0	100.8	101.7	102.5	103.1	101.8	100.5	99.5	98.6
280	.61	96.2	97.0	97.8	98.7	99.5	100.3	101.1	101.8	102.5	101.3	100.1	99.3
320	.69	94.7	95.5	96.3	97.1	97.9	98.7	99.5	100.2	101.0	101.7	100.9	99.9
360	.77	93.0	93.8	94.6	95.4	96.2	97.0	97.7	98.5	99.2	100.0	100.7	100.4

### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)				
	20	22	24	25	27
ENGINE ANTI-ICE ON	-0.9	-0.9	-1.0	-1.0	-1.0
ENGINE & WING ANTI-ICE ON	-3.6	-3.8	-3.8	-3.9	-4.0



## ENGINE INOP

### Max Continuous %N1

#### 10000 FT to 1000 FT Pressure Altitudes

10000 FT PRESS ALT			TAT (°C)										
KIAS	M	-20	-15	-10	-5	0	5	10	15	20	25	30	35
160	.29	95.2	96.0	96.8	97.6	98.3	99.1	99.8	98.6	97.4	96.6	95.8	94.9
200	.36	96.0	96.7	97.5	98.3	99.0	99.8	100.5	100.5	99.4	98.5	97.8	97.0
240	.43	95.6	96.4	97.2	97.9	98.7	99.4	100.2	100.9	100.1	99.2	98.4	97.7
280	.51	94.5	95.3	96.1	96.9	97.6	98.4	99.1	99.9	100.4	99.5	98.7	98.0
320	.58	93.0	93.9	94.7	95.5	96.2	97.0	97.8	98.6	99.3	99.7	99.0	98.2
360	.65	91.6	92.4	93.2	94.0	94.8	95.6	96.4	97.2	98.0	98.7	99.1	98.5
5000 FT PRESS ALT			TAT (°C)										
KIAS	M	-10	-5	0	5	10	15	20	25	30	35	40	45
160	.26	94.9	95.7	96.4	97.2	98.0	98.8	99.2	98.3	97.4	96.6	95.9	95.1
200	.33	94.7	95.5	96.3	97.1	97.8	98.6	99.4	98.9	98.0	97.3	96.6	95.8
240	.40	94.0	94.8	95.6	96.4	97.2	97.9	98.7	99.5	98.7	97.9	97.2	96.5
280	.46	93.3	94.1	94.9	95.7	96.5	97.3	98.1	98.8	98.9	98.2	97.5	96.8
320	.53	92.5	93.3	94.1	94.9	95.7	96.5	97.2	98.0	98.7	98.4	97.7	97.1
360	.59	91.5	92.3	93.1	93.9	94.7	95.5	96.2	97.0	97.8	98.5	98.0	97.3
3000 FT PRESS ALT			TAT (°C)										
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.26	94.8	95.6	96.4	97.2	98.0	98.7	98.8	97.9	97.1	96.4	95.6	94.8
200	.32	94.5	95.3	96.1	96.9	97.6	98.4	99.2	98.3	97.5	96.8	96.1	95.3
240	.38	94.1	94.9	95.6	96.4	97.2	98.0	98.7	98.8	98.0	97.2	96.6	95.9
280	.45	93.2	94.0	94.8	95.6	96.4	97.2	97.9	98.7	98.3	97.5	96.9	96.2
320	.51	92.5	93.3	94.1	94.9	95.7	96.4	97.2	98.0	98.5	97.8	97.1	96.5
360	.57	91.6	92.4	93.2	94.0	94.7	95.5	96.3	97.1	97.8	98.1	97.4	96.8
1000 FT PRESS ALT			TAT (°C)										
KIAS	M	-5	0	5	10	15	20	25	30	35	40	45	50
160	.25	93.9	94.7	95.4	96.2	97.0	97.8	98.5	98.2	97.4	96.7	96.0	95.2
200	.31	93.5	94.3	95.1	95.9	96.7	97.4	98.2	98.5	97.8	97.0	96.3	95.6
240	.37	93.0	93.8	94.6	95.4	96.1	96.9	97.7	98.4	98.1	97.3	96.6	95.9
280	.43	92.3	93.2	93.9	94.7	95.5	96.3	97.1	97.8	98.3	97.6	96.9	96.2
320	.49	91.6	92.4	93.2	94.0	94.8	95.6	96.3	97.1	97.9	97.9	97.2	96.5
360	.55	90.7	91.5	92.3	93.1	93.9	94.7	95.4	96.2	96.9	97.7	97.3	96.6

#### %N1 Adjustments for Engine Bleeds

BLEED CONFIGURATION	PRESSURE ALTITUDE (1000 FT)			
	1	3	5	10
ENGINE ANTI-ICE ON	-0.6	-0.8	-0.8	-0.8
ENGINE & WING ANTI-ICE ON	-2.9	-3.0	-2.7	-3.2





## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Driftdown/LRC Cruise Range Capability Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20		20	40	60	80	100
138	128	120	112	106	100	95	90	86	82	78
275	256	239	225	212	200	190	180	172	164	157
413	384	359	337	317	300	284	270	258	246	235
551	512	479	449	423	400	379	360	344	328	314
689	640	598	562	529	500	474	451	429	410	392
826	768	718	674	635	600	569	541	515	492	471
964	896	838	786	741	700	664	631	601	574	549
1102	1025	957	898	846	800	758	721	687	656	628
1240	1153	1077	1011	952	900	853	811	773	738	706
1377	1281	1197	1123	1058	1000	948	901	859	820	785
1515	1409	1317	1235	1164	1100	1043	991	945	902	863
1653	1537	1436	1348	1270	1200	1138	1081	1030	984	942
1792	1666	1556	1460	1375	1300	1232	1171	1116	1066	1020
1930	1794	1676	1573	1481	1400	1327	1261	1202	1148	1098
2068	1922	1796	1685	1587	1500	1422	1351	1288	1230	1177
2207	2051	1916	1798	1693	1600	1517	1441	1373	1312	1255
2345	2180	2036	1910	1799	1700	1611	1531	1459	1393	1333
2484	2309	2156	2023	1905	1800	1706	1621	1545	1475	1411

#### Driftdown/Cruise Fuel and Time

AIR DIST (NM)	FUEL REQUIRED (1000 KG)										TIME (HR:MIN)
	WEIGHT AT START OF DRIFTDOWN (1000 KG)										
	40	45	50	55	60	65	70	75	80	85	
100	0.4	0.4	0.4	0.4	0.4	0.5	0.5	0.5	0.5	0.5	0:16
200	0.8	0.8	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.3	0:33
300	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0	2.1	0:49
400	1.6	1.8	1.9	2.0	2.2	2.3	2.5	2.6	2.8	2.9	1:06
500	2.0	2.2	2.4	2.6	2.8	3.0	3.2	3.3	3.5	3.7	1:22
600	2.4	2.7	2.9	3.1	3.3	3.6	3.8	4.0	4.3	4.5	1:39
700	2.8	3.1	3.4	3.6	3.9	4.2	4.5	4.7	5.0	5.3	1:55
800	3.2	3.6	3.9	4.2	4.5	4.8	5.1	5.4	5.7	6.1	2:11
900	3.6	4.0	4.3	4.7	5.0	5.4	5.7	6.1	6.4	6.8	2:28
1000	4.0	4.4	4.8	5.2	5.6	6.0	6.4	6.7	7.1	7.6	2:44
1100	4.4	4.8	5.3	5.7	6.1	6.6	7.0	7.4	7.9	8.3	3:01
1200	4.8	5.3	5.7	6.2	6.7	7.1	7.6	8.1	8.6	9.0	3:17
1300	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.8	3:34
1400	5.5	6.1	6.6	7.2	7.7	8.3	8.8	9.4	9.9	10.5	3:51
1500	5.9	6.5	7.1	7.7	8.3	8.9	9.4	10.0	10.6	11.2	4:07
1600	6.3	6.9	7.5	8.2	8.8	9.4	10.0	10.7	11.3	12.0	4:24
1700	6.6	7.3	8.0	8.6	9.3	10.0	10.6	11.3	12.0	12.7	4:41
1800	7.0	7.7	8.4	9.1	9.8	10.5	11.2	11.9	12.6	13.4	4:57

Includes APU fuel burn.

Driftdown at optimum driftdown speed and cruise at long range cruise speed.

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Altitude Capability

100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15200	12600	9900
80	17200	15300	12500
75	19200	17400	15000
70	20900	19700	17300
65	22500	21300	19800
60	24100	23000	21600
55	26300	24800	23500
50	29000	27700	25800
45	31400	30500	29200
40	33800	33000	31800

With engine anti-ice on, decrease altitude capability by 1200 ft.

With engine and wing anti-ice on, decrease altitude capability by 5500 ft.

## ENGINE INOP

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		10	15	17	19	21	23	25	27	29	31
85	%N1	91.8	95.5	97.9							
	MACH	.561	.600	.616							
	KIAS	311	303	300							
	FF/ENG	3067	3033	3052							
80	%N1	90.1	94.0	95.9	98.5						
	MACH	.545	.590	.603	.621						
	KIAS	302	299	294	291						
	FF/ENG	2875	2870	2846	2886						
75	%N1	88.4	92.5	94.0	96.1						
	MACH	.528	.579	.593	.607						
	KIAS	293	293	288	284						
	FF/ENG	2684	2709	2674	2662						
70	%N1	86.5	90.7	92.3	94.0	96.2					
	MACH	.510	.562	.582	.595	.610					
	KIAS	282	284	283	278	274					
	FF/ENG	2494	2518	2520	2481	2487					
65	%N1	84.5	88.7	90.4	92.2	93.9	96.4				
	MACH	.491	.542	.563	.584	.596	.612				
	KIAS	271	274	274	273	268	265				
	FF/ENG	2306	2327	2330	2330	2295	2317				
60	%N1	82.3	86.5	88.3	90.0	91.9	93.7	96.4			
	MACH	.471	.521	.543	.564	.585	.597	.614			
	KIAS	261	263	263	263	263	258	254			
	FF/ENG	2124	2137	2139	2140	2143	2114	2146			
55	%N1	80.2	84.2	85.9	87.7	89.5	91.4	93.3	96.2		
	MACH	.453	.498	.520	.541	.563	.585	.597	.614		
	KIAS	250	251	252	252	253	252	247	244		
	FF/ENG	1954	1948	1950	1950	1953	1958	1938	1971		
50	%N1	77.8	81.6	83.4	85.2	87.0	88.7	90.7	92.7	95.7	
	MACH	.434	.475	.495	.516	.538	.561	.583	.596	.613	
	KIAS	240	239	239	240	241	241	241	236	233	
	FF/ENG	1791	1764	1762	1762	1764	1767	1777	1765	1793	
45	%N1	75.5	79.1	80.6	82.3	84.1	85.9	87.7	89.7	91.8	94.8
	MACH	.415	.452	.469	.489	.511	.533	.556	.578	.593	.610
	KIAS	229	227	227	227	228	229	229	229	225	222
	FF/ENG	1636	1594	1582	1575	1577	1580	1586	1600	1593	1613
40	%N1	73.0	76.2	77.8	79.4	81.0	82.8	84.6	86.4	88.3	90.7
	MACH	.395	.429	.445	.462	.480	.502	.525	.548	.571	.589
	KIAS	218	215	215	214	214	215	216	216	216	214
	FF/ENG	1485	1434	1416	1402	1392	1394	1400	1410	1421	1424



# ENGINE INOP

## MAX CONTINUOUS THRUST

### Holding

### Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	81.1	84.1	88.3	92.8				
	KIAS	250	251	252	253				
	FF/ENG	2740	2730	2750	2800				
80	%N1	79.5	82.4	86.5	91.0	98.3			
	KIAS	242	243	244	245	247			
	FF/ENG	2580	2570	2570	2610	2740			
75	%N1	77.8	80.5	84.7	89.1	95.0			
	KIAS	235	236	236	238	239			
	FF/ENG	2420	2400	2400	2420	2490			
70	%N1	76.0	78.6	82.8	87.1	92.1			
	KIAS	227	227	228	229	231			
	FF/ENG	2260	2240	2230	2250	2270			
65	%N1	74.0	76.7	80.8	85.0	89.7	97.7		
	KIAS	219	219	220	221	222	224		
	FF/ENG	2100	2090	2070	2070	2080	2230		
60	%N1	71.7	74.6	78.5	82.8	87.4	93.7		
	KIAS	210	210	211	212	213	214		
	FF/ENG	1950	1930	1910	1910	1910	1970		
55	%N1	69.4	72.3	76.3	80.5	84.9	90.0		
	KIAS	200	201	202	203	204	205		
	FF/ENG	1800	1770	1750	1740	1730	1760		
50	%N1	67.0	69.7	73.8	77.8	82.3	87.0	94.9	
	KIAS	191	191	192	193	194	195	196	
	FF/ENG	1650	1620	1600	1580	1570	1570	1680	
45	%N1	64.3	66.9	71.0	75.0	79.4	84.0	89.6	
	KIAS	184	184	184	184	184	185	186	
	FF/ENG	1500	1470	1440	1430	1400	1400	1450	
40	%N1	61.1	64.0	67.8	72.0	76.2	80.7	85.4	94.1
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1350	1330	1300	1270	1250	1240	1260	1360

This table includes 5% additional fuel for holding in a racetrack pattern.

# ENGINE INOP

## ADVISORY INFORMATION

### Gear Down Landing Rate of Climb Available Flaps 15

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	50	-10				
50	80	20	-80			
48	110	40	-50			
46	140	70	-30	-130		
44	170	100	0	-100		
42	200	130	20	-80	-190	
40	220	160	50	-50	-170	
38	250	190	80	-20	-140	-280
36	270	220	110	0	-120	-250
34	270	250	140	20	-100	-230
32	270	270	160	40	-80	-210
30	280	270	180	60	-60	-190
20	290	280	200	90	-20	-130
10	300	290	200	100	-10	-120
0	310	300	210	100	-10	-120
-20	330	320	230	110	0	-120
-40	350	340	240	120	0	-120

Rate of climb capability shown is valid for 60000 kg, gear down at VREF15+5.  
 Decrease rate of climb 120 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 160 ft/min per 5000 kg less than 60000 kg.

### Flaps 30

TAT (°C)	RATE OF CLIMB (FT/MIN)					
	PRESSURE ALTITUDE (FT)					
	-2000	0	2000	4000	6000	8000
52	-250	-310				
50	-220	-290	-390			
48	-190	-260	-370			
46	-170	-240	-340	-450		
44	-140	-210	-320	-420		
42	-110	-180	-290	-400	-520	
40	-90	-160	-270	-370	-490	
38	-60	-130	-240	-350	-470	-610
36	-50	-100	-210	-320	-450	-580
34	-40	-70	-190	-300	-430	-560
32	-40	-60	-170	-290	-410	-540
30	-40	-50	-150	-270	-400	-520
20	-30	-50	-140	-240	-360	-470
10	-30	-40	-130	-240	-360	-470
0	-20	-40	-130	-240	-360	-470
-20	-20	-30	-130	-250	-370	-490
-40	-10	-30	-130	-250	-380	-500

Rate of climb capability shown is valid for 60000 kg, gear down at VREF30+5.  
 Decrease rate of climb 130 ft/min per 5000 kg greater than 60000 kg.  
 Increase rate of climb 160 ft/min per 5000 kg less than 60000 kg.

## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down

## Section 63

## GEAR DOWN

### Long Range Cruise Altitude Capability

#### Max Cruise Thrust, 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	15600	12500	9400
80	18400	15500	12600
75	21100	18500	15700
70	23600	21400	18600
65	26100	24400	21800
60	28600	27100	25300
55	30800	29600	28100
50	32900	31900	30700
45	35100	34100	33000
40	37500	36500	35400

## GEAR DOWN

### Long Range Cruise Control

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)								
		10	21	23	25	27	29	31	33	35
85	%N1	85.9								
	MACH	.482								
	KIAS	267								
	FF/ENG	2421								
80	%N1	84.2								
	MACH	.468								
	KIAS	259								
	FF/ENG	2271								
75	%N1	82.5	91.7							
	MACH	.454	.554							
	KIAS	251	248							
	FF/ENG	2123	2101							
70	%N1	80.6	89.8	91.7						
	MACH	.440	.541	.557						
	KIAS	243	242	240						
	FF/ENG	1977	1960	1950						
65	%N1	78.6	87.9	89.5	91.6	94.5				
	MACH	.425	.524	.543	.560	.578				
	KIAS	235	234	233	231	229				
	FF/ENG	1835	1812	1806	1805	1836				
60	%N1	76.5	85.6	87.4	89.1	91.3	94.5			
	MACH	.409	.504	.525	.544	.562	.580			
	KIAS	226	225	225	224	222	220			
	FF/ENG	1696	1661	1661	1658	1664	1696			
55	%N1	74.4	83.3	85.0	86.8	88.5	90.9	94.1		
	MACH	.393	.484	.504	.525	.545	.562	.581		
	KIAS	217	216	216	216	215	213	211		
	FF/ENG	1559	1515	1512	1515	1517	1523	1555		
50	%N1	71.9	80.7	82.5	84.2	86.0	87.8	90.2	93.5	
	MACH	.376	.463	.482	.502	.523	.544	.561	.580	
	KIAS	207	206	206	206	206	205	203	201	
	FF/ENG	1424	1371	1367	1368	1374	1377	1381	1411	
45	%N1	69.1	78.0	79.7	81.4	83.1	85.0	86.8	89.1	92.5
	MACH	.358	.441	.458	.477	.498	.520	.541	.559	.578
	KIAS	197	196	196	196	196	196	195	193	191
	FF/ENG	1294	1231	1224	1224	1230	1235	1237	1239	1265
40	%N1	66.2	74.9	76.6	78.3	80.0	81.8	83.6	85.5	87.7
	MACH	.340	.417	.434	.452	.471	.491	.513	.535	.554
	KIAS	187	185	185	185	185	185	185	185	183
	FF/ENG	1170	1098	1085	1083	1089	1092	1094	1096	1097



## GEAR DOWN

### Long Range Cruise Enroute Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
324	290	260	236	217	200	188	178	168	160	153
654	583	523	474	435	400	377	357	338	321	307
989	880	787	713	653	600	566	535	507	483	461
1329	1181	1054	953	871	800	754	713	676	643	614
1674	1484	1322	1194	1090	1000	943	891	844	803	766
2024	1791	1593	1436	1310	1200	1131	1069	1013	962	918
2381	2103	1865	1680	1530	1400	1320	1247	1181	1122	1070
2743	2417	2140	1924	1751	1600	1508	1424	1348	1280	1221
3113	2737	2418	2171	1972	1800	1695	1600	1514	1438	1371

### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)									
	10		14		20		24		28	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
200	2.4	0:49	2.2	0:47	1.9	0:44	1.7	0:42	1.6	0:41
400	4.9	1:36	4.5	1:31	4.0	1:25	3.7	1:20	3.5	1:17
600	7.4	2:25	6.8	2:17	6.1	2:06	5.7	1:59	5.4	1:54
800	9.8	3:14	9.1	3:03	8.1	2:48	7.6	2:38	7.2	2:31
1000	12.1	4:04	11.3	3:50	10.1	3:30	9.5	3:18	9.0	3:08
1200	14.4	4:56	13.5	4:39	12.1	4:14	11.3	3:58	10.7	3:46
1400	16.7	5:49	15.6	5:28	14.0	4:58	13.1	4:40	12.4	4:24
1600	18.9	6:43	17.7	6:18	15.9	5:44	14.9	5:22	14.1	5:03
1800	21.1	7:38	19.7	7:10	17.7	6:30	16.6	6:05	15.7	5:43

### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
2	-0.3	-0.2	0.0	0.3	0.7
4	-0.7	-0.3	0.0	0.6	1.3
6	-1.0	-0.5	0.0	0.9	2.0
8	-1.3	-0.7	0.0	1.2	2.6
10	-1.7	-0.8	0.0	1.4	3.2
12	-2.0	-1.0	0.0	1.6	3.7
14	-2.4	-1.2	0.0	1.8	4.2
16	-2.7	-1.3	0.0	2.0	4.6
18	-3.0	-1.5	0.0	2.2	5.0
20	-3.4	-1.7	0.0	2.4	5.3
22	-3.7	-1.8	0.0	2.5	5.6

## GEAR DOWN

### Descent

VREF40 + 70 KIAS

PRESSURE ALTITUDE (FT)	TIME (MIN)	FUEL (KG)	DISTANCE (NM)
41000	21	280	91
39000	20	270	86
37000	19	270	81
35000	19	260	77
33000	18	260	72
31000	17	250	68
29000	17	250	64
27000	16	240	60
25000	15	230	56
23000	14	230	52
21000	13	220	48
19000	13	210	44
17000	12	200	40
15000	11	190	36
10000	8	170	26
5000	6	140	16
1500	4	110	9

Allowances for a straight-in approach are included.

## GEAR DOWN

### Holding

#### Flaps Up

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)							
		1500	5000	10000	15000	20000	25000	30000	35000
85	%N1	75.7	78.4	82.7	86.9	91.9			
	KIAS	229	229	229	229	229			
	FF/ENG	2240	2220	2220	2230	2250			
80	%N1	74.1	76.9	81.0	85.3	89.9			
	KIAS	224	224	224	224	224			
	FF/ENG	2110	2100	2090	2090	2100			
75	%N1	72.3	75.3	79.2	83.6	88.1			
	KIAS	218	218	218	218	218			
	FF/ENG	1990	1970	1960	1960	1960			
70	%N1	70.6	73.5	77.5	81.8	86.2	91.7		
	KIAS	213	213	213	213	213	213		
	FF/ENG	1870	1850	1840	1830	1830	1860		
65	%N1	68.8	71.7	75.8	80.0	84.4	89.1		
	KIAS	209	209	209	209	209	209		
	FF/ENG	1760	1740	1720	1710	1700	1720		
60	%N1	66.9	69.7	73.9	77.9	82.3	86.9	94.1	
	KIAS	203	203	203	203	203	203	203	
	FF/ENG	1650	1620	1600	1590	1580	1580	1660	
55	%N1	65.0	67.6	71.8	75.8	80.2	84.7	90.2	
	KIAS	197	197	197	197	197	197	197	
	FF/ENG	1530	1510	1490	1470	1450	1450	1490	
50	%N1	62.7	65.5	69.4	73.6	77.8	82.3	87.0	
	KIAS	191	191	191	191	191	191	191	
	FF/ENG	1420	1400	1370	1350	1330	1320	1350	
45	%N1	60.2	63.1	67.0	71.2	75.3	79.8	84.4	91.3
	KIAS	184	184	184	184	184	184	184	184
	FF/ENG	1310	1290	1260	1240	1210	1200	1220	1260
40	%N1	57.7	60.4	64.5	68.5	72.8	77.1	81.5	86.6
	KIAS	177	177	177	177	177	177	177	177
	FF/ENG	1200	1170	1150	1130	1100	1080	1090	1110

This table includes 5% additional fuel for holding in a racetrack pattern.

Intentionally  
Blank



## Performance Inflight - QRH

## Chapter PI-QRH

## Gear Down, Engine Inop

## Section 64

## GEAR DOWN

## ENGINE INOP

## MAX CONTINUOUS THRUST

## Driftdown Speed/Level Off Altitude

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)		OPTIMUM DRIFTDOWN SPEED (KIAS)	LEVEL OFF ALTITUDE (FT)		
START DRIFTDOWN	LEVEL OFF		ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
85	80	227	1700		
80	76	223	4000	2300	200
75	71	218	6300	4900	2800
70	66	213	8600	7300	5300
65	62	208	10900	9800	8000
60	57	202	13200	12300	10900
55	52	196	15600	14800	13900
50	47	190	18100	17300	16500
45	43	183	20600	19800	18900
40	38	176	23100	22300	21400

Includes APU fuel burn.

## Long Range Cruise Altitude Capability

## 100 ft/min residual rate of climb

WEIGHT (1000 KG)	PRESSURE ALTITUDE (FT)		
	ISA + 10°C & BELOW	ISA + 15°C	ISA + 20°C
75	1500		
70	4500	2500	
65	7500	5900	3400
60	10600	9200	6900
55	13300	12300	10600
50	16200	15400	14500
45	19300	18300	17500
40	22200	21400	20500

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Long Range Cruise Control**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (1000 FT)									
		5	7	9	11	13	15	17	19	21	23
70	%N1	94.8									
	MACH	.389									
	KIAS	235									
	FF/ENG	3774									
65	%N1	92.6	94.3	96.9							
	MACH	.376	.389	.402							
	KIAS	228	227	226							
	FF/ENG	3477	3485	3527							
60	%N1	90.2	91.9	93.7	96.3						
	MACH	.364	.375	.388	.402						
	KIAS	220	219	218	218						
	FF/ENG	3192	3191	3198	3240						
55	%N1	87.8	89.3	91.0	92.8	95.4					
	MACH	.351	.362	.374	.387	.400					
	KIAS	212	211	210	209	209					
	FF/ENG	2924	2909	2906	2913	2951					
50	%N1	85.3	86.7	88.2	89.9	91.7	94.2	98.2			
	MACH	.338	.348	.359	.371	.384	.398	.412			
	KIAS	204	203	202	201	200	199	198			
	FF/ENG	2672	2647	2630	2626	2633	2657	2737			
45	%N1	82.7	84.0	85.4	86.9	88.6	90.4	92.7	96.6		
	MACH	.325	.334	.344	.355	.367	.380	.393	.408		
	KIAS	196	195	193	192	191	190	189	189		
	FF/ENG	2432	2400	2374	2356	2351	2352	2359	2417		
40	%N1	79.8	81.1	82.5	83.9	85.4	87.0	88.8	90.8	94.1	98.4
	MACH	.311	.320	.329	.339	.349	.361	.374	.387	.402	.418
	KIAS	188	186	184	183	182	181	180	179	179	178
	FF/ENG	2206	2166	2133	2107	2088	2076	2069	2065	2101	2201

## GEAR DOWN

## ENGINE INOP

### MAX CONTINUOUS THRUST

#### Long Range Cruise Diversion Fuel and Time Ground to Air Miles Conversion

AIR DISTANCE (NM)					GROUND DISTANCE (NM)	AIR DISTANCE (NM)				
HEADWIND COMPONENT (KTS)						TAILWIND COMPONENT (KTS)				
100	80	60	40	20	20	40	60	80	100	
172	151	134	120	109	100	93	88	83	78	75
352	308	270	242	219	200	187	175	165	156	148
533	465	408	364	330	300	280	262	246	232	220
716	623	545	486	440	400	373	349	328	309	293
900	783	684	609	551	500	466	436	409	385	365
1086	943	823	733	661	600	559	523	490	462	438
1273	1105	964	856	772	700	652	610	572	538	510
1462	1267	1103	980	883	800	745	696	652	614	581
1653	1431	1245	1104	994	900	838	782	733	690	653
1845	1595	1386	1228	1105	1000	931	868	813	765	724

#### Reference Fuel and Time Required at Check Point

AIR DIST (NM)	PRESSURE ALTITUDE (1000 FT)					
	6		10		14	
	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)	FUEL (1000 KG)	TIME (HR:MIN)
100	1.3	0:27	1.1	0:26	1.0	0:26
200	2.6	0:53	2.4	0:50	2.3	0:48
300	3.9	1:18	3.7	1:15	3.6	1:11
400	5.2	1:44	4.9	1:39	4.8	1:35
500	6.5	2:10	6.1	2:04	6.0	1:58
600	7.8	2:37	7.3	2:29	7.1	2:22
700	9.1	3:03	8.5	2:55	8.3	2:46
800	10.3	3:30	9.7	3:20	9.4	3:10
900	11.6	3:58	10.9	3:46	10.5	3:35
1000	12.8	4:25	12.0	4:12	11.6	3:59

#### Fuel Required Adjustments (1000 KG)

REFERENCE FUEL REQUIRED (1000 KG)	WEIGHT AT CHECK POINT (1000 KG)				
	40	50	60	70	80
1	-0.2	-0.1	0.0	0.1	0.3
2	-0.3	-0.2	0.0	0.3	0.6
3	-0.5	-0.3	0.0	0.5	1.0
4	-0.6	-0.3	0.0	0.7	1.3
5	-0.8	-0.4	0.0	0.9	1.7
6	-1.0	-0.5	0.0	1.0	2.0
7	-1.1	-0.6	0.0	1.2	2.4
8	-1.3	-0.7	0.0	1.4	2.7
9	-1.5	-0.7	0.0	1.6	3.1
10	-1.6	-0.8	0.0	1.8	3.5
11	-1.8	-0.9	0.0	1.9	3.8
12	-1.9	-1.0	0.0	2.1	4.2
13	-2.1	-1.1	0.0	2.3	4.5
14	-2.3	-1.1	0.0	2.5	4.9

Includes APU fuel burn.

**GEAR DOWN**

**ENGINE INOP**

**MAX CONTINUOUS THRUST**

**Holding  
Flaps Up**

WEIGHT (1000 KG)		PRESSURE ALTITUDE (FT)			
		1500	5000	10000	15000
80	%N1	93.2			
	KIAS	224			
	FF/ENG	4120			
75	%N1	91.2	94.5		
	KIAS	218	218		
	FF/ENG	3840	3890		
70	%N1	89.2	92.4		
	KIAS	213	213		
	FF/ENG	3580	3610		
65	%N1	87.3	90.3	95.7	
	KIAS	209	209	209	
	FF/ENG	3340	3360	3430	
60	%N1	85.1	88.1	92.7	
	KIAS	203	203	203	
	FF/ENG	3090	3090	3130	
55	%N1	82.8	85.7	90.2	97.0
	KIAS	197	197	197	197
	FF/ENG	2850	2840	2860	2990
50	%N1	80.2	83.2	87.6	92.6
	KIAS	191	191	191	191
	FF/ENG	2610	2600	2610	2650
45	%N1	77.7	80.5	84.9	89.5
	KIAS	184	184	184	184
	FF/ENG	2390	2370	2360	2380
40	%N1	75.0	77.7	82.0	86.4
	KIAS	177	177	177	177
	FF/ENG	2170	2140	2120	2130

This table includes 5% additional fuel for holding in a racetrack pattern.



**Performance Inflight - QRH****Chapter PI-QRH****Text****Section 65**

---

**Introduction**

This chapter contains information to supplement performance data from the Flight Management Computer (FMC). In addition, sufficient inflight data is provided to complete a flight with the FMC inoperative. In the event of conflict between data presented in this chapter and that contained in the approved Airplane Flight Manual, the Flight Manual shall always take precedence.

---

**General****Flight with Unreliable Airspeed / Turbulent Air Penetration**

Pitch attitude and average %N1 information is provided for use in all phases of flight in the event of unreliable airspeed/Mach indications resulting from blocking or freezing of the pitot system. Loss of radome or turbulent air may also cause unreliable airspeed/Mach indications. The cruise table in this section may also be used for turbulent air penetration.

Pitch attitude is shown in bold type for emphasis since altitude and/or vertical speed indications may also be unreliable.

**Max Climb %N1**

This table shows Max Climb %N1 for a 280/.78 climb speed schedule, normal engine bleed for packs on or off and anti-ice off. Enter the table with airport pressure altitude and TAT and read %N1. %N1 adjustments are shown for anti-ice operation.

**Go-around %N1**

To find Max Go-around %N1 based on normal engine bleed for packs on (AUTO) and anti-ice on or off, enter the Go-around %N1 table with airport pressure altitude and reported OAT or TAT and read %N1. For packs OFF or HIGH operation, apply the %N1 adjustment shown below the table.

**VREF**

This table contains flaps 40, 30 and 15 reference speeds for a given weight.

---

With autothrottles disengaged an approach speed wind correction (max 20 knots) of 1/2 steady headwind component + gust increment above steady wind is recommended. Do not apply a wind correction for tailwinds. The maximum command speed should not exceed landing flap placard speed minus 5 knots.

---

## Advisory Information

### Normal Configuration Landing Distance

The normal configuration distance tables are provided as advisory information to help determine the actual landing distance performance of the airplane for different runway surface conditions and brake configurations.

Flaps 15, 30, and 40 landing distances and adjustments are provided for dry runways as well as runways with good, medium, and poor reported braking action, which are commonly referred to as slippery runway conditions.

If the surface is affected by water, snow or ice, and the braking action is reported as "good", conditions should not be expected to be as good as on clean, dry runways. The value "good" is comparative and is intended to mean that airplanes should not experience braking or directional control difficulties when landing. The performance level used to calculate the "good" data is consistent with wet runway testing done on early Boeing jets. The performance level used to calculate "poor" data reflects runways covered with wet ice.

Dry runway landing performance is shown for max manual braking configuration and autobrake settings max, 3, 2, and 1. The autobrake performance may be used to assist in the selection of the most desirable autobrake setting for a given field length. Selection of an autobrake setting results in a constant rate of deceleration. Maximum effort manual braking should achieve shorter landing distance than the max autobrake setting. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and normal approach speed for the selected landing flap at sea level, zero wind, zero slope, and two engine detent reverse thrust. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, temperature, speed, and reverse thrust. Each adjustment is independently added to the reference landing distance.

---

## Non-normal Configuration Landing Distance

Advisory information is provided to support non-normal configurations that affect the landing performance of the airplane. Landing distances and adjustments are provided for dry runways and runways with good, medium, and poor reported braking action.

Enter the table with the applicable non-normal configuration and read the normal approach speed. The reference landing distance is a reference distance from 50 ft above the threshold to stop based on a reference landing weight and speed at sea level, zero wind, and zero slope. Subsequent columns provide adjustments for off-reference landing weight, altitude, wind, slope, and speed conditions. Each adjustment is independently added to the reference landing distance. Landing distance includes the effect of reverse thrust.

## Recommended Brake Cooling Schedule

Advisory information is provided to assist in avoiding the problems associated with hot brakes. For normal operation, most landings are at weights below the AFM quick turnaround limit weight.

Use of the recommended cooling schedule will help avoid brake overheat and fuse plug problems that could result from repeated landings at short time intervals or a rejected takeoff.

Enter the Recommended Brake Cooling Schedule table with the airplane weight and brakes on speed, adjusted for wind at the appropriate temperature and altitude condition. Instructions for applying wind adjustments are included below the table. Linear interpolation may be used to obtain intermediate values. The resulting number is the reference brake energy per brake in millions of foot-pounds, and represents the amount of energy absorbed by each brake during a rejected takeoff. Notes providing adjustments for wind are included below the table.

To determine the energy per brake absorbed during landing, enter the appropriate Adjusted Brake Energy Per Brake table (No Reverse Thrust or 2 Engine Reverse) with the reference brake energy per brake and the type of braking used during landing (Max Manual, Max Auto, or Autobrake). The resulting number is the adjusted brake energy per brake and represents the energy absorbed in each brake during the landing.

The recommended cooling time is found in the appropriate (steel or carbon brakes) final table by entering with the adjusted brake energy per brake. Times are provided for ground cooling and inflight gear down cooling.

Brake Temperature Monitor System (BTMS) indications are also shown. If brake cooling is determined from the BTMS, use the hottest brake indication 10 to 15 minutes after the airplane has come to a complete stop, or inflight with gear retracted to determine recommended cooling schedule.

---

## Engine Inoperative

### Initial Max Continuous %N1

The Initial Max Continuous %N1 setting for use following an engine failure is shown. The table is based on the typical all engine cruise speed of .79M to provide a target %N1 setting at the start of driftdown. Once driftdown is established, the Max Continuous %N1 table should be used to determine %N1 for the given conditions.

### Max Continuous %N1

Power setting is based on one engine operating with one A/C pack operating and all anti-ice bleeds off. Enter the table with pressure altitude, TAT, and IAS or Mach to read %N1.

It is desirable to maintain engine thrust level within the limits of the Max Cruise thrust rating. However, where thrust level in excess of Max Cruise rating is required, such as for meeting terrain clearance, ATC altitude assignments, or to attain maximum range capability, it is permissible to use the thrust needed up to the Max Continuous thrust rating. The Max Continuous thrust rating is intended primarily for emergency use at the discretion of the pilot and is the maximum thrust that may be used continuously.

### Driftdown Speed/Level Off Altitude

The table shows optimum driftdown speed as a function of cruise weight at start of driftdown. Also shown are the approximate weight and pressure altitude at which the airplane will level off considering 100 ft/min residual rate of climb.

The level off altitude is dependent on air temperature (ISA deviation).

### Driftdown/LRC Range Capability

This table shows the range capability from the start of driftdown. Driftdown is continued to level off altitude. As weight decreases due to fuel burn, the airplane is accelerated to Long Range Cruise speed. Cruise is continued at level off altitude and Long Range Cruise speed.

To determine fuel required, enter the Ground to Air Miles Conversion table with the desired ground distance and adjust for anticipated winds to obtain air distance to destination. Then enter the Driftdown/Cruise Fuel and Time table with air distance and weight at start of driftdown to determine fuel and time required. If altitudes other than the level off altitude is used, fuel and time required may be obtained by using the Engine Inoperative Long Range Cruise Enroute Fuel and Time table.

## Long Range Cruise Altitude Capability

The table shows the maximum altitude that can be maintained at a given weight and air temperature (ISA deviation), based on Long Range Cruise speed, Max Continuous thrust, and 100 ft/min residual rate of climb.

## Long Range Cruise Control

The table provides target %N1, engine inoperative Long Range Cruise Mach number, IAS and fuel flow for the airplane weight and pressure altitude. The fuel flow values in this table reflect single engine fuel burn.

## APU Operation During Flight

For APU operation during flight, increase fuel flow according to the following table. These increments include the APU fuel flow and the effect of increased drag from the APU door.

PRESSURE ALTITUDE (1000 FT)	APU FUEL FLOW (KG/HR)
39	45
35	45
31	50
25	60
20	65
15	75
10	85
5	95

## Long Range Cruise Diversion Fuel and Time

Tables are provided for crews to determine the fuel and time required to proceed to an alternate airfield with one engine inoperative. The data is based on single engine Long Range Cruise speed and .78/280/250 descent. Enter with Air Distance as determined from the Ground to Air Miles Conversion table and read Fuel and Time required at the cruise pressure altitude. Adjust the fuel obtained for deviation from the reference weight at checkpoint as required by entering the off reference fuel adjustments table with the fuel required for the reference weight and the actual weight at checkpoint. Read fuel required and time for the actual weight.

## Holding

Target %N1, indicated airspeed and fuel flow per engine information is tabulated for holding with flaps up based on the FMC optimum holding speed schedule. This is the higher of the maximum endurance speed and the maneuvering speed. Small variations in airspeed will not appreciably affect the overall endurance time. Enter the table with weight and pressure altitude to read %N1, IAS and fuel flow per engine.

## Gear Down Landing Rate of Climb Available

Rate of climb data is provided as guidance information in the event an engine inoperative landing (manual or autoland) is planned. The tables show gear down rate of climb available for Flaps 15 and Flaps 30. Enter the table with TAT and pressure altitude to read rate of climb available. Apply adjustments shown to correct for weight.

---

## Gear Down

This section contains performance for airplane operation with the landing gear extended. The data is based on engine bleeds for normal air conditioning.

**Note:** The Flight Management Computer System (FMCS) does not contain special provisions for operation with landing gear extended. As a result, the FMCS may generate inappropriate enroute speed schedules, display non-conservative predictions of fuel burn, estimated time of arrival (ETA), maximum altitude, and compute overly shallow descent path. An accurate estimated time of arrival (ETA) is available if current speed or Mach is entered into the VNAV cruise page.

Tables for gear down performance in this section are identical in format and used in the same manner as tables for the gear up configuration previously described.



**Maneuvers**

**Chapter Man**

**Table of Contents**

**Section TOC**

**Introduction . . . . . MAN.05**

    General . . . . . MAN.05.1

    Non-Normal Maneuvers . . . . . MAN.05.1

    Flight Patterns . . . . . MAN.05.1

**Non-Normal Maneuvers. . . . . MAN.1**

    Approach to Stall or Stall Recovery . . . . . MAN.1.1

    Rejected Takeoff . . . . . MAN.1.2

    Ground Proximity Warning System (GPWS) Response . . . . . MAN.1.4

        GPWS Caution . . . . . MAN.1.4

        GPWS Warning . . . . . MAN.1.5

    Traffic Avoidance . . . . . MAN.1.6

    Upset Recovery . . . . . MAN.1.8

        Nose High Recovery . . . . . MAN.1.9

        Nose Low Recovery . . . . . MAN.1.9

    Windshear . . . . . MAN.1.9

        Windshear Caution . . . . . MAN.1.9

        Windshear Warning . . . . . MAN.1.10

        Windshear Escape Maneuver . . . . . MAN.1.11

**Flight Patterns. . . . . MAN.2**

    Takeoff . . . . . MAN.2.2

    GLS Approach - Fail Passive . . . . . MAN.2.3

    ILS Approach - Fail Passive . . . . . MAN.2.4

    Instrument Approach Using VNAV . . . . . MAN.2.5

    Instrument Approach Using V/S . . . . . MAN.2.6

    Instrument Approach - RNAV (RNP) AR . . . . . MAN.2.7

    Circling Approach . . . . . MAN.2.8

    Visual Traffic Pattern . . . . . MAN.2.9

    Go-Around and Missed Approach . . . . . MAN.2.10



**737 Flight Crew Operations Manual**

---

ILS Approach Using HUD . . . . .	MAN.2.11
Instrument Approach Using VNAV and HUD . . . . .	MAN.2.12
Circling Approach Using HUD . . . . .	MAN.2.13
Visual Traffic Pattern Using HUD . . . . .	MAN.2.14





---

## **General**

Non-Normal Maneuvers and Flight Patterns are included for training and review purposes.

---

## **Non-Normal Maneuvers**

Flight crews are expected to do non-normal maneuvers from memory.

---

## **Flight Patterns**

Flight patterns show procedures for some all-engine and engine-inoperative situations.

Flight patterns do not include all procedural items but show required/recommended:

- configuration changes
- thrust changes
- Mode Control Panel (MCP) changes
- pitch mode and roll mode changes
- checklist calls.



Intentionally  
Blank



## Approach to Stall or Stall Recovery

All recoveries from approach to stall should be done as if an actual stall has occurred.

Immediately do the following at the first indication of stall (buffet or stick shaker).

**Note:** Do not use flight director commands during the recovery.

Pilot Flying	Pilot Monitoring
<ul style="list-style-type: none"><li>Initiate the recovery:<ul style="list-style-type: none"><li>Hold the control column firmly.</li><li>Disconnect autopilot and autothrottle.</li><li>Smoothly apply nose down elevator to reduce the angle of attack until buffet or stick shaker stops. Nose down stabilizer trim may be needed.*</li></ul></li></ul>	<ul style="list-style-type: none"><li>Monitor altitude and airspeed.</li><li>Verify all required actions have been done and call out any omissions.</li><li>Call out any trend toward terrain contact.</li></ul>
<ul style="list-style-type: none"><li>Continue the recovery:<ul style="list-style-type: none"><li>Roll in the shortest direction to wings level if needed.**</li><li>Advance thrust levers as needed.</li><li>Retract the speedbrakes.</li><li>Do not change gear or flap configuration, except<ul style="list-style-type: none"><li>During liftoff, if flaps are up, call for flaps 1.</li></ul></li></ul></li></ul>	<ul style="list-style-type: none"><li>Monitor altitude and airspeed.</li><li>Verify all required actions have been done and call out any omissions.</li><li>Call out any trend toward terrain contact.</li><li>Set the FLAP lever as directed.</li></ul>
<ul style="list-style-type: none"><li>Complete the recovery:<ul style="list-style-type: none"><li>Check airspeed and adjust thrust as needed.</li><li>Establish pitch attitude.</li><li>Return to the desired flight path.</li></ul></li><li>Re-engage the autopilot and autothrottle if desired.</li></ul>	<ul style="list-style-type: none"><li>Monitor altitude and airspeed.</li><li>Verify all required actions have been done and call out any omissions.</li><li>Call out any trend toward terrain contact.</li></ul>

**WARNING: \*If the control column does not provide the needed response, stabilizer trim may be necessary. Excessive use of pitch trim may aggravate the condition, or may result in loss of control or in high structural loads.**

---

**WARNING: \*\* Excessive use of pitch trim or rudder may aggravate the condition, or may result in loss of control or in high structural loads.**

---

## Rejected Takeoff

The captain has the sole responsibility for the decision to reject the takeoff. The decision must be made in time to start the rejected takeoff maneuver by V1. If the decision is to reject the takeoff, the captain must clearly announce “REJECT,” immediately start the rejected takeoff maneuver and assume control of the airplane. If the first officer is making the takeoff, the first officer must maintain control of the airplane until the captain makes a positive input to the controls.

Prior to 80 knots, the takeoff should be rejected for any of the following:

- activation of the master caution system
- system failure(s)
- unusual noise or vibration
- tire failure
- abnormally slow acceleration
- takeoff configuration warning
- fire or fire warning
- engine failure
- predictive windshear warning
- if a side window opens
- if the airplane is unsafe or unable to fly.

Above 80 knots and prior to V1, the takeoff should be rejected for any of the following:

- fire or fire warning
- engine failure
- predictive windshear warning
- if the airplane is unsafe or unable to fly.

During the takeoff, the crewmember observing the non-normal situation will immediately call it out as clearly as possible.

**737 Flight Crew Operations Manual**

<b>Captain</b>	<b>First Officer</b>
<p>Without delay:</p> <p>Simultaneously close the thrust levers, disengage the autothrottles and apply maximum manual wheel brakes or verify operation of RTO autobrake.</p> <p>If RTO autobrake is selected, monitor system performance and apply manual wheel brakes if the AUTO BRAKE DISARM light illuminates or deceleration is not adequate.</p> <p>Raise SPEED BRAKE lever.</p> <p>Apply reverse thrust up to the maximum amount consistent with conditions.</p> <p>Continue maximum braking until certain the airplane will stop on the runway.</p>	<p>Verify actions as follows:</p> <p>Thrust levers closed.</p> <p>Autothrottles disengaged.</p> <p>Maximum brakes applied.</p> <p>Verify SPEED BRAKE lever UP and call "SPEEDBRAKES UP." If SPEED BRAKE lever is not UP, call "SPEEDBRAKES NOT UP."</p> <p>Reverse thrust applied. When both REV indications are green, call "REVERSERS NORMAL."</p> <p>If there is no REV indication(s) or the indication(s) stays amber, call "NO REVERSER ENGINE NUMBER 1", or "NO REVERSER ENGINE NUMBER 2", or "NO REVERSERS".</p> <p>Call out omitted action items.</p>

Captain	First Officer
<p>When stopping is assured: Start movement of the reverse thrust levers to reach the reverse idle detent before taxi speed. After the engines are at reverse idle, move the reverse thrust levers to full down.</p>	<p>Call out 60 knots. Communicate the reject decision to the control tower and cabin as soon as practical.</p>
<p>When the airplane is stopped, perform procedures as required. Review Brake Cooling Schedule for brake cooling time and precautions (refer to Performance Inflight Chapter.) Consider the following: The possibility of wheel fuse plugs melting The need to clear the runway The requirement for remote parking Wind direction in case of fire Alerting fire equipment Not setting the parking brake unless passenger evacuation is necessary Advising the ground crew of the hot brake hazard Advising passengers of the need to remain seated or evacuate Completion of Non-Normal checklist (if appropriate) for conditions which caused the RTO.</p>	

## Ground Proximity Warning System (GPWS) Response

### GPWS Caution

Accomplish the following maneuver for any of these aural alerts:

- SINK RATE
- TERRAIN
- DON'T SINK
- TOO LOW FLAPS
- TOO LOW GEAR
- TOO LOW TERRAIN
- GLIDESLOPE
- BANK ANGLE
- AIRSPEED LOW (airplanes with AIRSPEED LOW aural)
- CAUTION TERRAIN

- YF048 - YF928, YK626 - YK630, YK973 - YK980, YL541 - YL551, YN531 - YV754**
- CAUTION OBSTACLE

**737 Flight Crew Operations Manual**

Pilot Flying	Pilot Monitoring
Correct the flight path, airplane configuration, or airspeed.	

The below glideslope deviation alert may be cancelled or inhibited for:

- localizer or backcourse approach
- circling approach from an ILS
- when conditions require a deliberate approach below glideslope
- unreliable glideslope signal.

**Note:** If a terrain caution occurs when flying under daylight VMC, and positive visual verification is made that no obstacle or terrain hazard exists, the alert may be regarded as cautionary and the approach may be continued.

**Note:** Some aural alerts repeat.

### GPWS Warning

Accomplish the following maneuver for any of these conditions:

- Activation of “PULL UP” or “TERRAIN TERRAIN PULL UP” warning.

**YF048 - YF928, YK626 - YK630, YK973 - YK980, YL541 - YL551, YN531 - YV754** |

- Activation of the “PULL UP” or “OBSTACLE OBSTACLE PULL UP” warning.
- Other situations resulting in unacceptable flight toward terrain.

Pilot Flying	Pilot Monitoring
<p>Disconnect autopilot.</p> <p>Disconnect autothrottle.</p> <p>Aggressively apply maximum* thrust.</p> <p>Simultaneously roll wings level and rotate to an initial pitch attitude of 20°.</p> <p>Retract speedbrakes.</p> <p>If terrain remains a threat, continue rotation up to the pitch limit indicator (if available) or stick shaker or initial buffet.</p>	<p>Assure maximum* thrust.</p> <p>Verify all required actions have been completed and call out any omissions.</p>
<p>Do not change gear or flap configuration until terrain separation is assured.</p> <p>Monitor radio altimeter for sustained or increasing terrain separation.</p> <p>When clear of terrain, slowly decrease pitch attitude and accelerate.</p>	<p>Monitor vertical speed and altitude (radio altitude for terrain clearance and barometric altitude for a minimum safe altitude.)</p> <p>Call out any trend toward terrain contact.</p>

**Note:** Aft control column force increases as the airspeed decreases. In all cases, the pitch attitude that results in intermittent stick shaker or initial buffet is the upper pitch attitude limit. Flight at intermittent stick shaker may be required to obtain a positive terrain separation. Smooth, steady control will avoid a pitch attitude overshoot and stall.

**Note:** Do not use flight director commands.

**Note:** \*Maximum thrust can be obtained by advancing the thrust levers full forward if the EECs are in the normal mode. If terrain contact is imminent, advance thrust levers full forward.

**Note:** If positive visual verification is made that no obstacle or terrain hazard exists when flying under daylight VMC conditions prior to a terrain or obstacle warning, the alert may be regarded as cautionary and the approach may be continued.

## Traffic Avoidance

Immediately accomplish the following by recall whenever a TCAS traffic advisory (TA) or resolution advisory (RA) occurs.



**WARNING: Comply with the RA if there is a conflict between the RA and air traffic control.**

**WARNING: Once an RA has been issued, safe separation could be compromised if current vertical speed is changed, except as necessary to comply with the RA. This is because TCAS II-to-TCAS II coordination may be in progress with the intruder aircraft, and any change in vertical speed that does not comply with the RA may negate the effectiveness of the others aircraft's compliance with the RA.**

**Note:** If stick shaker or initial buffet occurs during the maneuver, immediately accomplish the APPROACH TO STALL RECOVERY procedure.

**Note:** If high speed buffet occurs during the maneuver, relax pitch force as necessary to reduce buffet, but continue the maneuver.

**Note:** Do not use flight director commands until clear of conflict.

**For TA:**

Pilot Flying	Pilot Monitoring
Look for traffic using traffic display as a guide. Call out any conflicting traffic.	
If traffic is sighted, maneuver if needed.	

**Note:** Maneuvers based solely on a TA may result in reduced separation and are not recommended.

**For RA, except a climb in landing configuration:**

**WARNING: A DESCEND (fly down) RA issued below 1000 feet AGL should not be followed.**

Pilot Flying	Pilot Monitoring
If maneuvering is required, disengage the autopilot and autothrottle. Smoothly adjust pitch and thrust to satisfy the RA command. Follow the planned lateral flight path unless visual contact with the conflicting traffic requires other action.	
Attempt to establish visual contact. Call out any conflicting traffic.	

---

## For a climb RA in landing configuration:

Pilot Flying	Pilot Monitoring
Disengage the autopilot and autothrottle. Advance thrust levers forward to ensure maximum thrust is attained and call for FLAPS 15. Smoothly adjust pitch to satisfy the RA command. Follow the planned lateral flight path unless visual contact with the conflicting traffic requires other action.	Verify maximum thrust set. Position flap lever to 15 detent.
Verify a positive rate of climb on the altimeter and call "GEAR UP."	Verify a positive rate of climb on the altimeter and call "POSITIVE RATE." Set the landing gear lever to UP.
Attempt to establish visual contact. Call out any conflicting traffic.	

---

## Upset Recovery

An upset can generally be defined as unintentionally exceeding the following conditions:

- Pitch attitude greater than 25 degrees nose up, or
- Pitch attitude greater than 10 degrees nose down, or
- Bank angle greater than 45 degrees, or
- Within above parameters but flying at airspeeds inappropriate for the conditions.

The following techniques represent a logical progression for recovering the airplane. The sequence of actions is for guidance only and represents a series of options to be considered and used depending on the situation. Not all actions may be necessary once recovery is under way. If needed, use pitch trim sparingly. Careful use of rudder to aid roll control should be considered only if roll control is ineffective and the airplane is not stalled.

These techniques assume that the airplane is not stalled. A stalled condition can exist at any attitude and may be recognized by continuous stick shaker activation accompanied by one or more of the following:

- Buffeting which could be heavy at times
- Lack of pitch authority and/or roll control
- Inability to arrest descent rate.

737 Flight Crew Operations Manual

If the airplane is stalled, recovery from the stall must be accomplished first by applying and maintaining nose down elevator until stall recovery is complete and stick shaker activation ceases.

### Nose High Recovery

Pilot Flying	Pilot Monitoring
<ul style="list-style-type: none"> <li>Recognize and confirm the situation</li> </ul>	
<ul style="list-style-type: none"> <li>Disconnect autopilot and autothrottle</li> <li>Apply as much as full nose-down elevator</li> <li>* Apply appropriate nose down stabilizer trim</li> <li>Reduce thrust</li> <li>* Roll (adjust bank angle) to obtain a nose down pitch rate</li> <li>Complete the recovery:               <ul style="list-style-type: none"> <li>- When approaching the horizon, roll to wings level</li> <li>- Check airspeed and adjust thrust</li> <li>- Establish pitch attitude.</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>Call out attitude, airspeed and altitude throughout the recovery</li> <li>Verify all required actions have been completed and call out any omissions.</li> </ul>

### Nose Low Recovery

Pilot Flying	Pilot Monitoring
<ul style="list-style-type: none"> <li>Recognize and confirm the situation</li> </ul>	
<ul style="list-style-type: none"> <li>Disconnect autopilot and autothrottle</li> <li>Recover from stall, if required</li> <li>* Roll in shortest direction to wings level (unload and roll if bank angle is more than 90 degrees)</li> <li>Recover to level flight:               <ul style="list-style-type: none"> <li>- Apply nose up elevator</li> <li>- *Apply nose up trim, if required</li> <li>- Adjust thrust and drag as required.</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>Call out attitude, airspeed and altitude throughout the recovery</li> <li>Verify all required actions have been completed and call out any omissions.</li> </ul>

**WARNING: \* Excessive use of pitch trim or rudder may aggravate an upset situation or may result in loss of control and/or high structural loads.**

## Windshear

### Windshear Caution

For predictive windshear caution alert: (“MONITOR RADAR DISPLAY” aural).

Pilot Flying	Pilot Monitoring
Maneuver as required to avoid the windshear.	

## Windshear Warning

Predictive windshear warning during takeoff roll: (“WINDSHEAR AHEAD, WINDSHEAR AHEAD” aural)

- prior to V1, reject takeoff
- after V1, perform the Windshear Escape Maneuver.

Windshear encountered during takeoff roll:

- If windshear is encountered prior to V1, there may not be sufficient runway remaining to stop if an RTO is initiated at V1. At VR, rotate at a normal rate toward a 15 degree pitch attitude. Once airborne, perform the Windshear Escape Maneuver.
- If windshear is encountered near the normal rotation speed and airspeed suddenly decreases, there may not be sufficient runway left to accelerate back to normal takeoff speed. If there is insufficient runway left to stop, initiate a normal rotation at least 2,000 feet before the end of the runway, even if airspeed is low. Higher than normal attitudes may be required to lift off in the remaining runway. Ensure maximum thrust is set.

Predictive windshear warning during approach: (“GO-AROUND, WINDSHEAR AHEAD” aural)

- perform the Windshear Escape Maneuver, or, at pilot’s discretion, perform a normal go-around.

Windshear encountered in flight:

- perform the Windshear Escape Maneuver.

**Note:** The following are indications the airplane is in windshear:

- windshear warning (two-tone siren followed by “WINDSHEAR, WINDSHEAR, WINDSHEAR”) or
- unacceptable flight path deviations.

**Note:** Unacceptable flight path deviations are recognized as uncontrolled changes from normal steady state flight conditions below 1000 feet AGL, in excess of any of the following:

- 15 knots indicated airspeed
- 500 fpm vertical speed
- 5° pitch attitude
- 1 dot displacement from the glideslope
- unusual thrust lever position for a significant period of time.

## Windshear Escape Maneuver

Pilot Flying	Pilot Monitoring
<b>MANUAL FLIGHT</b> <ul style="list-style-type: none"> <li>• Disconnect autopilot.</li> <li>• Push either TO/GA switch.</li> <li>• Aggressively apply maximum thrust*</li> <li>• Disconnect autothrottle.</li> <li>• Simultaneously roll wings level and rotate toward an initial pitch attitude of 15°.</li> <li>• Retract speedbrakes.</li> <li>• Follow flight director TO/GA guidance (if available) **</li> </ul>	<ul style="list-style-type: none"> <li>• Verify maximum* thrust.</li> <li>• Verify all required actions have been completed and call out any omissions.</li> </ul>
<b>AUTOMATIC FLIGHT</b> <ul style="list-style-type: none"> <li>• Push either TO/GA switch***</li> <li>• Verify TO/GA mode annunciation.</li> <li>• Verify GA thrust.</li> <li>• Retract speedbrakes.</li> <li>• Monitor system performance****</li> </ul>	<ul style="list-style-type: none"> <li>• Verify GA* thrust.</li> <li>• Verify all required actions have been completed and call out any omissions.</li> </ul>
<b>MANUAL OR AUTOMATIC FLIGHT</b> <ul style="list-style-type: none"> <li>• Do not change flap or gear configuration until windshear is no longer a factor.</li> <li>• Monitor vertical speed and altitude.</li> <li>• Do not attempt to regain lost airspeed until windshear is no longer a factor.</li> </ul>	<ul style="list-style-type: none"> <li>• Monitor vertical speed and altitude.</li> <li>• Call out any trend toward terrain contact, descending flight path, or significant airspeed changes.</li> </ul>

**Note:** Aft control column force increases as the airspeed decreases. In all cases, the pitch attitude that results in intermittent stick shaker or initial buffet is the upper pitch attitude limit. Flight at intermittent stick shaker may be required to obtain a positive terrain separation. Smooth, steady control will avoid a pitch attitude overshoot and stall.

**Note:** \*Maximum thrust can be obtained by advancing the thrust levers full forward if the EECs are in the normal mode. If terrain contact is imminent, advance thrust levers full forward.

**Note:** \*\*Do not exceed the Pitch Limit Indication.


**Note:** \*\*\* If TO/GA is not available, disconnect autopilot and autothrottle and fly manually.

**WARNING: \*\*\*\* Severe windshear may exceed the performance of the AFDS. The pilot flying must be prepared to disconnect the autopilot and autothrottle and fly manually.**



Intentionally  
Blank


# Takeoff

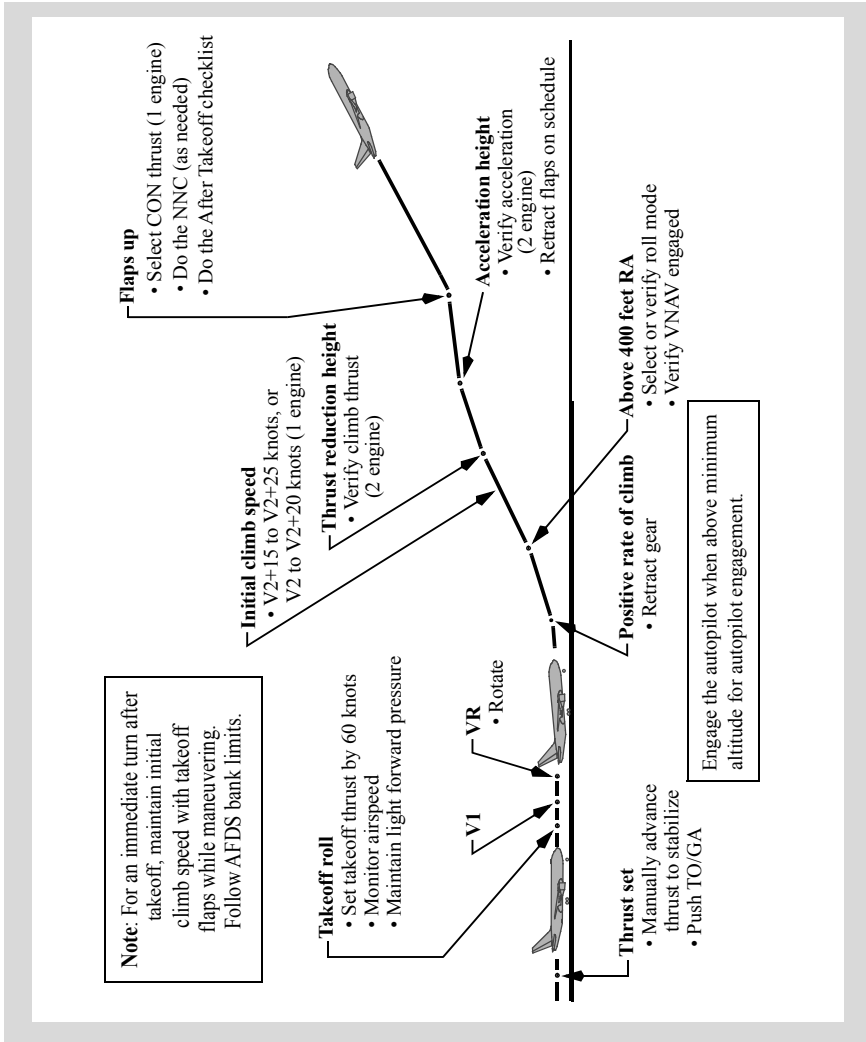




# GLS Approach - Fail Passive


YV751 - YV754

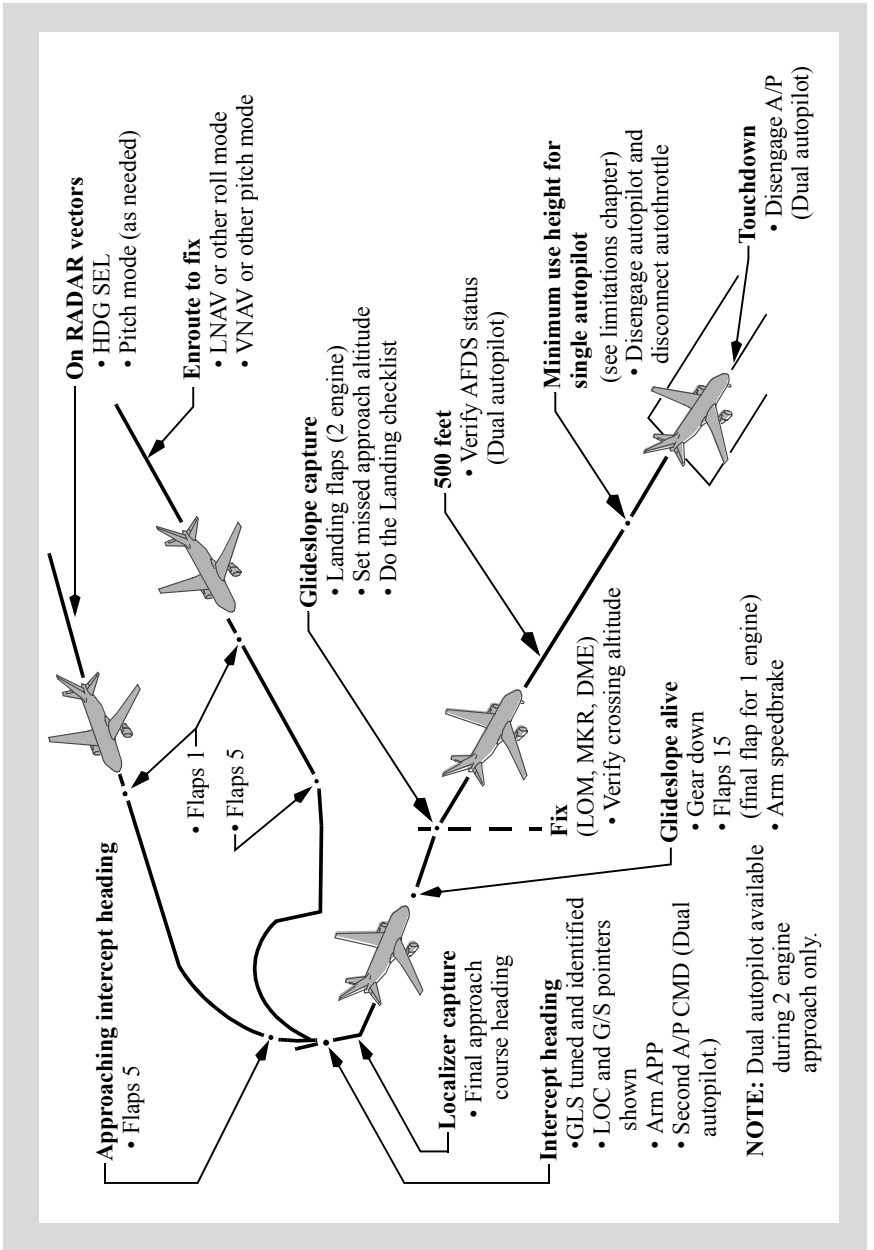


## ILS Approach - Fail Passive

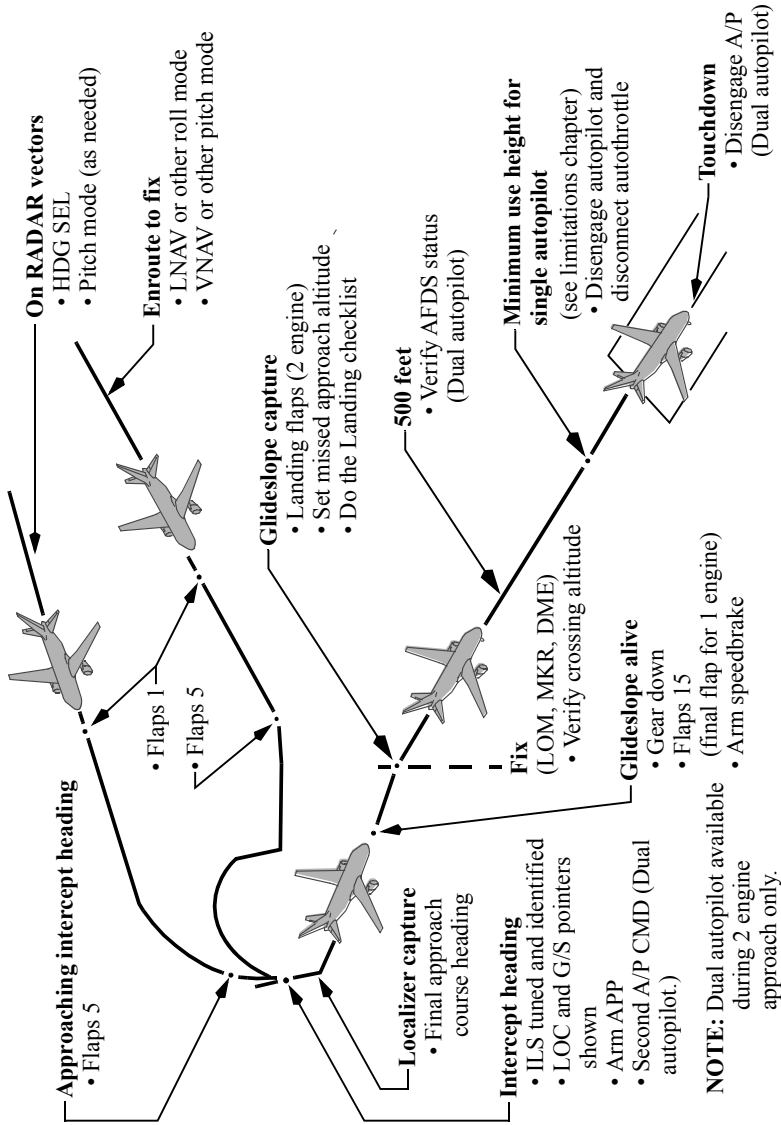


## Instrument Approach Using VNAV

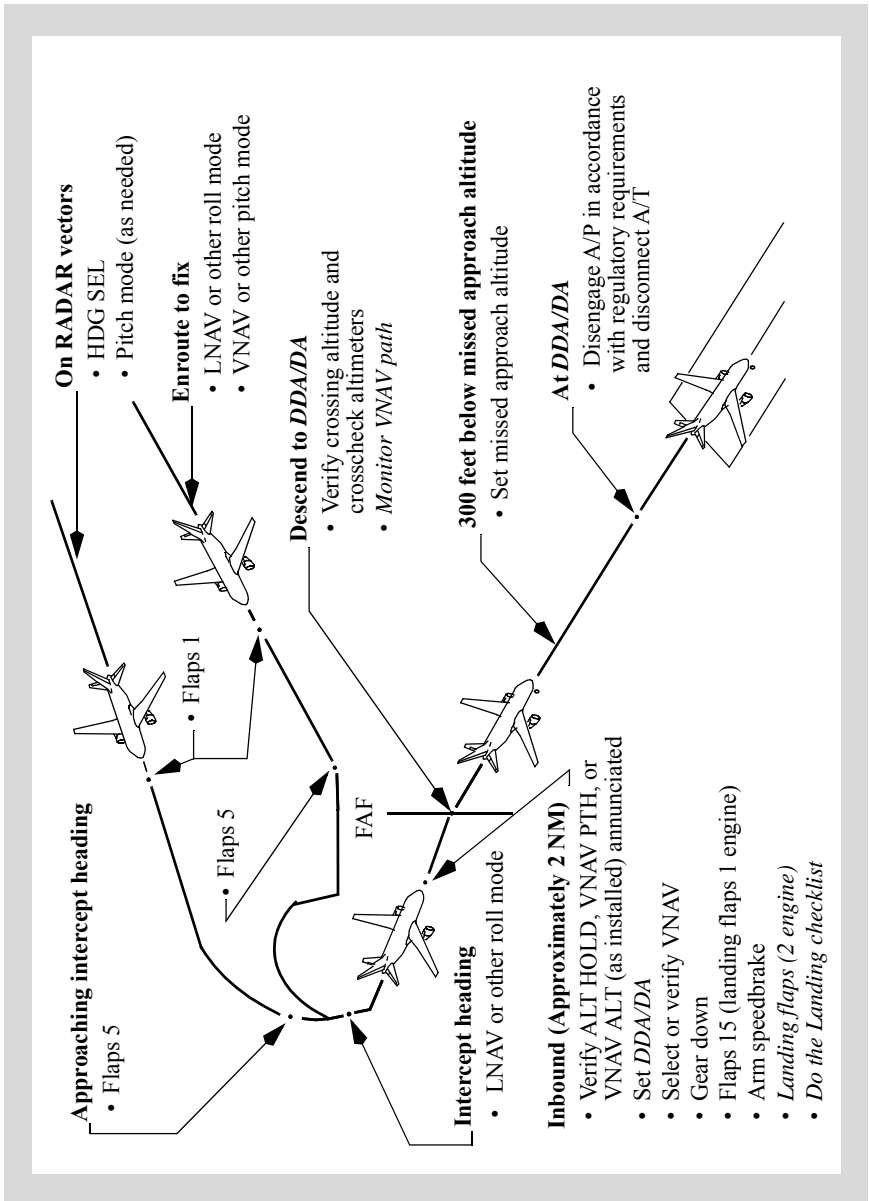

## Instrument Approach Using V/S

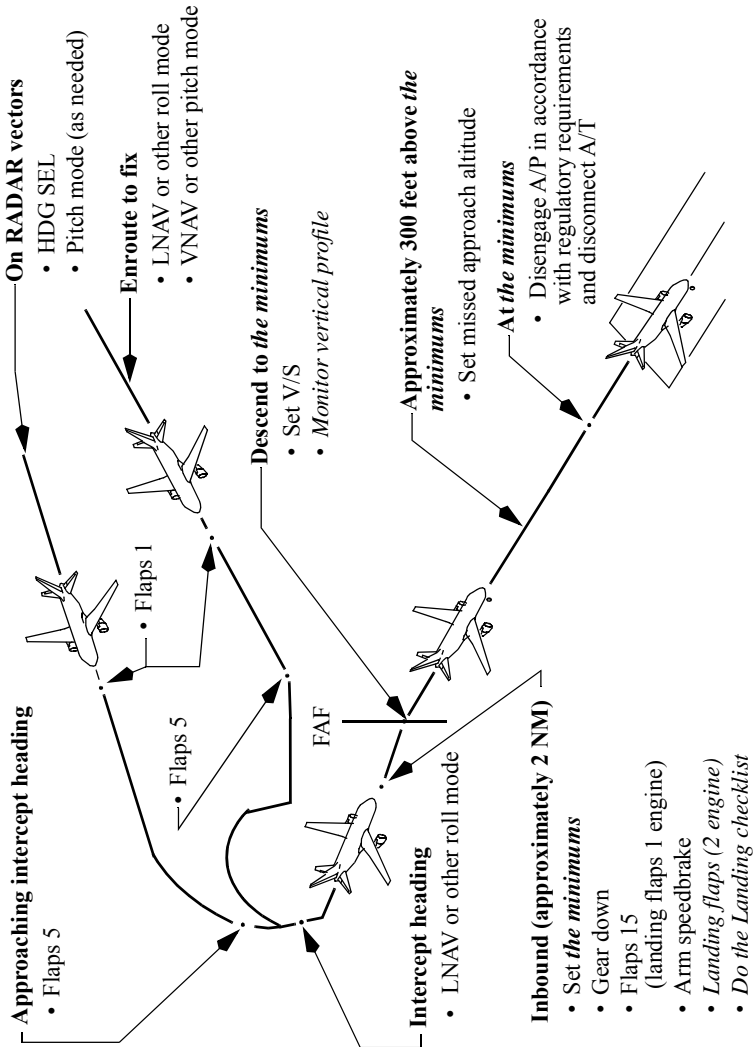

## Instrument Approach - RNAV (RNP) AR

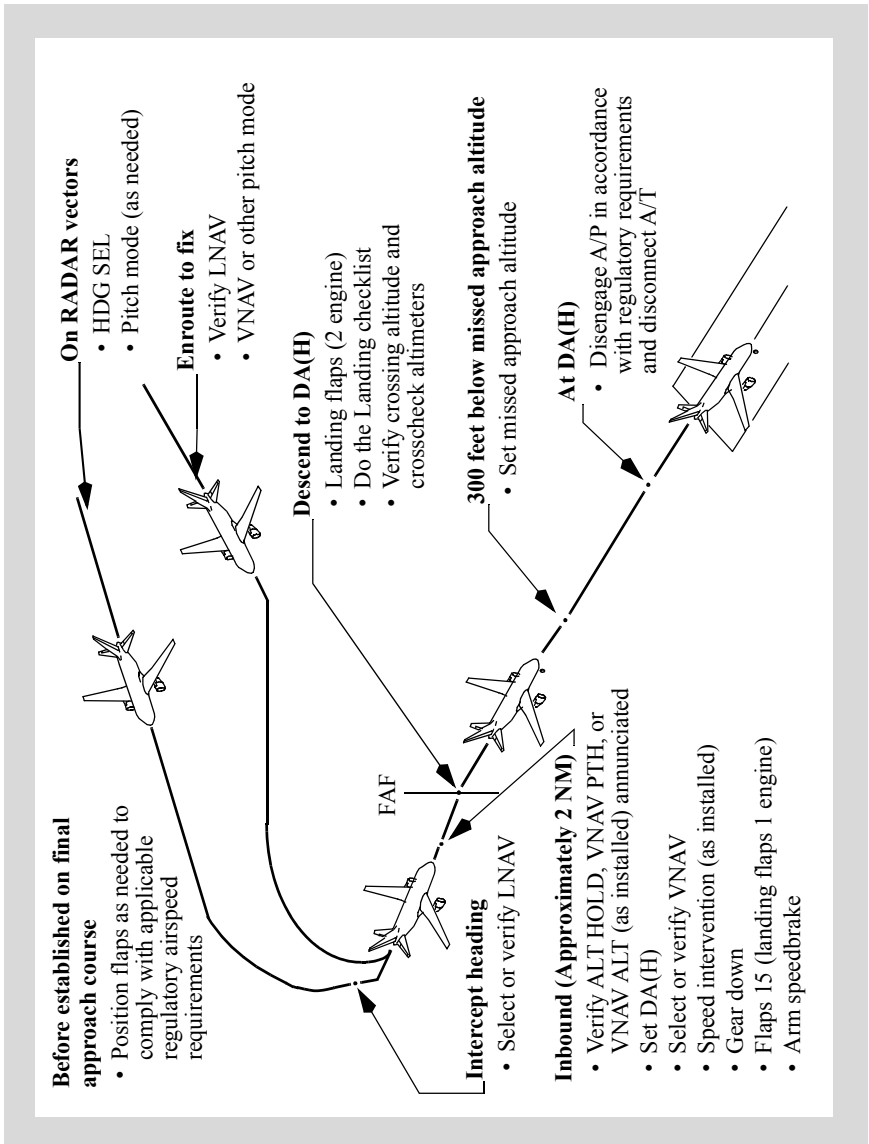

## Circling Approach

If a missed approach is needed at any time while circling, make an initial climbing turn toward the landing runway and intercept the missed approach course.

### Before starting the turn to base

- Gear down (1 engine)
- Landing flaps
- Do the Landing checklist
- Flaps 10 (1 engine)
- Speedbrake armed

### Configuration at MDA(H)


- Gear down
- Gear up (1 engine)
- Flaps 15
- Flaps 10 (1 engine)
- Speedbrake armed

### MCP altitude / MDA(H)


- Select ALT HOLD (as needed)
- Set missed approach altitude
- Select HDG SEL

### Intercepting landing profile


- Disengage autopilot and autothrottle

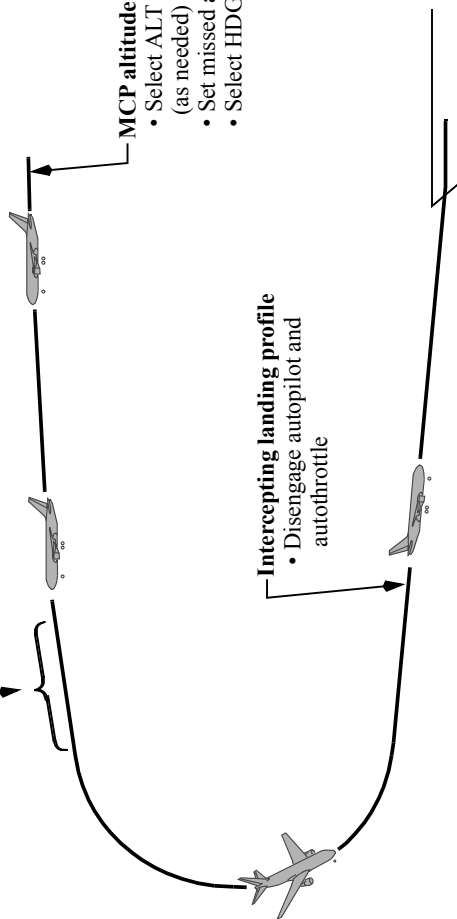

Visual Traffic Pattern

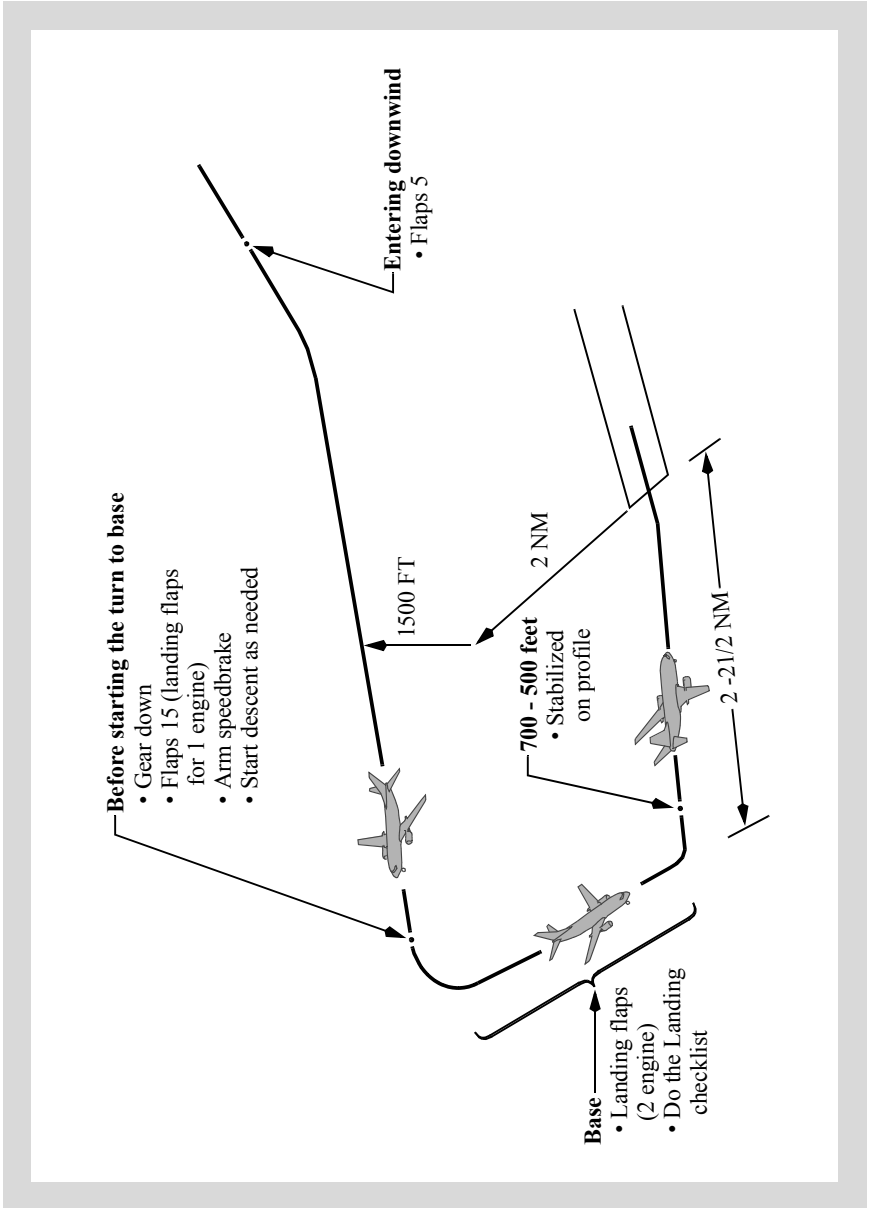


## Go-Around and Missed Approach

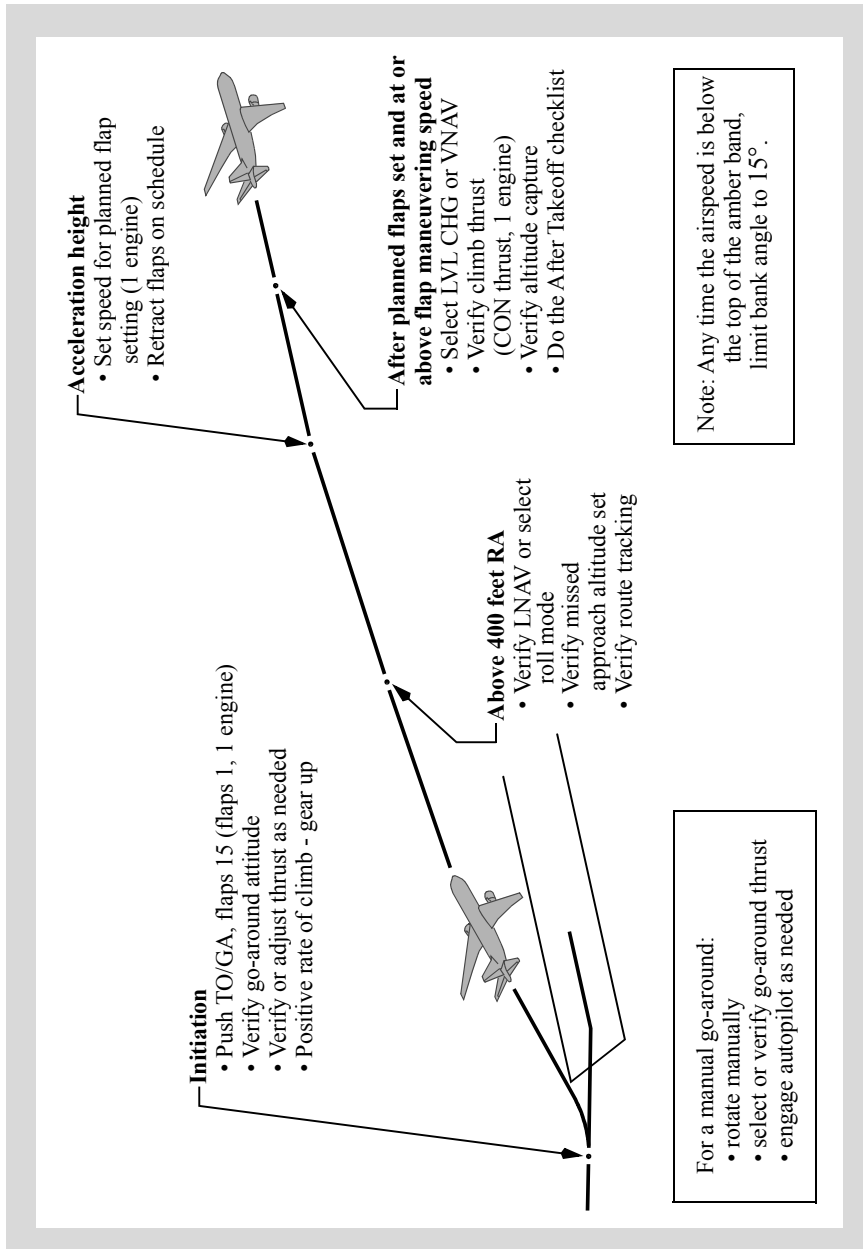




# ILS Approach Using HUD

YK622 - YK625, YS179 - YS190

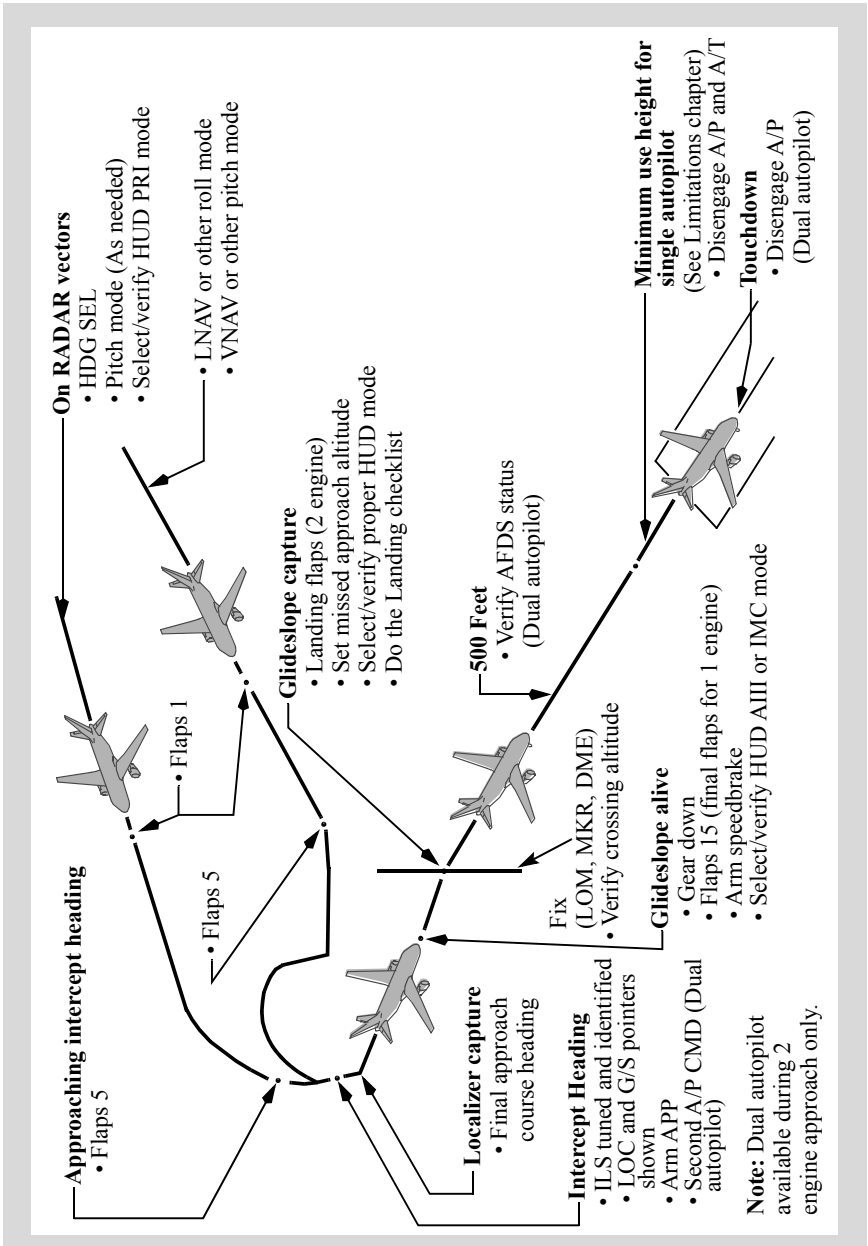


# Instrument Approach Using VNAV and HUD

YK622 - YK625, YS179 - YS190

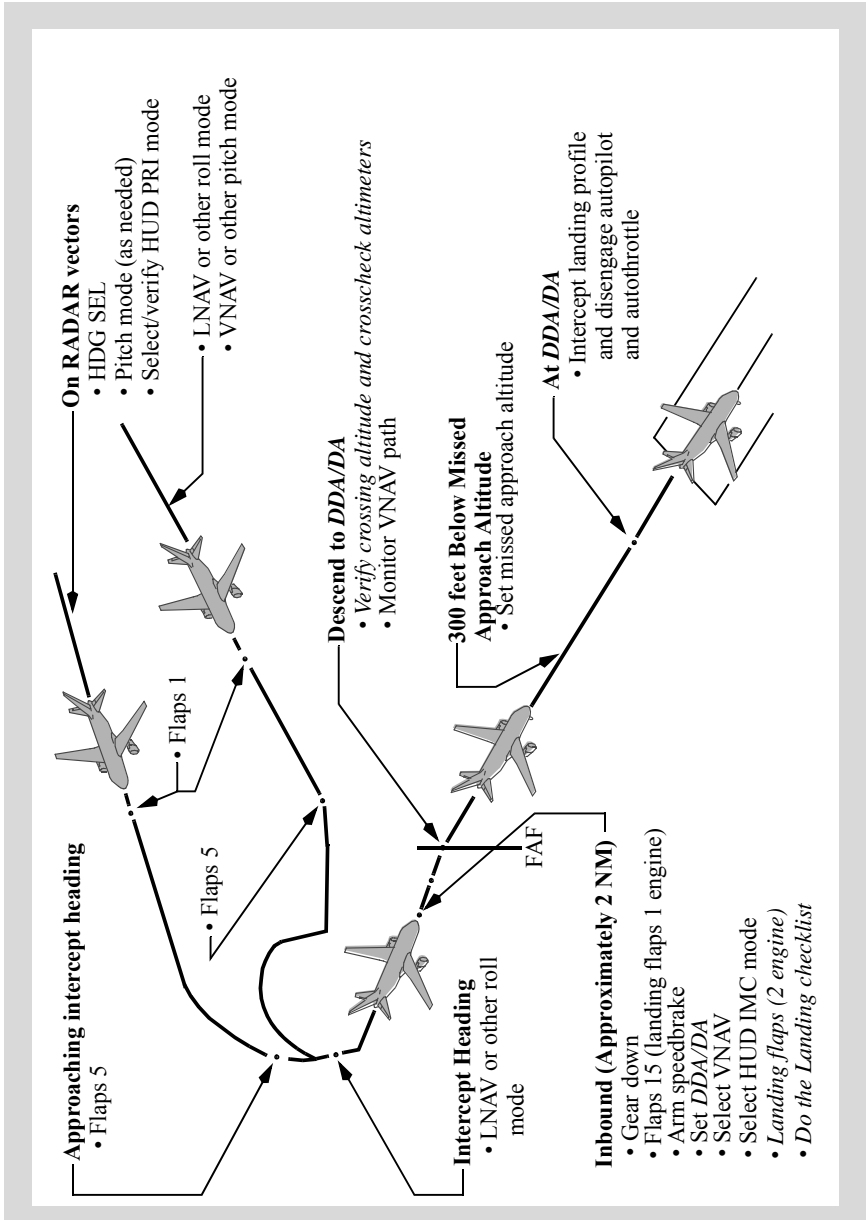


## Circling Approach Using HUD

YK622 - YK625, YS179 - YS190

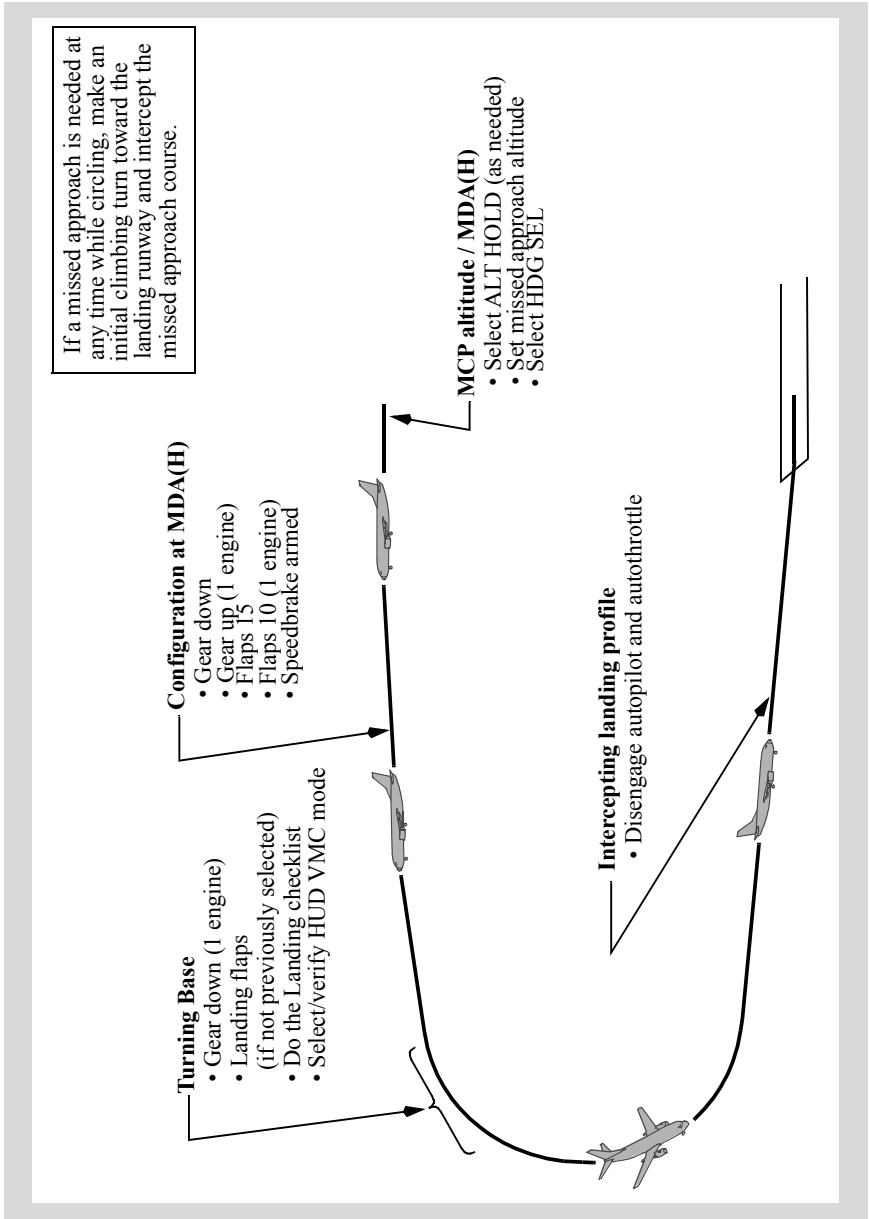

## Visual Traffic Pattern Using HUD

YK622 - YK625, YS179 - YS190

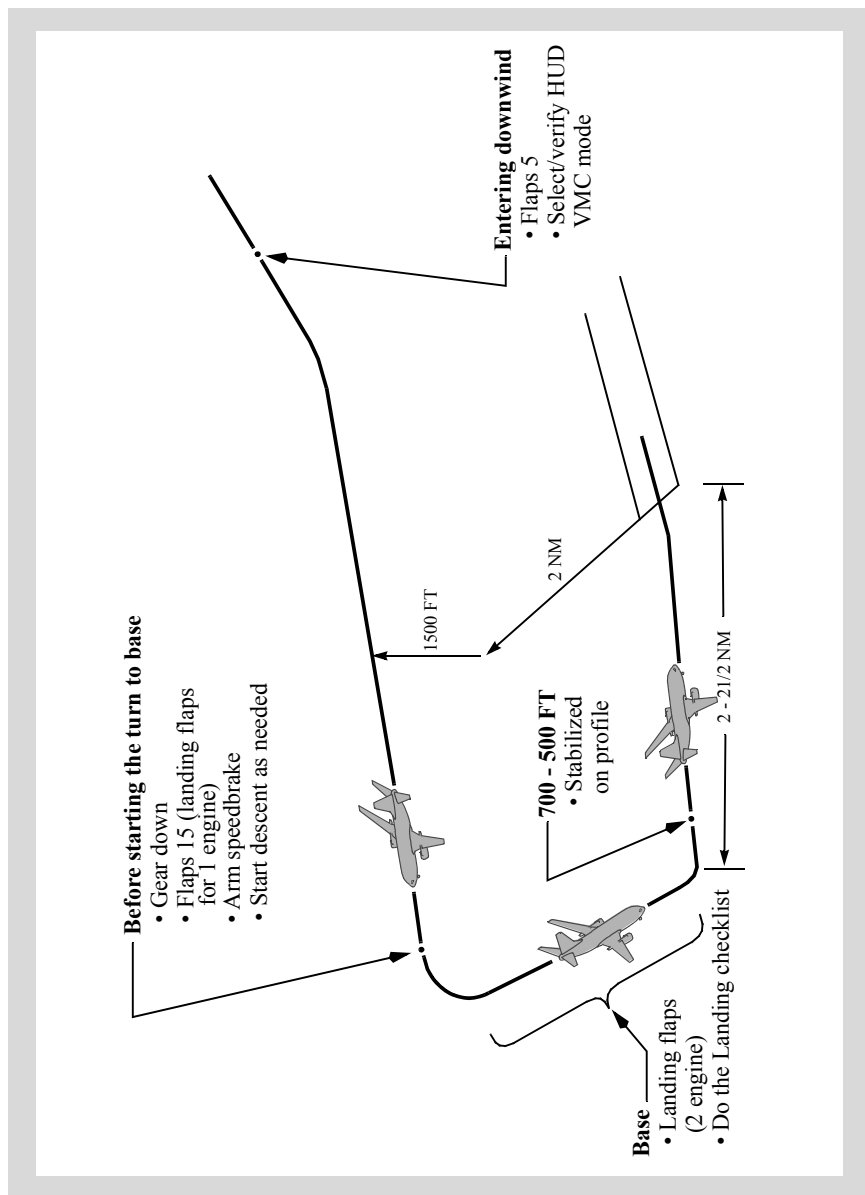



**Checklist Instructions**

**Chapter CI**

**Table of Contents**

**Section TOC**

**Model Identification . . . . .CI.ModID**

**Revision Record . . . . .CI.RR**

**QRH List of Effective Pages . . . . .CI.LEP**

**Normal Checklists. . . . .CI.1**

    Introduction . . . . . CI.1.1

    Normal Checklist Operation . . . . . CI.1.1

    Checklist Content. . . . . CI.1.2

    Checklist Construction. . . . . CI.1.2

**Non-Normal Checklists . . . . .CI.2**

    Introduction . . . . . CI.2.1

    Non-Normal Checklist Operation . . . . . CI.2.2

    Non-Normal Checklist Use . . . . . CI.2.4

    Non-Normal Checklist Legend . . . . . CI.2.7

        Redirection Symbol . . . . . CI.2.7

        Separator Symbol . . . . . CI.2.7

        Task Divider Symbol . . . . . CI.2.7

        Decision Symbol. . . . . CI.2.7

        Precaution Symbol . . . . . CI.2.7



Intentionally  
Blank

**General**

The aircraft listed in the table below are covered in the Quick Reference Handbook. The table information is used to distinguish data peculiar to one or more, but not all of the aircraft. Where data applies to all aircraft listed, no reference is made to individual aircraft numbers.

Configuration data reflects the airplane as delivered configuration and is updated for service bulletin incorporations in conformance with the policy stated in the introduction section of this chapter.

Serial and tabulation numbers are supplied by Boeing.

<b>Registry Number</b>	<b>Serial Number</b>	<b>Tabulation Number</b>
B-2998	29042	YA701
B-2999	29084	YA702
B-2991	29085	YA703
B-2992	29086	YA704
B-2658	30512	YA705
B-2659	30513	YA706
B-5029	30634	YA707
B-5028	30034	YA708
B-5038	30656	YA709
B-5039	28258	YA710
B-5552	37425	YF048
B-5551	36697	YF049
B-5511	37576	YF921
B-5512	37577	YF922
B-5528	37578	YF923
B-5529	37150	YF924
B-5532	37151	YF925
B-5533	37152	YF926

Registry Number	Serial Number	Tabulation Number
B-5535	37579	YF927
B-5566	37153	YF928
B-5151	34255	YK622
B-5152	34256	YK623
B-5308	32687	YK624
B-5309	32689	YK625
B-5382	36540	YK626
B-5383	35631	YK627
B-5386	35634	YK628
B-5385	35633	YK629
B-5388	35635	YK630
B-5159	35044	YK961
B-5160	35045	YK962
B-5161	35046	YK963
B-5162	35047	YK964
B-5301	35048	YK965
B-5302	35049	YK966
B-5318	30723	YK967
B-5303	35050	YK968
B-5305	35051	YK969
B-5306	35052	YK970
B-5307	35053	YK971
B-5459	35057	YK973
B-5458	35055	YK974
B-5476	35056	YK975
B-5488	37148	YK976
B-5489	37149	YK977





## 737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-5487	35058	YK978
B-5498	37574	YK979
B-5499	37575	YK980
B-5319	35102	YL076
B-5355	35104	YL077
B-5389	35636	YL541
B-5432	35641	YL542
B-5433	35642	YL543
B-5435	35644	YL544
B-5563	38012	YL545
B-5565	38015	YL546
B-5595	38017	YL547
B-5603	38020	YL548
B-5605	38022	YL549
B-5602	36824	YL550
B-5601	36823	YL551
B-5216	34026	YM482
B-5218	34027	YM483
B-5219	34028	YM484
B-5277	38381	YN531
B-5279	38384	YN532
B-5278	38383	YN533
B-5280	38385	YN534
B-5630	38386	YS151
B-5631	38387	YS152
B-5632	38388	YS153
B-5633	38389	YS154

Registry Number	Serial Number	Tabulation Number
B-5635	38390	YS155
B-5653	38391	YS156
B-5655	38392	YS157
B-5656	38393	YS158
B-5657	38394	YS159
B-5659	38396	YS160
B-5658	38395	YS166
B-5706	38398	YS168
B-5708	38403	YS169
B-5707	38399	YS170
B-5751	38400	YS171
B-5752	38404	YS172
B-5750	38380	YS173
B-5788	38382	YS174
B-5789	38401	YS175
B-5790	38402	YS176
B-5791	39930	YS177
B-5845	39931	YS178
B-1911	39907	YS179
B-1912	39908	YS180
B-1913	39900	YS181
B-1915	39901	YS182
B-1970	39903	YS183
B-1969	39902	YS184
B-1971	39904	YS185
B-1706	39905	YS186
B-1708	39911	YS187



## 737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-1707	39906	YS188
B-1709	39912	YS189
B-1749	39909	YS190
B-5792	41790	YS191
B-5846	41791	YS192
B-5688	41792	YS193
B-5847	41793	YS194
B-1966	39910	YT501
B-6485	39913	YT502
B-6483	39918	YT503
B-6482	41391	YT504
B-6487	39919	YT505
B-6486	41395	YT506
B-1964	39914	YT507
B-6489	39915	YT508
B-6490	41392	YT509
B-6488	41396	YT510
B-6818	39916	YT511
B-6819	39917	YT512
B-6849	40959	YT513
B-6842	40957	YT514
B-7176	41393	YT515
B-7177	41394	YT516
B-7179	40960	YT517
B-7178	40958	YT518
B-7195	43885	YT519
B-7196	43886	YT520



737 Flight Crew Operations Manual

Registry Number	Serial Number	Tabulation Number
B-7560	43887	YT521
B-6887	43884	YV604
B-6889	43914	YV605
B-7197	42925	YV741
B-7557	42926	YV742
B-7558	42927	YV743
B-7559	42928	YV744
B-7847	42930	YV745
B-7846	42929	YV746
B-7848	42931	YV747
B-7849	42932	YV748
B-1557	42933	YV749
B-1550	42934	YV750
B-1558	42935	YV751
B-1579	42936	YV752
B-1580	42937	YV753
B-7816	42938	YV754
B-7826	42939	YV755
B-7819	42945	YV756
B-7821	42946	YV757
B-7823	42947	YV758
B-7831	42949	YV759
B-7818	42941	YV760
B-7825	42948	YV761
B-1455	42950	YV762
B-1457	63682	YV763
B-1456	42951	YV764



737 Flight Crew Operations Manual

---

Registry Number	Serial Number	Tabulation Number
B-1302	63683	YV765
B-1301	42944	YV766
B-1300	42940	YV767





Intentionally  
Blank



**Checklist Instructions**  
**Revision Record**

**Chapter CI**  
**Section RR**

**Revision Transmittal Letter**

To: All holders of Xiamen Airlines 737 Flight Crew Operations Manual (FCOM), Boeing Document Number D6-27370-75C-XIA.

Subject: Flight Crew Operations Manual Revision.

This revision reflects the most current information available to The Boeing Company 60 days before the subject revision date. The following revision highlights explain changes in this revision. General information below explains the use of revision bars to identify new or revised information.

**Revision Record**

No. (更新号)	Revision Date (更新日期)	Filed by (换页人)	Date Filed (换页日期)	Remarks (备注)
40	September 15, 2016			

## General

The Boeing Company issues FCOM revisions to provide new or revised procedures and information. Formal revisions also incorporate appropriate information from previously issued FCOM bulletins.

The revision date is the approximate date the manual is approved for printing. The revision is mailed a few weeks after this date. This manual is effective upon receipt and supersedes any manual (with the same document number) with a previous revision number.

Formal revisions include a Transmittal Letter, a new Revision Record, Revision Highlights, and a current List of Effective Pages. Use the information on the new Revision Record and List of Effective Pages to verify the FCOM content.

Pages containing revised technical material have revision bars associated with the changed text or illustration. Editorial revisions (for example, spelling corrections) may have revision bars with no associated highlight.

The Revision Record should be completed by the person incorporating the revision into the manual.

---

## Filing Instructions

Consult the List of Effective Pages (CI.LEP). Pages identified with an asterisk (\*) are either replacement pages or new (original) issue pages. Remove corresponding old pages and replace or add new pages. Remove pages that are marked DELETED; there are no replacement pages for deleted pages.

---

## Revision Highlights

This section (CI.RR) replaces the existing section CI.RR in your manual.

Be careful when inserting changes not to throw away pages from the manual that are not replaced. Using the List of Effective Pages (CI.LEP) can help determine the correct content of the manual.

Throughout the manual, airplane effectivity may be updated to reflect coverage as listed on the Preface - Model Identification page, or to show service bulletin airplane effectivity. Highlights are not supplied.

This manual is published from a database; the text and illustrations are marked with configuration information. Occasionally, because the editors rearrange the database markers, or mark items with configuration information due to the addition of new database content, some customers may receive revision bars on content that appears to be unchanged. Pages may also be republished without revision bars due to slight changes in the flow of the document.



**Chapter NNC - Non-Normal Checklists****Section 2 - Air Systems****CABIN ALTITUDE WARNING or Rapid Depressurization**

NNC.2.2 - Expanded flight crew guidance in the event the flight crew is manually controlling cabin pressure during the CABIN ALTITUDE WARNING or Rapid Depressurization NNC. Added a Deferred Items section primarily to add a step to open the outflow valve at pattern altitude in order to ensure the airplane lands depressurized.

NNC.2.2 - Expanded flight crew guidance in the event the flight crew is manually controlling cabin pressure during the CABIN ALTITUDE WARNING or Rapid Depressurization NNC. Added a Deferred Items section primarily to add a step to open the outflow valve at pattern altitude in order to ensure the airplane lands depressurized.

NNC.2.2 - Added Deferred Descent checklist.

NNC.2.2 -

NNC.2.3 -

**Section 3 - Anti-Ice, Rain****ENGINE COWL ANTI-ICE**

NNC.3.1 - Added separate steps for the autothrottle and thrust lever in order to standardize with other Non-Normal Checklists that have similar steps.

NNC.3.1 - Added the word “confirm” for standardization.

NNC.3.1 - Added a step to run the engine at reduced thrust to keep the light extinguished for standardization.

NNC.3.1 -

**Ice Crystal Icing**

NNC.3.3 - Changed the description of “reference N1 indicators” to “reference N1 bugs” in order to correspond with the description used in FCOM VOL. 2.

NNC.3.3 - Added “both” to the ENGINE START switches step for standardization.

NNC.3.4 - Changed the description of “reference N1 indicators” to “reference N1 bugs” and added the word “readouts” in order to correspond with the descriptions used in FCOM VOL. 2.

NNC.3.5 - Revised text "degrees" to degree symbol for standardization.

## **Section 4 - Automatic Flight**

### **ROLL AUTHORITY**

NNC.4.2 - Added RCAS ROLL AUTHORITY Alert

### **ROLL/YAW ASYMMETRY**

NNC.4.3 - Added RCAS ROLL/YAW ASYMMETRY Alert.

## **Section 6 - Electrical**

### **DRIVE**

NNC.6.2 - Changed the punctuation.

### **LOSS OF BOTH ENGINE DRIVEN GENERATORS**

NNC.6.6 - Revised RCCB location to "P6-SPCU-A-4".

NNC.6.10 - Changed "The MAP display is not available." from a Step to a Note.

### **TR UNIT**

NNC.6.14 -

## **Section 7 - Engines, APU**

### **Engine Limit or Surge or Stall**

NNC.7.3 - Added new step 6 to Engine Limit, or Surge, or Stall NNC.

NNC.7.3 - Added "Transponder mode selector....TA ONLY". This step prevents climb commands which can exceed reduced thrust performance capability.

### **EEC ALTERNATE MODE**

NNC.7.14 - Added Choose one step for DISPLAY SOURCE completed or not for CDS BP 2015 or later.

NNC.7.15 - Added Choose one step for DISPLAY SOURCE completed or not for CDS BP 2015 or later.

### **Engine Failure or Shutdown**

NNC.7.16 - Revised to redirect crews to the engine severe damage or separation checklist when appropriate. During training, occasionally, crews incorrectly do the engine failure checklist when they should do the engine severe damage or separation checklist.

### **Engine High Oil Temperature**

NNC.7.21 - Added "Transponder mode selector....TA ONLY". This step prevents climb commands which can exceed reduced thrust performance capability.

**Engine High Vibration**

NNC.7.22 - Changed “affected engine” to “both” in step # 2 since it is likely both engines will be similarly affected if in icing conditions.

NNC.7.23 - Changed the punctuation.

NNC.7.23 - Added "Transponder mode selector....TA". This step prevents climb commands which can exceed reduced thrust performance capability.

**Engine In-Flight Start**

NNC.7.24 - Separated the second note into two notes, beginning with one for when the N2 is less than 8% and then the other for when engines are shut down one hour or more. This ensures the crew is always aware the ENGINE START switch must be placed to CONT when the N2 is less than 8% in order to display the EGT.

NNC.7.24 - Separated the second note into two notes, beginning with one for when the N2 is less than 8% and then the other for when engines are shut down one hour or more. This ensures the crew is always aware the ENGINE START switch must be placed to CONT when the N2 is less than 8% in order to display the EGT.

NNC.7.26 - Deleted reference during the Engine In-Flight Start NNC to a numerical EGT value. Deleted for standardization and because the EGT limit is referenced by the EGT start limit line.

**ENGINE OIL FILTER BYPASS**

NNC.7.29 - Added new step 4 to the ENGINE OIL FILTER BYPASS NNC.

NNC.7.29 - Added "Transponder mode selector....TA ONLY". This step prevents climb commands which can exceed reduced thrust performance capability.

**One Engine Inoperative Landing**

NNC.7.30 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

**Section 8 - Fire Protection****ENGINE OVERHEAT**

NNC.8.5 - Added "Transponder mode selector....TA ONLY". This step prevents climb commands which can reduce thrust performance capability.

**CARGO FIRE**

NNC.8.14 - Response restored from "MAX" back to " \_\_\_\_".

## **CARGO FIRE DETECTOR FAULT**

NNC.8.15 - Deleted step for simplicity and because it is a restatement of the condition.

## **ENGINE FIRE/OVERHEAT DETECTOR FAULT**

NNC.8.16 - Amended the condition statement by adding that fire detection system is inoperative in one or both engines.

NNC.8.16 - Deleted step for simplicity and because it is a restatement of the condition.

## **Section 9 - Flight Controls**

### **All Flaps Up Landing**

NNC.9.4 - Changed step from “Burn off fuel to reduce touchdown speed” to “Consider burning off fuel to reduce touchdown speed” to allow for flight crew discretion.

NNC.9.4 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

### **Jammed or Restricted Flight Controls**

NNC.9.10 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

### **LEADING EDGE FLAPS TRANSIT**

NNC.9.14 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

### **Stabilizer Trim Inoperative**

NNC.9.26 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

### **Trailing Edge Flap Asymmetry**

NNC.9.30 - Changed the note for simplification by stating the next larger flap setting is flaps 40.

NNC.9.30 - Added step to “Consider burning off fuel to reduce touchdown speed” for standardization amongst the 737 fleet.

**737 Flight Crew Operations Manual**

NNC.9.31 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

NNC.9.32 -

NNC.9.33 - Changed “may” to “can” per Boeing standard.

**Trailing Edge Flap Disagree**

NNC.9.35 - Changed “may” to “can” per Boeing standard.

NNC.9.35 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

NNC.9.37 -

NNC.9.37 - Changed “may” to “can” per Boeing standard.

NNC.9.38 - Changed “may” to “can” per Boeing standard.

NNC.9.39 - Added step to “Consider burning off fuel to reduce touchdown speed” for standardization amongst the 737 fleet.

NNC.9.39 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

NNC.9.40 - Changed “may” to “can” per Boeing standard.

**Trailing Edge Flaps Up Landing**

NNC.9.41 - Changed “may” to “can” per Boeing standard.

NNC.9.41 - Changed step from “Burn off fuel to reduce touchdown speed” to “Consider burning off fuel to reduce touchdown speed” to allow for flight crew discretion.

NNC.9.41 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

NNC.9.43 - Changed “may” to “can” per Boeing standard.

NNC.9.43 - Changed “may” to “can” per Boeing standard.

NNC.9.43 - Changed “may” to “can” per Boeing standard.

**Section 10 - Flight Instruments, Displays****Airspeed Unreliable**

NNC.10.1 -

NNC.10.3 -

---

NNC.10.3 - Added a step to select reliable side on Transponder selector when Captain's or First Officer's airspeed is reliable.

NNC.10.4 - Added a step to check the Non-Normal Configuration Landing Distance table for Airspeed Unreliable.

NNC.10.4 - Moved the guidance from the flight crew training manual "If a go-around or missed approach is necessary, do not press TO/GA," into the Airspeed Unreliable non-normal checklist.

NNC.10.4 -

NNC.10.4 - Added a step to turn the transponder off if altitude is unreliable. Some causes of airspeed unreliable can also interfere with altitude. If altitude is unreliable, there is a chance that an RA would decrease separation and increase the risk of a mid-air collision. Since the transponder does not have a selection to turn altitude reporting off, the transponder is put in standby.

NNC.10.4 -

#### **DISPLAY SOURCE**

NNC.10.10 - Added "if needed" to the choose one instruction to select the opposite autopilot.

#### **DISPLAY SOURCE**

NNC.10.12 - Added NNC for Display Source for airplanes with BP12 or later.

### **Section 11 - Flight Management, Navigation**

#### **GLS**

NNC.11.7 - Added GLS capability information.

#### **GPS**

NNC.11.7 - Changed to refer to "ADS-B" instead of "ADS-B Out. This change makes it more generic, to cover both ADS-B Out and ADS-B In operations.

#### **ILS**

NNC.11.8 - Added GLS capability information.

#### **IRS FAULT**

NNC.11.10 - Added "failed side" to be more specific which IRS mode selector needs to be placed in the OFF position.

NNC.11.10 - Added "failed side" to be more specific which IRS mode selector needs to be placed in the OFF position.

NNC.11.11 - Added "failed side" to be more specific which IRS mode selector needs to be placed in the NAV position.

**737 Flight Crew Operations Manual**

NNC.11.11 - Fixed the formatting by bolding the word “flashing” instead of “is”.

NNC.11.12 - Changed “desired” to “needed” per Boeing standard. Also fixed the formatting by bolding the word “needed” instead of “is”.

NNC.11.12 - Changed “desired” to “needed” per Boeing standard.

NNC.11.12 - Standardized the alignment of the IRS mode selector step.

**Section 12 - Fuel****CROSSFEED SELECTOR  
INOPERATIVE**

NNC.12.4 - Changed the step for clarity.

NNC.12.4 - Changed the step for clarity.

**Section 13 - Hydraulics****HYDRAULIC PUMP OVERHEAT**

NNC.13.2 - Hydraulic system thermal analyses have identified a remote risk for an engine driven pump failure that may result in excessive temperatures in flammable fluid leakage zones. To the flight crew, this remote failure may be identified when hydraulic pressure is greater than 3300 psi and a hydraulic pump overheat has occurred. To reduce this risk the Hydraulic Pump Overheat NNC has been revised.

NNC.13.2 -

NNC.13.2 -

**LOSS OF SYSTEM A**

NNC.13.3 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

**LOSS OF SYSTEM B**

NNC.13.7 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

**MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B**

NNC.13.13 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

## Section 14 - Landing Gear

### ANTISKID INOPERATIVE

NNC.14.1 - Revised the step directing the crews to check the Non-Normal Configuration Landing Distance for standardization and to add that other approved sources can be used to determine the landing distance.

### Partial or All Gear Up Landing

NNC.14.22 - Changed step from “Burn off fuel to reduce touchdown speed” to “Consider burning off fuel to reduce touchdown speed” to allow for flight crew discretion.

---

## Performance Package 10

### 737-700 CFM56-7B22 KG FAA CATA

## Section 10 -

### file Highlight

PI-QRH.10.1 - Updated Flight with Unreliable Airspeed Holding table to include KIAS and to add high altitude holding data. Flaps Up data was added to Terminal Area Table. Consolidated and restructured data in publishing system.

### Flight With Unreliable Airspeed / Turbulent Air Penetration

PI-QRH.10.2 - Consolidated and restructured data in publishing system.

## Section 11 - Advisory Information

### Non-Normal Configuration Landing Distance

PI-QRH.11.4 - Updated Non-Normal Landing Distances to add data for Airspeed Unreliable.

---

## Performance Package 20

### 737-700 CFM56-7B22 KG M FAA CATF/M

## Section 20 - Pkg Model Identification

737-700 CFM56-7B22 KG M FAA CATF/M was added as Section 20.

## Section 20 -

737-700 CFM56-7B22 KG M FAA CATF/M was added as Section 20.

### file Highlight

PI-QRH.20.1 - Updated Flight with Unreliable Airspeed Holding table to include KIAS and to add high altitude holding data. Flaps Up data was added to Terminal Area Table. Consolidated and restructured data in publishing system.



**Section 21 - Advisory Information**

Added section "21".

**Non-Normal Configuration Landing Distance**

PI-QRH.21.4 - Updated Non-Normal Landing Distances to add data for Airspeed Unreliable.

**Section 22 - Engine Inoperative**

Added section "22".

**Section 23 - Gear Down**

Added section "23".

**Section 24 - Gear Down, Engine Inop**

Added section "24".

**Section 25 - Text**

Added section "25".

---

**Performance Package 30****737-700W CFM56-7B22 KG M FAA CATA****Section 30 - Pkg Model Identification**

737-700W CFM56-7B22 KG M FAA CATA moved from Section 20 to 30.

**Section 30 -**

737-700W CFM56-7B22 KG M FAA CATA moved from Section 20 to 30.

**file Highlight**

PI-QRH.30.1 - Updated Flight with Unreliable Airspeed Holding table to include KIAS and to add high altitude holding data. Flaps Up data was added to Terminal Area Table. Consolidated and restructured data in publishing system.

**Flight With Unreliable Airspeed/Turbulent Air Penetration**

PI-QRH.30.2 - Consolidated and restructured data in publishing system.

**Section 31 - Advisory Information**

Section "21" moved to "31".

**Section 32 - Engine Inoperative**

Section "22" moved to "32".

**Section 33 - Gear Down**

Section "23" moved to "33".

## **Section 34 - Gear Down, Engine Inop**

Section "24" moved to "34".

## **Section 35 - Text**

Section "25" moved to "35".

---

## **Performance Package 40**

### **737-700W CFM56-7B22 C KG M FAA CATF/M**

#### **Section 40 - Pkg Model Identification**

737-700W CFM56-7B22 C KG M FAA CATF/M was added as Section 40.

#### **Section 40 -**

737-700W CFM56-7B22 C KG M FAA CATF/M was added as Section 40.

Updated packae title description to 737-700W CFM56-7B22 C KG M FAA CATF/M.

#### **Section 41 - Advisory Information**

Added section "41".

#### **Section 42 - Engine Inoperative**

Added section "42".

#### **Section 43 - Gear Down**

Added section "43".

#### **Section 44 - Gear Down, Engine Inop**

Added section "44".

#### **Section 45 - Text**

Added section "45".

---

## **Performance Package 50**

### **737-700W CFM56-7B24A+26B2\_BUMP C M KG FAA CATF/M HIGH\_ALT PAX GAS**

#### **Section 50 - Pkg Model Identification**

737-700W CFM56-7B24A+26B2\_BUMP C M KG FAA CATF/M HIGH\_ALT PAX GAS was added as Section 50.

#### **Section 50 -**

737-700W CFM56-7B24A+26B2\_BUMP C M KG FAA CATF/M HIGH\_ALT PAX GAS was added as Section 50.

**Section 51 - Advisory Information**

Added section "51".

**Section 52 - Engine Inoperative**

Added section "52".

**Section 53 - Gear Down**

Added section "53".

**Section 54 - Gear Down, Engine Inop**

Added section "54".

**Section 55 - Text**

Added section "55".

---

**Performance Package 60****737-800W CFM56-7B24 KG M FAA CATC/N****Section 60 - Pkg Model Identification**

737-800W CFM56-7B24 KG M FAA CATC/N moved from Section 40 to 60.

**General**

PI-QRH.60.1 - Revised to add/change an airplane entry.

PI-QRH.60.1 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

PI-QRH.60.4 - Revised to add/change an airplane entry.

**Section 60 -**

737-800W CFM56-7B24 KG M FAA CATC/N moved from Section 40 to 60.

**file Highlight**

PI-QRH.60.1 - Updated Flight with Unreliable Airspeed Holding table to include KIAS and to add high altitude holding data. Flaps Up data was added to Terminal Area Table. Consolidated and restructured data in publishing system.

**Section 61 - Advisory Information**

Section "41" moved to "61".

**Section 62 - Engine Inoperative**

Section "42" moved to "62".

**Section 63 - Gear Down**

Section "43" moved to "63".

**Section 64 - Gear Down, Engine Inop**

Section "44" moved to "64".

**Section 65 - Text**

Section "45" moved to "65".

---

**Performance Package 70**

**737-800W CFM56-7B26 KG M FAA CATC/N**

**Section 70 - Pkg Model Identification**

737-800W CFM56-7B26 KG M FAA CATC/N moved from Section 50 to 70.

**Section 70 -**

737-800W CFM56-7B26 KG M FAA CATC/N moved from Section 50 to 70.

**file Highlight**

PI-QRH.70.1 - Updated Flight with Unreliable Airspeed Holding table to include KIAS and to add high altitude holding data. Flaps Up data was added to Terminal Area Table. Consolidated and restructured data in publishing system.

**Section 71 - Advisory Information**

Section "51" moved to "71".

**Non-Normal Configuration Landing Distance**

PI-QRH.71.4 - Updated Non-Normal Landing Distances to add data for Airspeed Unreliable.

**Section 72 - Engine Inoperative**

Section "52" moved to "72".

**Section 73 - Gear Down**

Section "53" moved to "73".

**Section 74 - Gear Down, Engine Inop**

Section "54" moved to "74".

**Section 75 - Text**

Section "55" moved to "75".

---

**Performance Package 80****737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC Model  
737-800W.1)****Section 80 - Pkg Model Identification**

737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC Model  
737-800W.1) was added as Section 80.

**Section 80 -**

737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC Model  
737-800W.1) was added as Section 80.

**Section 81 - Advisory Information**

Added section "81".

**Section 82 - Engine Inoperative**

Added section "82".

**Section 83 - Gear Down**

Added section "83".

**Section 84 - Gear Down, Engine Inop**

Added section "84".

**Section 85 - Text**

Added section "85".

## Chapter Man - Maneuvers

### Section 1 - Non-Normal Maneuvers

#### Ground Proximity Warning System (GPWS) Response

MAN.1.4 - Made some wording changes for standardization and per the Boeing standard.

MAN.1.4 - Made some wording changes for standardization and per the Boeing standard.

MAN.1.4 - Made some wording changes for standardization and per the Boeing standard.

MAN.1.4 - Added a step to move the reversers to full down for completeness and consistency with the landing roll procedure.

#### Windshear

MAN.1.11 - Revised to "push" either TO/GA switch for consistency within the normal procedures, supplementary procedures, non-normal checklists, non-normal maneuvers, and flight patterns.

MAN.1.11 - Revised to "push" either TO/GA switch for consistency within the normal procedures, supplementary procedures, non-normal checklists, non-normal maneuvers, and flight patterns.

### Section 2 - Flight Patterns

#### GLS Approach - Fail Passive

MAN.2.3 -

---

## Chapter CI - Checklist Instructions

### Section ModID - Model Identification

#### General

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.



**737 Flight Crew Operations Manual**

---

CI.ModID.6 - Revised to add/change an airplane entry.

CI.ModID.6 - Revised to add/change an airplane entry.

---

**Performance Package LEP**

**737-800WSFP1 CFM56-7B26 C M KG FAA CATC/N (FMC Model  
737-800W.1)**

**Section 2 - Non-Normal Checklists**

**Non-Normal Checklist Use**

CI.2.4 - Added reading the “airplane effectivity (if applicable) as needed to verify the correct checklist” to the Checklist Instructions – Non-Normal Checklist Use.

Intentionally  
Blank





# Checklist Instructions

## QRH List of Effective Pages

# Chapter CI

## Section LEP

### Quick Reference Handbook

#### Quick Action Index

\* QA.Index.1-2 September 15, 2016

#### Lights (tab)

\* Lights.Index.1-8 September 15, 2016

#### Unannounced (tab)

\* Unann.Index.1-2 September 15, 2016

#### Alphabetical Index

\* Alpha.Index.1-12 September 15, 2016

#### Normal Checklists

NC.1-4 June 8, 2015

#### 0 Miscellaneous (tab)

0.TOC.1-2 May 15, 2008

0.1-8 March 26, 2015

#### 1 Airplane Gen., Emer. Equip., Doors, Windows (tab)

1.TOC.1-2 September 27, 2012

\* 1.1-28 September 15, 2016

#### 2 Air Systems (tab)

\* 2.TOC.1-2 September 15, 2016

\* 2.1-36 September 15, 2016

#### 3 Anti-Ice, Rain (tab)

3.TOC.1-2 September 25, 2014

\* 3.1-8 September 15, 2016

#### 4 Automatic Flight (tab)

\* 4.TOC.1-2 September 15, 2016

\* 4.1-4 September 15, 2016

#### 5 Communications (tab)

5.TOC.1-2 May 15, 2008

5.1-2 September 18, 2008

#### 6 Electrical (tab)

6.TOC.1-2 September 27, 2012

\* 6.1-16 September 15, 2016

#### 7 Engines, APU (tab)

\* 7.TOC.1-2 September 15, 2016

\* 7.1-40 September 15, 2016

#### 8 Fire Protection (tab)

8.TOC.1-2 September 25, 2014

\* 8.1-22 September 15, 2016

#### 9 Flight Controls (tab)

9.TOC.1-2 March 31, 2016

\* 9.1-44 September 15, 2016

#### 10 Flight Instruments, Displays (tab)

\* 10.TOC.1-2 September 15, 2016

\* 10.1-14 September 15, 2016

#### 11 Flight Management, Navigation (tab)

\* 11.TOC.1-2 September 15, 2016

\* 11.1-16 September 15, 2016

#### 12 Fuel (tab)

12.TOC.1-2 March 26, 2015

\* 12.1-20 September 15, 2016

#### 13 Hydraulics (tab)

\* 13.TOC.1-2 September 15, 2016

\* 13.1-18 September 15, 2016

#### 14 Landing Gear (tab)

14.TOC.1-2 March 27, 2014

\* 14.1-26 September 15, 2016

#### 15 Warning Systems (tab)

15.TOC.1-2 September 25, 2014

15.1-6 March 31, 2016

#### Performance Inflight - QRH (tab)

\* PI-QRH.TOC.1-2 September 15, 2016

#### 737-700 CFM56-7B22 KG FAA CATA

\* PI-QRH.TOC.10.1-4 September 15, 2016

PI-QRH.ModID.10.1-2 March 31, 2016

\* PI-QRH.10.1-6 September 15, 2016

\* PI-QRH.11.1-30 September 15, 2016

\* = Revised, Added, or Deleted

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

PI-QRH.12.1-12	March 31, 2016	* PI-QRH.60.1-6	September 15, 2016
PI-QRH.13.1-6	September 25, 2014	* PI-QRH.61.1-30	September 15, 2016
PI-QRH.14.1-4	March 31, 2016	* PI-QRH.62.1-12	September 15, 2016
PI-QRH.15.1-6	September 24, 2015	* PI-QRH.63.1-6	September 15, 2016
<b>737-700W CFM56-7B22 KG M FAA CATA</b>		* PI-QRH.64.1-4	September 15, 2016
* PI-QRH.TOC.20.1-4	September 15, 2016	* PI-QRH.65.1-6	September 15, 2016
* PI-QRH.ModID.20.1-2	September 15, 2016	<b>Maneuvers (tab)</b>	
* PI-QRH.20.1-6	September 15, 2016	* Man.TOC.1-2	September 15, 2016
* PI-QRH.21.1-30	September 15, 2016	MAN.05.1-2	May 15, 2008
* PI-QRH.22.1-12	September 15, 2016	* MAN.1.1-12	September 15, 2016
* PI-QRH.23.1-6	September 15, 2016	* MAN.2.1-14	September 15, 2016
* PI-QRH.24.1-4	September 15, 2016	<b>Checklist Instructions (tab)</b>	
* PI-QRH.25.1-6	September 15, 2016	CI.TOC.1-2	March 26, 2015
<b>737-700W CFM56-7B24A+26B2_BUMP KG FAA CATA PAX OXY</b>		<b>Model Identification</b>	
* PI-QRH.TOC.30.1-4	September 15, 2016	* CI.ModID.1-8	September 15, 2016
* PI-QRH.ModID.30.1-2	September 15, 2016	<b>Revision Record</b>	
* PI-QRH.30.1-6	September 15, 2016	* CI.RR.1-2	September 15, 2016
* PI-QRH.31.1-32	September 15, 2016	<b>Revision Highlights</b>	
* PI-QRH.32.1-14	September 15, 2016	* CI.RR.3-18	September 15, 2016
* PI-QRH.33.1-6	September 15, 2016	<b>List of Effective Pages</b>	
* PI-QRH.34.1-4	September 15, 2016	* CI.LEP.1-2	September 15, 2016
* PI-QRH.35.1-6	September 15, 2016	<b>Checklist Instructions - Normal Checklists</b>	
<b>737-800W CFM56-7B24 KG M FAA CATC/N</b>		* CI.1.1-2	September 15, 2016
* PI-QRH.TOC.40.1-4	September 15, 2016	<b>Checklist Instructions - Non-Normal Checklists</b>	
* PI-QRH.ModID.40.1-6	September 15, 2016	* CI.2.1-8	September 15, 2016
* PI-QRH.40.1-6	September 15, 2016	<b>Evacuation</b>	
* PI-QRH.41.1-30	September 15, 2016	Back Cover.1-2	September 25, 2014
* PI-QRH.42.1-12	September 15, 2016		
* PI-QRH.43.1-6	September 15, 2016		
* PI-QRH.44.1-4	September 15, 2016		
* PI-QRH.45.1-6	September 15, 2016		
<b>737-800W CFM56-7B26 KG M FAA CATC/N</b>			
* PI-QRH.TOC.50.1-4	September 15, 2016		
* PI-QRH.ModID.50.1-2	September 15, 2016		
* PI-QRH.50.1-6	September 15, 2016		
* PI-QRH.51.1-30	September 15, 2016		
* PI-QRH.52.1-12	September 15, 2016		
* PI-QRH.53.1-6	September 15, 2016		
* PI-QRH.54.1-4	September 15, 2016		
* PI-QRH.55.1-6	September 15, 2016		
<b>737-800WSFP1 CFM56-7B26 KG M FAA CATC/N (FMC Model 737-800W.1)</b>			
* PI-QRH.TOC.60.1-4	September 15, 2016		
* PI-QRH.ModID.60.1-2	September 15, 2016		

\* = Revised, Added, or Deleted

Boeing Proprietary. Copyright © Boeing. May be subject to export restrictions under EAR. See title page for details.

**Checklist Instructions**  
**Normal Checklists****Chapter CI**  
**Section 1****Introduction**

This introduction gives guidelines for use of the Normal Checklist (NC).

The NC is organized by phase of flight.

The NC is used to verify that critical items have been done.

**Normal Checklist Operation**

Normal checklists are used after doing all respective procedural items.

The following table shows which pilot calls for the checklist and which pilot reads the checklist. Both pilots visually verify that each item is in the needed configuration or that the step is done. The far right column shows which pilot gives the response. This is different than the normal procedures where the far right column can show which pilot does the step.

<b>Checklist</b>	<b>Call</b>	<b>Read</b>	<b>Verify</b>	<b>Respond</b>
PREFLIGHT	Captain	First officer	Both	Captain
BEFORE START	Captain	First officer	Both	Captain
BEFORE TAXI	Captain	First officer	Both	Captain
BEFORE TAKEOFF	Captain	First officer	Both	Captain
AFTER TAKEOFF	Pilot flying	Pilot monitoring	Both	Pilot monitoring
DESCENT	Pilot flying	Pilot monitoring	Both	Pilot flying
APPROACH	Pilot flying	Pilot monitoring	Both	Pilot flying
LANDING	Pilot flying	Pilot monitoring	Both	Pilot flying
SHUTDOWN	Captain	First officer	Both	Captain
SECURE	Captain	First officer	Both	Captain

If the airplane configuration does not agree with the needed configuration:

- stop the checklist
- complete the respective procedure steps
- continue the checklist

If it becomes apparent that an entire procedure was not done:

- stop the checklist
- complete the entire procedure
- do the checklist from the start

---

Try to do checklists before or after high work load times. The crew may need to stop a checklist for a short time to do other tasks. If the interruption is short, continue the checklist with the next step. If a pilot is not sure where the checklist was stopped, do the checklist from the start. If the checklist is stopped for a long time, also do the checklist from the start.

After completion of each checklist, the pilot reading the checklist calls, " \_\_\_\_ CHECKLIST COMPLETE."

---

## Checklist Content

The checklist has the minimum items needed to operate the airplane safely.

Normal checklists have items that meet any of the following criteria:

- items essential to safety of flight that are not monitored by an alerting system, or
- items essential to safety of flight that are monitored by an alerting system but if not done, would likely result in a catastrophic event if the alerting system fails, or
- items needed to meet regulatory requirements, or
- items needed to maintain fleet commonality between the 737, 747-400, 757, 767, 777, and 787, or
- items that enhance safety of flight and are not monitored by an alerting system (for example the autobrake), or
- during shutdown and secure, items that could result in injury to personnel or damage to equipment if not done.

---

## Checklist Construction

When a checklist challenge does not end with “switch or lever”, then the challenge refers to system status. For example, “Landing Gear...Down”, refers to the status of the landing gear, not just the position of the lever.

When a checklist challenge ends with “switch or lever”, then the challenge refers to the position of the switch or lever. For example, “Engine start levers...CUTOFF” refers to the position of the levers.

Because normal checklists are done routinely, some checklist items are simplified to be more conversational such as "Autobrake.....RTO" instead of "AUTOBRAKE select switch.....RTO".



## Introduction

The non-normal checklists chapter contains checklists used by the flight crew to manage non-normal situations. The checklists are grouped in sections which match the system description chapters in Volume 2.

Most checklists correspond to a light, alert or other indication. In most cases, the MASTER CAUTION and system annunciator lights also illuminate to indicate the non-normal condition. These lights, alerts and other indications are the cues to select and do the associated checklist.

Checklists without a light, alert or other indication (such as Ditching) are called unannunciated checklists. Most unannunciated checklists are in the associated system section. For example, Fuel Leak Engine is in section 12, Fuel. Unannunciated checklists with no associated system are in section 0, Miscellaneous.

All checklists have condition statements. The condition statement briefly describes the situation that caused the light, alert or other indication. Unannunciated checklists also have condition statements to help in understanding the reason for the checklist.

Some checklists have objective statements. The objective statement briefly describes the expected result of doing the checklist or briefly describes the reason for steps in the checklist.

Checklists can have both memory and reference items. Memory items are critical steps that must be done before reading the checklist. The last memory item is followed by a dashed horizontal line. Reference items are actions to be done while reading the checklist.



Some checklists have additional information at the end of the checklist. The additional information provides data the crew may wish to consider. The additional information does not need to be read.

Checklists that need a quick response are listed in the Quick Action Index. In each system section, Quick Action Index checklists are listed first, followed by checklists that are not in the Quick Action Index. The titles of Quick Action Index checklists are printed in **bold** type. Checklist titles in upper case (such as AUTO BRAKE DISARM) are annunciated by a light, alert, or other indication. Checklist titles in upper and lower case (such as Window Damage) are not annunciated.

---

---

## Non-Normal Checklist Operation

Non-normal checklists start with steps to correct the situation. If needed, information for planning the rest of the flight is included. When special items are needed to configure the airplane for landing, the items are included in the Deferred Items section of the checklist. Flight patterns for some engine-out situations are located in the Maneuvers chapter and show the sequence of configuration changes.

While every attempt is made to supply needed non-normal checklists, it is not possible to develop checklists for all conceivable situations. In some smoke, fire or fumes situations, the flight crew may need to move between the Smoke, Fire or Fumes checklist and the Smoke or Fumes Removal checklist. In some multiple failure situations, the flight crew may need to combine the elements of more than one checklist. In all situations, the captain must assess the situation and use good judgment to determine the safest course of action.

It should be noted that, in determining the safest course of action, troubleshooting, i.e., taking steps beyond published non-normal checklist steps, may cause further loss of system function or system failure. Troubleshooting should only be considered when completion of the published non-normal checklist results in an unacceptable situation.

There are some situations where the flight crew must land at the nearest suitable airport. These situations include, but are not limited to, conditions where:

- the non-normal checklist includes the item “Plan to land at the nearest suitable airport.”
- fire or smoke continues
- only one AC power source remains (engine or APU generator)
- only one hydraulic system remains (the standby system is considered a hydraulic system)
- any other situation determined by the flight crew to have a significant adverse effect on safety if the flight is continued.

It must be stressed that for smoke that continues or a fire that cannot be positively confirmed to be completely extinguished, the earliest possible descent, landing, and evacuation must be done.

If a smoke, fire or fumes situation becomes uncontrollable, the flight crew should consider an immediate landing. Immediate landing implies immediate diversion to a runway. However, in a severe situation, the flight crew should consider an overweight landing, a tailwind landing, an off-airport landing, or a ditching.

Checklists directing an engine shutdown must be evaluated by the captain to determine whether an actual shutdown or operation at reduced thrust is the safest course of action. Consideration must be given to the probable effects of running the engine at reduced thrust.

**737 Flight Crew Operations Manual**

There are no non-normal checklists for the loss of an engine indication or automatic display of the secondary engine indications. Continue normal engine operation unless a limit is exceeded.

Non-normal checklists also assume:

- During engine start and before takeoff, the associated non-normal checklist is done if a non-normal situation is identified. After completion of the checklist, the *Minimum Equipment List (MEL)* is consulted to determine if Minimum Equipment List dispatch relief is available.
- System controls are in the normal configuration for the phase of flight before the start of the non-normal checklist.
- If the MASTER CAUTION and system annunciator lights illuminate, all related amber lights are reviewed to assist in recognizing the cause(s) of the alert.
- Aural alerts are silenced and the master caution system is reset by the flight crew as soon as the cause of the alert is recognized.
- The EMERGENCY position of the oxygen regulator is used when needed to supply positive pressure in the masks and goggles to remove contaminants. The 100% position of the oxygen regulator is used when positive pressure is not needed but contamination of the flight deck air exists. The Normal position of the oxygen regulator is used if prolonged use is needed and the situation allows. Normal boom microphone operation is restored when oxygen is no longer in use.
- Indicator lights are tested to verify suspected faults.

**YA701 - YF049, YM482 - YM484**

- In flight, reset of a tripped circuit breaker is not recommended. However, a tripped circuit breaker may be reset once, after a short cooling period (approximately 2 minutes), if in the judgment of the captain, the situation resulting from the circuit breaker trip has a significant adverse effect on safety. On the ground, flight crew reset of a tripped circuit breaker should only be done after maintenance has determined that it is safe to reset the circuit breaker.

**YF921 - YL551, YN531 - YV754**

- In flight, reset of a tripped circuit breaker is not recommended unless directed by a non-normal checklist. However, a tripped circuit breaker may be reset once, after a short cooling period (approximately 2 minutes), if in the judgment of the captain, the situation resulting from the circuit breaker trip has a significant adverse effect on safety. On the ground, flight crew reset of a tripped circuit breaker should only be done after maintenance has determined that it is safe to reset the circuit breaker.
- Flight crew cycling (pulling and resetting) of a circuit breaker to clear a non-normal condition is not recommended, unless directed by a non-normal checklist.

After engine start and before takeoff, illumination of a red warning light, an amber caution light, an alert or other indication requires completion of the associated checklist. In certain cases, amber caution lights illuminate during MASTER CAUTION recall to inform the flight crew of the failure of one element in a system with redundant elements. If system operation is maintained by a second element, the amber caution light will extinguish when MASTER CAUTION is reset. In these situations, the amber caution light alerts the flight crew that normal system operation will be affected if another element fails. If an amber caution light illuminates during MASTER CAUTION recall, but extinguishes after MASTER CAUTION reset, completion of the associated checklist is not required.

---

## Non-Normal Checklist Use

If a checklist or a step in a checklist is not applicable to all airplanes, airplane effectivity information is included in the checklist. Airplane effectivity can be listed by airplane number, registry number, serial number or tabulation number. If a checklist is applicable to some but not all airplanes, airplane effectivity is centered below the checklist title. If a step in a checklist is applicable to some but not all airplanes, airplane effectivity is included above the step. If a checklist or a step in a checklist is applicable to all airplanes, airplane effectivity information is not included.

Non-normal checklist use starts when the airplane flight path and configuration are correctly established. Only a few situations need an immediate response (such as CABIN ALTITUDE WARNING or Rapid Depressurization). Usually, time is available to assess the situation before corrective action is started. All actions must then be coordinated under the captain's supervision and done in a deliberate, systematic manner. Flight path control must never be compromised.

When a non-normal situation occurs, at the direction of the pilot flying, both crewmembers do all memory items in their areas of responsibility without delay.

The pilot flying calls for the checklist when:

- the flight path is under control
- the airplane is not in a critical phase of flight (such as takeoff or landing)
- all memory items are complete.

The pilot monitoring reads aloud:

- the checklist title
- the airplane effectivity (if applicable) as needed to verify the correct checklist
- as much of the condition statement as needed to verify that the correct checklist has been selected
- as much of the objective statement (if applicable) as needed to understand the expected result of doing the checklist.



**737 Flight Crew Operations Manual**

---

The pilot flying does not need to repeat this information but must acknowledge that the information was heard and understood.

For checklists with memory items, the pilot monitoring first verifies that each memory item has been done. The checklist is normally read aloud during this verification. The pilot flying does not need to respond except for items that are not in agreement with the checklist. The item numbers do not need to be read.

Non-memory items are called reference items. The pilot monitoring reads aloud the reference items, including:

- the precaution (if any)
- the response or action
- any amplifying information.

The pilot flying does not need to repeat this information but must acknowledge that the information was heard and understood. The item numbers do not need to be read.

The word “Confirm” is added to checklist items when both crewmembers must verbally agree before action is taken. During an inflight non-normal situation, verbal confirmation is required for:

- an engine thrust lever
- an engine start lever
- an engine, APU or cargo fire switch
- a generator drive disconnect switch
- an IRS mode selector, when only one IRS is failed
- a flight control switch

This does not apply to the Loss of Thrust on Both Engines checklist.

With the airplane stationary on the ground:

- the captain and the first officer take action based on preflight and postflight areas of responsibility
- during an evacuation, the first officer sets the flap lever to 40.

With the airplane in flight or in motion on the ground:

- the pilot flying and the pilot monitoring take action based on each crewmember’s Areas of Responsibility.

After moving the control, the crewmember taking the action also states the checklist response.

The pilot flying may also direct reference checklists to be done by memory if no hazard is created by such action, or if the situation does not allow reference to the checklist.

Checklists include an Inoperative Items table only when the condition of the items is needed for planning the rest of the flight. The inoperative items, including the consequences (if any), are read aloud by the pilot monitoring. The pilot flying does not need to repeat this information but must acknowledge that the information was heard and understood.

After completion of the non-normal checklist, normal procedures are used to configure the airplane for each phase of flight.

When there are no deferred items, the DESCENT, APPROACH and LANDING normal checklists are used to verify that the configuration is correct for each phase of flight.

When there are deferred items, the non-normal checklist will include the item “**Checklist Complete Except Deferred Items.**” The pilot flying is to be made aware when there are deferred items. These items are included in the Deferred Items section of the checklist and may be delayed until the usual point during descent, approach or landing.

The deferred items are read aloud by the pilot monitoring. The pilot flying or the pilot monitoring takes action based on each crewmember’s area of responsibility. After moving the control, the crewmember taking the action also states the response.

The Deferred Items section of the non-normal checklist includes the Descent, Approach and Landing normal checklists if one or more of the following occur:

- an item is deferred until after the Descent Checklist
- a normal checklist response is changed as a result of the non-normal situation. (The changed response is printed in **bold** type.)

Use these checklists instead of the usual DESCENT, APPROACH and LANDING normal checklists. The pilot flying or the pilot monitoring responds to the deferred normal checklist items based on each crewmember’s area of responsibility. However, during the deferred Landing normal checklist, the pilot flying responds to all deferred normal checklist items.

Each checklist has a checklist complete symbol at the end. The following symbol indicates that the checklist is complete:



The checklist complete symbol can also be in the body of the checklist. This only occurs when a checklist divides into two or more paths. Each path can have a checklist complete symbol at the end. The flight crew does not need to continue reading the checklist after the checklist complete symbol.

After completion of each non-normal checklist, the pilot monitoring states “       CHECKLIST COMPLETE.”

Additional information at the end of the checklist is not required to be read.

## 737 Flight Crew Operations Manual

The flight crew must be aware that checklists cannot be created for all conceivable situations and are not intended to replace good judgment. In some situations, at the captain's discretion, deviation from a checklist can be needed.

---

## Non-Normal Checklist Legend

### Redirection Symbol



The redirection symbol is used in two ways:

- In the Table of Contents of a system section, to direct the flight crew to a different system section.
- In a non-normal checklist, with the word “Go to”, to direct the flight crew to a different checklist or to a different step in the current checklist.

### Separator Symbol



The separator symbol is used in two ways:

- In the Table of Contents of a system section, to separate the Quick Action Index checklists from the checklists that are not in the Quick Action Index.
- In a non-normal checklist, to separate the memory items from the reference items.

### Task Divider Symbol

---

The task divider symbol is used to indicate the end of one task and the beginning of another task.

### Decision Symbol

Choose one:



The decision symbol is used to identify possible choices.

### Precaution Symbol



The precaution symbol is used to identify information that the flight crew must consider before taking the action.

Intentionally  
Blank



**Evacuation Checklist is on the  
reverse side of this page.**



**Evacuation**

Condition: Evacuation is needed.

- 1 PARKING BRAKE. . . . . Set C
- 2 Speedbrake lever . . . . . DOWN C
- 3 FLAP lever . . . . . 40 F/O
- 4 Pressurization mode selector . . . . . MAN F/O
- 5 Outflow VALVE  
switch . . . . . Hold in OPEN  
until the outflow VALVE  
indication shows fully open  
to depressurize the airplane F/O
- 6 If time allows, verify that the flaps are 40  
before the engine start levers are moved  
to CUTOFF. C
- 7 Engine start levers (both) . . . . . CUTOFF C
- 8 Advise the cabin to evacuate. C
- 9 Advise the tower. F/O
- 10 Engine and APU  
fire switches (all) . . . . . Override and pull F/O
- 11 **If** an engine or APU fire warning occurs:  
Illuminated fire  
switch . . . . . Rotate to the stop  
and hold for 1 second F/O

